

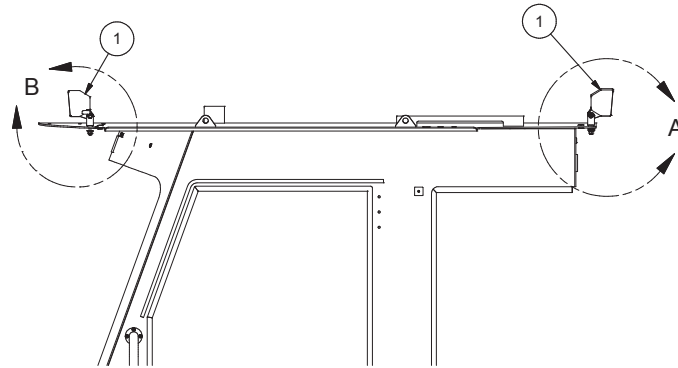


Light Installation - Cab

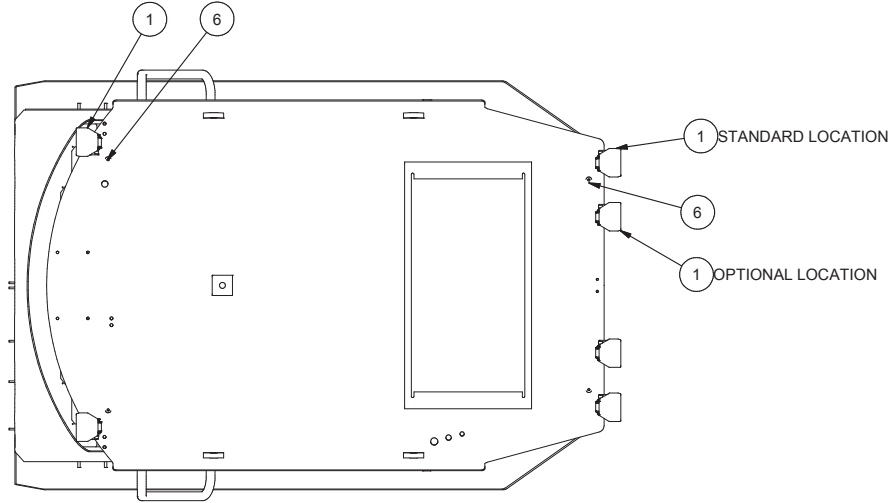

1 WHEN ROUTING WIRE HARNESS, ALLOW WIRES TO DROOP SLIGHTLY BELOW THE GROMMET TO PREVENT WATER FROM FOLLOWING WIRES INTO CAB.

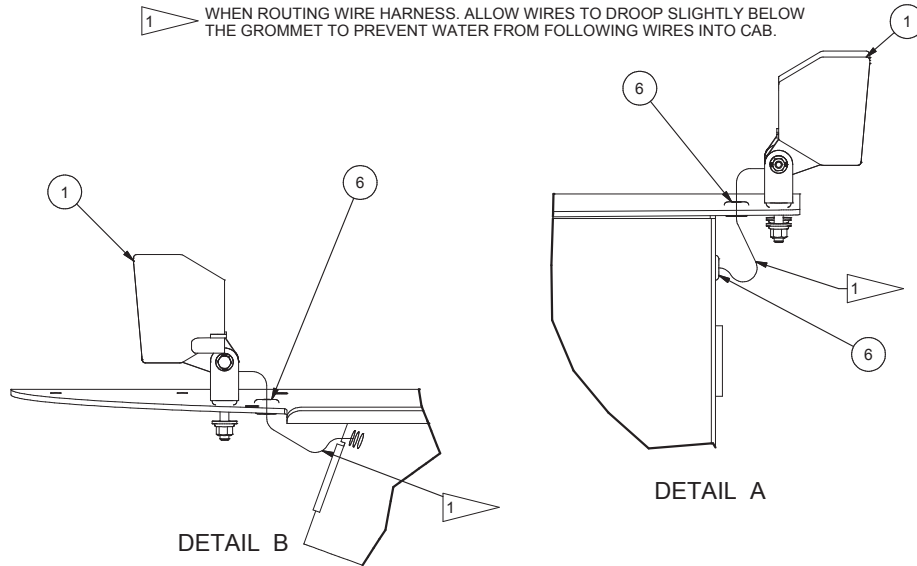

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	<b>587904</b>		<b>Lights Installation, Cab</b>				
1	258338	4	. Floodlight				
6	236806	8	. Grommet, Rubber				