

# Increased Safety!

## Broken Steering Arm?

Customers routinely reweld old design. Cantilevered pins will **break** loose again and again.

Improved design reduces steering arm failure at the cylinder pin.

Have you experienced a failure of the steering arm at the cylinder pin? This may be caused by the cantilevered design.


A new steering arm (PN 591240) captures the cylinder pin on both ends, reducing the chance of failure. And the best part is that the new design drops right in with no rework necessary.

Simply order:

Part Number	Description	QTY
591240	Steering Arm	1
565013	Cylinder Pins	2
R13811083	Capscrews	2
R13811193	Nuts	2

# wagner


A Division of Allied Systems Company

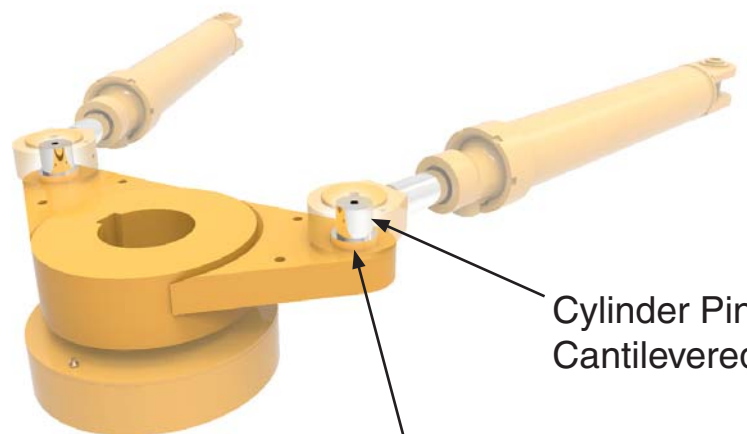

### Old Design

544649  
522072

Stop rewelding the pin!

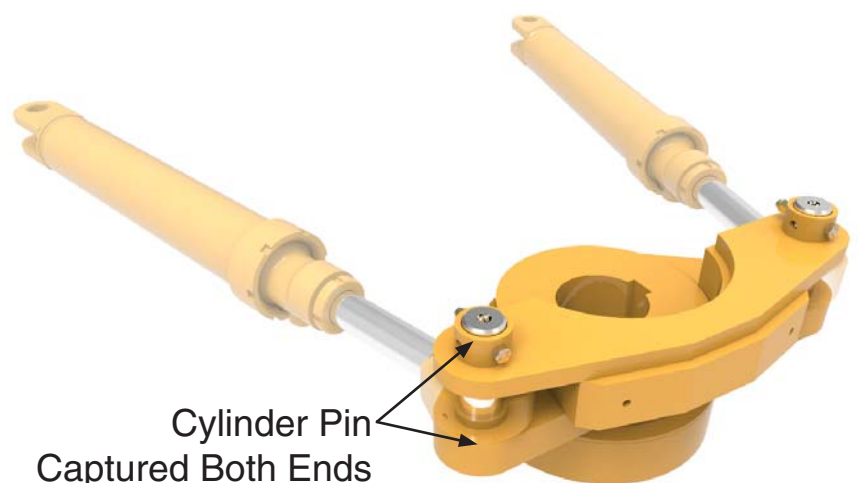

### New Design

591240

85-700  
Rev 5/2016