

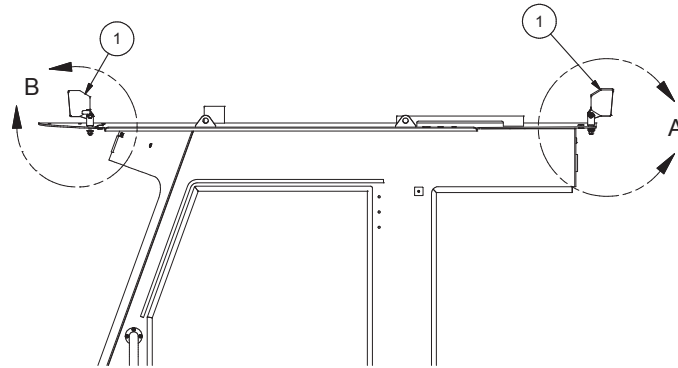


Light Installation - Cab

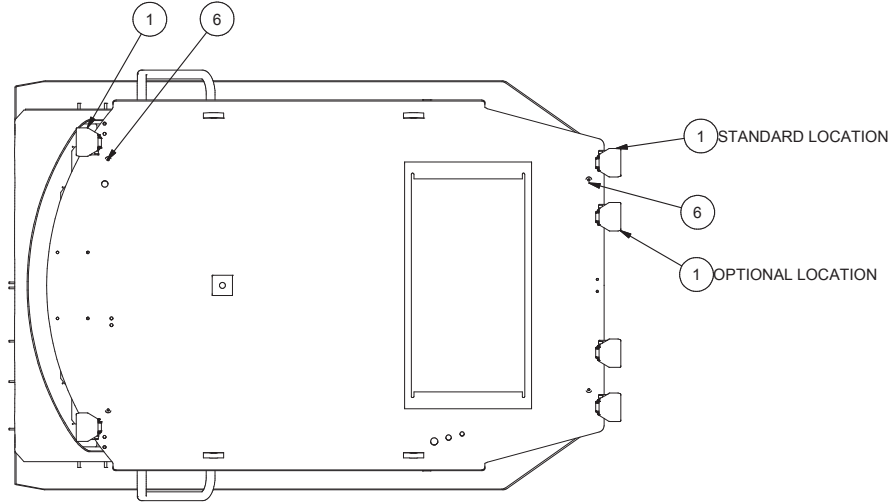

1 WHEN ROUTING WIRE HARNESS, ALLOW WIRES TO DROOP SLIGHTLY BELOW THE GROMMET TO PREVENT WATER FROM FOLLOWING WIRES INTO CAB.

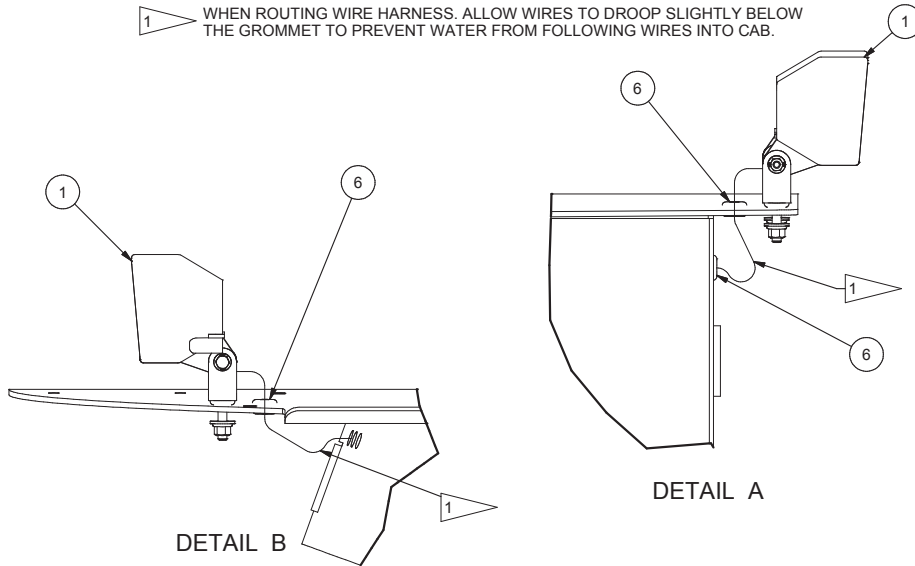

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	594299		Lights Installation, Cab				
1	258338	2	. Floodlight				
6	236806	0	. Grommet, Rubber				