


LCS Forward Drum Dumper

- Handles a variety of drum sizes and types
- Rubber covered non-slip pads
- Visibility that puts the driver in control
- Dumper arms can be removed to use as a pallet fork clamp

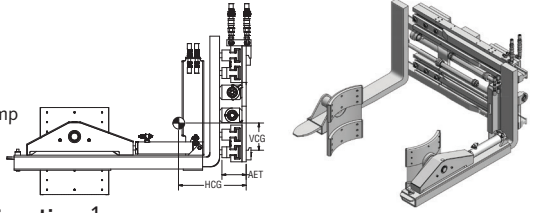

Forward Drum Dumper: 1 Powered Arm, 2 Functions¹

Model Number	Capacity with Forks (lb)	Capacity with Dumper (lb)	Opening Range (in)	Mounting Class	Lost Load AET (in)	HCG (in)	VCG (in)	Weight (lb)
LCS-25NN-DD1B8	2,500		9-55.5	II	5.0	13.6	5.6	880
LCS-35NN-DD1B8	3,500	2,000	9-60.5					920
LCS-50NN-DD1B8	5,000		12-66.1	II or III	5.0/6.0	13.4/14.4	6.1	1,045

Forward Drum Dumper: 2 Powered Arms, 2 Functions¹

Model Number	Capacity with Forks (lb)	Capacity with Dumper (lb)	Opening Range (in)	Mounting Class	Lost Load AET (in)	HCG (in)	VCG (in)	Weight (lb)
LCS-25NN-DD2B8	2,500		9-55.5	II	5.0	14.0	5.3	920
LCS-35NN-DD2B8	3,500	2,000	9-60.5					960
LCS-50NN-DD2B8	5,000		12-66.1	II or III	5.0/6.0	13.8/14.8	6.1	1,085

¹ Sideshift available. Sideshift adds a third function. A solenoid installation will be required.

Notes: Includes quick disconnect hydraulic couplings to convert drum dumper to a pallet fork clamp. Standard fork length is 48".

Recommended Hydraulic Supply

Model Number	Flow (gpm)	Max psi
All non-rotating models	7-10	2,500
All rotating models	12	2,500

Hydraulic flow less than minimum may reduce operating speed and/or cause irregular arm movement. Higher flow may result in heat build-up, erratic operation and shortened hydraulic system life.

Capacity

Mounting Class	Truck Rating
II	2,000-5,500
III	6,000-10,000

Minimum Truck Carriage Width

Model Number	Minimum Truck Carriage Width (in)	Body Width (in)
LCS-25	36	30
LCS-35	41	35
LCS-50	41	35

Installation Kits

Model Number	Number of Functions
YHJL-6-D-30 ¹	2
YHJL-8-D-30 ¹	
2527912	Set of 2 quick disconnect hydraulic couplings ²

¹ Includes the hoses to connect a standard attachment to the hose terminal on the lift truck carriage.

² See page J-3 for more information on quick disconnect coupling kits.

Optional Mounting Hooks

Description	
Class II	Quick change hooks
Class III	Quick change hooks

Mounting other than shown, consult factory.