

## **Lubrication L120**

Proper and consistent lubrication of articulation points on your Wagner is vital to the longevity of your machine.

An optional automatic lubrication system will lubricate most of the points on your Wagner, but inspection of these points is still necessary to ensure the automatic system is working properly.

Note: Manual lubrication is always required for the drivelines, and the steering column.

Note: The drivelines require a different grease than the rest of the machine. See Fluids chart in Section 5-2, or the tables on page 5-3-2 for details.

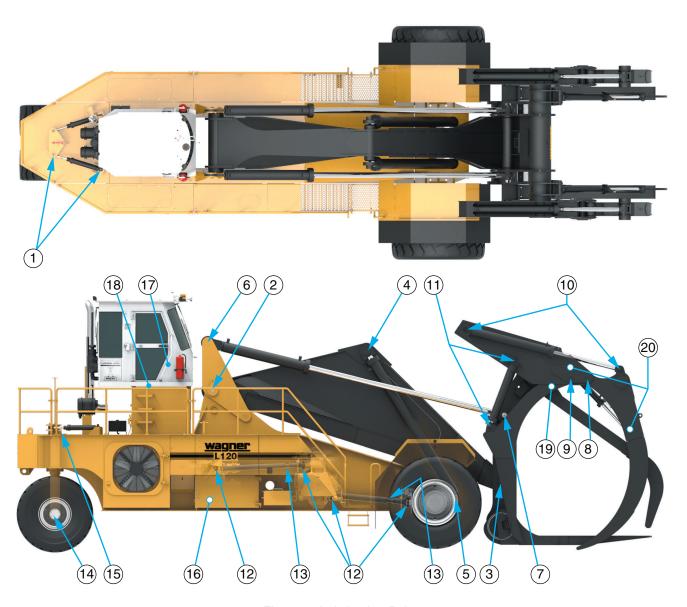


Figure 1 Lubrication Points

80-1281 Rev: 04-2019

## **Lubrication Schedule**

Refer to: Figure 1

	10 Hours	
Before engine startup, check the following:		
1	Steering Cylinder Pins	Mobilgrease Special No. 2
2	Boom To Chassis Pins	
3	Boom To Carriage Pins *a	
4 & 5	Hoist Cylinder Pins *a	
6 & 7	Tilt Cylinder Pins	
8	Holddown Arm Pins	
9	Kickoff Arm Pins	
10	Holddown Cylinder Pins	
(11)	Kickoff Cylinder Pins	
19	Aux Holddown Arm Pins	
20	Aux Holddown Cylinder Pins	
	50 Hours	
(12)	Driveline Cross Assemblies *b*c (refer to service form 80-627)	Mobilith SHC 220 Grease
16	Optional Automatic Grease System. Check grease level. See 80-1052 for service and maintenance information.	Mobilgrease Special No. 2
	250 Hours	
18	Seat Platform Swivel Bearing *c (grease fitting located under cab)	Mobilith SHC 220 Grease
	500 Hours	
(14)	Tailwheel Bearing	Mobilgrease Special No. 2
(15)	Tailpost	
16	Optional Automatic Grease System. Clean or replace grease filter. See 80-1052 for service and maintenance	
1000 Hours		
13	Driveline Slip Yokes *b*c (refer to service form 80-627)	Mobilith SHC 220 Grease
	2000 Hours	
17)	Steering Column U-Joints *c	Mobilgrease Special No. 2

<sup>\*</sup>a When operating in water, lubricate submerged points more frequently.

2 80-1281 Rev: 04-2019

<sup>\*</sup>b Use handgun or lower pressure adaptor; lubricate sparingly.

<sup>\*</sup>c Not lubricated by optional automatic grease system.