







Hydraulic System - Seat Mounted Controls

Hydraulic System - Seat Mounted Controls


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
581046 Hyd. Syst. - Seat Mtd Controls							
1	* 250367	1	. Valve, Lh Pilot Control	52	223654	2	. Locknut
2	* 249361	1	. Valve, Rh Pilot Control	53	574511	4	. Spacer
3	* 581038	1	. Junction Box Assembly	54	237391	2'	. Insulation, Pipe
4	* 581058	1	. Manifold Assembly	55	241200	2	. Insulation, Valve Cover Wrap
5	566662	2	. Bracket	59	220577	2	. Connector, Cord
6	251456	2	. Hose Assembly	60	244749	2	. Handle, Control
7	251457	2	. Hose Assembly		252842	1	. Boot
8	209589	4	. Clamp	61	579632	2	. Bracket
9	24229	8	. Fitting	62	232908	1	. Relay
10	238252	8	. Hose Assembly	63	232909	1	. Relay Socket
11	224120W	8	. Capscrew	64	232910	1	. Relay Spring
12	581070	1	. Hose Bracket Weldment	65	22628	1 m	. Rail, Din
13	581069	1	. Plate Weldment,Front	66	22635	1	. Diode
14	253441	2	. Fitting	67	241757	2	. Terminal Block
15	209596	4	. Fitting	68	232238	1	. End Plate
16	226904	4	. Fitting	69	241761	3	. End Stop
18	567173	1	. Decal	70	229808	5'	. Cord, Sdn
19	211560	17	. Fitting	71	231582	5'	. Cord, Sdn
21	581074	1	. Decal	72	203339	8	. Terminal Disc
22	214316	2	. Fitting	73	224120W	4	. Capscrew
23	253440	2	. Fitting	74	R13810998	4	. Capscrew
25	223784	24	. Fitting	75	R13807439	8	. Locknut
27	00103340	4	. Flat Washer	76	R13811443	16	. Flat Washer
28	16728W	4	. Screw	77	* 251318	1	. Handle, Joystick Control
30	568668	2	. Plate	78	* 251323	1	. Handle, Joystick Control
32	232286	6	. Hose Assembly	79	251324	2	. Boot, Rubber
35	222384	12	. Machine Screw	80	581587	2	. Rod
36	222441	16	. Locknut	81	251330	4	. Jam Nut
37	R13810993	4	. Capscrew	82	R14786	3	. Hose Assembly
38	238253	2	. Hose Assembly	83	234267	3	. Hose Assembly
39	00103339	12	. Flat Washer	84	233270	2	. Hose Assembly
41	570534	1	. Armrest, RH	85	229554	1	. Hose Assembly
42	581063	1	. Armrest, LH	86	220470	2	. Hose Assembly
44	254359	2	. Hose Assembly	87	14826	1	. Hose Assembly
46	570819	1	. Washer	88	232972	1	. Hose Assembly
47	230282	2	. Flat Washer	89	254358	6	. Hose Assembly
48	Y17C-0624	2	. Capscrew	90	224968	8	. Fitting
49	570820	1	. Washer				
50	581035	1	. Control Weldment				* See Separate Coverage

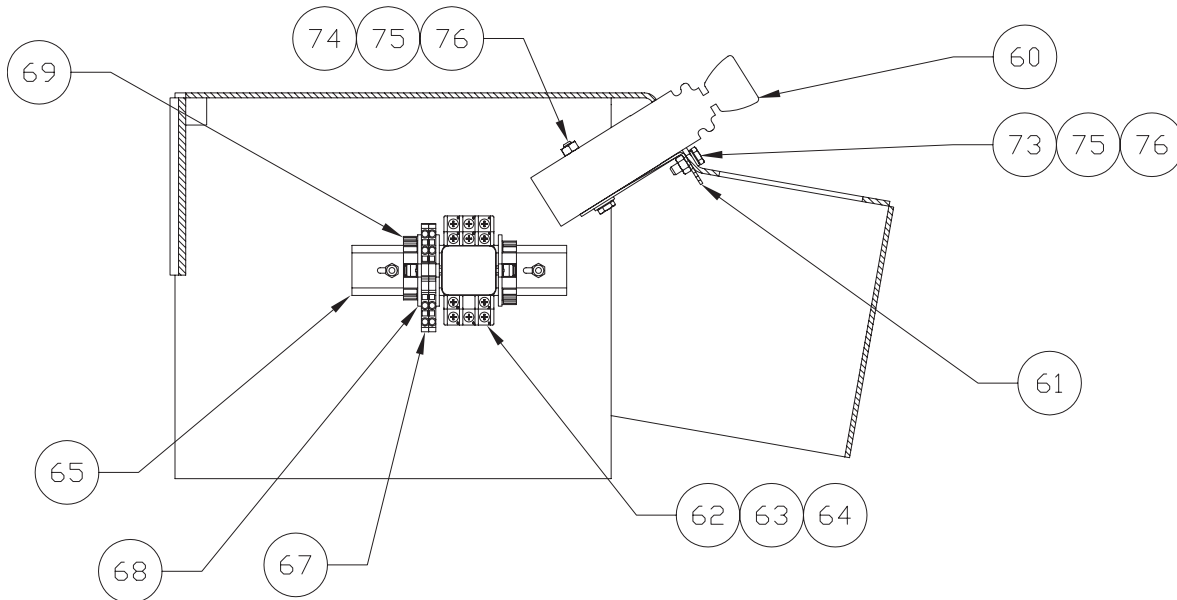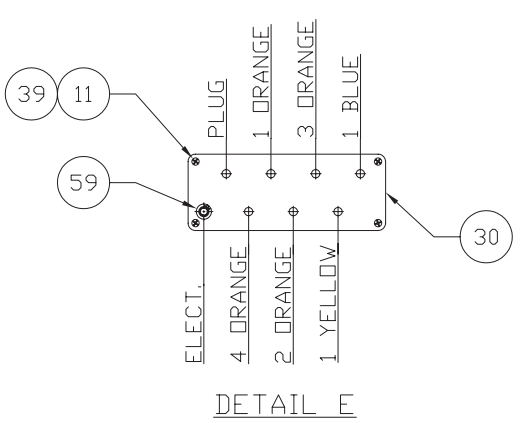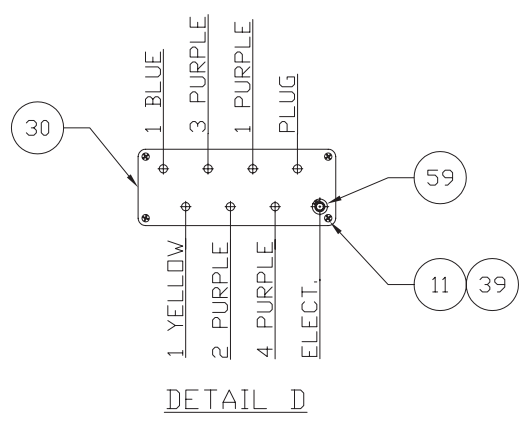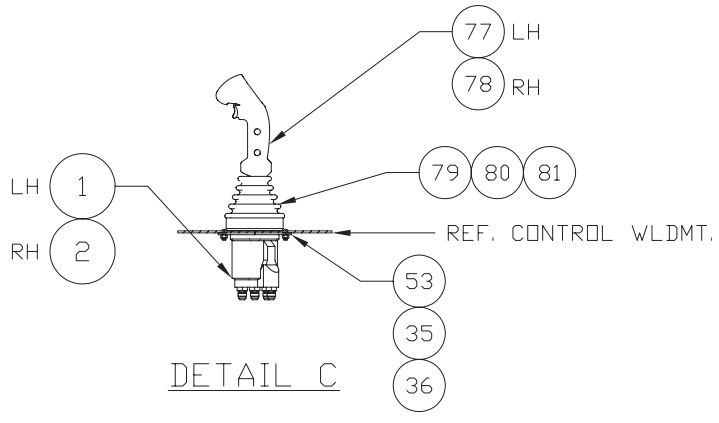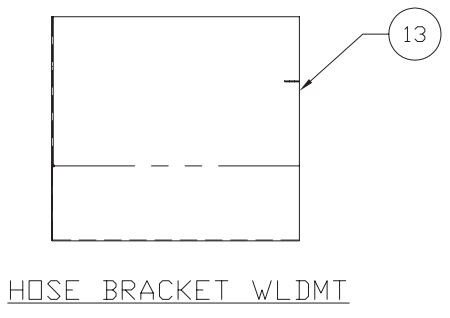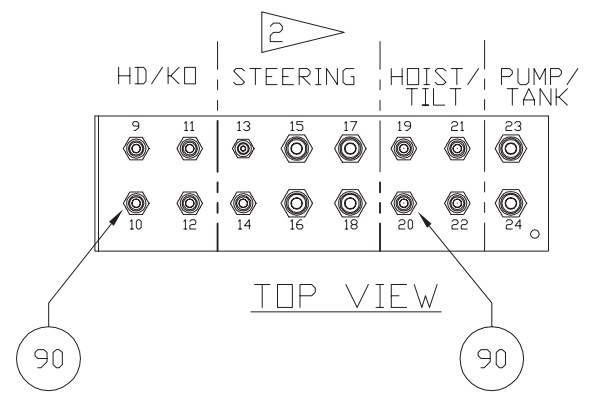

JOYSTICK STEERING DETAIL
LOCATE ELECTRICAL COMPONENTS ON INSIDE RH CONSOLE
SEE DETAIL C FOR WIRING


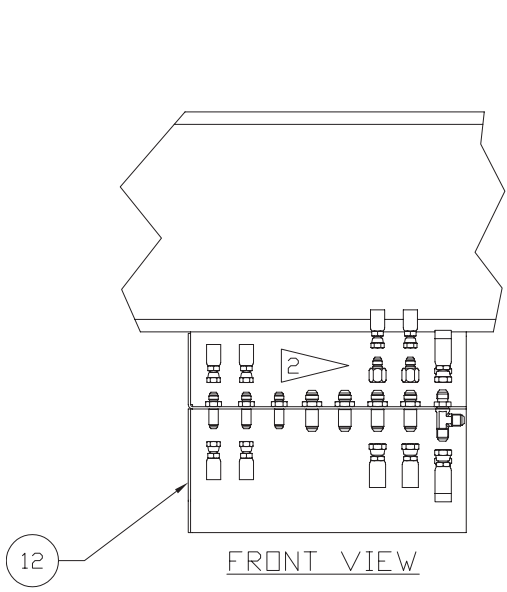


2 STEERING SYSTEM PARTS SHOWN FOR REFERENCE ONLY.

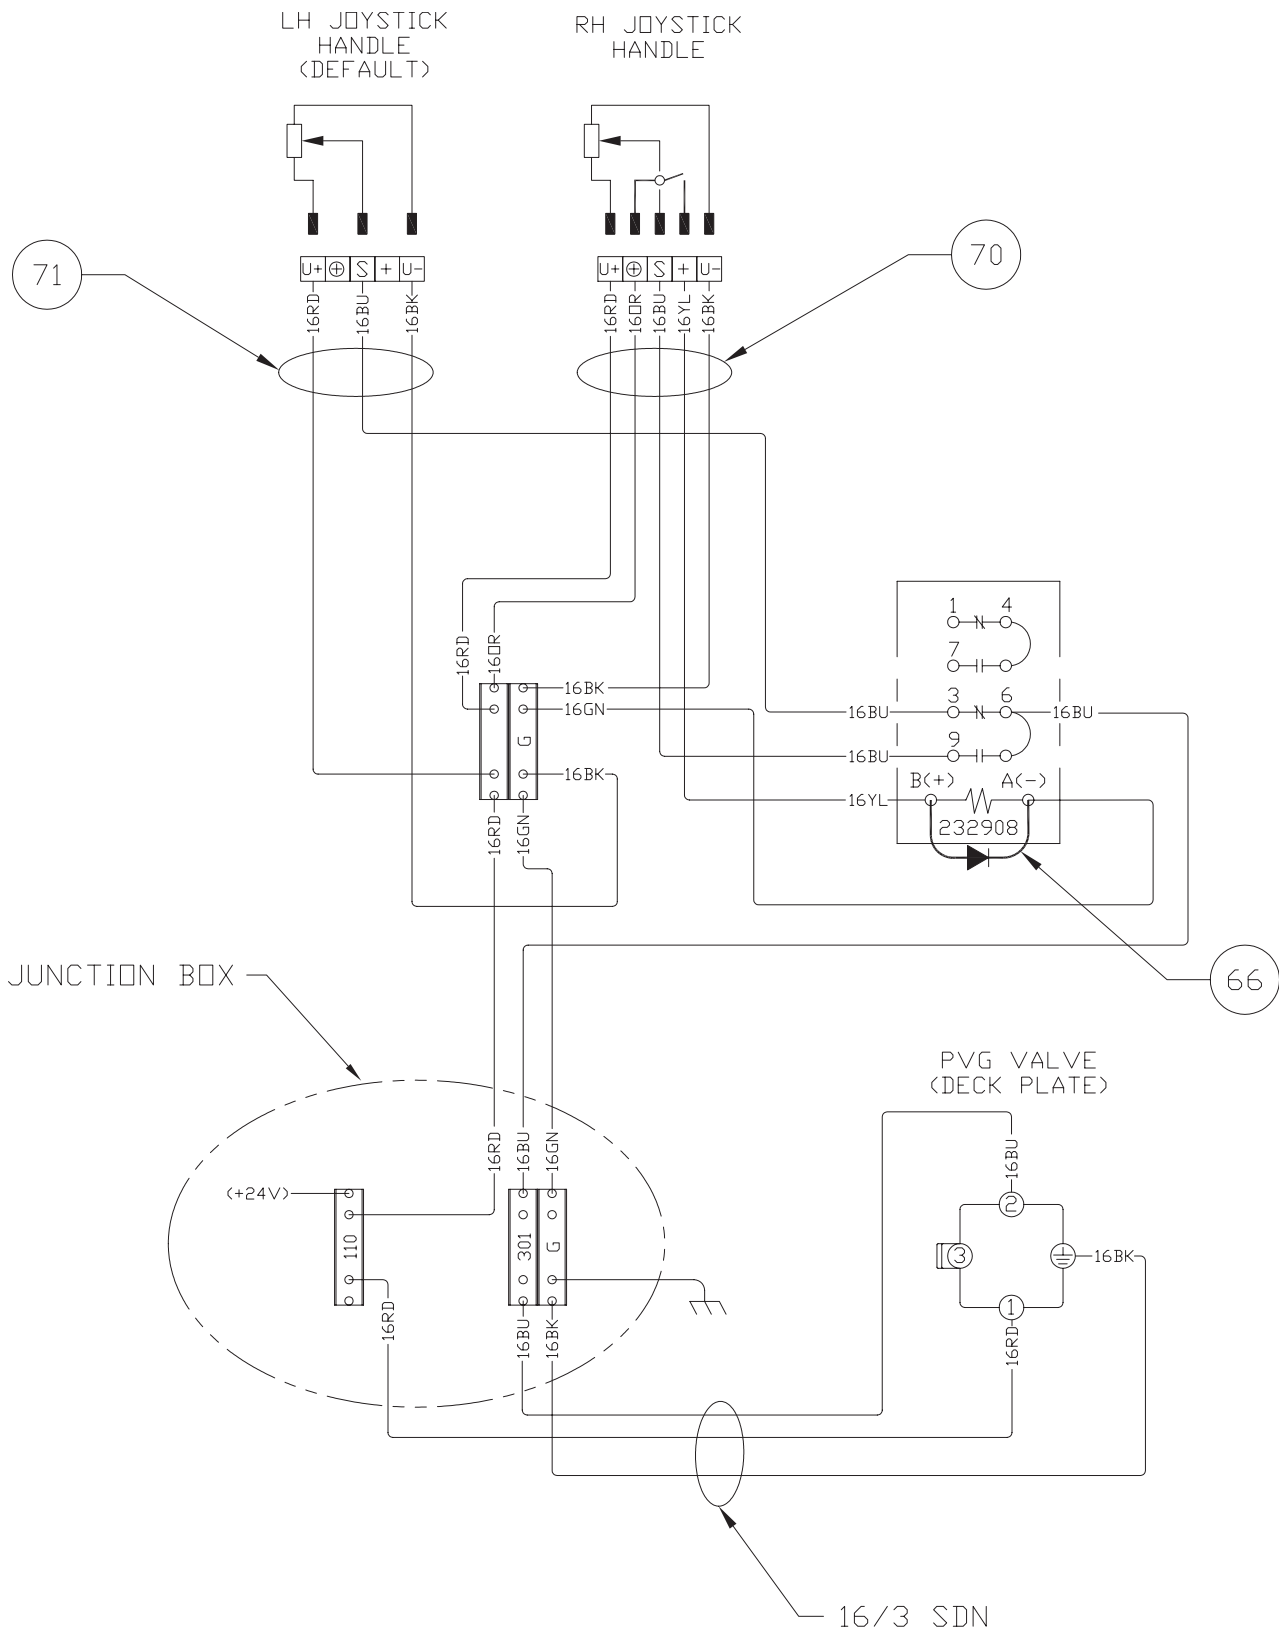

DETAIL C


JOYSTICK STEERING WIRING

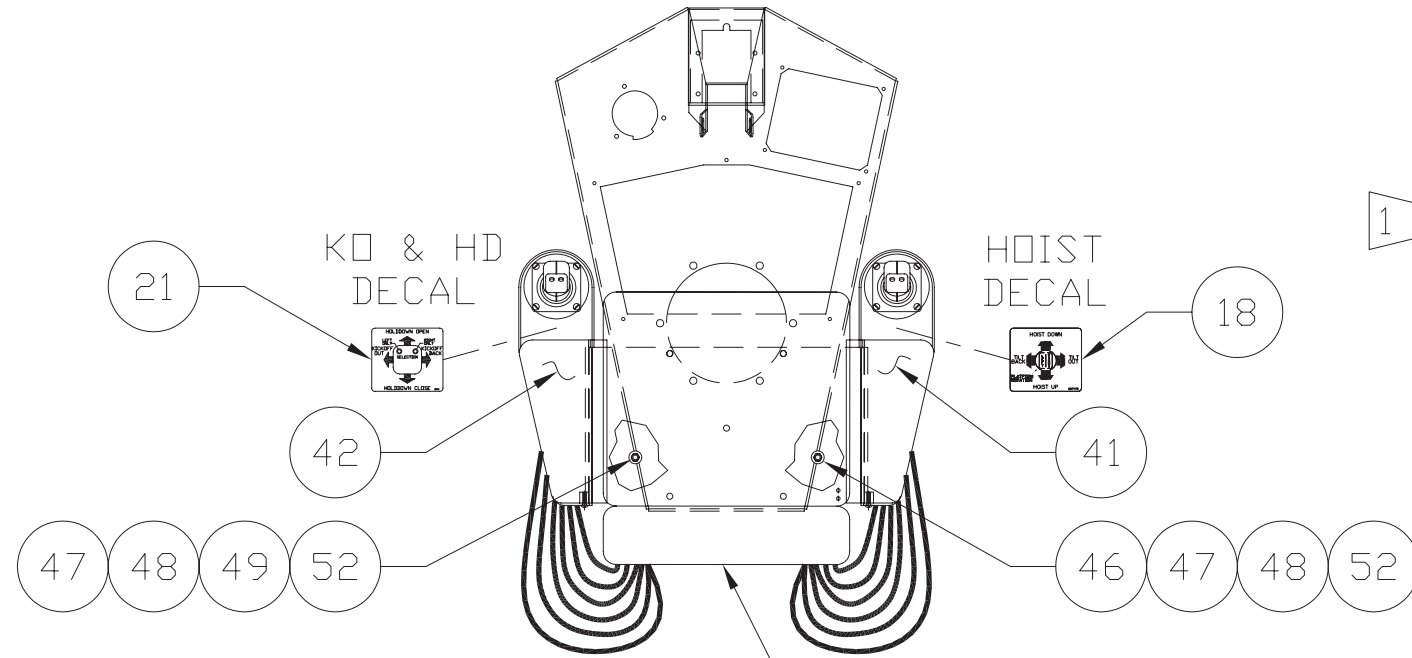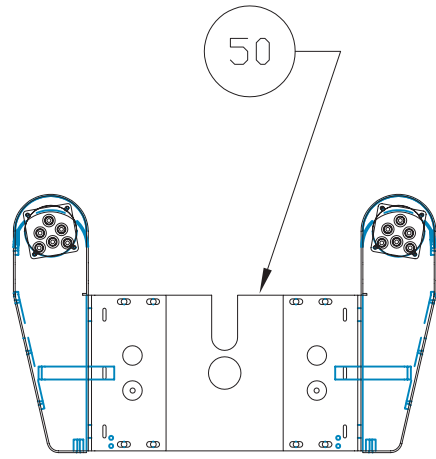

1 INSTALL ON THE INSIDE OF THE CONSOLE; FROM THE EDGE OF THE SEAT CUSHION TO THE REMOVABLE COVER PLATE.


SEAT, TOP VIEW

SEE DETAIL C

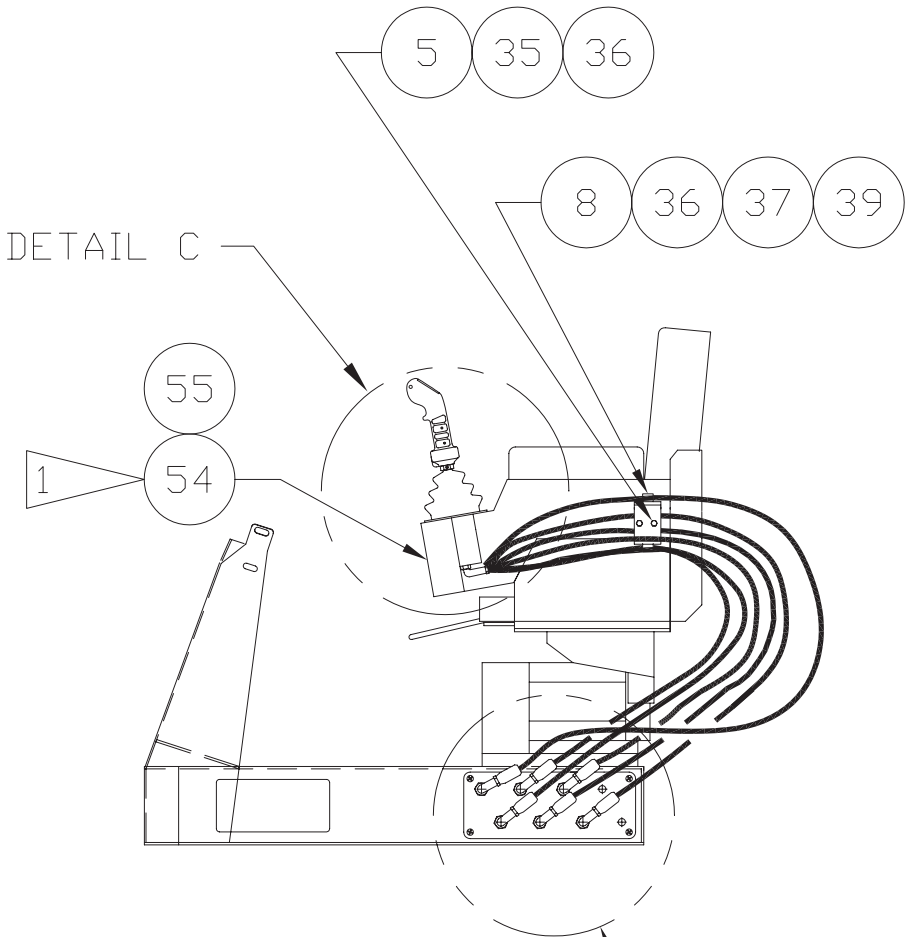


SEAT, LEFT VIEW

SEE DETAIL D

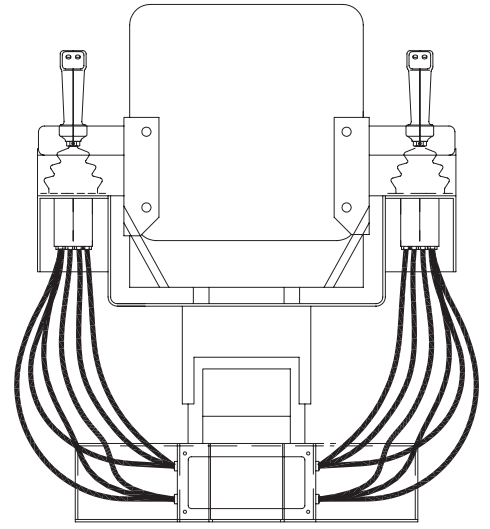



SEAT, BACK VIEW

SEE DETAIL E

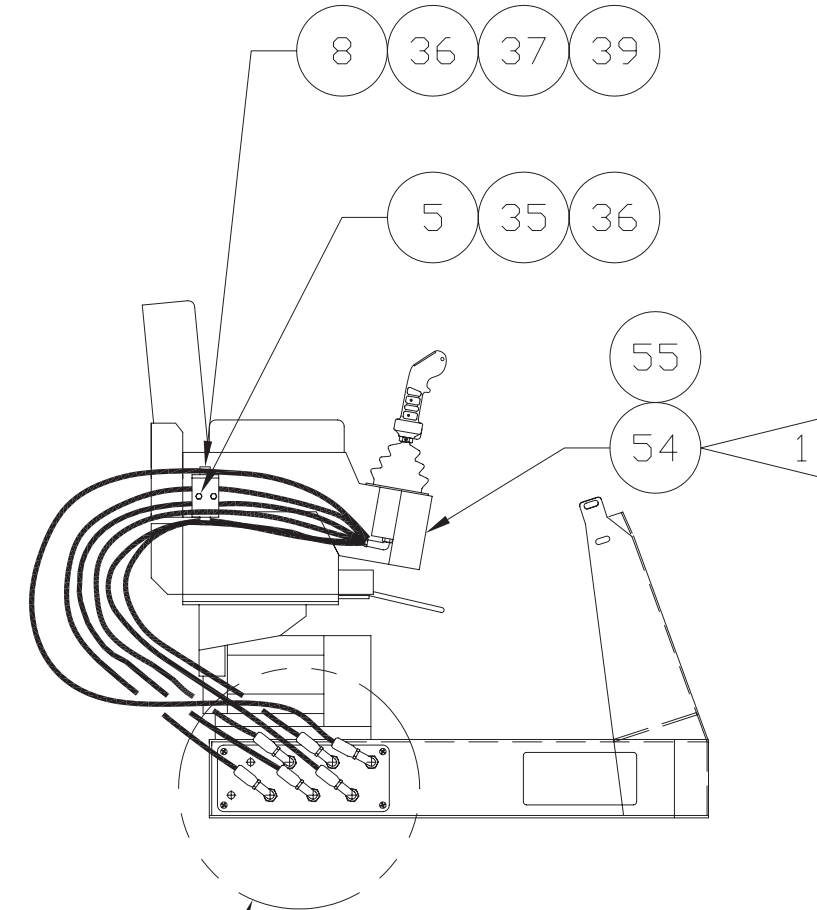


SEAT, RIGHT VIEW

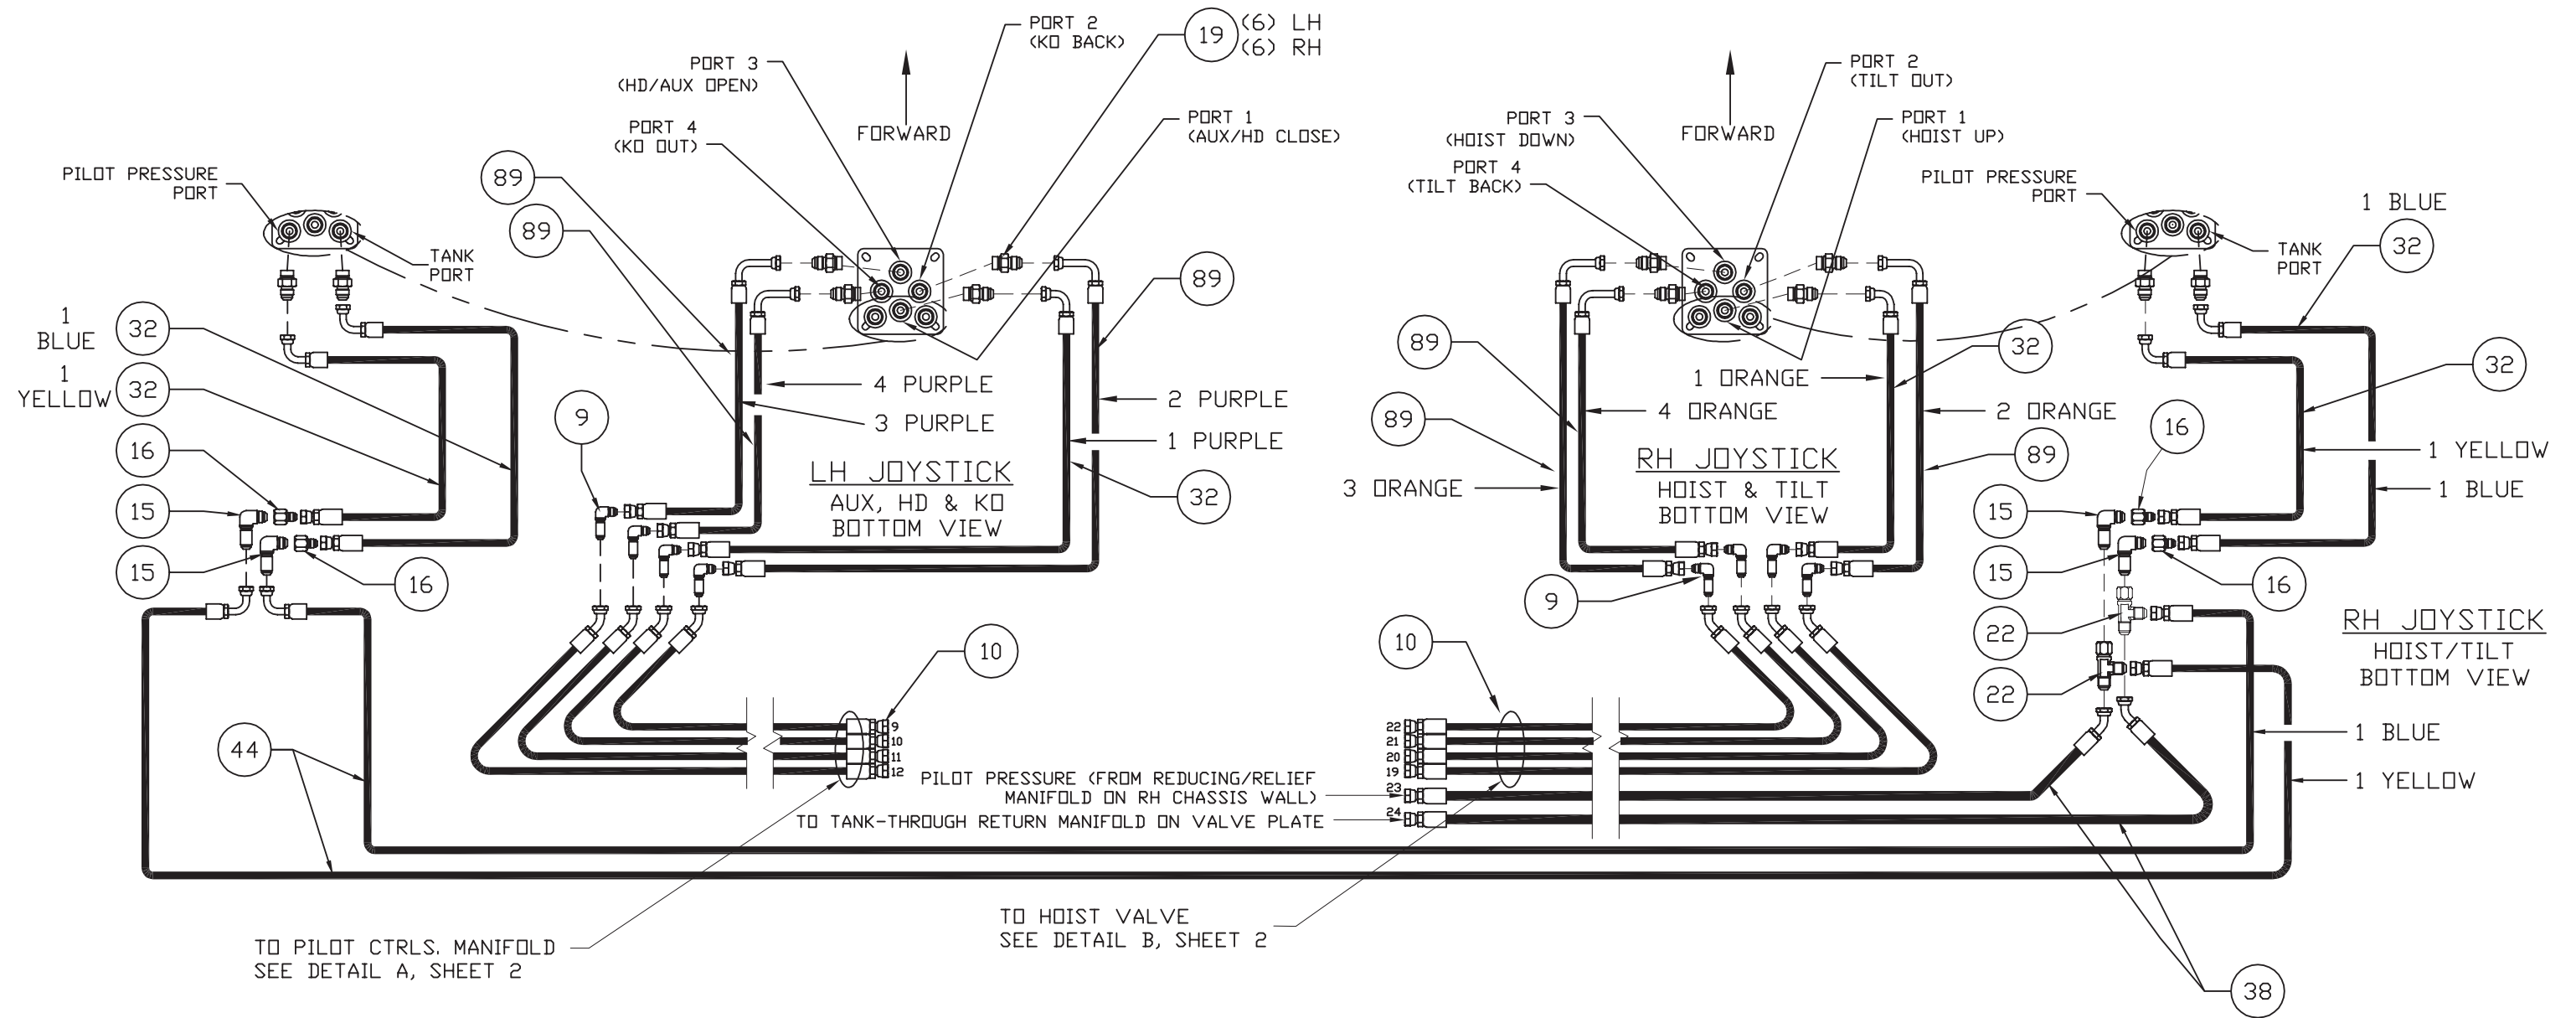

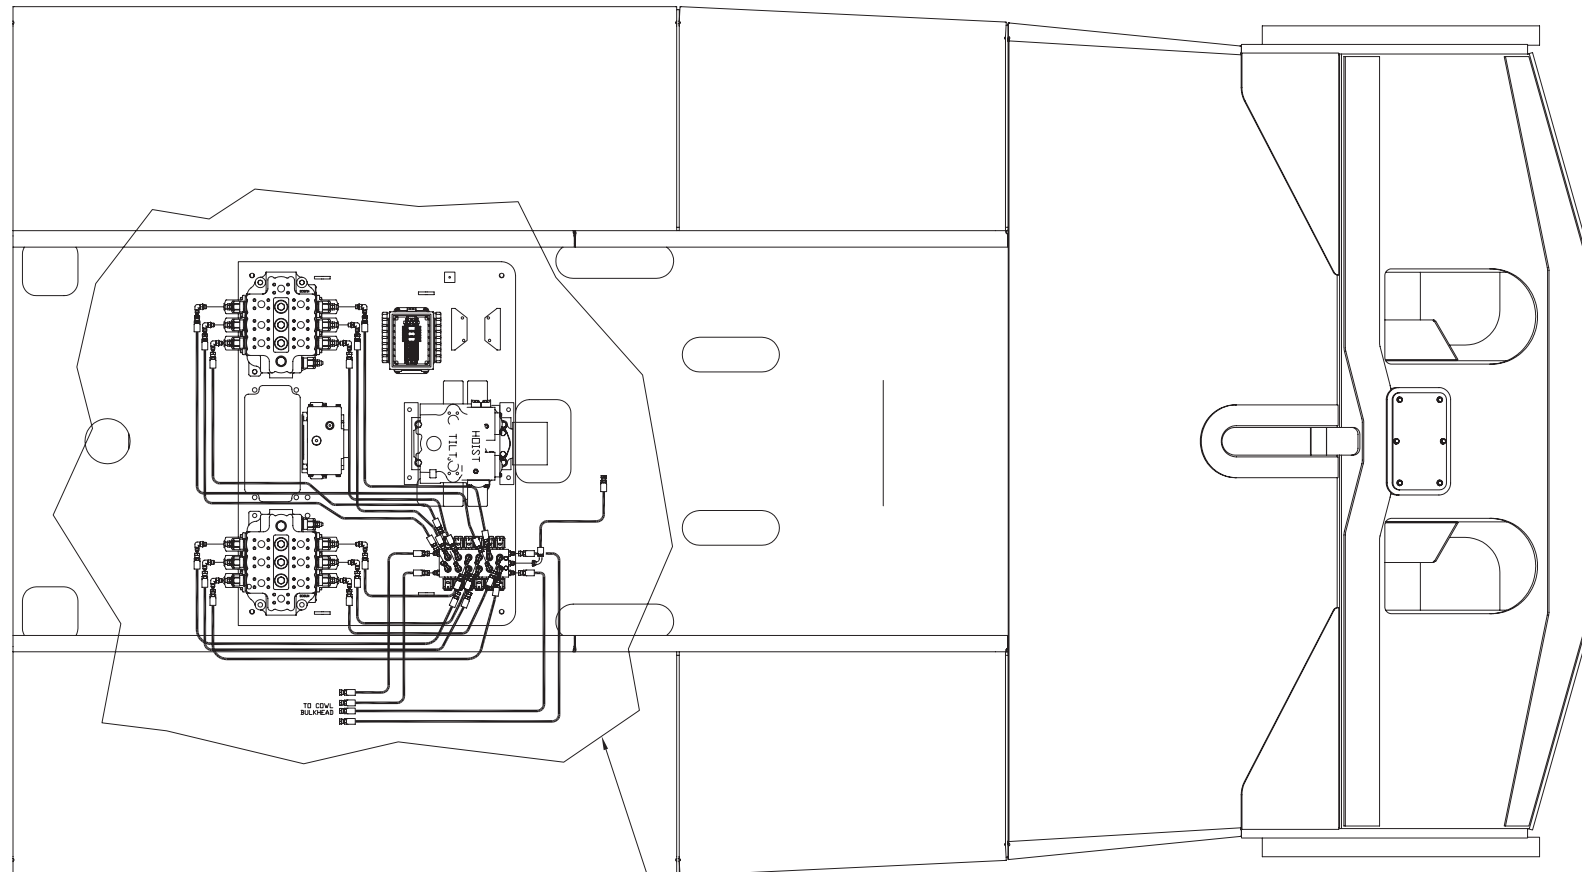

SEE DETAIL A FOR PILOT CONTROLS MANIFOLD PLUMBING
SEE DETAIL B FOR HOIST/TILT PLUMBING

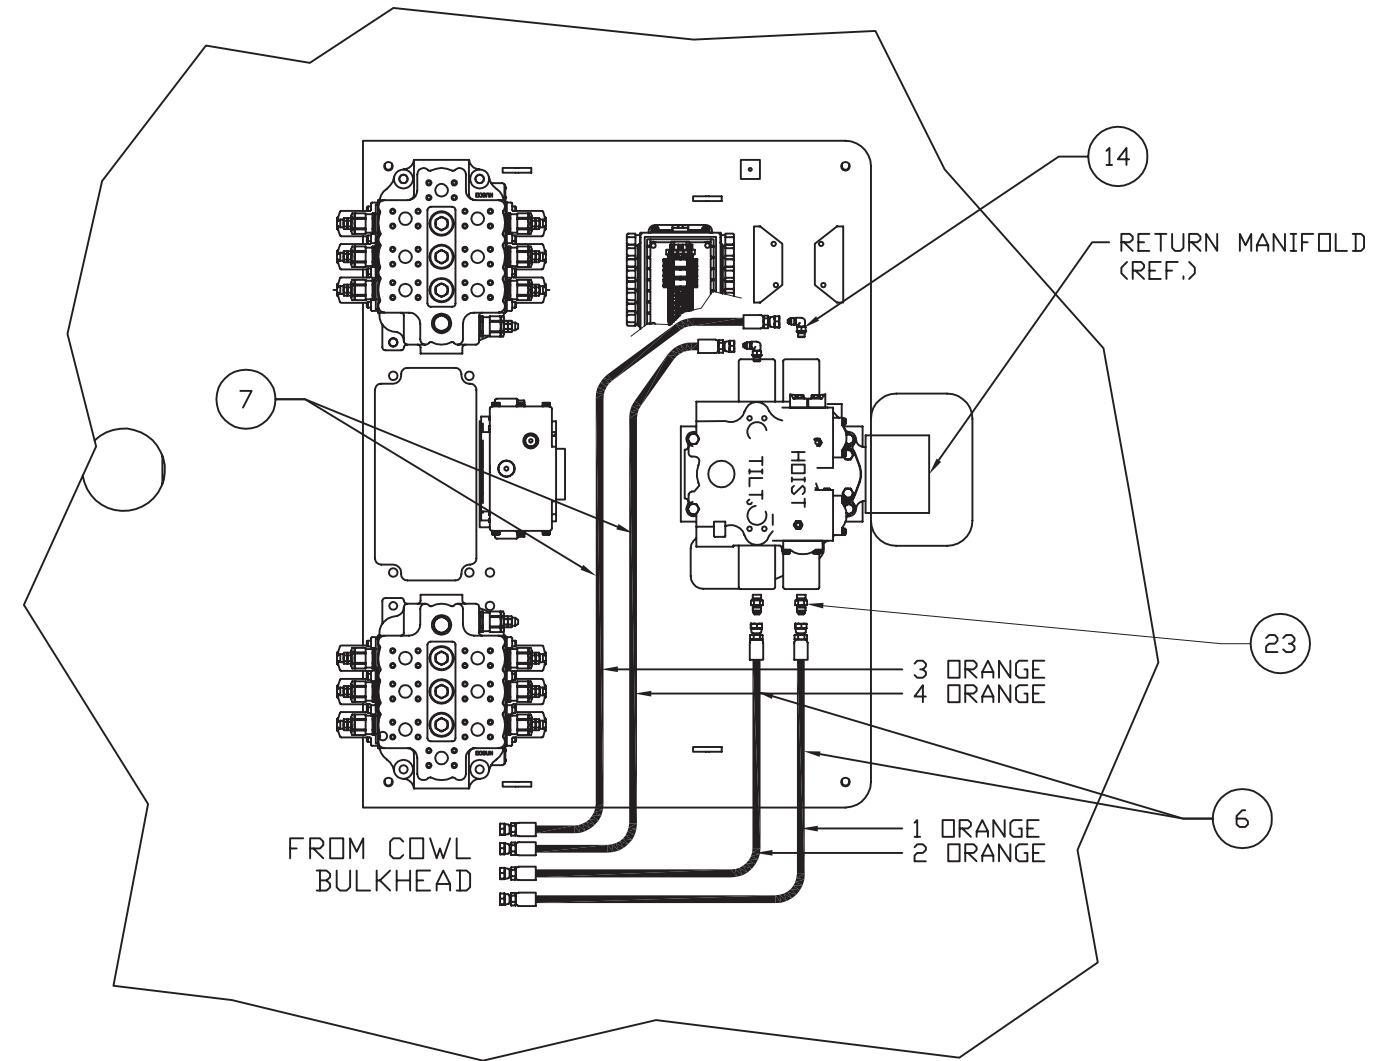

DETAIL B
HOIST/TILT VALVE

