


Freeman Automatic

ROADSIDER

Self-Propelled Bale Wagon

Parts Book

789

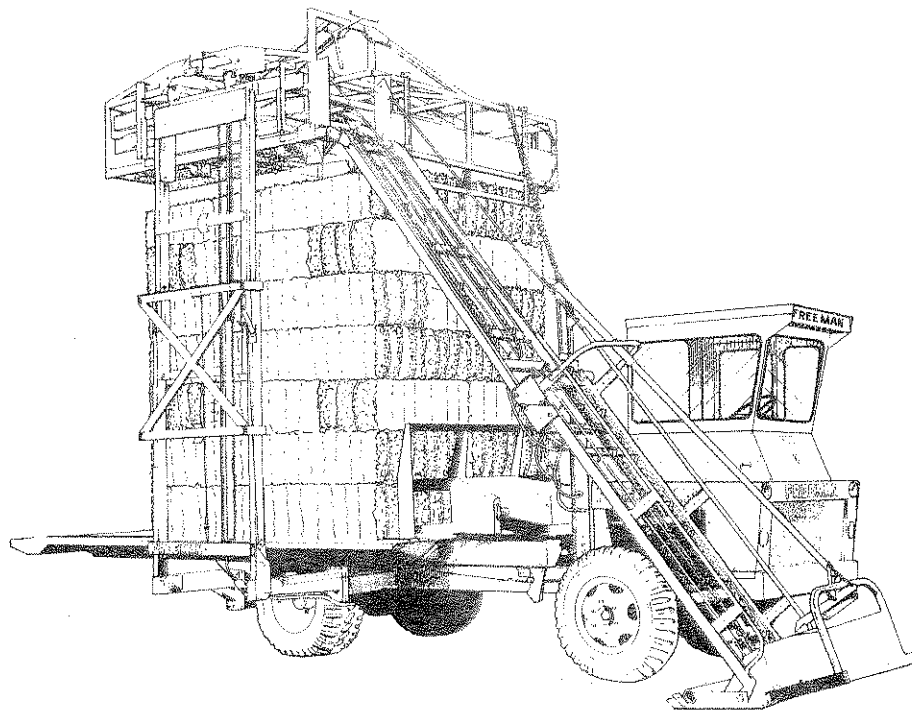

manufactured and distributed by

J. A. FREEMAN & SON, INC.



INTENTIONALLY BLANK


Freeman Automatic

ROADSIDER

Self-Propelled Bale Wagon

Parts Book

789

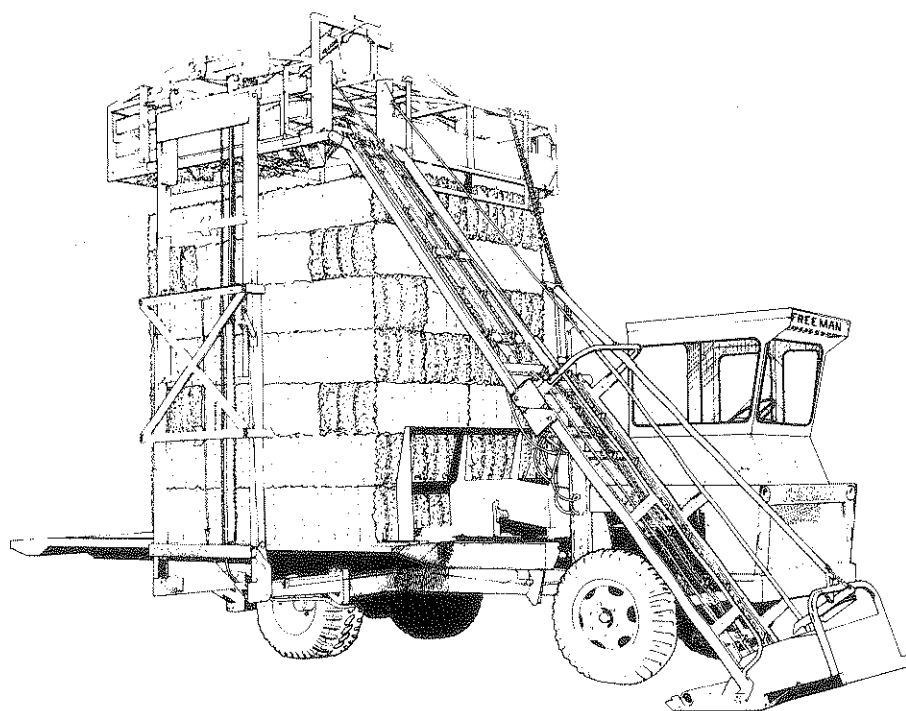

POLICY

1. It is the policy of J.A. Freeman & Son, Inc. to constantly improve its products whenever it is practical to do so.
2. J.A. Freeman & Son, Inc. reserve the right to redesign or change its equipment or component parts thereof without incurring any obligation to install or furnish such changes on equipment previously delivered.
3. Unauthorized changes or additions to equipment manufactured by J.A. Freeman & Son, Inc. relieves the company of further responsibility for warranted operation and breakage replacement.

INSTRUCTIONS FOR ORDERING PARTS

1. Order by part number and description of part.
 - (a) Parts should NOT be ordered from illustration only.
 - (b) Parts should NOT be ordered from numbers on castings.
2. Order by bale wagon serial number and model.
3. Much delay and confusion can be avoided if parts numbers are arranged in sequence on all orders.
4. State how to ship: whether by truck, stage, parcel post, air parcel post, UPS, or air freight.
5. Claims for shortage or error in handling of an order for parts must be made upon receipt of goods.
6. Address all orders for parts as follows:

J.A. Freeman & Son, Inc.
Parts Department,
2034 N.W. 27th Avenue,
Portland, Oregon 97210

Place serial number of machine here for your convenience:

Bale wagon Serial No. _____

Motor Serial No. _____

Left and right of machine are understood to mean from a position facing in the direction of travel.

Permission must be secured before any parts are returned for credit. When parts are returned, the freight must be prepaid or arrangements made so that they can be brought in by our trucks.

"NOTE"

Parts are identified by reference numbers. See parts list for correct part numbers. DO NOT USE REFERENCE NUMBERS AS PART NUMBERS.

TABLE OF CONTENTS

Pickup	1
Pickup Lift	2
Front Elevator	3, 4
Rear Elevator	5, 6
Right Hand Side Mast	7, 8
Left Hand Side Mast	9, 10
Cage	11
Cage Conveyor	12
Cage Index & Bale Support	13
Cage Pusher	14
Electric Cage Controls	15, 16
Cage Hydraulics	17, 18
Hydraulic Controls	19, 20
Main Frame Hydraulics	21, 22
Front Control Panel Hydraulics	23, 24
Rear Control Panel Hydraulics	25
Hydraulic Pumps	26
Steering Hydraulics	27
Steering Assembly	28
Manual Control Levers	29
Transmission Shift Mechanism	30
Deck & Engine Hood	31, 32
Brake & Clutch	33, 34
Vacuum Booster & Pump	35, 36
Main Frame & Bed	37, 38
Load Pusher	39
Drive Line	40
Front Axle	41, 42
Rear Axle	43, 44
Rear Axle Differential Breakdown	45, 46
Transmission	47, 48
Electrical	49, 50
Exhaust & Air Cleaner	51, 52
Radiator & Engine Mounts, J.D.	53
Radiator & Engine Mounts, A.C.	54
Cab	55, 56
Air Conditioner	57
Seat Assembly	58
Steering Gear Assembly Breakdown	59, 60
Fuel Lines	61
Hydraulic Motor Breakdown	62
Hydraulic Control Valve Breakdown (01-520)	63
Prince Cylinder	64
Hypower Cylinders	65, 66, 67
Victor Cylinders	68
Brake Cylinder	69
Hydraulic Control Valve Breakdown (01-507)	70
Relay Box Wiring Diagram	71

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
01-115	22	02-153	14	05-111	4-6
01-145	18	02-157	28	05-112	4-6
01-146	18	02-158	28	05-113	6-12
01-200	22	03-110	50	05-121	12
01-209	18	03-112	50	05-122	20
01-211	22	03-113	50	05-133	8
01-236	18	03-114	50	05-140	39
01-237	18	03-116	50	05-145	8-10
01-238	18	03-130	36, 50	05-210	39
01-315	22	03-132	36-50	05-211	39
01-418	18	03-134	50	05-212	38, 39
01-419	18	03-142	24	05-214	39
01-420	18	03-150	50	05-216	36
01-432	18	03-155	50	05-219	39
01-433	18	03-156	50	05-236	26
01-507	20-22-70	03-157	50	05-237	26
01-513	22	03-158	16	05-238	26
01-514	24-27	03-159	16	05-239	26
01-516	22	03-160	16	05-240	26
01-520	20-22, 63	03-161	16	05-241	26
01-521	22	03-162	16	05-243	36
01-526	34	03-163	16	05-244	36
01-527	34	03-164	16	05-255	6
01-552	14-28, 66	03-165	16	05-901	4-6
01-555	22, 67	03-166	16	05-907	26
01-560	22, 67	03-167	16	06-106	18
01-566	8-10, 65	03-168	16	06-113	8-10
01-569	2-22, 68	03-170	16	06-118	39
01-570	2-22, 68	03-171	16	06-121	25-26
01-604	18	03-172	16	06-122	14
01-607	22, 39	03-173	16	06-124	28
01-627	26	03-174	16	06-125	34
01-628	26	03-175	16	06-126	34
01-630	22	03-176	16	06-130	22
01-631	22	03-177	16	06-131	34
01-635	26	03-178	16	06-136	36
01-636	26	03-179	16	06-145	14
01-718	36	03-180	16-24	06-147	28
01-719	36	03-181	16	06-149	22
01-720	18-22-24-27-36	03-182	16	07-114	28
01-722	18-22	03-183	16	07-120	20
01-723	22	03-184	16	07-123	38
01-738	22	03-185	16	07-124	18
01-802	34	03-186	16	07-126	16
01-803	34	03-187	16	10-106	4
01-804	34	03-188	16	10-109	4
01-806	34	03-189	16	10-110	4-6
01-807	34, 36	03-190	16	10-111	4-6
01-810	36	03-191	16	10-112	4
01-812	34	03-192	16	10-114	4
01-813	61	03-193	16-50	10-115	4
01-814	61	03-195	50	10-116	4
01-862	34	03-196	50	10-118	6
01-863	34	03-199	50	10-119	6
01-865	61	03-200	50	10-131	6
01-866	61	03-201	50	10-132	6
01-867	61	03-202	50	10-135	6
01-868	61	03-203	50	10-139	1
01-869	61	03-204	50	10-142	1
01-870	61	03-209	50	10-143	1
01-871	61	03-210	50	10-144	1
01-872	61	03-900	16	10-145	1
01-873	61	03-901	16, 50	10-146	1
02-104	4, 6, 12	04-105	13	10-149	4
02-106	14	04-109	29	10-152	4
02-108	8, 10	04-123	2	10-153	4
02-112	39	05-107	12	10-154	4
02-120	30	05-108	4, 6	10-155	2
02-145	39	05-110	29	10-157	6

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
10-904	4	12-124	8	18-143	30
10-905	6	12-125	8-10	18-146	30
11-102	11	12-126	8-10	18-147	29
11-103	11	12-128	8	18-149	30
11-109	14	12-144	10	18-152	30
11-122	13	12-146	10	18-153	30
11-124	13	12-154	8	18-154	30
11-126	13	12-155	10	18-157	30
11-128	13	12-182	10	18-169	30
11-168	14	12-183	10	18-173	29
11-169	14	16-125	38	18-174	29
11-171	14	16-126	38	18-185	22
11-175	14	16-127	38	18-188	8
11-180	14	16-140	38	18-189	29
11-183	14	16-141	38	18-192	29
11-184	20	16-142	38	18-194	29
11-192	13	17-115	32	18-195	29
11-203	14	17-118	32	18-196	29
11-204	14	17-123	32	19-109	42, 44
11-205	14	17-128	32	19-115	44, 50
11-206	14	17-129	32	19-120	40
11-207	14	17-134	32	19-124	40
11-208	14	17-135	32	19-125	40
11-209	11	17-139	32	19-139	34
11-211	11	17-140	32	19-140	34
11-218	13	17-141	32	19-141	34
11-220	13	17-142	32	19-142	34
11-225	11	17-153	32	19-143	36
11-230	14	17-175	32	19-148	34
11-235	16	17-176	32	19-151	34
11-237	11	17-178	32	19-155	34
11-238	11	17-179	32	19-157	34, 69
11-244	14	17-180	32	19-159	34, 44
11-245	14	17-181	32	19-162	36
11-246	13	17-182	32	19-164	36
11-247	12	17-186	32	19-191	34
11-248	12	17-187	32	19-193	44, 50
11-251	12	17-188	32	19-202	34, 48
11-253	16	17-189	32	19-209	40
11-254	16	17-190	32	19-210	42
11-255	16	17-192	32	19-212	40
11-256	16	17-195	32	19-214	40
11-257	16	17-196	32	19-215	40
11-258	16	17-198	32	19-216	40
11-259	16	17-199	28	19-220	36
11-260	16	17-202	28	19-222	36
11-261	16	17-204	28	19-223	36
11-262	16	17-206	28	19-225	42
11-263	16	17-207	28	19-226	42
11-264	16	17-208	28	19-227	42
11-265	16	17-209	27, 28, 60	19-228	42
11-266	16	17-211	28	19-229	42
11-267	16	17-213	28	19-230	42
11-268	16	17-214	28	19-232	42
11-269	16	17-215	28	19-233	42
11-270	13	17-216	28	19-235	42
11-274	11	17-217	28	19-236	42
11-275	13	17-218	28	19-237	42
11-276	13	17-220	28	19-238	42
11-903	12	17-235	16, 32	19-239	42
12-114	8-10	17-236	32	19-240	42
12-116	8-10	17-237	27, 60	19-241	42
12-117	8-10	18-122	29	19-243	42
12-118	8-10	18-124	29	19-244	42
12-119	8-10	18-126	29	19-245	42
12-120	8	18-128	36	19-246	42
12-121	8	18-140	30	19-247	42
12-122	8-10	18-141	30	19-248	42
12-123	8-10	18-142	30	19-249	42

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
19-250	42	20-217	61	B 0093161	48
19-252	42	AC 0923817	26	B 0093257	48
19-253	42	AC 4023052	26	B 0093628	48
19-254	42	AC 4023925	26	B 0093644	48
19-255	42	AC 4024630	26	B 0093769	48
19-256	42	AC 4026549	26	B 0093787	48
19-257	42	AC 4027293	26	B 0093798	48
19-258	42	AC 4357289	26	B 0093966	48
19-259	42	ACN0048280	57	B 0094227	48
19-260	42	ACN0529945	57	B 0094228	48
19-261	42	ACN0960800	57	B 0094229	48
19-262	42	ACN1120009	57	B 0094458	48
19-263	42	ANC0007256	38	B 0094809	48
19-264	42	ARM0007373	2	B 0094816	48
19-265	42	ARM0007522	38	B 0095249	48
19-266	42	ARM0007633	38	B 0095276	48
19-267	42	ARM3133117	28, 42	B 0095849	48
19-268	42	ARM4382812	28	B 0096711	48
19-269	42	AXL0007505	42	B 0097342	48
19-270	42	AXL0007694	44	B 0097422	48
19-271	42	AXL0687991	44	B 0097844	48
19-272	42	B 0011353	48	B 0097847	48
19-273	42	B 0011564	48	B 0097848	48
19-274	42	B 0011650	48	B 0097974	48
19-275	42	B 0035662	48	B 0097978	48
19-279	36	B 0035666	48	B 0097979	48
19-280	36	B 0038809	48	B 0097982	48
19-316	36	B 0038869	48	B 0097986	48
19-317	36	B 0061527	48	B 0097991	48
19-322	36	B 0090128	48	B 0097998	48
19-909	40	B 0090235	48	B 0097999	48
19-914	42	B 0091204	48	B 0099003	48
19-915	42	B 0091217	48	B 0099009	48
20-104	53	B 0091221	48	B 0099705	48
20-109	53, 54	B 0091224	48	B 0099976	48
20-112	53, 54	B 0091233	48	B 0147491	48
20-127	52	B 0091239	48	B 0223736	48
20-128	52	B 0091484	48	B 0423351	48
20-129	52	B 0091486	48	B 0444592	48
20-130	52	B 0091491	48	BFL0000204	53
20-131	52	B 0091504	48	BFL0000242	53
20-132	52	B 0091677	48	BFL0009221	54
20-133	52	B 0091739	48	BFL0009222	54
20-140	52	B 0091924	48	BFL0009223	54
20-143	52	B 0092106	48	BFL0009224	54
20-151	52	B 0092345	48	BKT0005688	26
20-153	52	B 0092348	48	BKT0005769	61
20-160	52	B 0092421	48	BKT0005931	26
20-161	53, 54	B 0092429	48	BKT0006788	38
20-164	54	B 0092496	48	BKT0006805	56
20-174	53	B 0092497	48	BKT0006911	32
20-176	53	B 0092533	48	BKT0007018	57
20-177	53	B 0092534	48	BKT0007070	53
20-178	53	B 0092695	48	BKT0007364	54
20-180	53	B 0092712	48	BKT0007415	34
20-181	53	B 0092716	48	BKT0007416	34
20-184	53	B 0092717	48	BKT0007444	53, 54
20-185	53	B 0092718	48	BKT0007498	38
20-186	53	B 0092719	48	BKT0007783	52
20-192	53	B 0092732	48	BKT0007992	24
20-195	52	B 0092737	48	BKT0007997	20, 22
20-199	53	B 0092743	48	BKT0008427	36
20-206	52	B 0092779	48	BKT0008510	36
20-208	52	B 0092794	48	BKT0009258	29
20-210	52	B 0092796	48	BKT0074450	54
20-213	61	B 0092822	48	BKT0074451	54
20-214	61	B 0092917	48	BKT0076150	53
20-215	52	B 0093079	48	BKT0076151	53
20-216	52	B 0093081	48	BKT0752100	57

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
BKT0752101	57	CHR0015048	62	ETN0025967	46
BLO0000100	56	CHR0060023	4, 6, 22, 62	ETN0027859	46
BLO0000700	56	CLH0007485	34	ETN0027860	46
BLO0001065	56	CLH0011967	48	ETN0027875	46
BLO0003316	56	CLH01219BW	48	ETN0027876	46
BLO0006305	56	BLH0260280	48	ETN0027880	46
BLO0062318	56	CLP0038100	18	ETN0029571	46
BLC0007786	20	CLP0035772	8, 10	ETN0030689	44
BLC0007787	20	CLP121	18	ETN0030714	44
BLC0007998	20	CNK0000550	12	ETN0030800	46
BLC0008386	20	CNK0005500	4, 6	ETN0032425	46
BLJ0000109	20, 30	COT0000504	20	ETN0033699	46
BLJ0001090	20, 30	CRB5003000	11	ETN0035278	44
BLK0008049	20	CVR0006779	56	ETN0035585	46
BLT0004710	57	CWL0083240	32	ETN0036480	44
BLT2509905	57	CWL0083241	32	ETN0036997	44
BMP6021044	56	CYL0031818	2	ETN0037888	44
BON0008271	22, 70	CYL0181106	2, 68	ETN0037889	44
BRC0007888	20	CYL0181107	2, 68	ETN0039520	44
BRC0008512	36	CYL0410112	68	ETN0041568	46
BRC0008564	36	CYL0411088	68	ETN0041583	46
BRG0000493	44	CYL0412057	68	ETN0042002	44
BRG0008099	2	CYL0414207	68	ETN0042055	46
BRG000M18N	8-10	CYL0414208	68	ETN0043269	46
BRG0010846	16	CYL0419146	68	ETN0044356	46
BRG0063052	48	CYL1000014	64	ETN0045461	46
BRG0181491	30	CYL1040008	64	ETN0047399	46
BRK0007484	34	CYL1411003	64	ETN0050432	44
BRK3120531	44	CYL1713122	64	ETN0050436	44
BSH0000103	20	CYL1818110	2	ETN0050437	44
BSH0009502	53, 54	CYL1904001	64	ETN0050443	44
C 0006554	26	CYL1904002	64	ETN0054463	46
CAB 0000101	56	CYL2200208	64	ETN0054562	46
CAB 0000102	56	CYL2400018	64	ETN0059191	44
CAB 0000103	56	CYL2400214	64	ETN0059192	44
CAB 0000104	56	CYL2400326	64	ETN0059502	44
CAB 0000105	56	CYL2401326	64	ETN0060598	46
CAB 0000106	56	CYL2405214	64	ETN0062829	46
CAB 0000107	56	CYL2405326	64	ETN0062830	46
CAB 0000109	56	CYL2501214	64	ETN0063028	46
CAB 0008864	56	CYL5110008	64	ETN0064085	46
CAM0007863	20	CYL7110004	64	ETN0064551	46
CAM0008394	20	CYL8110006	64	ETN0065515	46
CBL0007461	8, 10	DOR0006867	56	ETN0067814	46
CBL0074600	8	DOR0006868	56	ETN0067817	46
CBL0074601	8	ELC0005020	56	ETN0067815	46
CGF0008592	11	ELC0005540	50	ETN0071806	46
CHN0020003	6	ELC0015019	24	ETN0074021	46
CHN0020005	4	ELV0007962	4	ETN0074022	46
CHN0020007	8	ELV0586500	6, 12, 16	ETN0074023	46
CHN0020008	8	ETN0009797	46	ETN0075184	44
CHN2060107	10	ETN0009803	46	ETN0076930	46
CHR0000616	62	ETN0009820	46	ETN0078400	46
CHR0005389	62	ETN0012495	46	ETN0078401	46
CHR0005776	62	ETN0012904	46	ETN0079470	46
CHR0005777	62	ETN0013377	46	ETN0090536	46
CHR0006049	62	ETN0014354	46	ETN0090873	46
CHR0006901	62	ETN0014571	44	ETN0095204	46
CHR0007357	62	ETN0014935	46	ETN0096800	46
CHR0007358	62	ETN0014949	46	ETN0099596	44
CHR0007359	62	ETN0014950	46	ETN0102739	46
CHR0007360	62	ETN0014970	46	EXH0000101	52
CHR0007461	62	ETN0015050	46	EXH0007809	52
CHR0007462	62	ETN0015092	46	F 0000025	6, 25
CHR0007464	62	ETN0015094	46	F 0000123	6
CHR0007537	62	ETN0015828	46	F 0000129	38
CHR0009055	62	ETN0018346	46	F 0000172	4, 6, 30, 39
CHR0009057	62	ETN0019186	44	F 0000278	16
CHR0014193	62	ETN0023130	46	F 0000440	4, 20, 30

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 0000570	20	F 0006599	14, 18, 64	GRS2701903	63
F 0000747	1, 11, 18, 38	F 0006627	50	GSK0008270	22, 70
F 0000760	10, 39	F 0006628	24	GUD0007139	8
F 0000766	8, 10	F 0006629	18	GUD0008416	1, 4
F 0000822	14	F 0006639	50	GUD0071440	8
F 0000840	11	F 0006657	24	GUD0073390	8
F 0000853	32	F 0006758	34	GUD0073391	10
F 0000857	6	F 0006793	52	HOS0008273	22
F 0000862	50	F 0006795	52	HOS0008452	22
F 0000883	6, 39	F 0006821	53, 54	HOS0008453	22
F 0000990	8	F 0006823	54	HOS0008454	22
F 0000994	8, 29	F 0006825	54	HOS0008455	22
F 0000995	8, 29	F 0006827	54	HOS0008456	22
F 0001002	29	F 0006828	36	HOS0008457	22
F 0001003	29	F 0006830	53, 54	HOS0008458	18, 22
F 0001007	38	F 0006857	32	HOS0008459	18, 22
F 0001019	1	F 0006858	58	HOS0008460	18, 22
F 0001280	4, 6	F 0007166	32	HOS0008461	22
F 0001385	39	F 0007247	34	HOS0008462	22
F 0001386	4, 6, 8, 10	F 0007598	14	HOS0008463	22, 25
F 0001505	56	F 0008264	32, 56	HOS0008464	22, 26
F 0001517	34	F 0008301	53	HOS0008465	26, 27
F 0001568	20	FD 0000049	1	HOS0008466	22, 27
F 0001589	32	FD 0007114	56	HOS0008467	22
F 0001643	13	FIL0007933	52	HOS0008468	22
F 0001689	32	FIL0010008	32	HOS0008469	22, 24
F 0001720	44	FIL0115154	56	HOS0008470	22, 24
F 0004027	38	FT 0000055	2	HOS0008471	22, 25
F 0004067	8, 29	FT 0000141	29	HOS0008472	22
F 0004068	8, 29	FT 0000193	36	HOS0008481	26, 27
F 0004527	56	FT 0000530	36	HOS0008482	22, 26
F 0005031	28	GLS0006951	56	HOS0008487	25
F 0005032	28	GLS0006952	56	HOS0008534	18
F 0005055	20, 30	GLS0006953	56	HOS0008535	18
F 0005121	13	GLS0006954	56	HOS0008536	26
F 0005207	29	GLS0006955	56	HOS0008537	26
F 0005237	16, 50	GLS0006956	56	HOS0008538	26
F 0005362	48	GRL0008318	54	HOS0008539	26
F 0005389	48	GRS0000073	70	HRN0007533	50
F 0005501	58	GRS0000509	70	HRN0008504	50
F 0005502	58	GRS0000510	63, 70	HRN0009041	50
F 0005505	58	GRS0000555	70	HRN0009055	50
F 0005554	29	GRS0000557	70	HRN0009056	50
F 0005703	58	GRS0000559	70	HRN0009042	50
F 0005705	58	GRS0000560	70	HRN0009044	50
F 0005842	50	GRS0000564	70	HYD0000811	22
F 0005861	29	GRS0000577	70	HYD0006616	26
F 0005866	58	GRS000911A	63	HYD0048022	22
F 0005867	58	GRS0000912	63	HYD0056020	36
F 0005918	58	GRS0000913	63	HYD1501500	26
F 0005920	58	GRS0000914	63	HYD3069040	22
F 0005921	58	GRS0000932	63	HYD3069060	22
F 0005948	32	GRS0000954	63	HYD3109042	22, 24, 27
F 0005949	32	GRS0000967	63	HYD3109043	18, 22, 36
F 0005950	32	GRS0000983	63	HYD3109064	22, 24
F 0005979	34	GRS0001141	63	HYD3109076	22, 25
F 0005992	14, 20, 30	GRS0001202	63	HYD3159020	22, 24, 27
F 0006108	32, 56	GRS0002502	70	HYD3159040	18
F 0006212	30, 34	GRS0002503	70	HYD3159060	25
F 0006268	32	GRS0002504	70	HYD3220043	36
F 0006292	28	GRS0002529	63	HYD3269044	22, 24, 25, 27
F 0006328	50	GRS0002706	63	HYD3269088	26
F 0006421	50	GRS0002781	63	HYD3309040	22, 24
F 0006424	50	GRS0002783	63	HYD3359030	36
F 0006428	50	GRS0002787	63	HYD3359040	18
F 0006431	50	GRS0003096	63	HYD3409030	18, 36
F 0006519	14, 18, 64	GRS0003147	63	HYD3409040	18, 22, 24, 36
F 0006551	50	GRS00K2021	63	HYD3509030	36
F 0006578	50	GRS0575576	70	HYD3509040	18, 22

INDEX


Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
HYD3709040	18, 22, 24, 27	HYP LC2SO	66	NCH0003750	1, 4, 6, 13, 38
HYD3709060	22	HYP LC46C	67	NCH0005000	8, 38, 54
HYD3959040	24	HYP LC46S	67	NCH0006250	8
HYD3959060	24	HYP LC4LR	67	NCH0007500	8, 38, 64
HYD3959070	22	HYP LC4RW	67	NCJ0002500	20
HYD4404070	25	HYP LC4SO	67	NCJ0005000	20, 39
HYD5205024	24	HYP LC4US	67	NCJ0007500	8, 38
HYD5205042	22	HYP OU25U	65	NCX0003125	12
HYD5205044	22	HYP OU25W	65	NFC0001000	4
HYD5205050	18, 22, 24, 27	HYP OU297	65	NFC0005000	36
HYD5205060	18, 22, 24	HYP HP25RW	65, 66	NFE0008750	42
HYD5205064	22	HYP LC25HO	65	NFH0002500	29
HYD5205070	25	HYP LC25LR	65	NFH0003750	30, 34, 68
HYD5275040	18	HYP LC25RC	65	NFH0004375	34
HYD5275050	18, 22	HYP LC25SO	65	NFH0005000	30
HYD5275060	25	HYP LC25US	65	NFH0007500	42, 44
HYD5315040	22	HYPLC2563C	65	NFH0008750	68
HYD5315045	22	HYPLC2563S	65	NFJ0006250	34
HYD5315054	24, 26	HYPLC265SP	66	NFJ0050000	14
HYD5325050	18, 22, 24	HYPLC2X65C	66	NFL0003750	30
HYD5325060	18, 22	HYPLC2X65S	66	NFL0005000	30
HYD5355050	18, 22	HYP SAC0KL2	14, 18, 66	PIN0007890	38
HYD5355064	22	HYP SACKL25	8, 10, 65	PIN0037540	56
HYD5375050	22	JD 0008041	36	PLT0006684	32
HYD5405022	24	KOB0000100	56	PLT0007003	22
HYD5405023	22	LAT290	56	PLT0007548	32
HYD5405032	18	LCH0007517	8	PLT0007989	24, 38
HYD5405034	18	LEV0007017	34	PLT0008046	38
HYD5405042	22	LEV0007413	34	PLT0008387	20
HYD5405050	18, 22, 24, 27	LEV0007889	20	PLT0073470	38
HYD5405056	24	LEV0007999	20	PLT0073471	38
HYD5405060	22	LEV0008000	20	PLT0075130	42
HYD5405064	18, 22, 25	LIN0008269	56	PLT0075131	42
HYD5405070	22	LIN0008278	56	PPE0000750	25
HYD5515054	24	LIN0008279	56	PPE0001000	25
HYD5515064	22, 24, 25, 26	LIN0008280	56	PPE0001500	26
HYD5705050	22	LIN0008281	56	PPE0020125	34
HYD5707050	22	LIN0008282	56	PPE0020250	36
HYD5755054	24	LIN0008283	56	PPE0041000	25
HYD5924040	18	LNK0007784	20	PPE0050450	36
HYD5924050	18, 22, 24	LOK0000055	56	PPE0100900	25
HYD5924060	18, 22, 25	MIR4072308	56	PPE0150900	26
HYD7230040	24, 25	MNT0006683	32	PPE1000600	25
HYD9355044	18	MNT0006799	57	PPE1250900	26
HYD9405033	22	MNT0007358	53, 54	PPE1251001	25
HYD9515044	26	MNT0007360	54	PPE5001100	24
HYD9515046	26	MNT0007370	54	PPE7500200	24
HYP HP2V	66	MNT0007371	54	PPE7503750	36
HYP HP2W	66	MNT0007372	54	PUL0000400	8, 10
HYP LC2A	66	MNT0007386	54	PUP0007309	2
HYP LC2E	66	MNT0007531	57	PUP0007363	2
HYP LC2N	66	MNT0007619	53	PUP0007369	2
HYP LC2O	66	MNT0007620	53	PUP0008035	1
HYP LC4A	67	MNT0007865	53	PUP0010907	1
HYP LC4E	67	MNT0008045	18	PUS0007472	39
HYP LC4N	67	MST0007338	8	ROD0000006	20
HYP LC4O	67	MST0007343	10	ROD0000060	20
HYP LC4P	67	MST0007734	10	ROD0007417	34
HYP LC4V	67	MST0007740	8	ROD0008050	20
HYP LC4W	67	MST0007742	10	ROD0008180	20
HYP OU65	66	MTR1001007	4, 6, 18, 22, 62	ROD0008298	20
HYP OU84	66	NCE0002500	20, 29, 42	RSF0007310	42
HYP LC25A	65	NCE0003125	1, 20	RSF0007311	42
HYP LC25E	65	NCE0003750	29, 30	RSF0007312	42
HYP LC25N	65	NCE0005000	20, 30, 42	RSF0007313	42
HYP LC25P	65	NCE0005625	53, 54	RSF0007848	38
HYP LC2LR	66	NCE0006250	2	RSF0008332	38
HYP LC2SC	66	NCH0002500	36	RUG0006968	56
HYP LC4PO	67	NCH0003125	1, 4, 6, 13, 16, 18	SBH0000201	12

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
SBH0000301	6	SHF0007442	34	TBE0009072	22
SBH0000302	4	SHF0007534	39	TBE0009073	22, 24
SBH0000303	11	SHF0008100	38	TBE0009074	22, 25
SBH0000506	8	SHM2203200	42	TBE0009075	22
SBH0000504	38	SHM2203201	42	TBE0009076	22
SCC0000102	16	SHR0007591	54	TBE0009077	22, 24
SCC0000103	29	SHT0006204	30	TBE0009078	22, 24
SCC0000104	13	SHT0007045	30	TBE0009079	22
SCC0000105	20	SHT0007068	30	TBE0009080	22
SCC0000108	42	SHT0039569	30	TBE0009082	22
SCC0000202	4, 6, 11, 16, 32	SLT0007030	12	TBE0009083	22
SCC0000203	1, 4, 18, 29, 34	SMR1031500	16	TBE0009084	22
SCC0000204	22	SMS0000199	28	TBE0009085	22
SCC0000205	24, 32	SPC0007333	42	TBE0009086	22
SCC0000206	34	SPC0007465	8	TBE0009087	22
SCC0000207	13, 56	SPC0007466	8	TBE0009208	34
SCC0000208	22	SPC0007504	8, 10	TBE0009209	34
SCC0000210	20	SPC0008036	38	TBE0009210	34
SCC0000217	52	SPC0008428	20	TBE0009211	34
SCC0000301	6, 13, 14, 16	SPC0009069	24	TBE0009212	34
SCC0000302	1, 12, 14, 16, 30, 38	SPG0001263	18	TBE0009213	34
SCC0000303	10, 13, 14, 16	SPG0001264	18	TBE0009214	34
	20, 34, 36, 56	SPG0005697	32	TBE0009226	22, 34
SCC0000304	1, 8, 12	SPK0003092	4, 6	TIR0090020	42
	10, 29, 30	SPK0008039	4, 6	TIR4019195	44
SCC0000306	16	SPK0128012	39	TNK0007422	32
SCC0000307	30	SQS5001500	39	TOW0002406	38
SCC0000308	38	SQS5003000	20	TRK0004277	6
SCC0000309	11, 20	SQS7501750	14	TRK0007159	4
SCC0000310	16	STD0000109	44	TRK0007376	38
SCC0000311	16	STP0007069	32	TRW0003430	60
SCC0000313	20	STP0008305	8	TRW0020205	60
SCC0000502	8, 10	STR0644420	52	TRW0020206	60
SCC0000503	8, 38	STS3750500	4	TRW0021244	60
SCC0000504	8	SUP0006786	13	TRW0021246	60
SCC0000505	14, 34, 53, 58	SUP0007487	32	TRW0025031	60
SCC0000506	14, 30, 54	SUP0007501	32	TRW0028258	60
SCC0000508	6, 10, 39	SUP0007563	32	TRW0028288	60
SCC0000509	14, 20	SUP0007767	38	TRW0028332	60
SCC0000510	42	SUP0007994	38	TRW0028333	60
SCC0000512	8, 10	SUP0007995	25, 38	TRW0028334	60
SCC0000514	10, 14, 20, 22	SUP0073480	38	TRW0028366	60
SCC0000517	54	SUP0073481	38	TRW0028371	60
SCC0000518	53	TBE0006401	18	TRW0029097	60
SCC0000614	53, 54	TBE0007909	22	TRW0032344	60
SCC0000704	2	TBE0007910	22	TRW0032356	60
SCC0000705	48	TBE0008493	24	TRW0032387	60
SCC0000708	8	TBE0008494	24	TRW0040092	60
SCC0000710	2	TBE0008495	24	TRW0050055	28
SCC0000808	6	TBE0008496	24	TRW0062005	60
SCC0000810	2, 4, 39	TBE0008497	24	TRW0063029	60
SCC0000812	2	TBE0008498	24	TRW0065978	60
SCC0001018	2	TBE0008499	24	TRW0069508	60
SCO0000302	1	TBE0008500	24	TRW0069509	60
SCO0000502	38	TBE0008501	24	TRW0075002	60
SCO0000508	8, 10	TBE0008502	24	TRW0213627	60
SCO0000510	8, 10	TBE0008573	34	TRW0213677	60
SFC0000502	38	TBE0008574	34	TRW0213679	60
SFC0000509	13	TBE0008586	18	TRW0213684	60
SFC0000810	44	TBE0008587	18	TRW0213685	60
SFC0000817	42	TBE0008588	18	TRW0215396	60
SHD0007022	50	TBE0008589	18	TRW0401222	60
SHD0007447	39	TBE0008614	25	TRW0401314	60
SHD0008257	8, 10	TBE0008615	25	TRW0401320	60
SHD0008264	8, 10	TBE0008628	27	TRW0401321	60
SHD0008290	11	TBE0008779	22	TRW0401324	60
SHD0008291	11	TBE0008780	22	TRW0402226	60
SHD0008305	10	TBE0009071	22	TRW0402302	60


INDEX

Part No.	Page No.	Part No.	Page No.
TRW0415414	60	ZZ 0000439	36
TRW402303A	60	ZZ 0000441	39
TRW402306A	60	ZZ 0000705	30
TRWC546001	60	ZZ 0002013	34
TRWG122708	60	ZZ 0002016	16
TRWG179788	60		
TRWG179858	60		
TRWG186282	60		
TRWG272121	60		
TRWG942162	60		
TRWHF5420A	60		
TRWHF54303	60		
TRWHF54402	60		
TRWHF5440A	60		
TRWHF5450A	60		
TRWHF5460A	60		
TRWHF54704	60		
TRWV220007	60		
VLV0000002	24		
VLV0000008	20, 22		
VLV0004813	24		
VLV00F30BK	22		
VLV0RD1075	18, 24		
VLV4951184	24		
VLV495T819	24		
VLVRD10750	18		
WAG0002162	69		
WAG0002167	69		
WAG0019148	44		
WAG0019149	44		
WAG0019432	69		
WAG0024489	44		
WAG0075334	44		
WAG0075335	44		
WAG0068927	44		
WAS0000110	4, 6		
WAS0000118	4		
WAS0000125	20		
WAS0008448	38		
WCT0003125	6, 18		
WCT0003750	1, 20		
WCT0005000	6, 11		
WCT0006250	8, 10		
WCT0007500	2, 6		
WEA0000937	56		
WEA0001179	56		
WES0002500	29		
WES0011250	25		
WHL0030872	44		
WHL0090020	42		
WHL0660103	42		
WHL0040195	44		
WLK0002500	28		
WLK0003125	4, 6, 18		
WLK0003750	1, 2, 4, 6, 38		
WLK0005000	8, 38, 54		
WLK0006250	8		
WLK0007500	6		
ZZ 0000100	2, 8, 10, 14		
ZZ 0000101	42		
ZZ 0000102	8		
ZZ 0000103	39		
ZZ 0000104	42		
ZZ 0000404	30		
ZZ 0000406	4, 6, 12		
	26, 30, 34		
ZZ 0000407	4, 6, 12, 34		
ZZ 0000408	4, 6, 34		
ZZ 0000413	14		

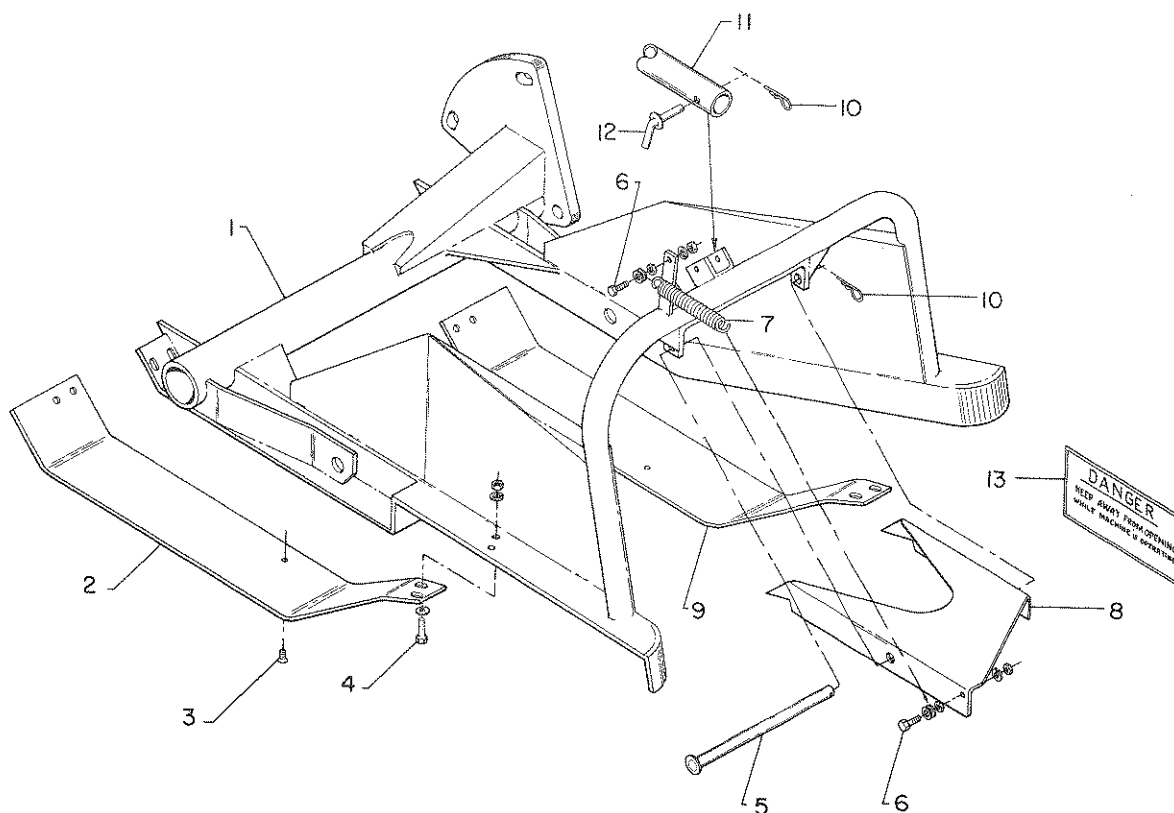


PICKUP

REF. NO.	PART NO.	DESCRIPTION
	PUP0010907	Pickup Assembly Complete
1	PUP0008035	Pickup Frame
2	10-142	R.H. Runner
3	SCO0000302	3/8" x 1" NC Flat Head Socket Cap Screw, 2 used
	WLK0003750	3/8" Lock Washer, 2 used
	NCH0003750	3/8" NC Hex Nut, 2 used
4	SCC0000304	3/8" x 1 1/2" NCHT Cap Screw, 8 used
	WCT0003750	3/8" Cut Washer, 8 used
	WLK0003750	3/8" Lock Washer, 8 used
	NCH0003750	3/8" NC Hex Nut, 8 used
5	10-145	Pin
6	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw, 2 used
	NCH0003125	5/16" NC Hex Nut, 2 used
	NCE0003125	5/16" NC Fiber Lock Nut, 2 used
7	F 0000747	Spring
8	10-144	Bale Check
9	10-143	L.H. Runner
10	F 0001019	Hair Pin
11	GUD0008416	Center Bale Guide, From Ser. No. 213
	10-139	Center Bale Guide, To Ser. No. 212
12	10-146	Pin, Bale Guide
13	FD 0000049	Danger Decal

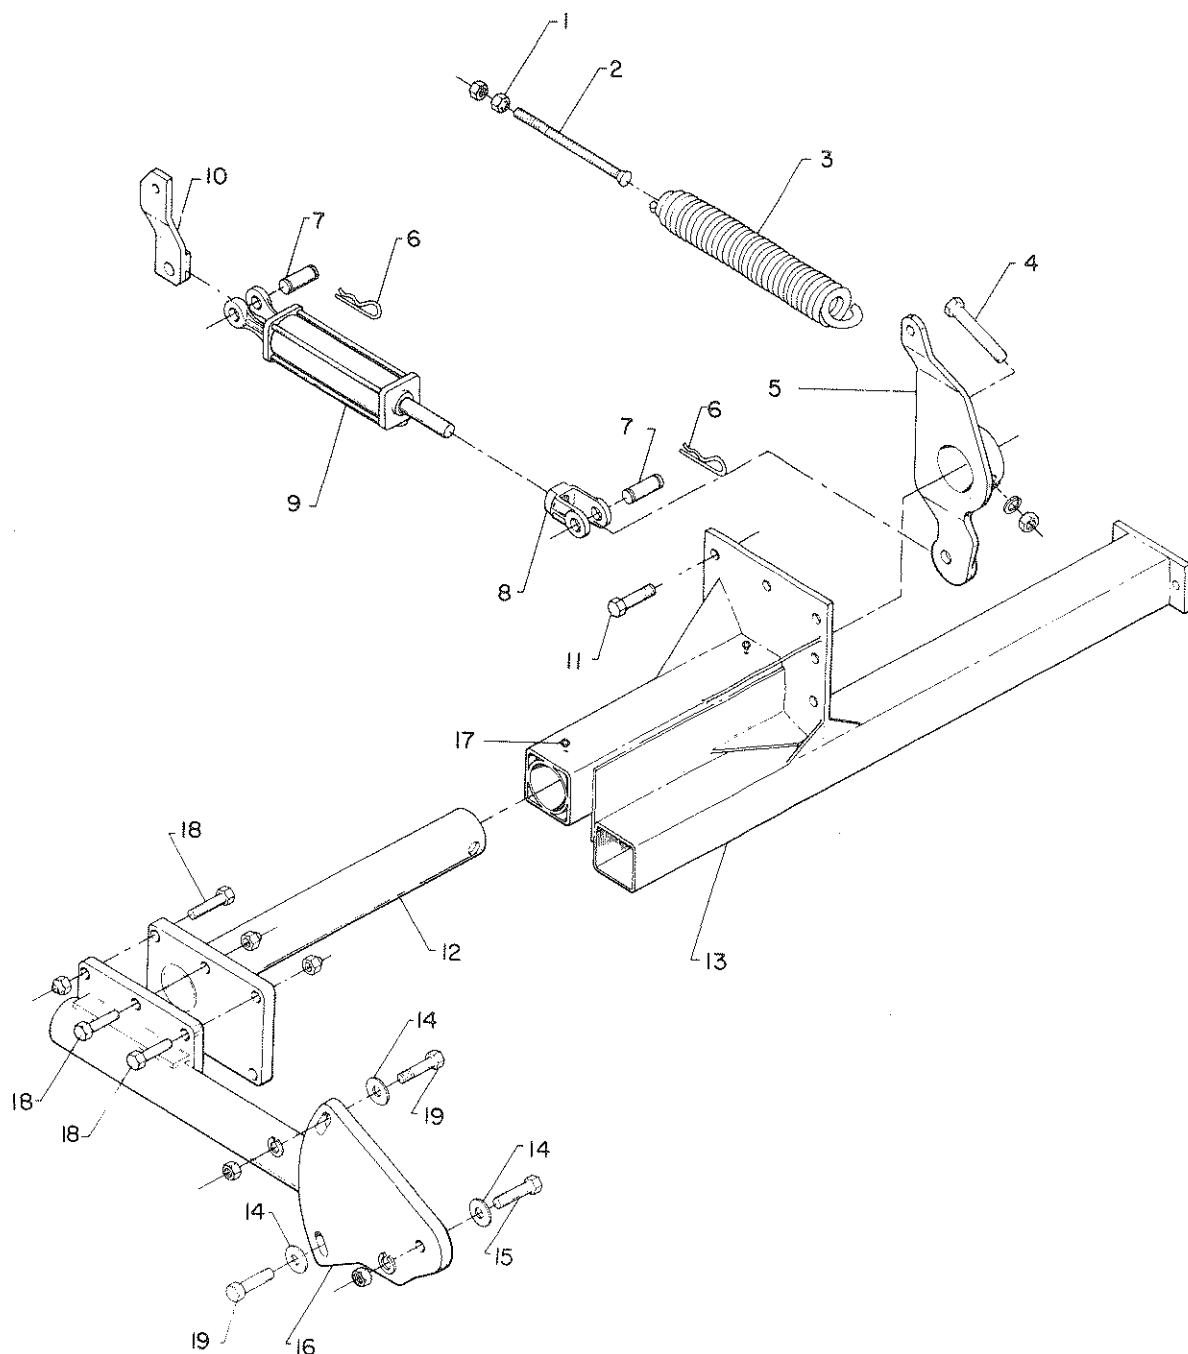


PICKUP LIFT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 0000055	5/8" NC Jam Nut	10	ARM0007373	Arm for Pickup Cylinder Mount
2	10-155	Spring Bolt, Conical Head	11	SCC0000704	5/8" x 1 1/2" NCHT Cap Screw, 8 used
3	04-123	Spring, Hook One End		NCE0006250	5/8" NC Fiber Lock Nut, 8 used
4	SCC0001018	1" x 6" NCHT Cap Screw	12	PUP0007363	Pivot Tube, Pick up Support Arm
5	PUP0007309	Pickup Lift Arm	13	BRG0008099	Bearing, Pickup Support Arm Pivot Tube
6	CYL0181107	Keeper, 4 used	14	WCT0007500	3/4" Flat Washer, 3 used
7	CYL0181106	Pin, 2 used	15	SCC0000810	3/4" x 3" NCHT Cap Screw
	CYL1818110	Pin, 2 used	16	PUP0007369	Pickup Arm Assembly
8	CLV0031818	Clevis	17	ZZ 0000100	1/4" -28 Zerk, 2 used
9	01-569	Hydraulic Cylinder, 2 1/2" x 8" Victor	18	SCC0000710	5/8" x 3" NCHT Cap Screw, 6 used
	01-570	Seal Kit for 01-569		NCE0006250	5/8" NC Fiber Lock Nut
			19	SCC0000812	3/4" x 3 1/2" NCHT Cap Screw, 2 used

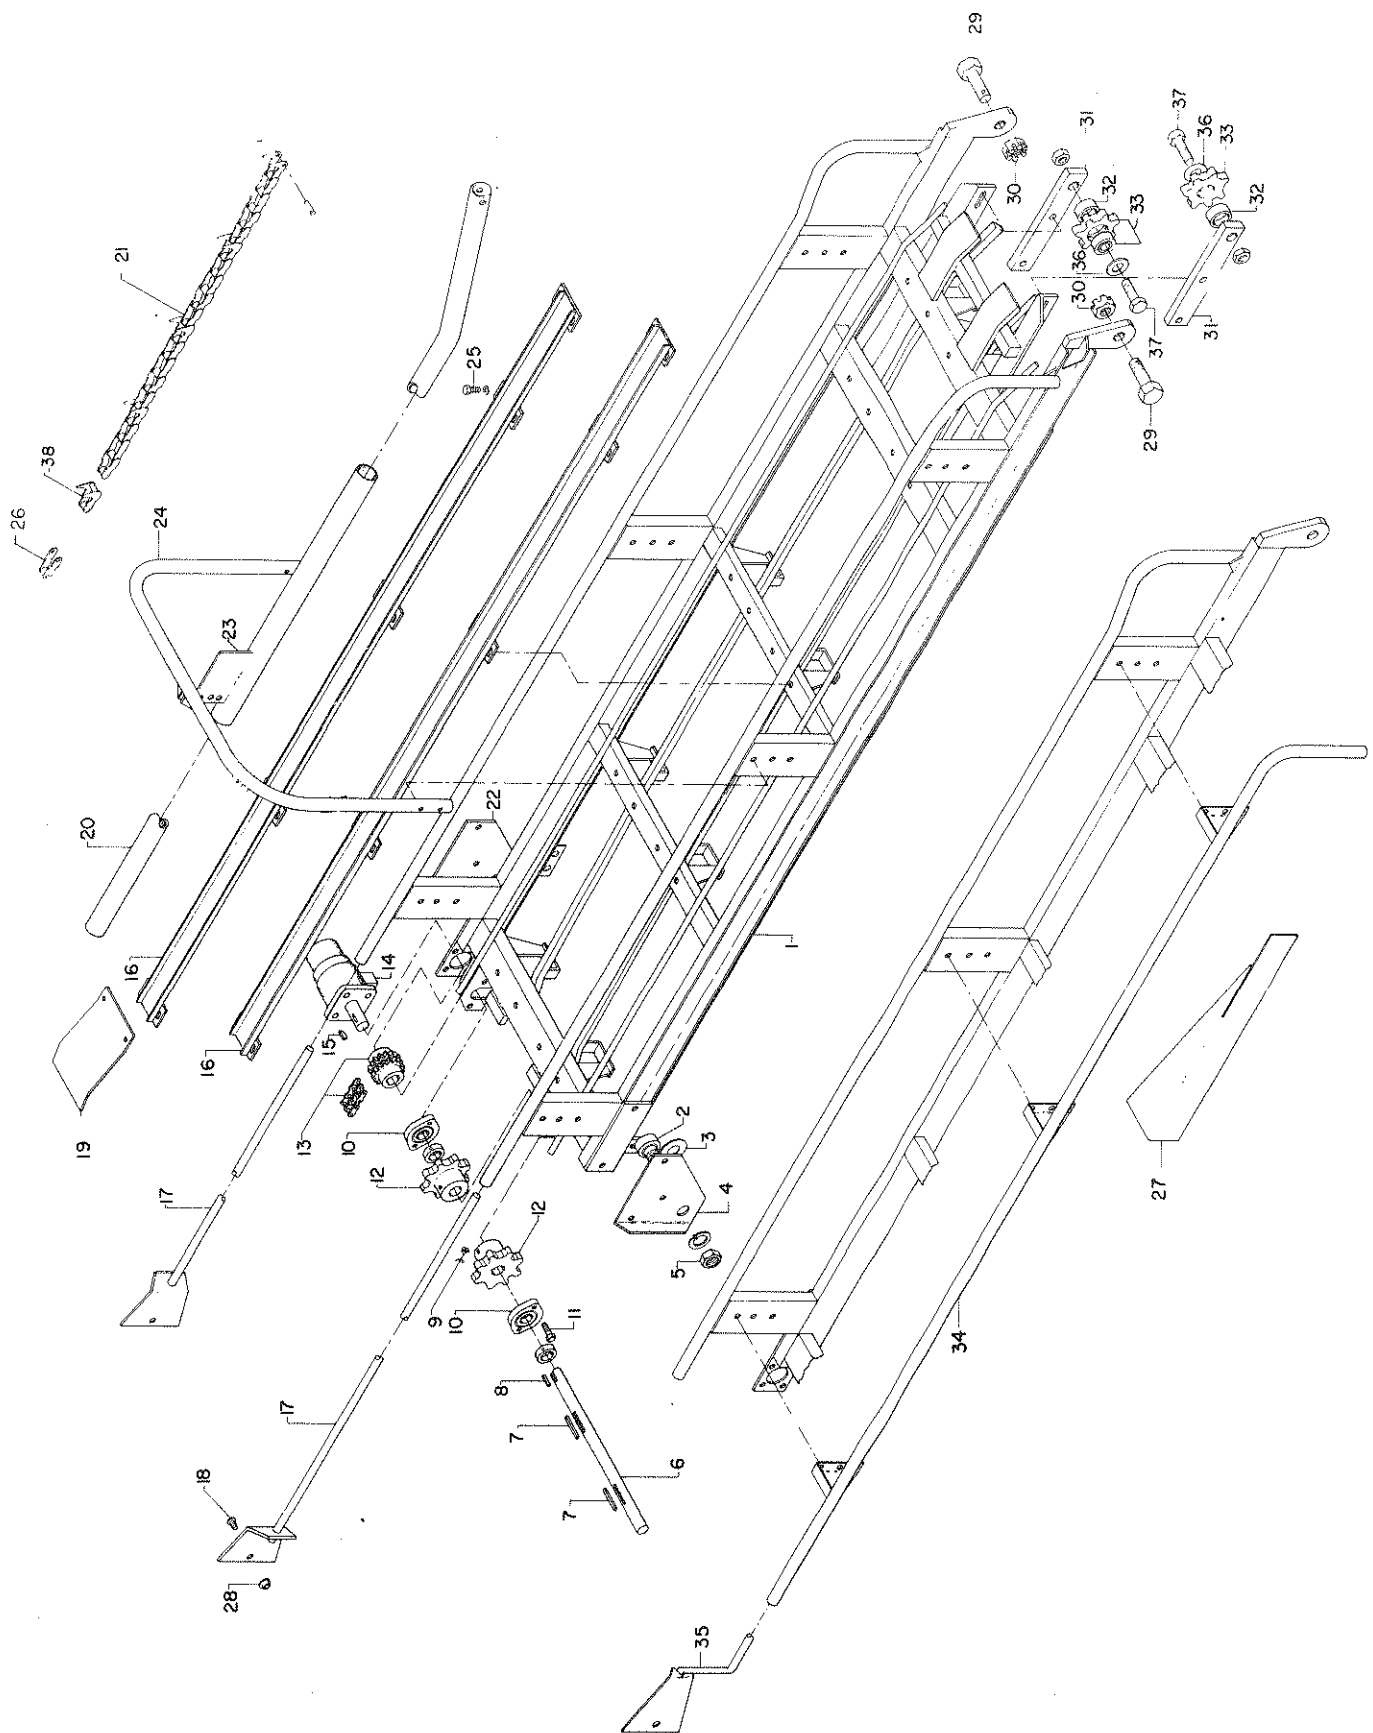


FRONT ELEVATOR

REF. NO.	PART NO.	DESCRIPTION
	10-904	Front Elevator Complete
1	10-109	Frame
2	F 0001280	Roller, BCA 6206, 2 used
3	WAS0000110	1" Flat Washer, 8 used
4	10-110	Plate, Roller Mount, RH
5	F 0001386	1" NF Fiber Lock Jam Nut, 2 used
6	10-112	Drive Shaft, 1"
7	ZZ 0000407	Key, 3/4" x 1/4" x 1 3/4", 2 used
8	ZZ 0000406	Key, 3/4" x 1/4" x 1"
9	STS3750500	3/8" x 1/2" NC Socket Set Screw, 2 used
10	02-104	Bearing, FLCT 1" Fafnir
11	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw, 4 used
	WLK0003125	5/16" Lock Washer, 4 used
	NCH0003125	5/16" NC Hex Nut, 4 used
12	SPK0003092	Sprocket, 8 Tooth, 550, 2 used
13	05-901	Chain Coupler, D4016 x 1" x 1"
	05-111	Chain Coupler Half, 1" Bore
	05-112	Coupler Chain
14	MTR1001007	Hydraulic Motor, Char-Lyn A5K
	CHR0060023	Seal Kit
15	ZZ 0000408	Woodruff Key, No. 808
16	TRK0007159	Chain Track, 2 used
17	10-106	Bale Guide, 2 used
18	SBH0000302	3/8" x 1" NC Socket Button Head Cap Screw, 2 used
	WLK0003750	3/8" Lock Washer, 2 used
	NCH0003750	3/8" NC Hex Nut, 2 used
19	10-115	Bale Lifter
20	GUD0008416	Center Bale Guide, From Ser. No. 0213
	10-139	Center Bale Guide, To Ser. No. 0212
21	CHN0020005	Chain, Front Elevator, 136P No. 550, 2 used
22	10-111	Plate, Roller Mount, LH
23	ELV0007962	Bale Guide Support
24	10-149	Bale Guide Support Bracket
25	SCC0000202	5/16" x 1" NCHT Cap Screw, 20 used
26	05-108	Offset Link, No. 550
27	10-154	Bale Deflector, 2 Tie
28	F 0000440	Ferrule, 2 used
29	10-116	Pin, 1" dia., 2 used
30	NFC0001000	Nut, 1" NC Castelated, 2 used
31	10-114	Tightener Bracket, Elevator Chain, 2 used
32	F 0000172	3/4" Set Collar, 2 used
33	SPK0008039	Sprocket with Bearing, 7 Tooth Idler, 550
34	10-152	Bale Guide Adapter, 2 Tie
35	10-153	Bale Guide, 2 Tie
36	WAS0000118	Machinery Bushing, 3/4" x 12 ga., 2 used
37	SCC0000810	3/4" x 3" NCHT Cap Screw, 2 used
38	CNK0005500	Attachment Link Only, 550-M1

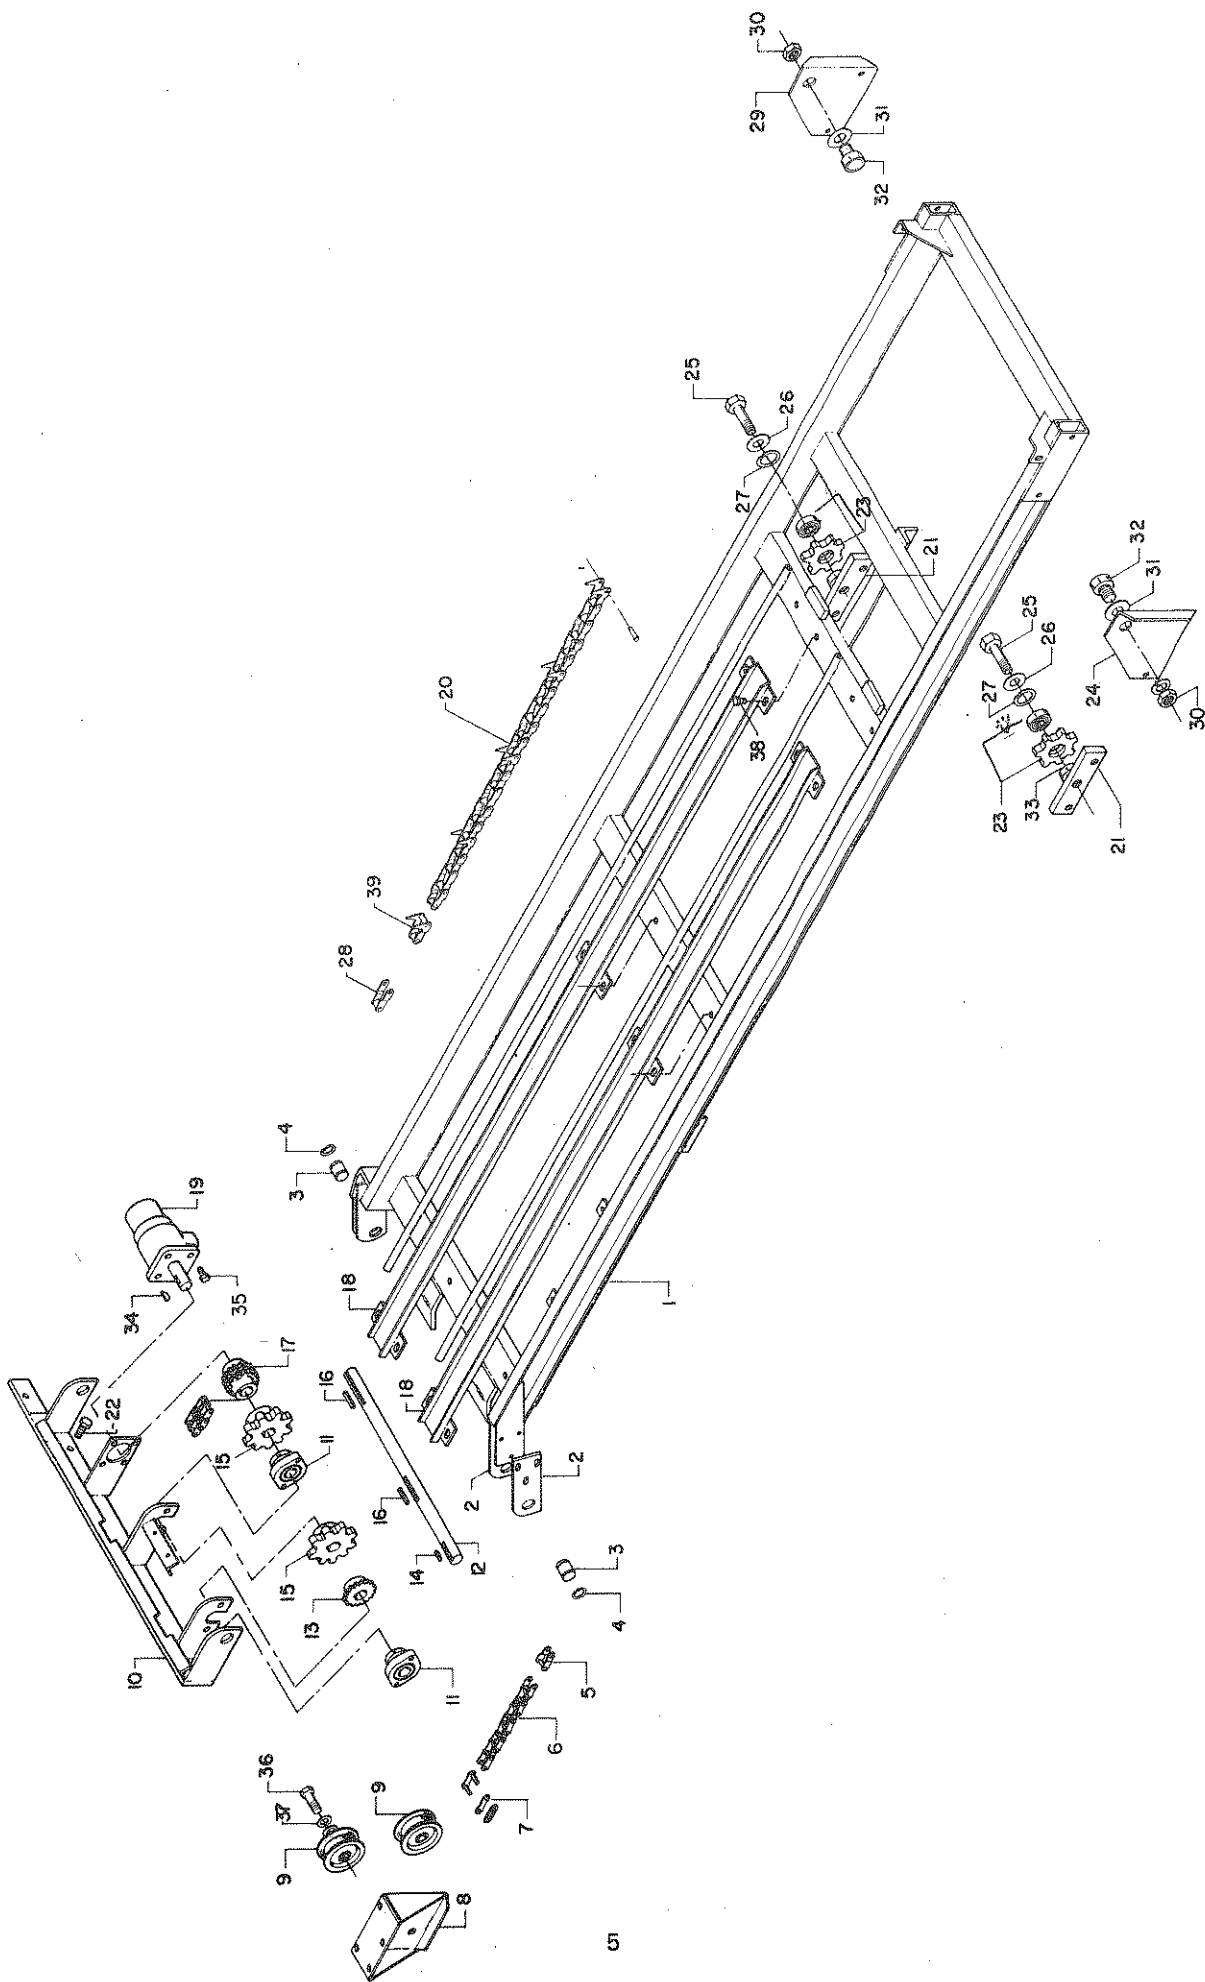


REAR ELEVATOR

REF. NO.	PART NO.	DESCRIPTION
	10-905	Rear Elevator Complete
1	10-131	Frame
2	10-135	Pickup Mount, 2 used
3	10-119	Pin, Pickup Pivot, 2 used
4	F 0000857	Snap Ring, 5133-98 Turac, 4 used
5	F 0000123	Offset Link, RC 50
6	05-255	Chain, Cage Conveyor, 78P, RC50
7	F 0000025	Connecting Link, RC 50
8	10-157	Mounting Bracket, Chain Tightener
9	F 0000883	Idler Pulley, 2 used
10	ELV0586500	Mounting Hinge, Rear Elevator
11	02-104	Bearing with Set Collar, FLCT 1" Fafnir, 2 used
12	10-132	Drive Shaft
13	05-113	Sprocket, 50B14 x 1"
14	ZZ 0000406	Key, 1/4" x 1"
15	SPK0003092	Sprocket, 8 Tooth, 2 used
16	ZZ 0000407	Key, 1/4" x 1 1/4", 2 used
17	05-901	Chain Coupler, D4016 x 1" x 1"
	05-111	Chain Coupler Half, 1" Bore
	05-112	Coupler Chain
18	TRK0004277	Chain Track, 2 used
19	MTR1001007	Hydraulic Motor
	CHR0060023	Seal Kit
20	CHN0020003	Chain, Rear Elevator, 119P, No. 550
21	10-118	Tightener Bracket, 2 used
22	SCC0000301	3/8" x 1/4" NCHT Cap Screw, 7 used
	WLK0003750	3/8" Lock Washer, 7 used
	NCH0003750	3/8" NC Hex Nut, 7 used
23	SPK0008039	Sprocket with Bearing, 7 Tooth Idler, 550
24	10-110	Roller Mount Plate, RH
25	SCC0000808	1/2" x 2 1/2" NCHT Cap Screw, 2 used
26	WCT0007500	1/2" Cut Washer, 4 used
27	WLK0007500	1/2" Lock Washer, 2 used
28	05-108	Offset Link, No. 550
29	10-111	Roller Mount Plate, LH
30	F 0001386	1" NF Fiber Lock Jam Nut, 2 used
31	WAS0000110	1" Spacer Washer
32	F 0001280	Roller, 6206 BCA, 2 used
33	F 0000172	1/4" Set Collar, 2 used
34	ZZ 0000408	Woodruff Key, 808
35	SBH0000301	3/8" x 1/4" Button Head Socket Cap Screw, 4 used
	WLK0003750	3/8" Lock Washer, 4 used
36	SCC0000508	1/2" x 2 1/2" NCHT Cap Screw, 2 used
37	WCT0005000	1/2" Cut Washer, 2 used
38	SCC0000202	5/16" x 1" NCHT Cap Screw, 12 used
	WCT0003125	5/16" Flat Washer, 12 used
	WLK0003125	5/16" Lock Washer, 12 used
	NCH003125	5/16" NC Hex Nut
39	CNK0005500	Attachment Link Only, 550-M1

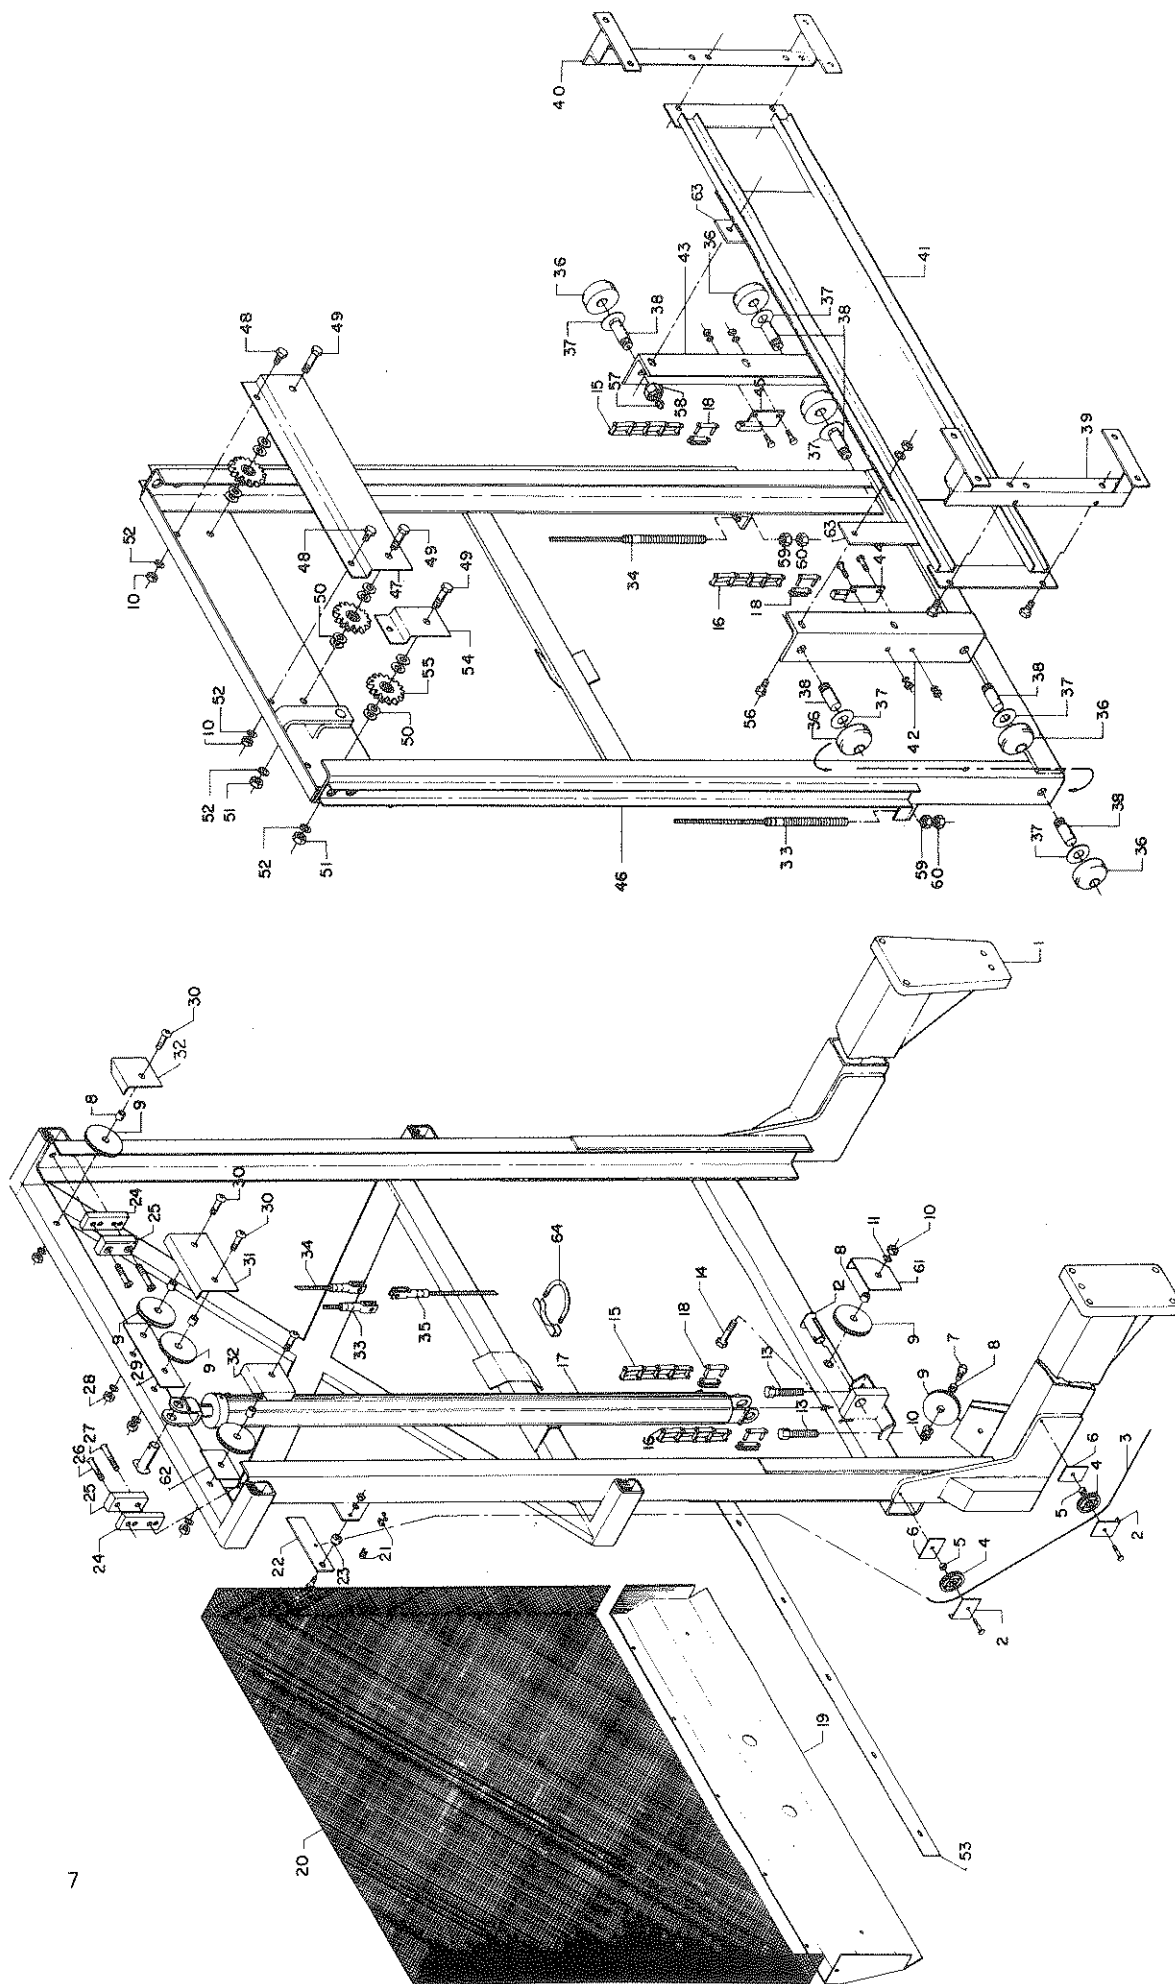


RIGHT HAND SIDE MAST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	MST0007338	Side Mast Frame, RH Outer	31	GUD0007139	Guide, Double Roller
2	F 0000994	Shield for Roller, 2 used	32	GUD0071440	Guide, Single Roller, Front, 2 used
3	18-188	Cable, 5/32" x 16'6"	33	CBL0074600	Side Mast Lift Cable, Front
4	F 0004067	Roller, 2 used	34	CBL0074601	Side Mast Lift Cable, Rear
5	F 0004068	Bushing, 2 used	35	CBL0007461	Side Mast Equalizer Cable
6	F 0000995	Shield for Roller, 2 used	36	12-117	Roller, Guide, 6 used
7	SCC0000504	1/2" x 1 3/4" NCHT Cap Screw	37	F 0000766	Washer, Hard, 1-1/8"
8	BRG000MI8N	Bushing, MI8N Torrington, 6 used	38	12-116	Stud, Guide Roller, 6 used
9	PUL0000400	Cable Roller, 6 used	39	12-128	Cage Support, Front
10	NCH0005000	1/2" NC Hex Nut, 22 used	40	12-154	Cage Support, Rear
11	WLK0005000	1/2" Lock Washer, 22 used	41	12-124	Apron, Side Mast
12	06-113	Pin with Keeper	42	12-122	Angle, Apron Roller
13	12-114	Chain Anchor, 2 used	43	12-123	Angle, Apron Roller
14	SCC0000512	1/2" x 3 1/2" NCHT Cap Screw	44	12-126	Front Chain Anchor
15	CHN0020007	Lift Chain, 115P, No. 2060RC	45	12-125	Rear Chain Anchor
16	CHN0020008	Lift Chain, 100P, No. 2060RC	46	MST0007740	Side Mast Frame, RH Inner
17	01-566	Hydraulic Cylinder, LC25 x 63 SP Hypower	47	12-121	Chain Guide, Rear
	HYPACKL25	Repair Kit	48	SCC0000502	1/2" x 1" NCHT Cap Screw, 3 used
18	05-145	Connecting Link	49	SCC0000708	5/8" x 2 1/2" NCHT Cap Screw, 3 used
19	SHD0008264	Side Mast Shield Support, RH	50	WCT0006250	5/8" Cut Washer, 9 used
20	SHD0008257	Side Mast Shield	51	NCH0006250	5/8" NC Hex Nut
21	F 0000990	Cable Clamp, 2 used	52	WLK0006250	5/8" Lock Washer
22	LCH0007517	Trip, Safety Latch	53	STP0008305	Backing Strip
23	05-133	Roller Spacer Bushing	54	12-120	Chain Guide, Front
24	12-118	Spacer Block, 2 used	55	02-108	Idler Sprocker, 01011536 Fafnir, 3 used
25	12-119	Top Guide, Side Mast, 2 used	56	SCC0000503	1/2" x 1 1/4" NCHT Cap Screw, 8 used
26	SCO0000508	1/2" x 2 1/2" NC Flat Head Socket Cap Screw	57	ZZ 0000100	1/4" -28 Zerk, 3 used
27	SCO0000510	1/2" x 3" NC Flat Head Socket Cap Screw	58	ZZ 0000102	Zerk, 1/4" -28, 45°, 3 used
28	NCH0005000	1/2" NC Hex Nut	59	F 0001386	1" NF Fiber Lock Jam Nut, 6 used
29	SPC0007466	Spacer, Double	60	NCH0007500	3/4" NC Hex Nut
30	SBH0000506	1/2" x 2" NC Socket Button Head Cap Screw	61	NCJ0007500	3/4" NC Jam Nut
			62	GUD0073390	Guide, Single Roller, Rear
			63	SPC0007465	Spacer, Single Roller
			64	SPC0007504	Spacer
				CLP0035772	Clamp

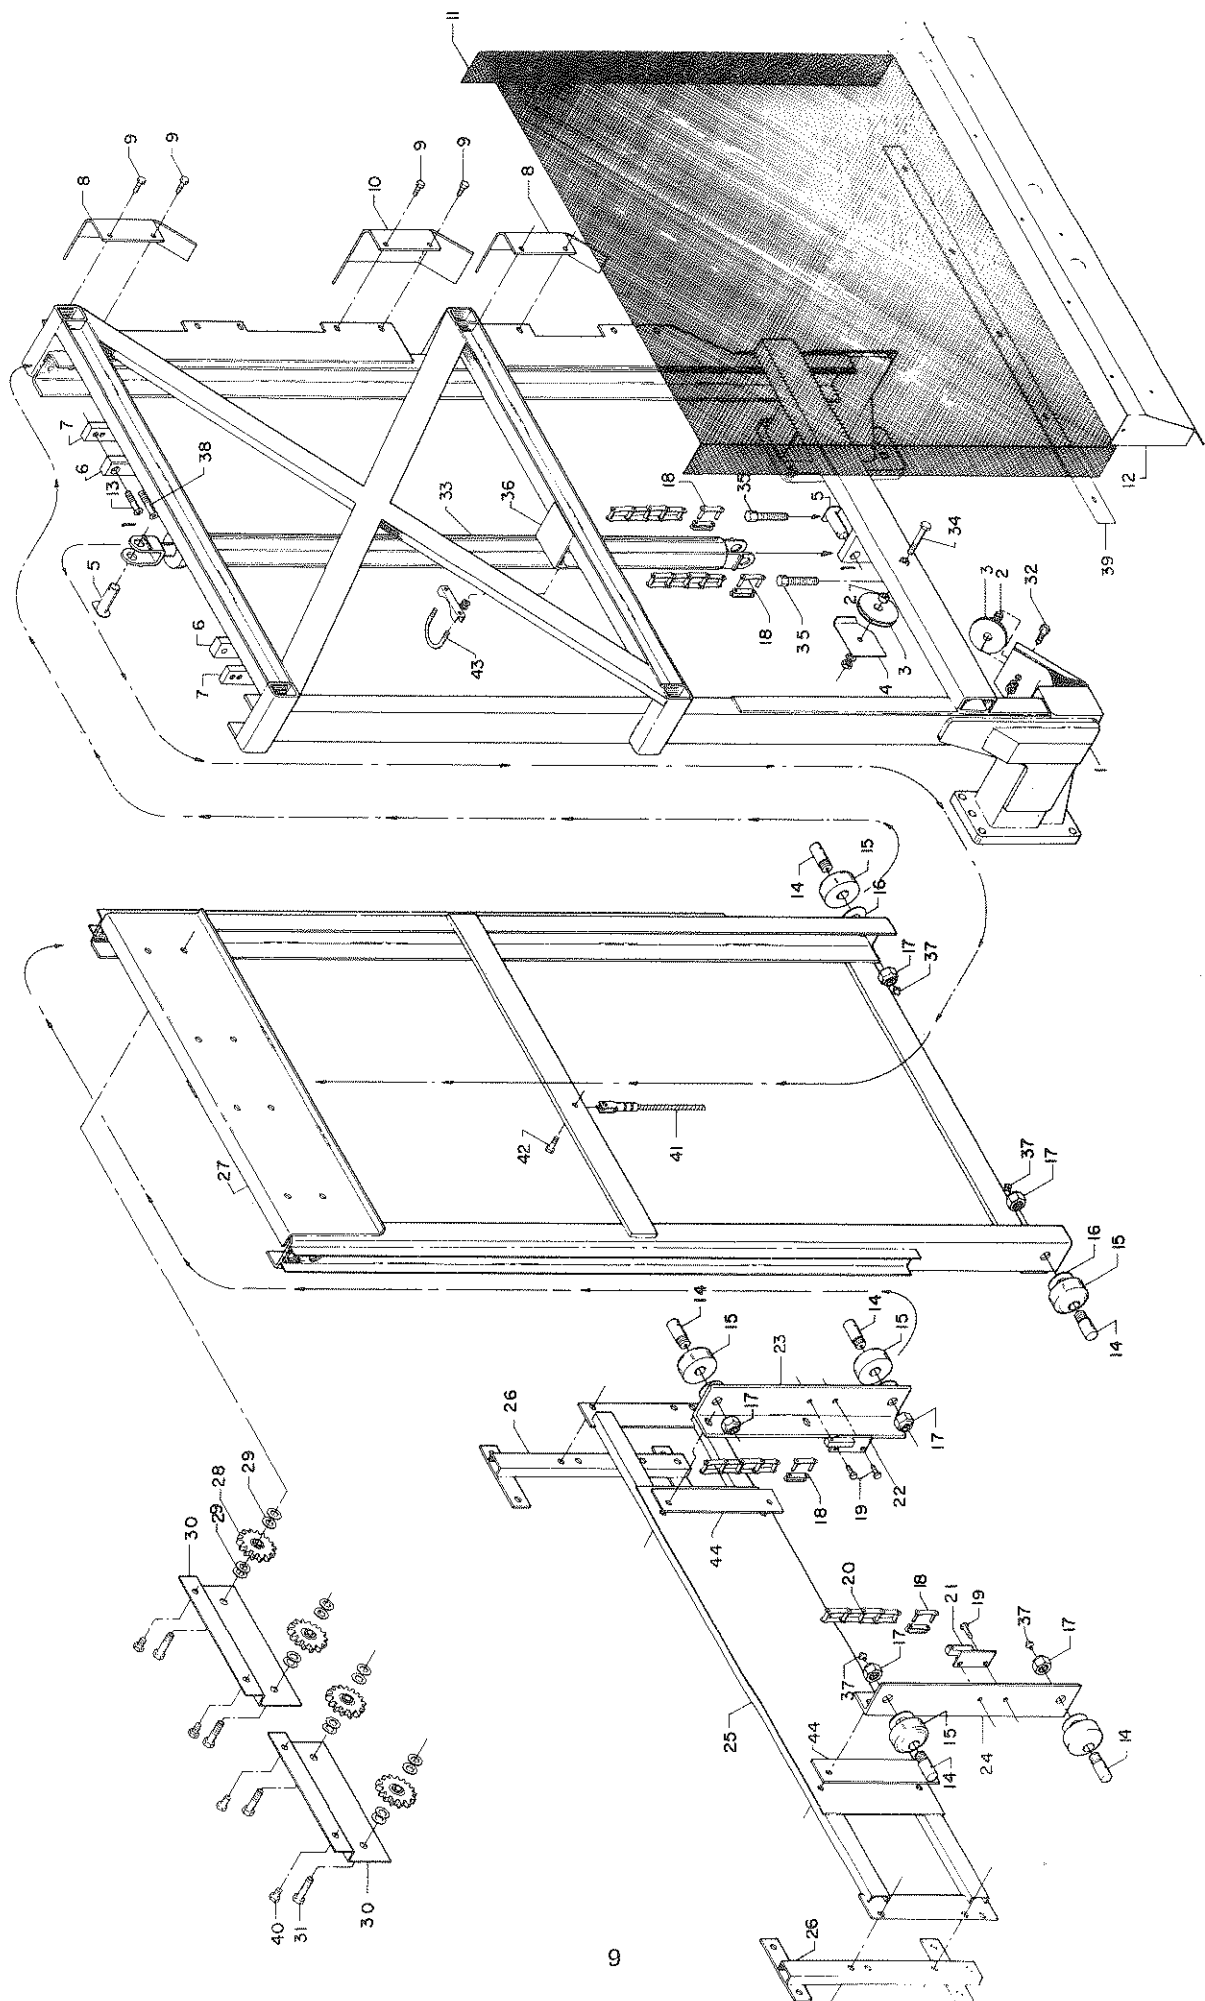

LEFT HAND SIDE MAST

REF. NO.	PART NO.	DESCRIPTION
1	MST0007734	Side Mast Frame, LH Outer
2	BRG000MI8N	Inner Race, ¾", 2 used
3	PUL0000400	Cable Roller, 2 used
4	GUD0073391	Guide, Single Roller, 2 used
5	06-113	Pin with Keeper, 2 used
6	12-119	Top Guide, Side, Mast, 2 used
7	12-118	Spacer Block, 2 used
8	12-182	Tie Cam, 2 used
9	SCC0000304	3/8" x 1¼" NCHT Cap Screw, 6 used
10	12-183	Interlocking Tie Cam
11	SHD0008257	Side Mast Shield
12	SHD0008264	Side Mast Shield Bracket
13	SCO0000508	½" x 2½" NCFH Socket Head Cap Screw, 2 used
14	12-116	Stud, Guide Roller, 6 used
15	12-117	Guide Roller, 6 used
16	F 0000766	Hardened Washer, 1-1/8" x 14 ga., 6 used
17	F 0001386	1" NF Fiber Lock Jam Nut, 6 used
18	05-145	Connecting Link, RC2060, 4 used
	F 0000760	Connecting Link, RC60
19	SCC0000303	3/8" x 1¼" NCHT Cap Screw, 4 used
20	CHN2060107	Chain, Lift, 107 Pitch, 2 used
21	12-125	Chain Anchor, Front
22	12-126	Chain Anchor, Rear
23	12-122	Apron Roller Angle, Rear
24	12-123	Apron Roller Angle, Front
25	12-155	Side Mast Apron
26	12-146	Cage Support, 2 used
27	MST0007742	Side Mast Frame, LH Inner
28	02-108	Idler Sprocket, 01011536 Fafnir, 4 used
29	WCT0006250	5/8" Cut Washer, 12 used
30	12-144	Chain Guide
31	SCC0000508	½" x 1½" NCHT Cap Screw
32	SCC0000512	½" x 3½" NCHT Cap Screw, 4 used
33	01-566	Hydraulic Cylinder, LC25 x 63 SP Hypower
	HYPACKL25	Repair Kit
34	SCC0000514	½" x 4" NCHT Cap Screw
35	12-114	Chain Anchor, 2 used
36	MST0007343	Support, Side Mast Cylinder
37	ZZ 0000100	¼" -28 Zerk
38	SCO0000510	½" x 3" NC Socket Flat Head Cap Screw
39	SHD0008305	Backup Strip
40	SCC0000502	½" x 1" NCHT Cap Screw
41	CBL0007461	Side Mast Equalizer Cable
42	SCC0000304	3/8" x 1½" NCHT Cap Screw
43	CLP0035772	Clamp
44	SPC0007504	Spacer

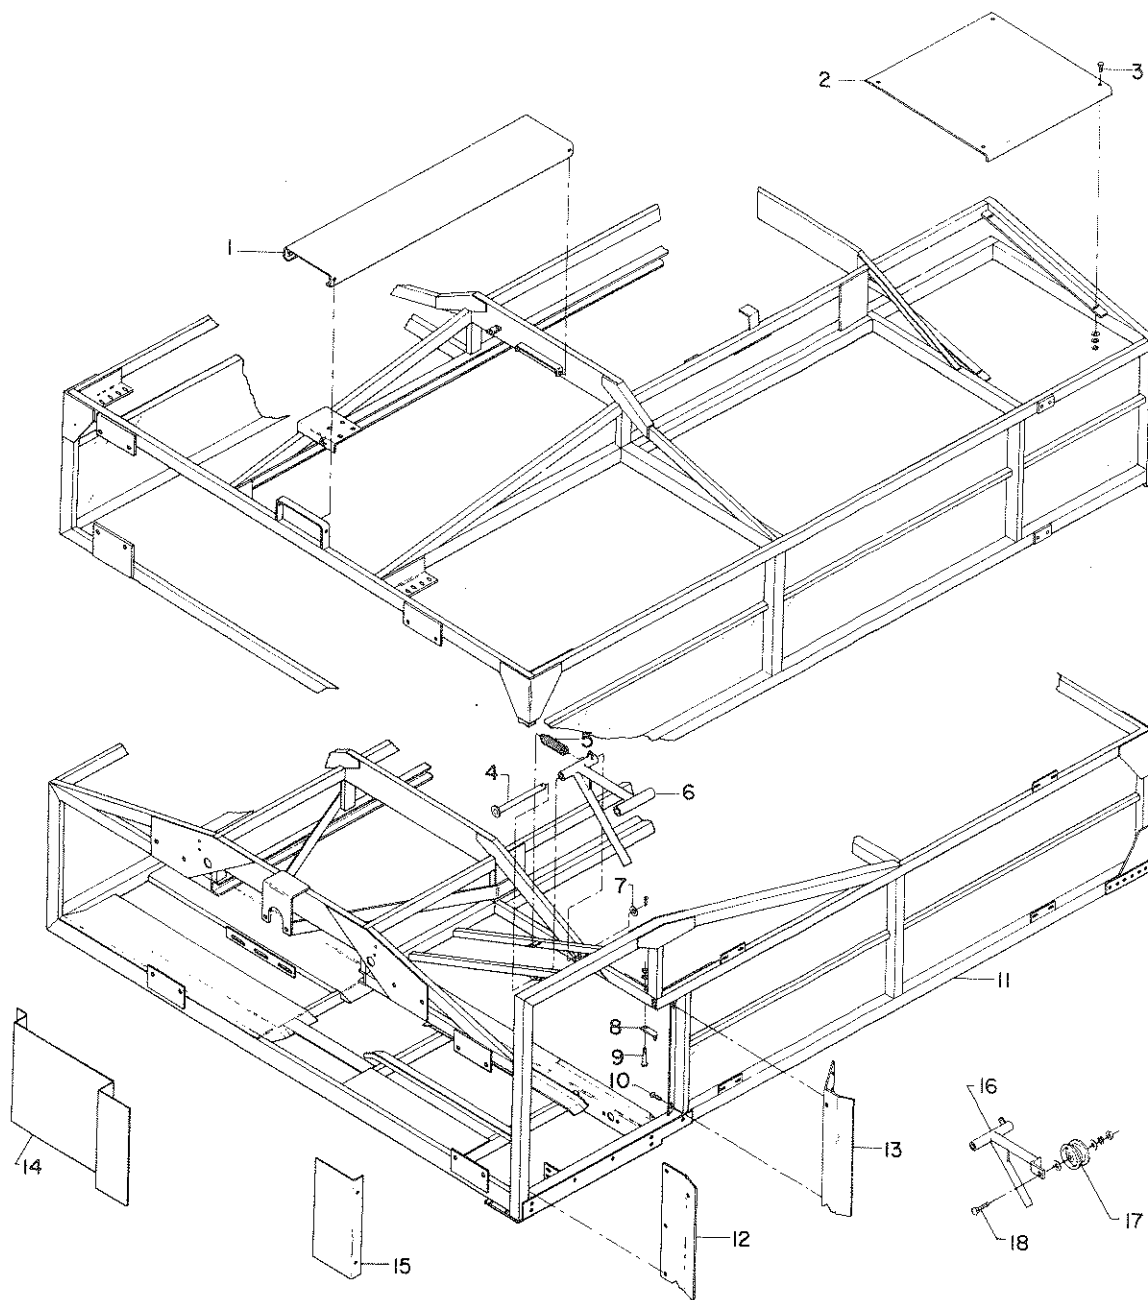


CAGE

REF. NO.	PART NO.	DESCRIPTION
1	11-237	Shield, Pusher Cylinder
2	11-238	Shield, Pusher
3	SCC0000202	5/16" x 1" NCHT Cap Screw, 8 used
4	11-102	Pin, Bale Kicker
5	F 0000747	Spring
6	11-103	Bale Kicker
7	WCT0005000	1/2" Cut Washer, 6 used
8	11-225	Shield Bracket
9	SCC0000309	3/8" x 2 3/4" NCHT Cap Screw
10	SBH0000303	3/8" x 1 1/4" Button Head Cap Screw, 6 used

REF. NO.	PART NO.	DESCRIPTION
11	11-274	Cage Frame
12	11-211	Bale Guide, Cage Extension, RH
13	11-209	Bale Guide, Cage Extension, LH


FOLLOWING USED AFTER SERIAL NUMBER 0214

14	SHD0008290	Rear Shield
15	SHD0008291	Front Shield
16	CGF0008592	Bale Kicker
17	F 0000840	Idler Pulley
18	CRB5003000	1/2" x 3" Carriage Bolt

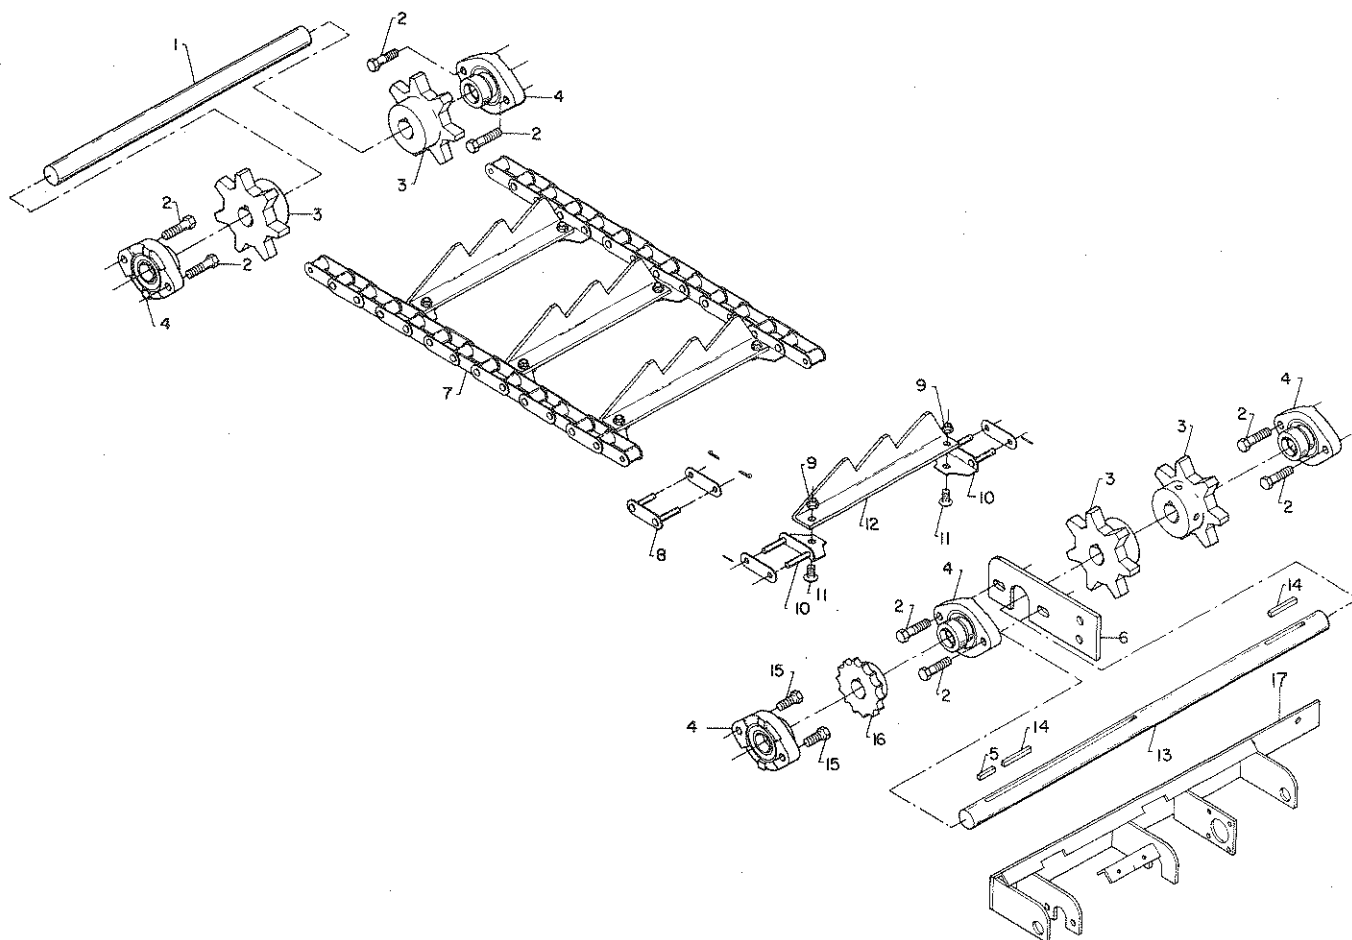


CAGE CONVEYOR


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	11-247	Idler Shaft	8	05-107	Connecting Link, No. 550
2	SCC0000304	3/8" x 1 1/2" NCHT Cap Screw, 10 used	9	NCX0003125	5/16" Flex Lock Nut, 24 used
3	05-121	Sprocket, 7 Tooth, 1" Bore, No. 550, 4 used	10	CNK0000550	Attachment Link, AH
4	02-104	Bearing, 1" Flange, FLCT 1", 4 used	11	SBH0000201	5/16" x 3/4" Button Head Sock Cap Screw, 24 used
5	ZZ 0000406	Key, 1/4" x 1"	12	SLT0007030	Slat Only
6	11-248	Center Bearing Mount	13	11-251	Drive Shaft
7	11-903	Chain, 60 Pitch Each Side	14	ZZ 0000407	Key, 1/4" x 1 1/4"
			15	SCC0000302	3/8" x 1" NCHT Cap Screw
			16	05-113	Sprocket, 50B14 x 1
			17	ELV0586500	Mounting Hinge, Rear Elevator

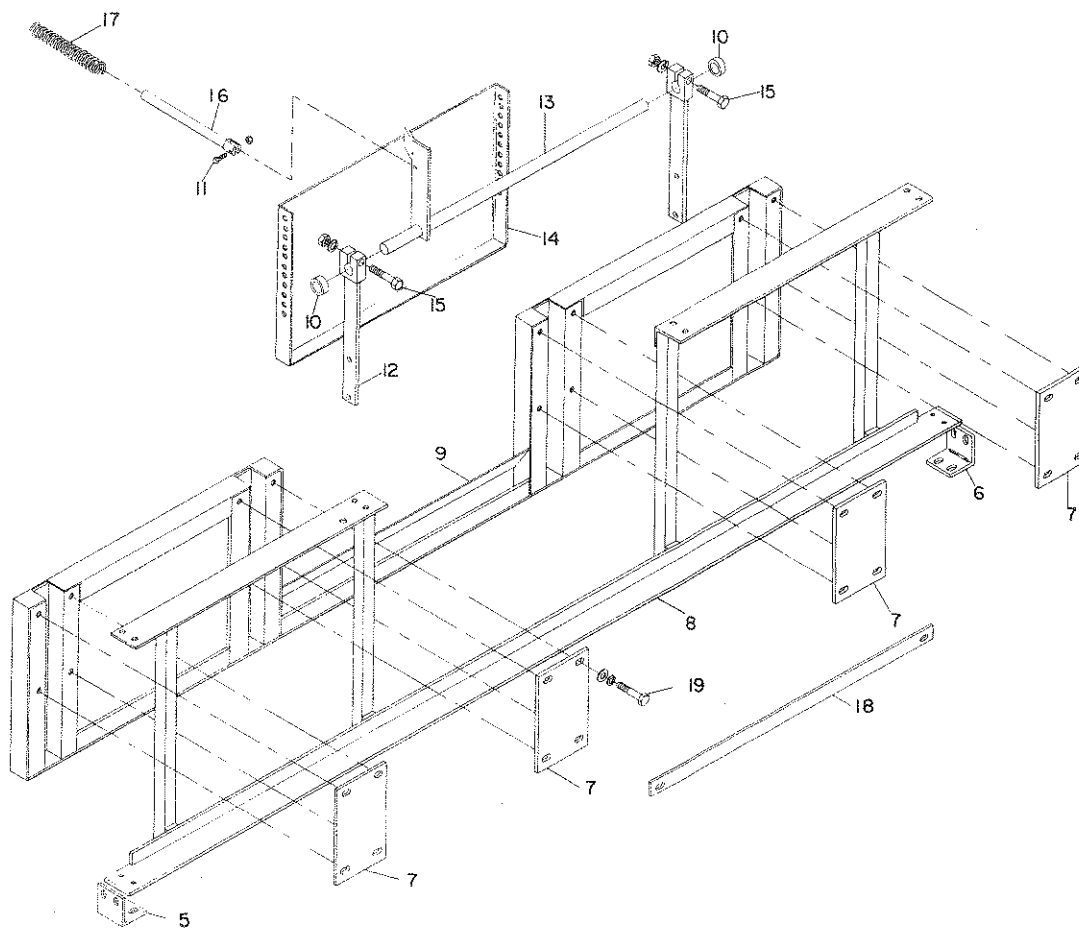

CAGE INDEX AND BALE SUPPORT

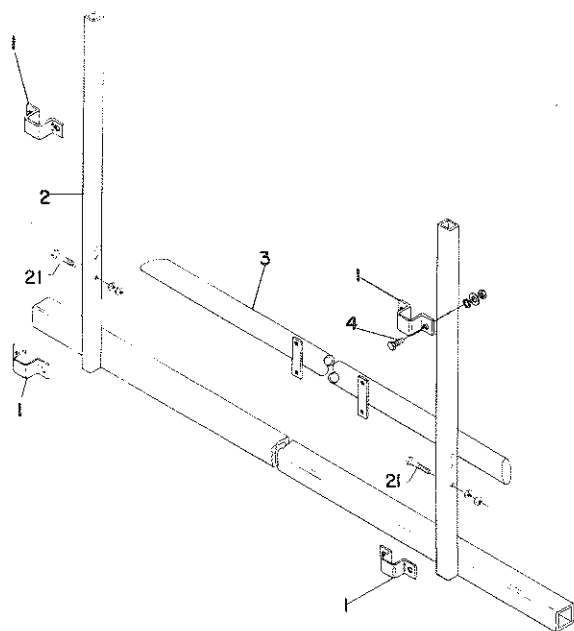


REF. NO.	PART NO.	DESCRIPTION
1	11-220	Bracket, Front Bale Support, 8 sued
2	SUP0006786	Front Bale Support, 2 used
3	11-128	Bale Guide Tube
4	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 16 used
5	11-276	Mount Angle, Bale Support, Front
6	11-275	Mount Angle, Bale Support, Rear
7	11-126	Guide Plate, Bale Support, 4 used
8	11-192	Mounting Bracket, Bale Support
9	11-124	Bale Support
10	F 0005121	1" Set Collar, 2 used
11	SCC0000104	1/4" x 1 1/2" NCHT Cap Screw, 2 used
12	11-218	Arm, Index Shaft, 2 used
13	11-246	Index Shaft
14	11-122	Skid, Index
15	SFC0000509	1/2" x 2 3/4" NFHT Cap Screw, 2 used
16	F 0001643	Rod, Index Valve Return
17	04-105	Spring, 461 Winks
18	11-270	Index Stop
19	SCC0000301	3/8" x 3/4" NCHT Cap Screw, 22 used
20	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 2 used
21	SCC0000207	5/16" x 2 1/4" NCHT Cap Screw, 4 used
	NCH0003125	5/16" NC Hex Nut, 4 used
	NCH0003725	3/8" Hex Nut (2 Used as Spacer)

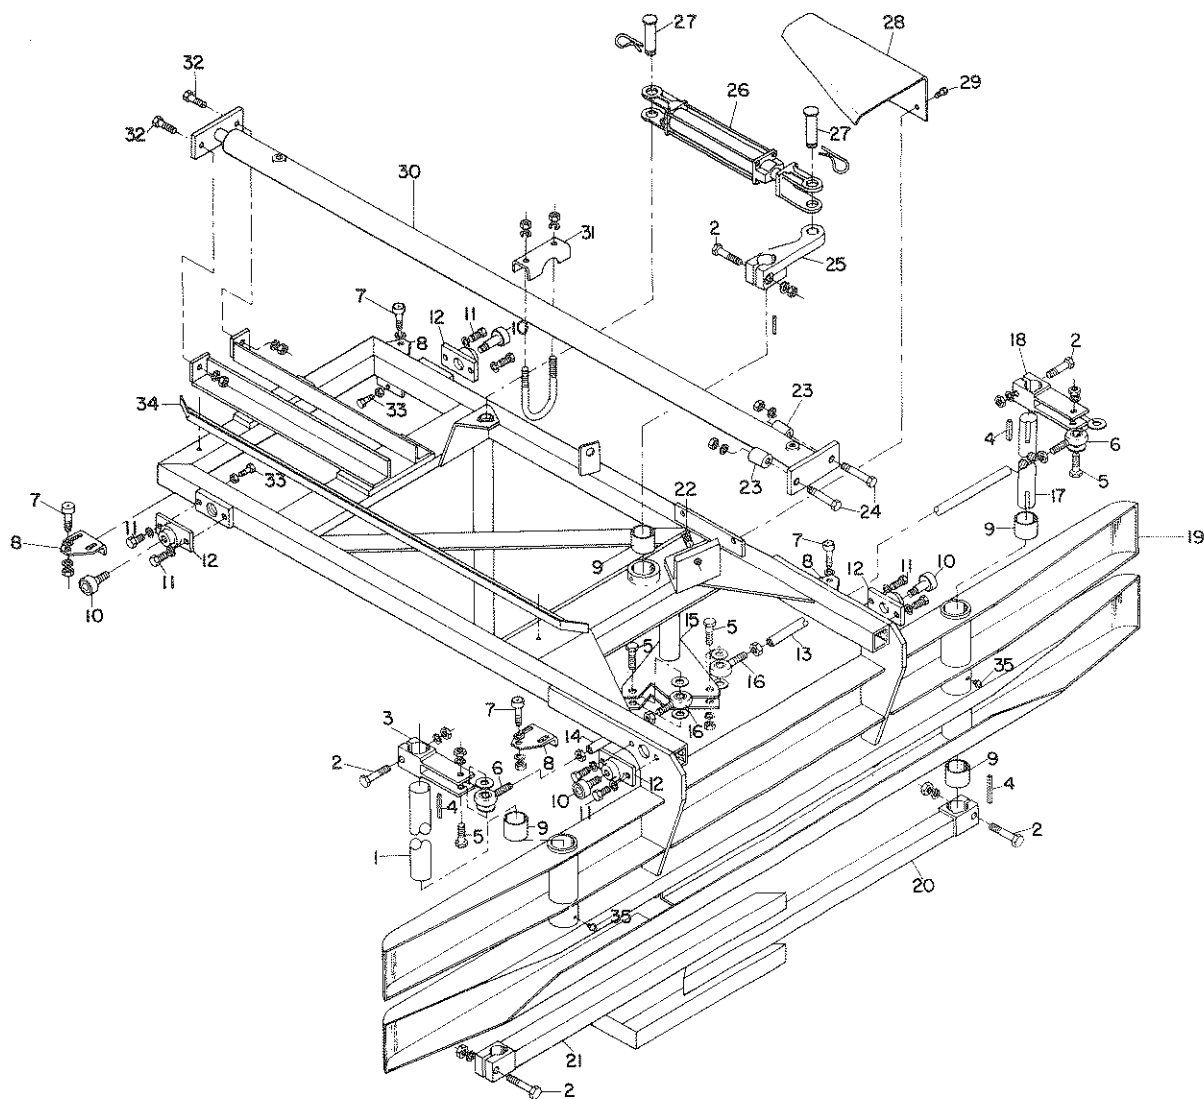


CAGE PUSHER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	11-171	Shaft, Tie Arm, Rear	19	11-244	Pusher Frame
2	SCC0000509	1/2" x 2 3/4" NCHT Cap Screw, 5 used	20	11-169	Front Tie Arm
3	11-203	Tie Arm Lever, Rear	21	11-168	Rear Tie Arm
4	ZZ 0000413	3/8" x 1-7/8" Key, 5 used	22	SQS7501750	3/4" x 1 1/4" Square Head Set Screw
5	SCC0000506	1/2" x 2" NCHT Cap Screw, 4 used	23	NFJ0007500	3/4" NC Jam Nut
6	F 0005992	Rod End, 1/2" RH Male, TM-8N, 2 used	24	11-109	Spacer, 2 used
	NFJ0005000	1/2" NF Jam Nut	25	SCC0000514	1/2" x 4" NCHT Cap Screw, 2 used
7	F 0000822	Cam Follower, CF-1-S McGill, 4 used	26	11-183	Lever, Tie Cylinder
8	11-230	Mounting Plate, Guide Roller, 4 used	27	F 0006519	Cylinder, PMC 8408 Prince
9	02-106	Oilite Bushing, 1-3/8" x 1 1/2" x 1 1/2", AA1507 Kingwell		F 0006599	Seal Kit
10	F 0007598	Cam Roller, 4 used	28	06-122	Pin with Keeper, 2 used
11	SCC0000302	3/8" x 1" NCHT Cap Screw, 16 used	29	11-180	Shield, Tie Cylinder
12	11-208	Roller Mount Plate, Pusher, 4 used	30	SCC0000301	3/8" x 3/4" NCHT Cap Screw, 2 used
13	11-206	Connecting Rod, Front Tie Arm		01-552	Hydraulic Cylinder, LC2 x 65 SP
14	11-204	Connecting Rod, Rear Tie Arm			Hypower
15	11-205	Bell Crank			Repair Kit
16	02-153	Rod End, 1/2" LH Male, TML-8N, 2 used	31	06-145	Clamp, 2 1/2" "U" Bolt, 3-4885 BK
	NFJ0050000	1/2" NF, LH Jam Nut	32	SCC0000505	1/2" x 1 3/4" NCHT Cap Screw, 2 used
17	11-175	Shaft, Front Tie Arm	33	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 4 used
18	11-207	Lever, Front Tie Arm	34	11-245	Cam Pusher, Limit Switch
			35	ZZ 0000100	1/4" -28 Zerk Fitting, 3 used

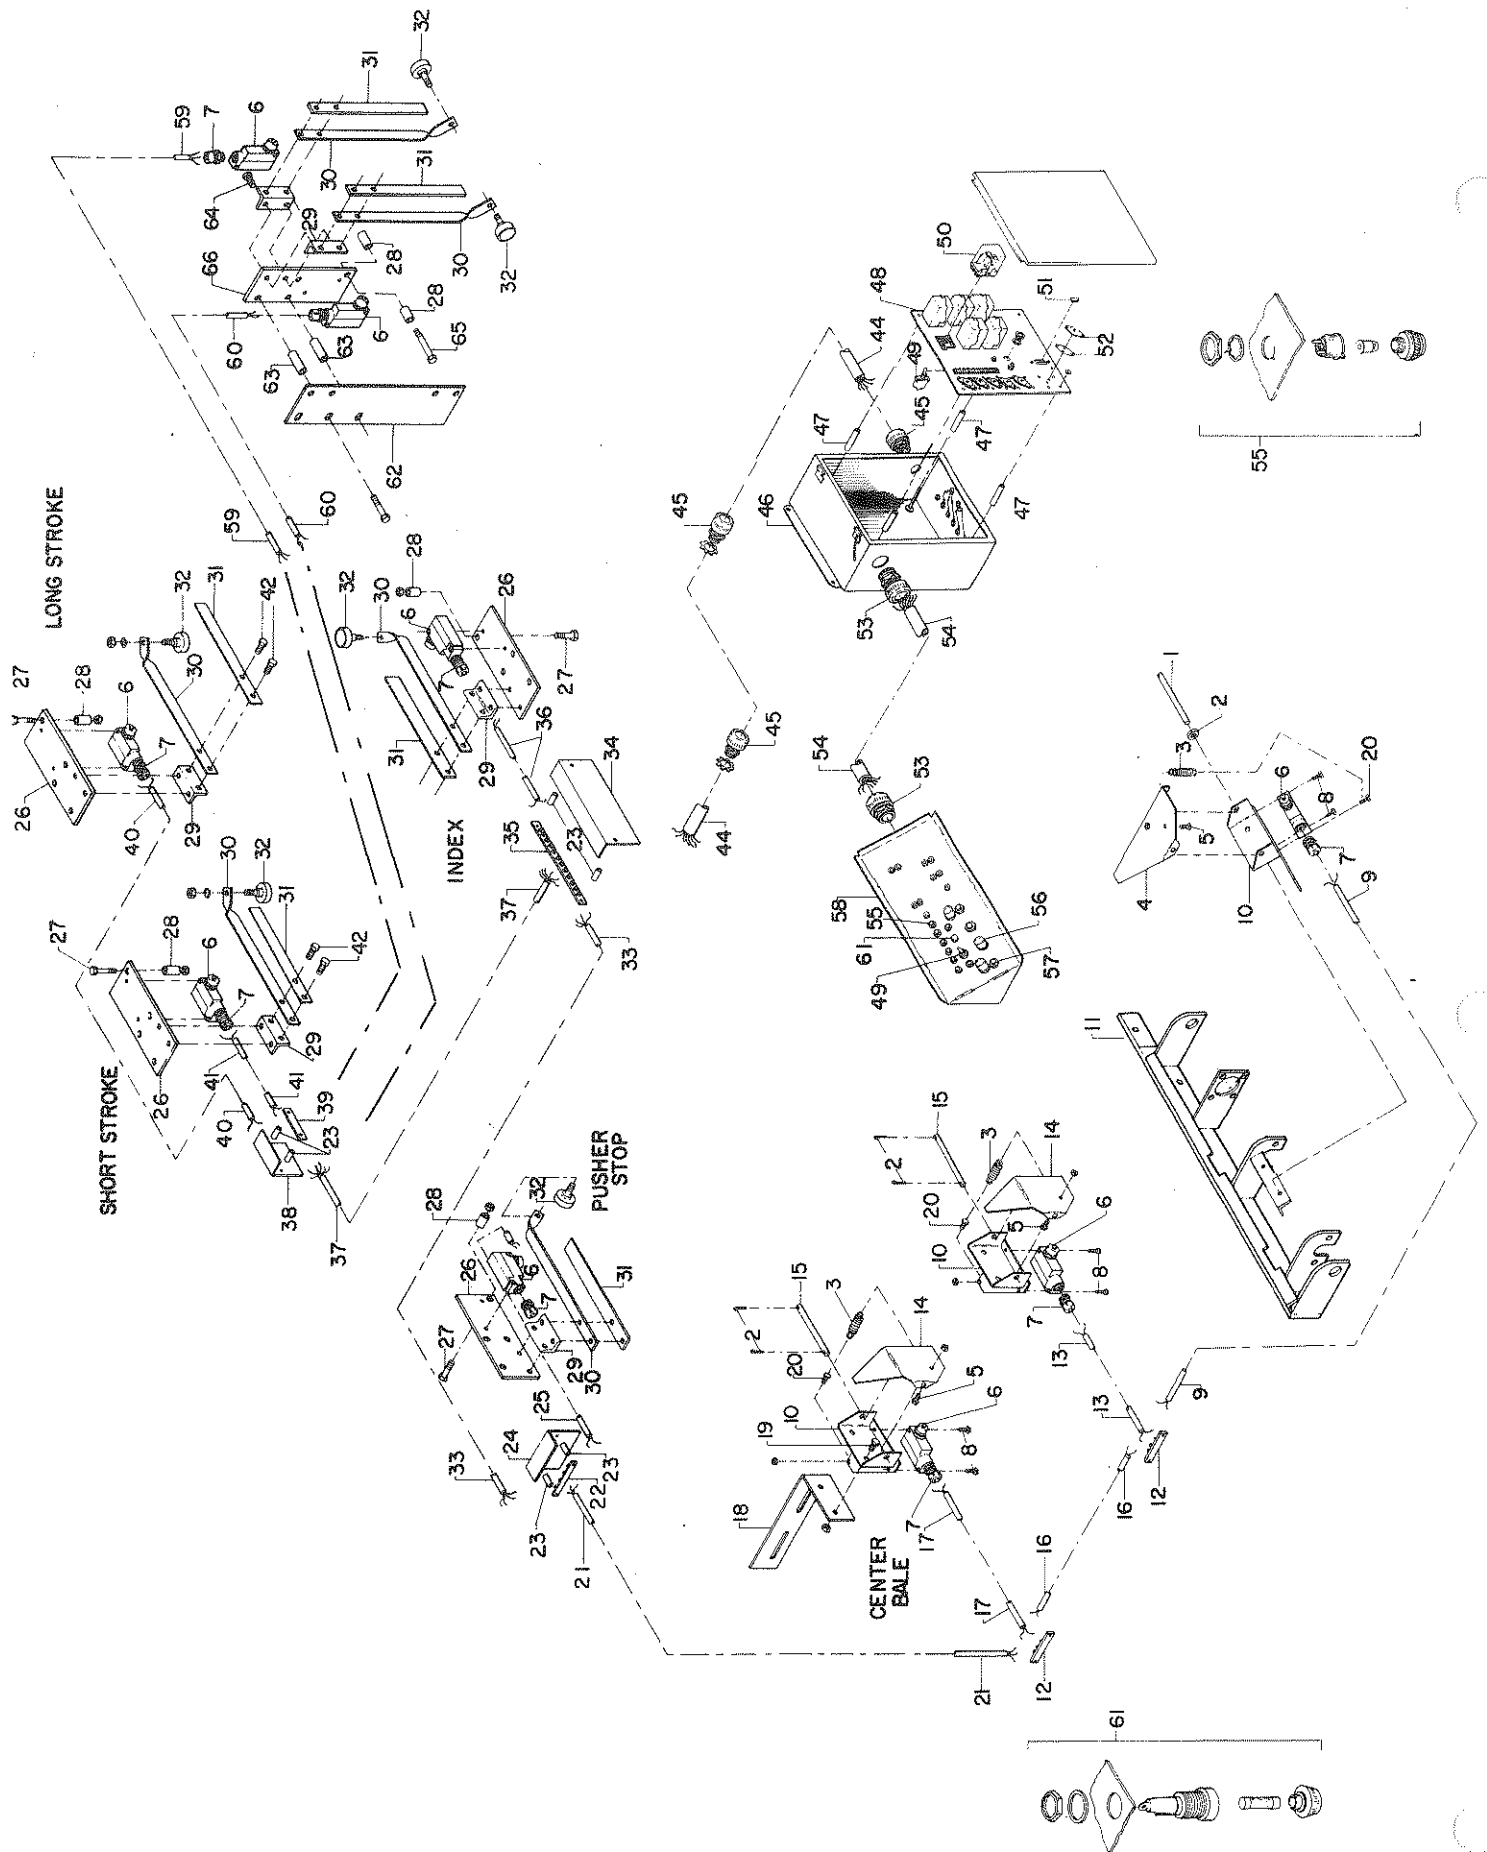


ELECTRIC CAGE CONTROLS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	11-256	Actuator Pivot Pin	36	03-172	2 Conductor Electric Cord, 36"
2	ZZ 0002016	3/8" Set Collar	37	03-170	6 Conductor Electric Cord, 60"
3	F 0000278	Spring, 3 used	38	11-269	Shield for 6 Post Terminal
4	11-257	Actuator, Limit Switch	39	03-161	Terminal Block, 6 Post, 4721-P6
5	SCC0000202	5/16" x 1" NCHT Cap Screw	40	03-173	2 Conductor Electric Cord, 40"
	NCH0003125	5/16" NC Hex Nut, 2 used	41	03-174	2 Conductor Electric Cord, 30"
6	03-158	Limit Switch, BZG1-2RN Micro, 9 used	42	SCC0000301	3/8" x 3/4" NCHT Cap Screw
	03-178	Repair Kit for 03-158 Limit Switch	43	SCC0000310	3/8" x 3" NCHT Cap Screw
7	03-177	Connector, 1/2", CGB193 C-H, 9 used	44	03-171	12 Conductor Electric Cord, 232"
8	SMR1031500	10-32 x 1 1/2" Machine Screw	45	03-179	Connector, 3/4" CGB296 C-H
9	03-163	2 Conductor Electric Cord, 44"	46	03-180	Box, with Cover, A-1210LP
10	11-258	Bracket, Limit Switch, 3 used	47	07-126	Spacer, 3/8" OD x 1 1/2" Tubing
11	ELV0586500	Mounting Hinge, Rear Elevator	48	03-900	Relay Chassis Complete
12	03-159	Terminal Block, 3 Post, 4721-P3, 2 used	49	03-181	Switch, 1TL1-3 Micro
			50	03-182	Relay, W388CPX-10 Magnecraft
			51	03-183	Integrated Circuit, MC140174CP Motorola
13	03-164	2 Conductor Electric Cord, 17"			
14	11-259	Actuator, Limit Switch, 2 used	52	03-184	Transistor, 2N6055
15	11-260	Actuator Pivot Pin, 2 used		03-185	Transistor Base, MK-15
16	03-166	2 Conductor Electric Cord, 57"	53	03-186	Connector, 1", CGB397 C-H
17	03-165	2 Conductor Electric Cord, 20"	54	03-187	20 Conductor Electric Cord, 80"
18	11-261	Bracket Mount, Center Bale Switch	55	03-188	Indicator Lamp Base, 162-8130-09-502
19	SCC0000302	3/8" x 1" NCHT Cap Screw		03-189	Indicator Lamp Lens, 178-0331-500
20	SCC0000102	1/4" x 1" NCHT Cap Screw		03-190	Indicator Lamp Bulb, 330GE
21	03-167	3 Conductor Electric Cord, 126"	56	F 0005237	Switch
22	03-160	Terminal Block, 4 Post, 4721-P4	57	03-191	Switch, 1PB4 Micro
23	11-262	Spacer	58	17-235	Control Panel Only
24	11-263	Shield for 4 Post Terminal		03-901	Control Panel Complete
25	03-163	2 Conductor Electric Cord, 44"	59	03-175	3 Conductor Electric Cord, 84"
26	11-264	Bracket, Limit Switch	60	03-176	2 Conductor Electric Cord, 84"
27	SCC0000306	3/8" x 2" NCHT Cap Screw	61	03-192	Fuse Holder, HKP Buss
28	11-265	Stop, Actuator		03-193	Fuse, AGC15
29	11-266	Mounting Bracket, Limit Switch Actuator	62	11-254	Mount, Bracket
			63	11-235	Spacer
30	11-267	Actuator, Limit Switch	64	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw
31	11-268	Backing Plate, Limit Switch Actuator	65	SCC0000311	3/8" x 3/4" NCHT Cap Screw
32	BRG0010846	Roller	66	11-255	Mount, Limit Switch
33	03-168	4 Conductor Electric Cord, 114"			
34	11-253	Shield for 12 Post Terminal			
35	03-162	Terminal Block 12 Post, 4721-P12			

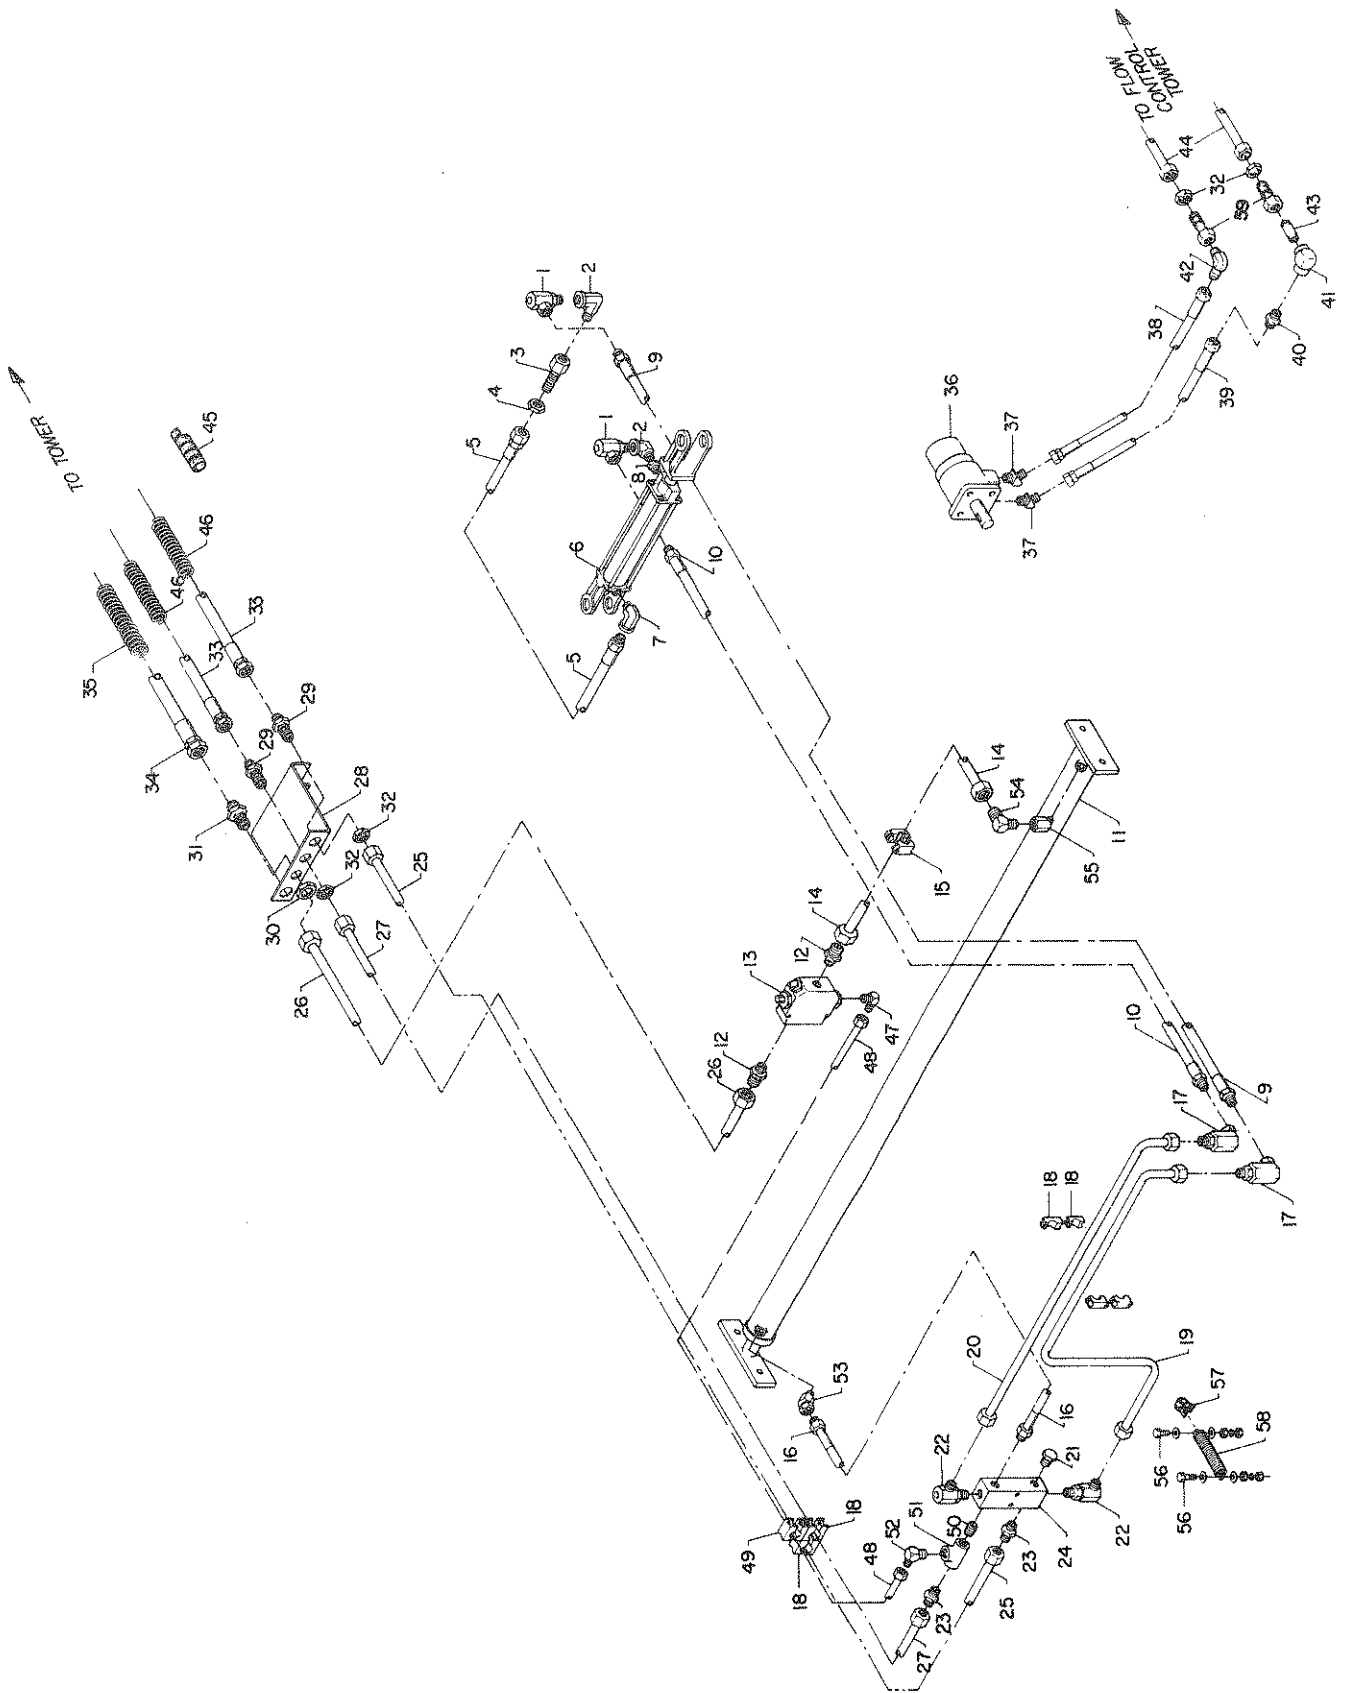

CAGE HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION
1	01-419	3/8" x 90° Rotating Swivel Fitting, 59UC x 06 x 06 x 06
	01-432	Seal Kit, 59SK06
2	HYD3409030	3/8" x 90° Steel Street Elbow
3	HYD5275040	1/2" Female Bulk Head Connector
4	HYD5924040	1/2" Bulk Head Nut
5	01-237	3/8" Hydraulic Hose, 28"
6	F 0006519	Hydraulic Cylinder, 2" x 8", RMC8408 Prince
	F 0006599	Seal Kit
7	HYD3409040	1/2" x 90° Steel Street Elbow
8	HYD3109043	1/2" x 3/8" Steel Bushing
9	01-209	3/8" Hydraulic Hose, 21"
10	01-238	3/8" Hydraulic Hose, 23"
11	01-552	Pusher Cylinder, LC2 x 65 SP Hypower
	HYPSAC0KL2	Seal Kit for 01-552
12	HYD5205060	3/4" Straight Male Connector
13	VLVRD10750	Selector Valve, RD1075-L-V-A21 Douglas
14	TBE0008586	3/4" Hydraulic Tube W/Sleeve & Nut
15	06-106	3/4" Tube Clamp
16	01-236	1/2" Hydraulic Hose, 26 1/2"
17	01-420	1/2" x 90° Rotating Swivel Fitting, 59UK-08-10-08 Imp.
	01-433	Seal Kit, 59SK-08 Imp.
18	F 0006629	5/8" Tube Clamp, 100-5/8 Gerard, 4 used
19	01-146	5/8" Hydraulic Tube, Swivel Arm, Lower, W/Nut & Sleeve
20	01-145	5/8" Hydraulic Tube, Swivel Arm, Upper
21	HYD3159040	1/2" Steel Hex Head Plug
22	01-418	1/2" x 90° Rotating Swivel Fitting, 59UA x 10 x 08 x 08
23	HYD5205050	5/8" Straight Male Connector
24	01-604	Hydraulic Swivel Block
25	TBE0006401	5/8" Hydraulic Tube W/Nut & Sleeve
26	TBE0008587	3/4" Hydraulic Tube W/Nut & Sleeve
27	TBE0008589	5/8" Hydraulic Tube W/Nut & Sleeve
28	MNT0008045	Hose Mount Plate
29	HYD5325050	5/8" Male Bulk Head Connector
30	HYD5924060	3/4" Bulk Head Nut
31	HYD5325060	3/4" Bulk Head Union, 11 used
32	HYD5924050	5/8" Bulk Head Nut
33	HOS0008459	1/2" Hydraulic Hose, 96", 2 used
34	HOS0008460	3/4" Hydraulic Hose, 96", 2 used
35	SPG0001264	Spring Guard, 12" Long for 3/4" Hose
36	MTR1001007	Hydraulic Motor, A5K Char-Lynn
37	HYD5355050	1/2" x 45° Steel Male Elbow, C5355 x 10 WH
38	HOS0008534	1/2" Hydraulic Hose, 33"
39	HOS0008535	1/2" Hydraulic Hose, 34"
40	HYD5205050	5/8" Straight Male Connector
41	HYD3509040	1/2" x 90° Steel Elbow
42	HYD5405050	5/8" x 90° Male Elbow
43	01-722	1/2" x 2" Extra Heavy Black Nipple
44	HOS0008458	1/2" Hydraulic Hose, 87"
45	07-124	Plastic Hose Wrap, 12 ft.
46	SPG0001263	Spring Guard, 12" Long for 1/2" Hose
47	HYD5405032	90° Male Elbow
48	TBE0008588	3/8" Hydraulic Tube W/Sleeve & Nut
49	CLP0038100	3/8" Tube Clamp, 3/8" -100 Girard
50	01-720	1/2" Close Extra Heavy Black Nipple
51	HYD3709040	1/2" Steel Tee
52	HYD5405034	3/8" x 90° Male Elbow
53	HYD9355044	1/2" x 45° Swivel Adaptor
54	HYD5405064	3/4" x 90° Male Elbow
55	HYD3359040	1/2" x 45° Steel Street Elbow
56	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw, 2 used
	WCT0003125	5/16" Flat Washer, 2 used
	NCH0003125	5/16" NC Hex Nut, 2 used
	WLK0003125	5/16" Lock Washer, 2 used
57	CLP121	Clamp
58	F 0000747	Spring
59	HYD5275050	5/8" Bulk Head Connector

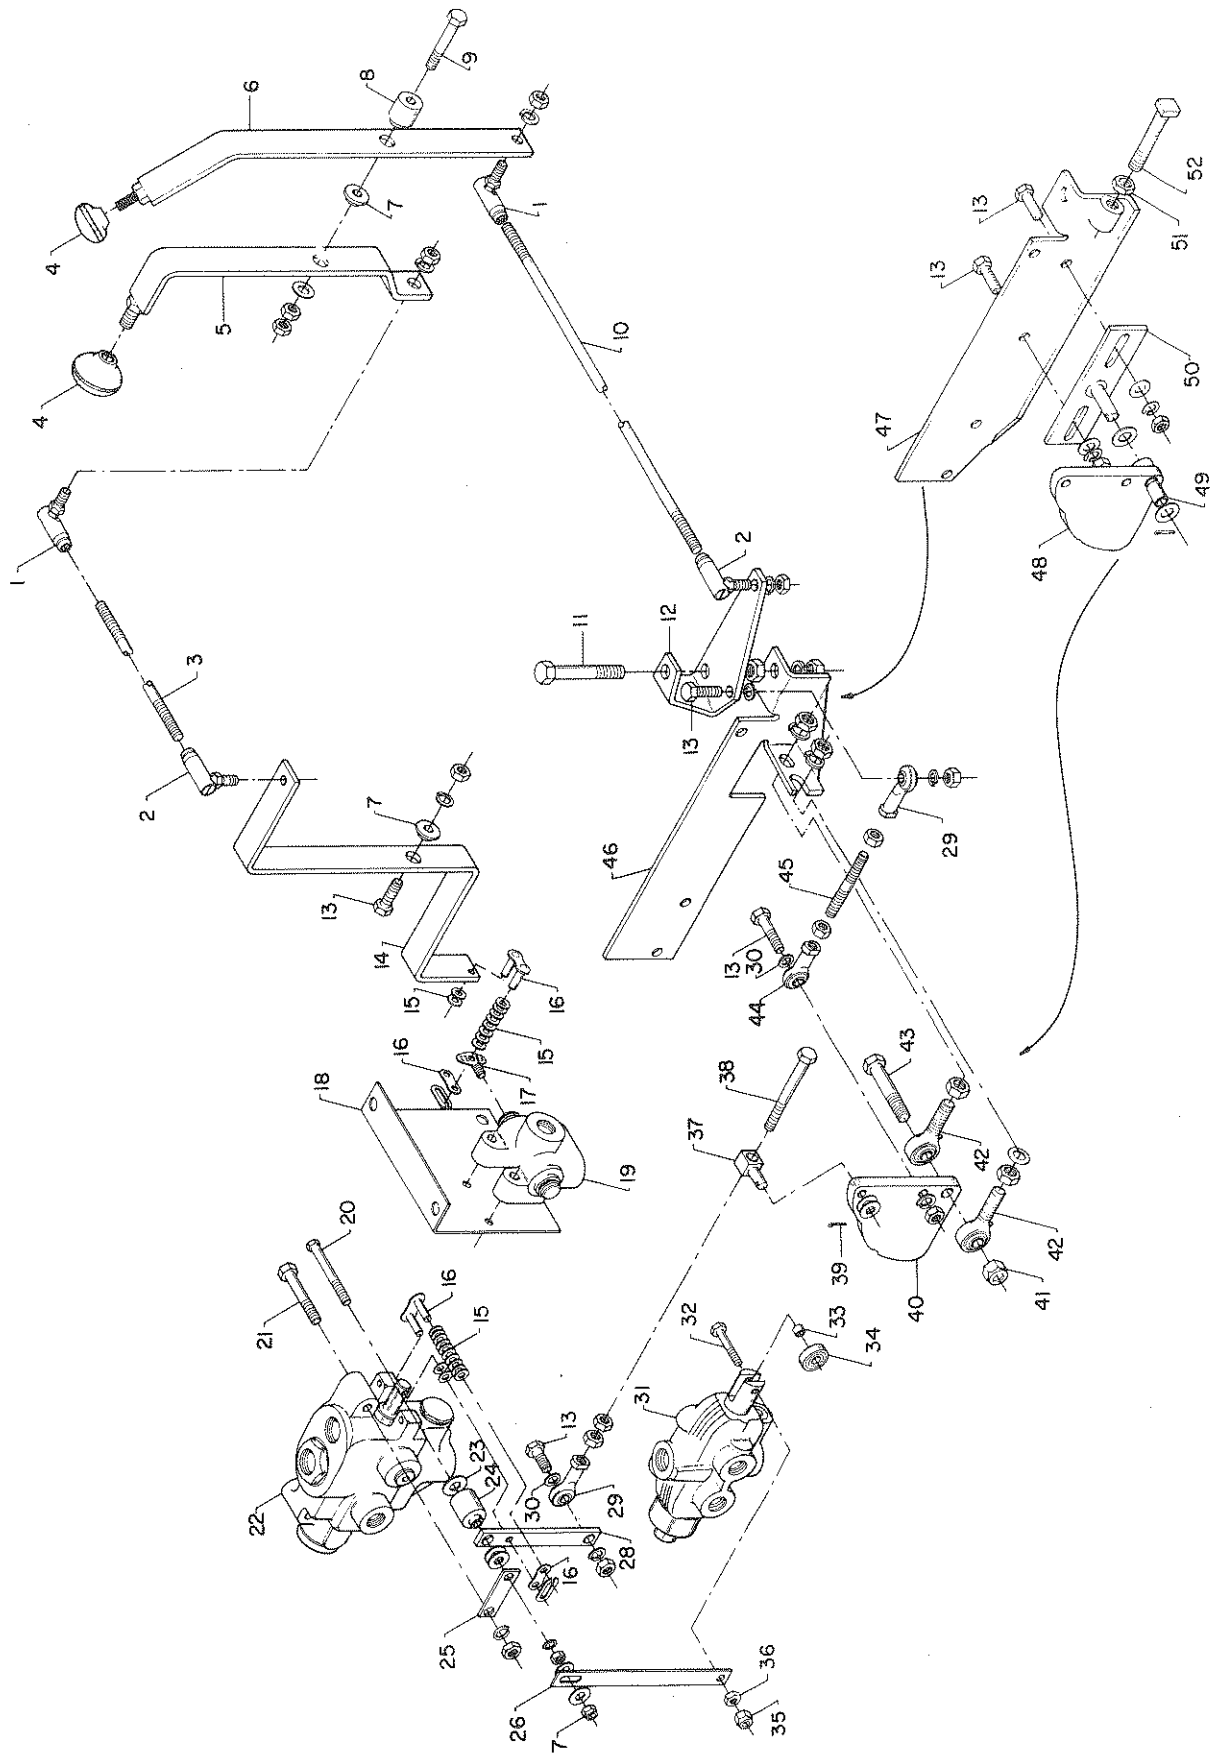


HYDRAULIC CONTROLS

REF. NO.	PART NO.	DESCRIPTION
1	BLJ0000109	Ball Joint, 3/8" NF, RH Thread
2	BLJ0001090	Ball Joint, 3/8" NF, LH Thread
3	ROD0008298	Control Rod, 3/8" x 14"
4	F 0005055	Knob, 2 used
5	LEV0008000	Control Lever, Selector
6	LEV0007999	Control Lever, Pickup
7	F 0000440	Ferrule, 2 used
8	07-120	Spacer
9	SCC0000309	3/8" x 2 3/4" NCHT Cap Screw
10	ROD0008050	Control Rod, Pickup Valve, 3/8" x 20"
11	SCC0000514	1/2" x 4" NCHT Cap Screw
12	BLC0007787	Bell Crank, Pickup Valves
13	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw
14	BLC0007998	Bell Crank, Selector Valve
15	WAS0000125	SAE Flat Washer, No. 12, 22 used
16	05-122	Connecting Link, RC60
17	11-184	Valve Spool Stud
18	BKT0007997	Bracket, Selector Valve
19	VLV0000008	Selector Valve, S-8 Gresen
20	SCC0000210	5/16" x 3" NCHT Cap Screw
21	SCC0000309	3/8" x 2 3/4" NCHT Cap Screw
22	01-520	Valve, SPYE-3 NRNH Gresen
23	WCT0003750	3/8" Flat Washer
24	SPC0008428	Ferrule
25	BRC0007888	Pivot Brace, Pickup Valve
26	LNK0007784	Alignment Link, Elevator Valve
27	NCE0003125	5/16" NC Elastic Stop Nut
28	LEV0007889	Operator Lever, Pickup Valve
29	ROD0000006	3/8" RH Female Rod End
30	WCT0003750	3/8" Flat Washer
31	01-507	Valve, 400 Gresen
32	SCC0000105	1/4" x 1 3/4" NCHT Cap Screw
33	BSH0000103	Bushing, 1/4" Tube, 1/4" Long
34	F 0000570	Bearing
35	NCE0002500	1/4" NC Elastic Stop Nut
36	NCJ0002500	1/4" NC Jam Nut
37	BLK0008049	Pickup Valve Slide Block
38	SCC0000313	3/8" x 3 3/4" NCHT Cap Screw
39	COT0000504	1/8" Cotter Key
40	CAM0007863	Cam, Pickup Valve, To Ser. No. 0210
41	NCE0005000	1/2" NC Elastic Stop Nut
42	F 0005992	1/2" Male Rod End, 2 used
43	SCC0000509	1/2" x 2 3/4" NCHT Cap Screw
44	ROD000060	3/8" LH Rod End
45	ROD0008180	Rod, 3/8" x 3 1/4"
46	BLC0007786	Bell Crank Mount, To Ser. No. 0210
47	BLC0008386	Bell Crank Mount, From Ser. No. 0211
48	CAM0008394	Cam, Pickup Valve, From Ser. No. 0211
49	F 0001568	Bushing, From Ser. No. 0211
50	PLT0008387	Cam Mount Plate, From Serial No. 0211
51	NCJ0005000	1/2" NC Jam Nut, From Ser. No. 0211
52	SQS5003000	1/2" x 3" Square Head Set Screw, From Ser. No. 0211


MAIN FRAME HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	01-569	Hydraulic Cylinder, 2½" x 8"	58	HOS0008458	½" Hydraulic Hose, 87"
	01-570	Seal Kit	59	01-521	Flow Control Valve, FC51 ½ Brand
2	HYD5405023	90° Male Elbow, 2 used	60	01-720	½" Close Extra Heavy Black Nipple
3	HOS0008467	¼" Hydraulic Hose, 103"	61	HYD5405050	5/8" x 90° Male Elbow
4	HYD9405033	3/8" x 90° Swivel Adapter	62	HOS0008458	½" Hydraulic Hose, 87"
5	01-211	3/8" Hydraulic Hose	63	TBE0009073	¾" Hydraulic Tube
6	01-315	½" Straight Swivel Restricted Adapter, 61SAx08x08 Imperial	64	TBE0009074	¾" Hydraulic Tube
7	TBE0009087	5/8" Hydraulic Tube	65	HOS0008459	½" Hydraulic Hose, 96"
8	HOS0008466	½" Hydraulic Hose, 82"	66	TBE0009083	5/8" Hydraulic Tube
9	HYD3109043	Steel Bushing, ½" x 3/8"	67	HOS0008460	¾" Hydraulic Hose, 96"
10	HYD3109064	Steel Bushing, ¾" x ½", 2 used	68	HYD5325050	5/8" Female Bulk Head Union
11	HYD3709060	¾" Tee, 2 used	69	HYD5325060	¾" Female Bulk Head Union
12	01-738	¾" Close Extra Heavy Black Nipple, 2 used	70	PLT0007003	Hose Mounting Plate, Tower
13	HYD3109076	Steel Bushing, 1" x ¾"	71	HYD5924050	5/8" Bulkhead Nut
14	HYD5205060	¾" Male Connector	72	HYD5924060	¾" Bulkhead Nut
15	HYD5405070	1" x 90° Male Elbow	73	HOS0008469	½" Hydraulic Hose, 58½"
16	HOS0008471	1" Hydraulic Hose, 29½"	74	HOS0008470	½" Hydraulic Hose, 73"
17	HOS0008463	¾" Hydraulic Hose, 18"	75	HOS0008472	¾" Hydraulic Hose, 44"
18	HYD5205042	Male Connector, ½" x ¼"	76	06-149	Reel Clamp
19	HYD3069060	¾" Hex Head Nipple	77	SCC0000514	½" x 4" NCHT Cap Screw, 2 used
20	HYD5405060	¾" x 90° Male Elbow	78	01-630	Hose Reel, Cascade 646044
21	HYD5405050	5/8" x 90° Male Elbow	79	HOS0008461	3/8" Hydraulic Hose, 198"
22	TBE0008779	¾" Hydraulic Tube	80	HOS0008462	3/8" Hydraulic Hose, 197"
23	HOS0008273	¼" Hydraulic Hose, 10"	81	01-631	Hydraulic Swivel Block, 646058 Cascade
24	HYD0048022	Brass Male Connector	82	TBE0007910	5/8" Hydraulic Tube
25	BON0008271	Bonnet for Gresen 400 Valve	83	TBE0007909	5/8" Hydraulic Tube
26	GSK0008270	Gasket for Gresen 400 Valve Bonnet	84	01-607	Hydraulic Motor
27	HYD3409040	Steel Street Elbow, ½"	85	HOS0008455	½" Hydraulic Hose, 45"
28	HYD5205064	Male Connector, ¾" x ½"	86	01-722	½" x 2" Extra Heavy Black Nipple, 2 used
29	TBE0009085	¾" Hydraulic Tube	87	HOS0008468	½" Hydraulic Hose, 66½"
30	TBE0009084	¾" Hydraulic Tube	88	TBE0009079	5/8" Hydraulic Tube
31	HYD5405064	90° Male Elbow, ¾" x ½"	89	TBE0009078	5/8" Hydraulic Tube
32	01-507	Index Valve, 400 Gresen	90	TBE0009077	5/8" Hydraulic Tube
33	TBE0008780	¾" Hydraulic Tube	91	HYD5705050	5/8" Tee Union
34	01-520	Valve, SPYE-3-NR-NH Gresen	92	TBE0009076	5/8" Hydraulic Tube
35	HYD3159020	Steel Hex Head Plug, ¼"	93	TBE0009075	5/8" Hydraulic Tube
36	HYD3109042	Steel Bushing, ½" x ¼"	94	HOS0008454	½" Hydraulic Hose, 56"
37	HYD5405042	90° Male Elbow	95	HOS0008453	½" Hydraulic Hose, 56"
38	01-513	Relief Valve, 2000 PSI	96	HOS0008456	½" Hydraulic Hose, 45"
39	HYD3069040	Hex Nipple, ½"	97	TBE0009086	¾" Hydraulic Tube
40	HYD3709040	½" Steel Tee	98	VLV00F30BK	Restrictor Valve, F30B, Pneutrol
41	HYD5355064	45° Male Elbow, ¾" x ½"	99	TBE0009071	5/8" Hydraulic Tube
42	HOS0008464	¾" Hydraulic Hose, AC, 40"	100	TBE0009072	5/8" Hydraulic Tube
	HOS0008482	¾" Hydraulic Hose, JD, 83"	101	HYD5375050	45° Bulkhead Union Elbow
43	HYD0000811	"O" Ring Adapter Fitting, 6401-8-8	102	TBE0009080	5/8" Hydraulic Tube
			103	HYD5707050	Swivel Nut Branch Tee
44	VLV0000008	Selector Valve, S-8 Gresen	104	HOS0008452	½" Hydraulic Hose, 20", 4 used
45	TBE0009226	¾" Hydraulic Tube	105	01-555	Hydraulic Cylinder, LC4x6sp, 2 used
46	HYD5515064	90° "O" Ring Elbow, ¾" x ½"		01-560	Repair Kit, KL4
47	HYD3269044	½" Straight Thread Adapter Fitting	106	01-115	Pin with Keeper, 8 used
48	01-723	½" x 3" Extra Heavy Black Nipple	107	HYD3309040	½" Steel Coupling
49	HYD3509040	½" x 90° Steel Elbow	108	HYD5275050	Female Bulkhead Connector, 2 used
50	01-200	½" Hydraulic Tube	109	HYD5405064	90° Male Elbow
51	BKT0007997	Bracket, Selector Valve	110	HYD5205044	½" Male Connector
52	SCC0000204	5/16" x 2" NCHT Cap Screw	111	HYD5205050	½" Male Connector, 4 used
53	MTR10010007	Hydraulic Motor	112	HYD5315040	Straight Thread Connector with "O" Ring, 7 used
	CHR0060023	Repair Kit	113	01-516	Valve, SP 4-4 NR Gresen
54	HYD5205050	5/8" Straight Male Connector	114	SCC0000208	5/16" x 2½" NCHT Cap Screw
55	HOS0008457	½" Hydraulic Hose, 79"	115	06-130	Clevis Pin, ¼" x 1½", 2 used
56	HYD3959070	1" Steel Cross	116	F 0000025	Connecting Link, RC60, 2 used
57	TBE0009082	5/8" Hydraulic Tube	117	18-185	Valve Lever, 2 used
			118	HYD5315045	Straight Thread Connector with "O" Ring, 2 used

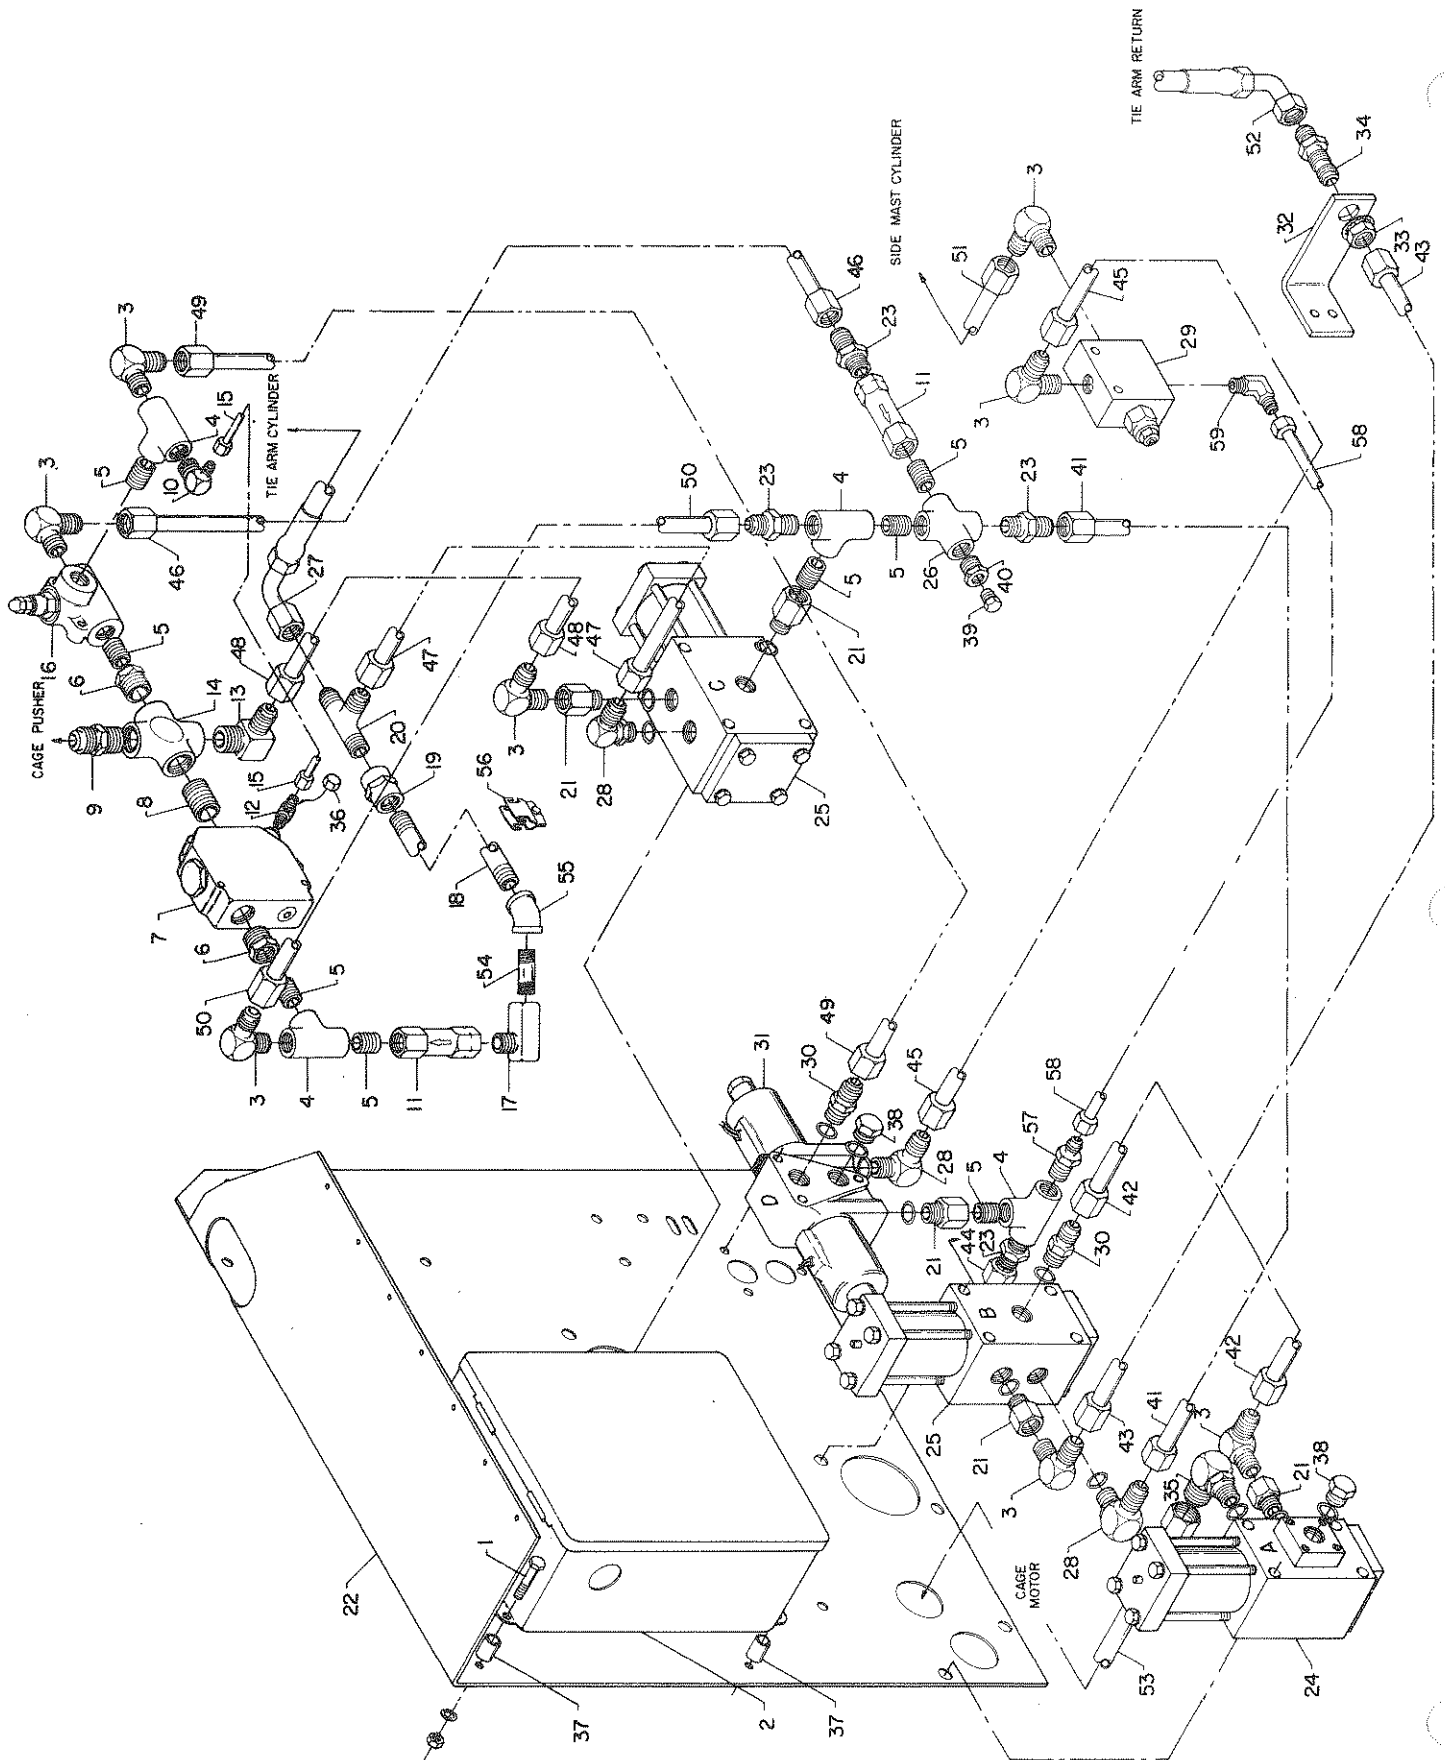


FRONT CONTROL PANEL HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION
1	SCC0000205	5/16" x 1 1/4" NCHT Cap Screw, 4 used
2	03-180	Box with Cover
3	HYD5405050	5/8" x 90° Male Elbow, 9 used
4	HYD3709040	1/2" Steel Tee, 3 used
5	01-720	1/2" Close Extra Heavy Black Nipple, 7 used
6	HYD3109064	Steel Bushing, 3/4" x 1/2", 2 used
7	VLV0RD1075	Sequence Valve, RD1075-HC-V-A1 Douglas
8	PPE7500200	3/4" x 2" Extra Heavy Black Nipple
9	HYD5205060	3/4" Straight Male Connector
10	HYD5205024	1/4" Straight Male Connector
11	F 0006657	1/2" Check Valve, 2 used
12	HYD5405022	1/4" x 90° Male Elbow
13	HYD5405056	5/8" x 90° Male Elbow
14	HYD3959060	3/4" Steel Cross
15	TBE0008502	1/4" Hydraulic Tube, Sequence Valve
16	01-514	Relief Valve, 1500 PSI
17	HYD3409040	1/2" x 90° Steel Street Elbow
18	PPE5001100	1/2" x 11" Extra Heavy Black Pipe
19	HYD3309040	1/2" Steel Coupling
20	HYD5755054	5/8" x 1/2" Male Run Tee
21	HYD3269044	1/2" Straight Thread "O" Ring Adapter
22	PLT0007989	Valve Mounting Plate
23	HYD5205050	5/8" Straight Male Connector, 2 used
24	VLV4951184	Solenoid Valve
	ELC0015019	Solenoid Coil Only
25	VLV495T819	Solenoid Valve
	ELC0015019	Solenoid Coil Only
26	HYD3959040	1/2" Steel Cross
27	HOS0008469	1/2" Hydraulic Hose, 58"
28	HYD5515054	5/8" x 90° Straight "O" Ring Elbow
29	VLV0000002	Counter Balance Valve
30	HYD5315054	5/8" Straight Thread "O" Ring Connector
31	VLV0004813	Double Solenoid Valve, 4813-12VDC
	03-142	Solenoid Coil Only
32	BKT0007992	Tube Support
33	HYD5924050	5/8" Bulk Head Nut
34	HYD5325050	5/8" Bulk Head Union
35	HYD5515064	3/4" x 90° Straight Thread "O" Ring Elbow
36	F 0006628	1" Tube Clamp, 2 Piece
37	SPC0009069	Spacer, 4 used
38	HYD7230040	1/2" Straight Thread "O" Ring Plug
39	HYD3159020	1/4" Hex Head Plug
40	HYD3109042	Steel Bushing, 1/2" x 1/4"
41	TBE0008497	5/8" Hydraulic Tube, Pusher Valve to Tie Arm Valve
42	TBE0008493	5/8" Hydraulic Tube, Pusher Valve
43	TBE0008499	5/8" Hydraulic Tube, Pusher Return
44	TBE0009077	5/8" Hydraulic Tube
45	TBE0008495	5/8" Hydraulic Tube, Side Mast Valve to Balance Valve
46	TBE0008498	5/8" Hydraulic Tube, Cross on Tie Arm Valve to Relief Valve
47	TBE0008494	5/8" Hydraulic Tube, Tie Arm
48	TBE0008496	5/8" Hydraulic Tube, Tie Arm
49	TBE0008501	5/8" Hydraulic Tube, Side Mast Valve
50	TBE0008500	5/8" Hydraulic Tube, Sequence Valve
51	TBE0007078	5/8" Hydraulic Tube
52	HOS0008470	1/2" Hydraulic Hose, 73"
53	TBE0009073	3/4" Hydraulic Tube

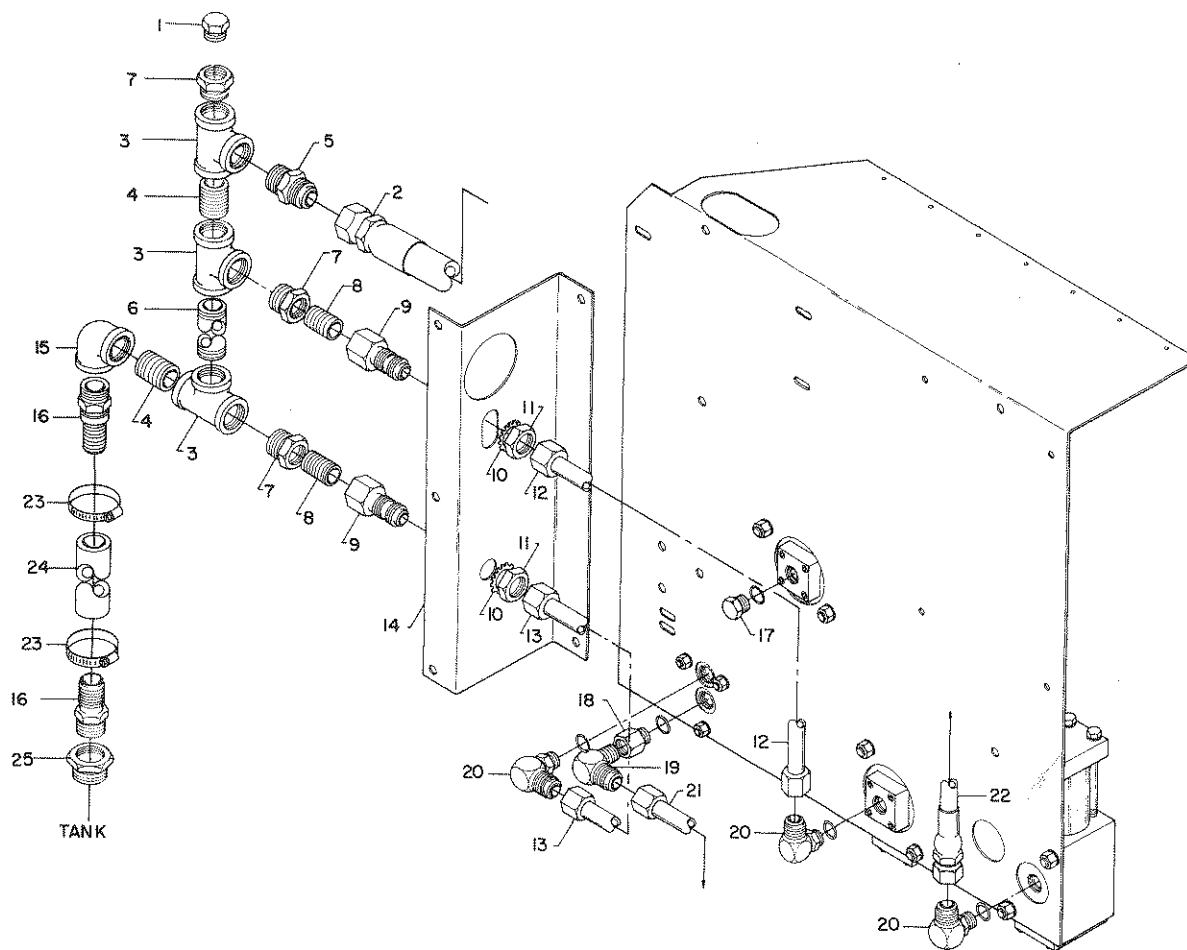


CONTROL PANEL HYDRAULIC (Rear View)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	HYD3159060	3/4" Hex Head Plug	13	TBE0008615	3/4" Hydraulic Tube, Return Line
2	HOS0008471	1" Hydraulic Hose, 29 1/2"	14	SUP0007995	Rear Valve Plate Support
3	PPE0041000	1" Standard Black Tee	15	PPE0100900	1" x 90° Standard Black Elbow
4	PPE0001000	1" Close Standard Black Nipple	16	HYD4404070	1" Hose Nipple
5	HYD5205070	1" Male Connector	17	HYD7230040	Plug, Straight Thread W/"O" Ring
6	PPE1000600	1" x 6" Standard Black Nipple	18	HYD3269044	1/2" Straight Thread Adapter W/"O" Ring
7	HYD3109076	Bushing, 1" x 3/4"	19	HYD5405064	90° Male Elbow
8	PPE0000750	3/4" Close Standard Black Nipple	20	HYD5515064	90° Elbow W/"O" Ring
9	HYD5275060	3/4" Female Bulkhead Connector	21	TBE0009074	90° Hydraulic Tube
10	WES0011250	1-1/8" External Star Lock Washer	22	HOS0008463	3/4" Hydraulic Hose, 18"
11	HYD5924060	3/4" Bulkhead Nut	23	06-121	Hose Clamp
12	TBE0008614	3/4" Hydraulic Tube, Return Line	24	HOS0008487	1" Return Hose, 19"
			25	PPE1251001	Bushing, 1 1/4" x 1"

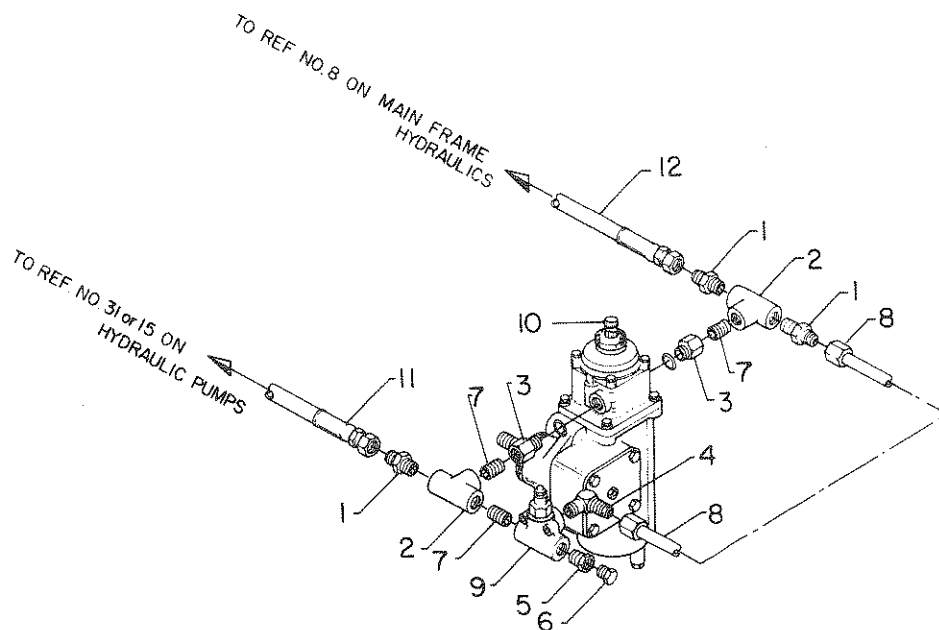


STEERING HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION
1	HYD5205050	5/8" Male Connector
2	HYD3709040	1/2" Steel Tee
3	HYD3269044	Straight Thread Adapter with "O" Ring
4	HYD5405050	5/8" x 90° Male Elbow
5	HYD3109042	Bushing, 1/2" x 1/4"
6	HYD3159020	1/4" Square Head Plug
7	01-720	1/2" Close Extra Heavy Black Nipple
8	TBE0008628	5/8" Hydraulic Tube
9	01-514	Relief Valve
10	17-209	Steering Gear Assembly
	17-237	Seal Kit for 17-209
11	HOS0008465	1/2" Hydraulic Hose, AC, 34"
	HOS0008481	1/2" Hydraulic Hose, JD, 49"
12	HOS0008466	1/2" Hydraulic Hose, 82"

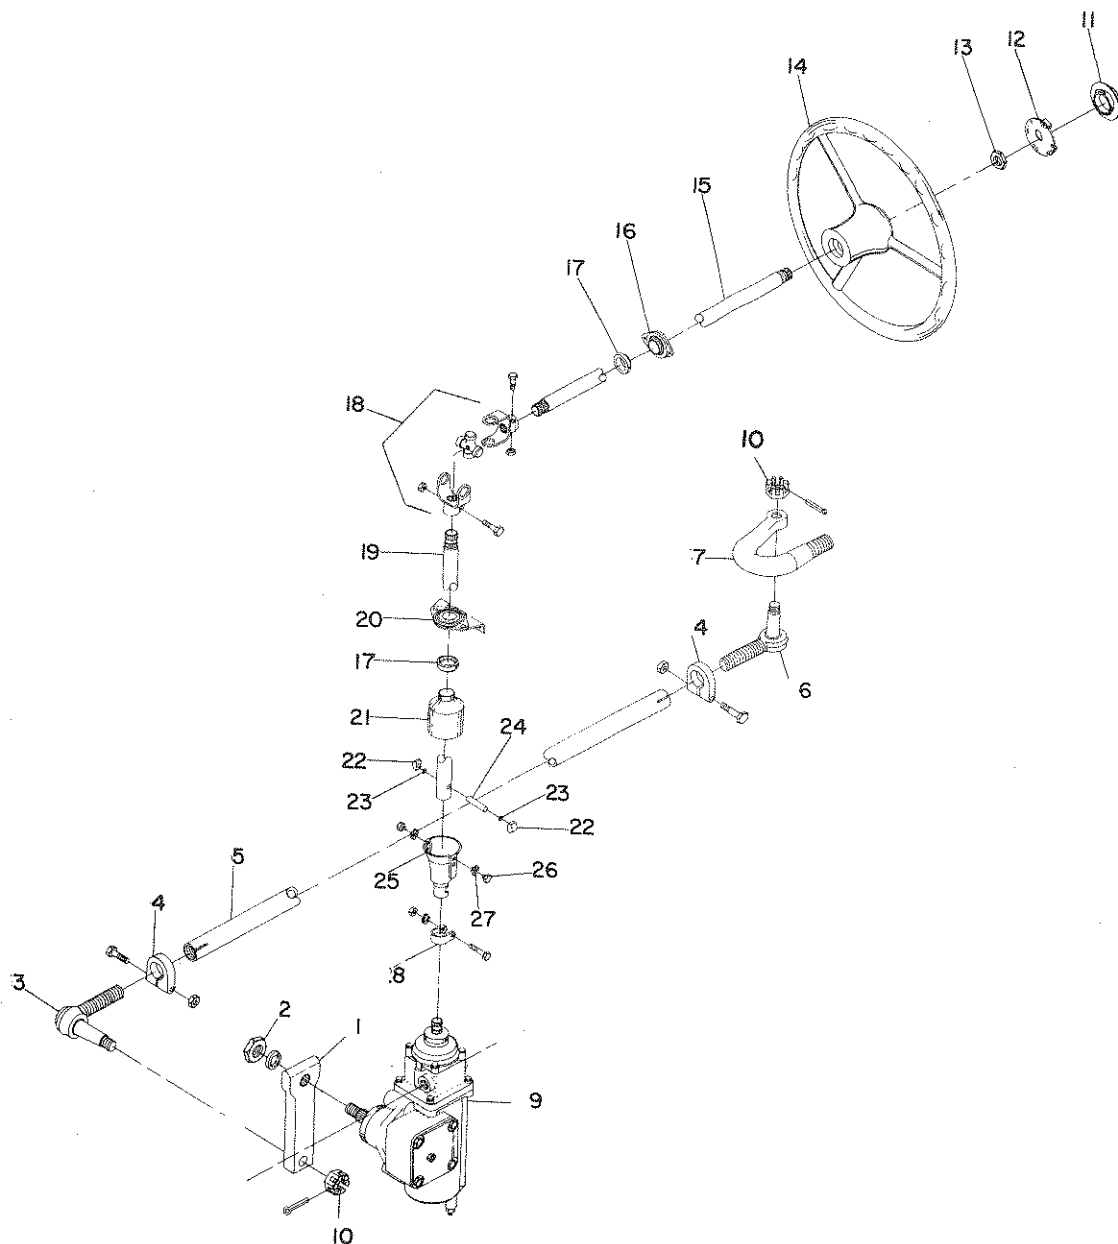


STEERING ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	ARM4382812	Steering Arm	14	F 0006292	Steering Wheel
2	TRW0050055	1-1/8" -16 Nut	15	17-199	Steering Shaft Upper, 08 9138 2500 TRW
3	17-216	Rod End, 5187R NAPA	16	02-157	Bearing, 7/8" Flange, FLCT Fafnir
4	06-147	Clamp	17	07-114	Locking Collar, 7/8"
5	17-217	Drag Link	18	17-204	Universal Assembly, 403708-A1 TRW
6	17-220	Rod End, 5187L NAPA	19	17-211	Universal Cross Kit
7	ARM3133117	Steering Arm	20	17-202	Steering Shaft, Lower
8	17-208	Clamp Assembly, 475187-A1 TRW	21	02-158	Pillow Block Bearing, 7/8" PBS Fafnir
9	17-209	Steering Gear Assembly, HF 54008 TRW	22	17-213	Seal, 032313 TRW
10	17-218	Castillated Nut, 7/8" - 14	23	17-214	Button, 055028 TRW
11	F 0005031	Steering Column Cap	24	17-215	Washer, 9/64" x 3/8", 02 8308 TRW
12	F 0005032	Steering Column Cap Holder	25	17-206	Pin, 040071 TRW
13	06-124	Nut, Steering Column, 13/16" -20	26	17-207	Shell Assembly, 403752-A1 TRW
			27	SMS0000199	Screw, 1/4" -28 x 3/8" Hex Head
				WLK0002500	1/4" Lock Washer

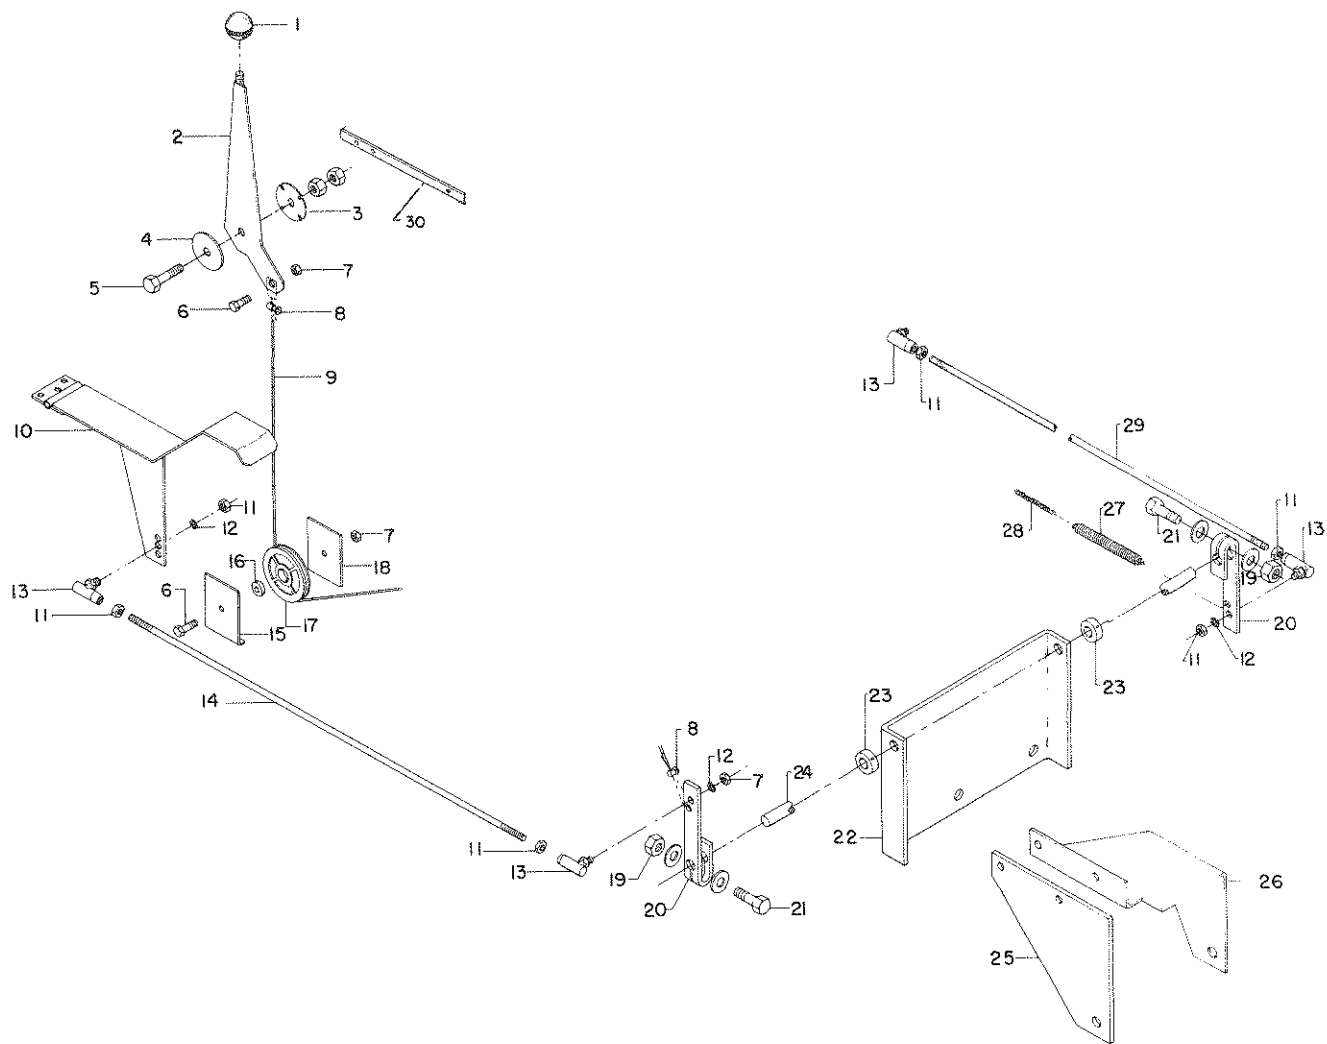


MANUAL CONTROL LEVERS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 0005554	Knob, Throttle Lever	15	F 000994	Shield, 2 used
2	18-122	Lever, Throttle	16	F 0004068	Bushing, 2 used
3	F 0001002	Conical Washer	17	F 0004067	Roller, 2 used
4	F 0001003	Friction Disc	18	F 000995	Plate, 2 used
5	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw	19	NCE0003750	3/8" NC Lock Nut, 3 used
6	SCC0000103	1/4" x 1 1/4" NCHT Cap Screw, 3 used	20	18-126	Lever, Throttle Cross Shaft, 2 used
7	NCE0002500	1/4" NC Lock Nut, 3 used	21	SCC0000304	3/8" x 1 1/2" NCHT Cap Screw, 3 used
8	F 0005861	Cable Clamp	22	18-194	Throttle Rod Bracket, AC
9	18-189	Cable, Throttle, 56"	23	FT 0000141	1/2" Set Collar, 2 used
10	18-124	Foot Throttle	24	18-147	Throttle Cross Shaft, AC & IHC
11	NFH0002500	1/4" NF Nut, 8 used	25	18-195	Throttle Rod Bracket, JD
12	WES0002500	1/4" Star Washer, 2 used	26	18-196	Throttle Rod Bracket, JD
13	F 0005207	Ball Joint, 1/4" NF RH, 4 used	27	04-109	Spring, 525 Winks
14	18-173	Throttle Rod	28	05-110	Chain
			29	18-174	Accelerator Rod, AC & John Deere
			30	BKT0009258	Throttle Lever Bracket

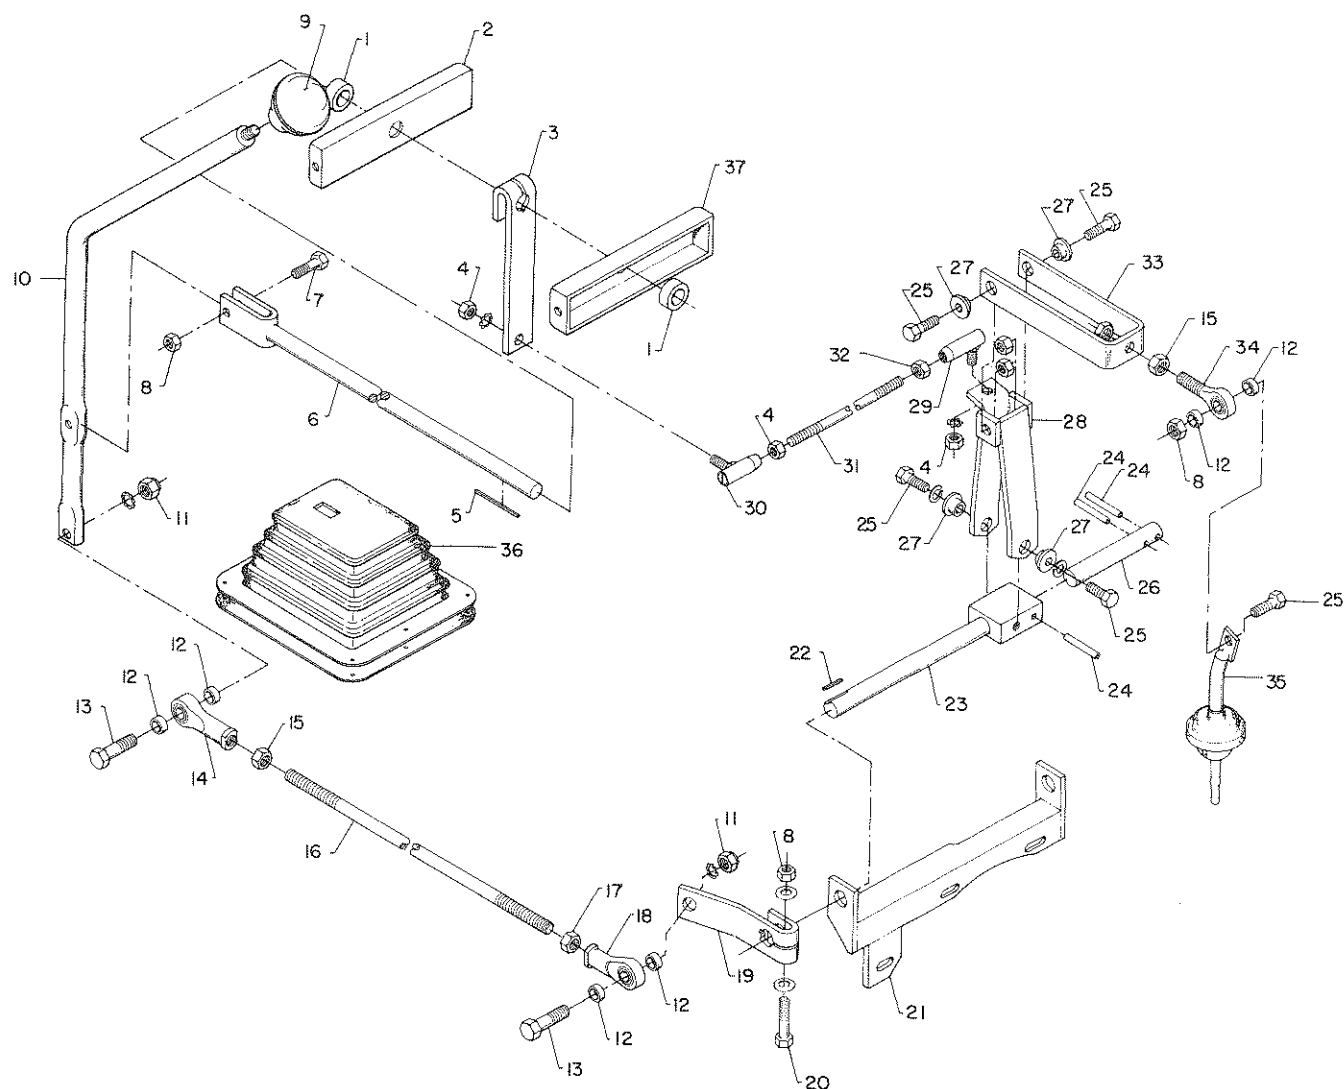


TRANSMISSION SHIFT MECHANISM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 0000172	3/4" Set Collar	18	02-120	Rod End, 1/2" NF, LH, Female, TML-8N Sperico
2	BRG0181491	Bearing, Shift Rod, 2 used	19	18-153	Lever, Shift Shaft
3	SHT0006204	Lever, Shift Rod	20	SCC0000307	3/8" x 2 1/4" NCHT Cap Screw, 3 used
4	NFH0003750	3/8" NF Hex Nut, 3 used	21	18-152	Mounting Bracket, Shift Shaft
5	ZZ 0000404	Key, 3/16" x 3/16" x 1 1/2"	22	ZZ 0000406	Key, 1/4" x 1/4" x 1"
6	SHT0007045	Shift Rod	23	18-140	Shift Shaft
7	SCC0000304	3/8" x 1 1/2" NCHT Cap Screw	24	ZZ 0000705	Roll Pin, 1/4" x 2", 3 used
8	NCE0003750	3/8" NC Fiber Lock Nut, 5 used	25	SCC0000302	3/8" x 1" NCHT Cap Screw, 4 used
9	F 0005055	Knob, Shift Lever	26	18-141	Shift Shaft Extension
10	SHT0007068	Shift Lever, Top Unit	27	F 0000440	Ferrule, 4 used
11	NCE0005000	1/2" NC Fiber Lock Nut, 2 used	28	18-142	Pivot, Shift Lever
12	18-146	Spacer, 6 used	29	BLJ0000109	Ball Joint, 3/8" NF, RH
13	SCC0000506	1/2" x 2" NCHT Cap Screw, 2 used	30	BLJ0001090	Ball Joint, 3/8" NF, LH
14	F 0006212	Rod End, 1/2" NF, RH, Female, TM-8N Sperico	31	18-154	Linkage Rod, Side Movement
15	NFH0005000	1/2" NF Hex Nut, 3 used	32	NFL0003750	3/8" NF, LH Hex Nut
16	18-157	Linkage Rod, Transmission Forward Movement	33	18-143	Shift Link
17	NFL0005000	1/2" NF LF Hex Nut	34	F 0005992	Rod End, 1/2" RH Male, TRE8N
			35	18-169	Shift Lever
			36	SHT0039569	Boot, Shift Lever
			37	18-149	Bearing, Shift Rod

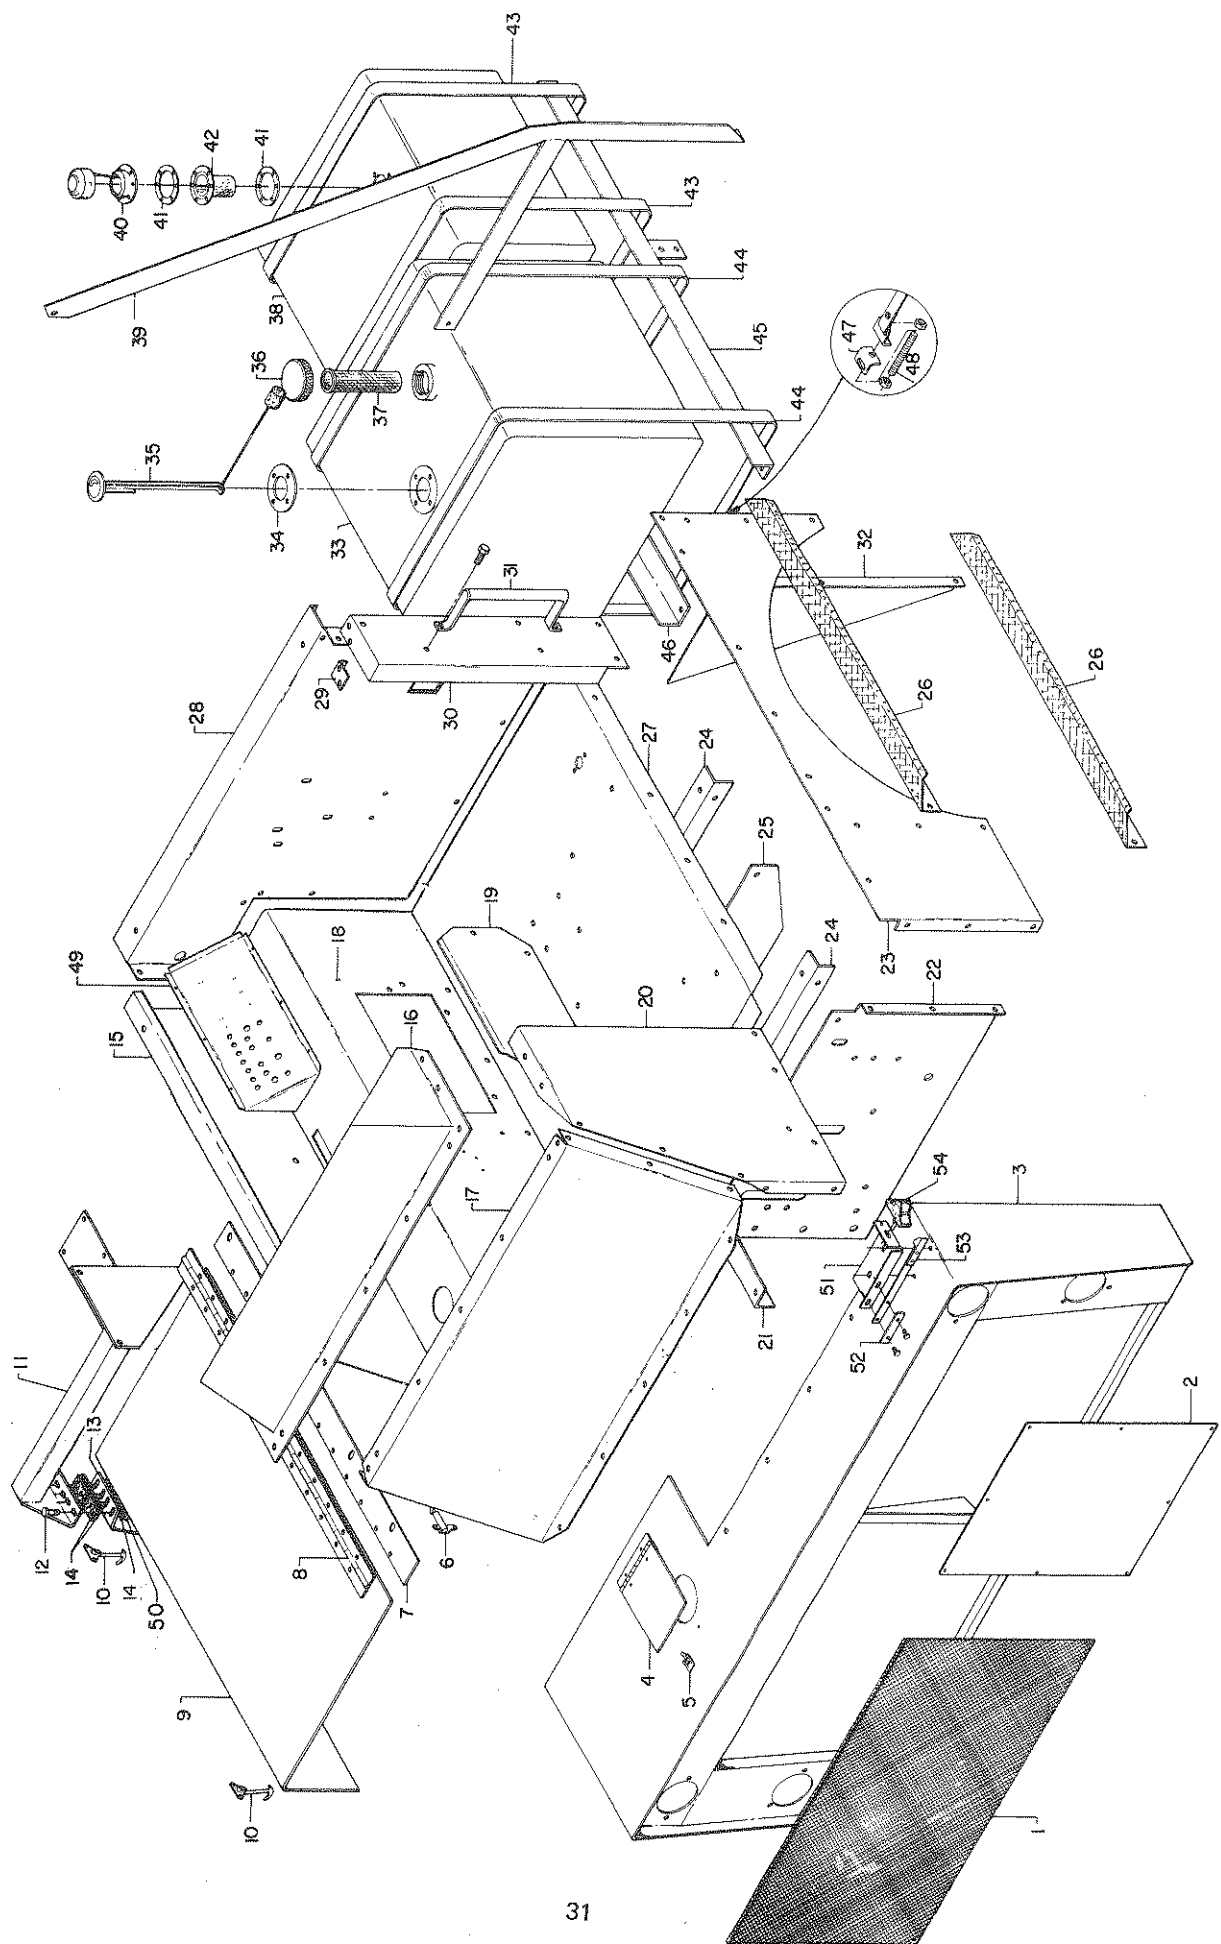


DECK AND ENGINE HOOD

REF. NO.	PART NO.	DESCRIPTION
1	17-175	Grill
2	17-176	Grill Extension
3	CWL0083240	Cowl, Front, AC
	CWL0083241	Cowl, Front, JD
4	17-153	Radiator Cap Cover
5	F 0006108	Latch, Radiator Cap Cover
6	F 0000853	Latch
7	17-179	Hinge Plate, Hood
8	17-139	Hinge, Hood
9	17-178	Hood
10	F 0007166	Hood Latch
11	SUP0007563	Hood Support, AC & JD
12	SCC0000205	5/16" x 1 3/4" NCHT Cap Screw
13	SUP0007501	Hood Support
14	F 0001589	Rubber Pad, 6 used
15	17-186	Console Right Side
16	17-182	Dash
17	17-180	Console Front
18	17-187	Control Panel
19	17-115	Cover, Control Panel Side
20	17-189	Console Side, LH
21	17-135	Rib, Platform Center
22	17-181	Front Deck Support
23	17-192	Shield
24	17-190	Deck Mount Rib
25	SUP0007487	Rear Deck Support
26	STP0007069	Step
27	17-198	Operator's Deck
28	17-188	Console, Rear Section
29	17-140	Connecting Angle
30	17-118	Console Side, LH Rear
31	17-123	Hand Rail
32	BKT0006911	Step Bracket
33	17-128	Fuel Tank
34	F 0005949	Gasket, Fuel Gauge
35	F 0005948	Fuel Gauge
36	F 0001689	Cap, Fuel Tank
37	F 0005950	Filter Screen, Fuel Tank
38	TNK0007422	Hydraulic Tank
39	17-236	Tower Brace
40	F 0006268	Filler Cap, Hydraulic Tank
41	F 0006857	Gasket for Filler Cap
42	FIL0010008	Screen for Filler
43	17-134	Tank Straps, Hydraulic, 2 used
44	17-129	Tank Straps, Fuel, 2 used
45	17-195	Tank Rail, LH
46	17-196	Tank Rail, RH
47	17-141	Anchor, Tank Strap, 4 used
48	17-142	Bolt with Nut, Tank Strap, 4 used
49	17-235	Control Panel, Electric
50	PLT0007548	Compression Plate
51	MNT0006683	Door Holder Mount
52	PLT0006684	Backing Plate
53	SPG0005697	Latch
54	F 0008264	Bumper

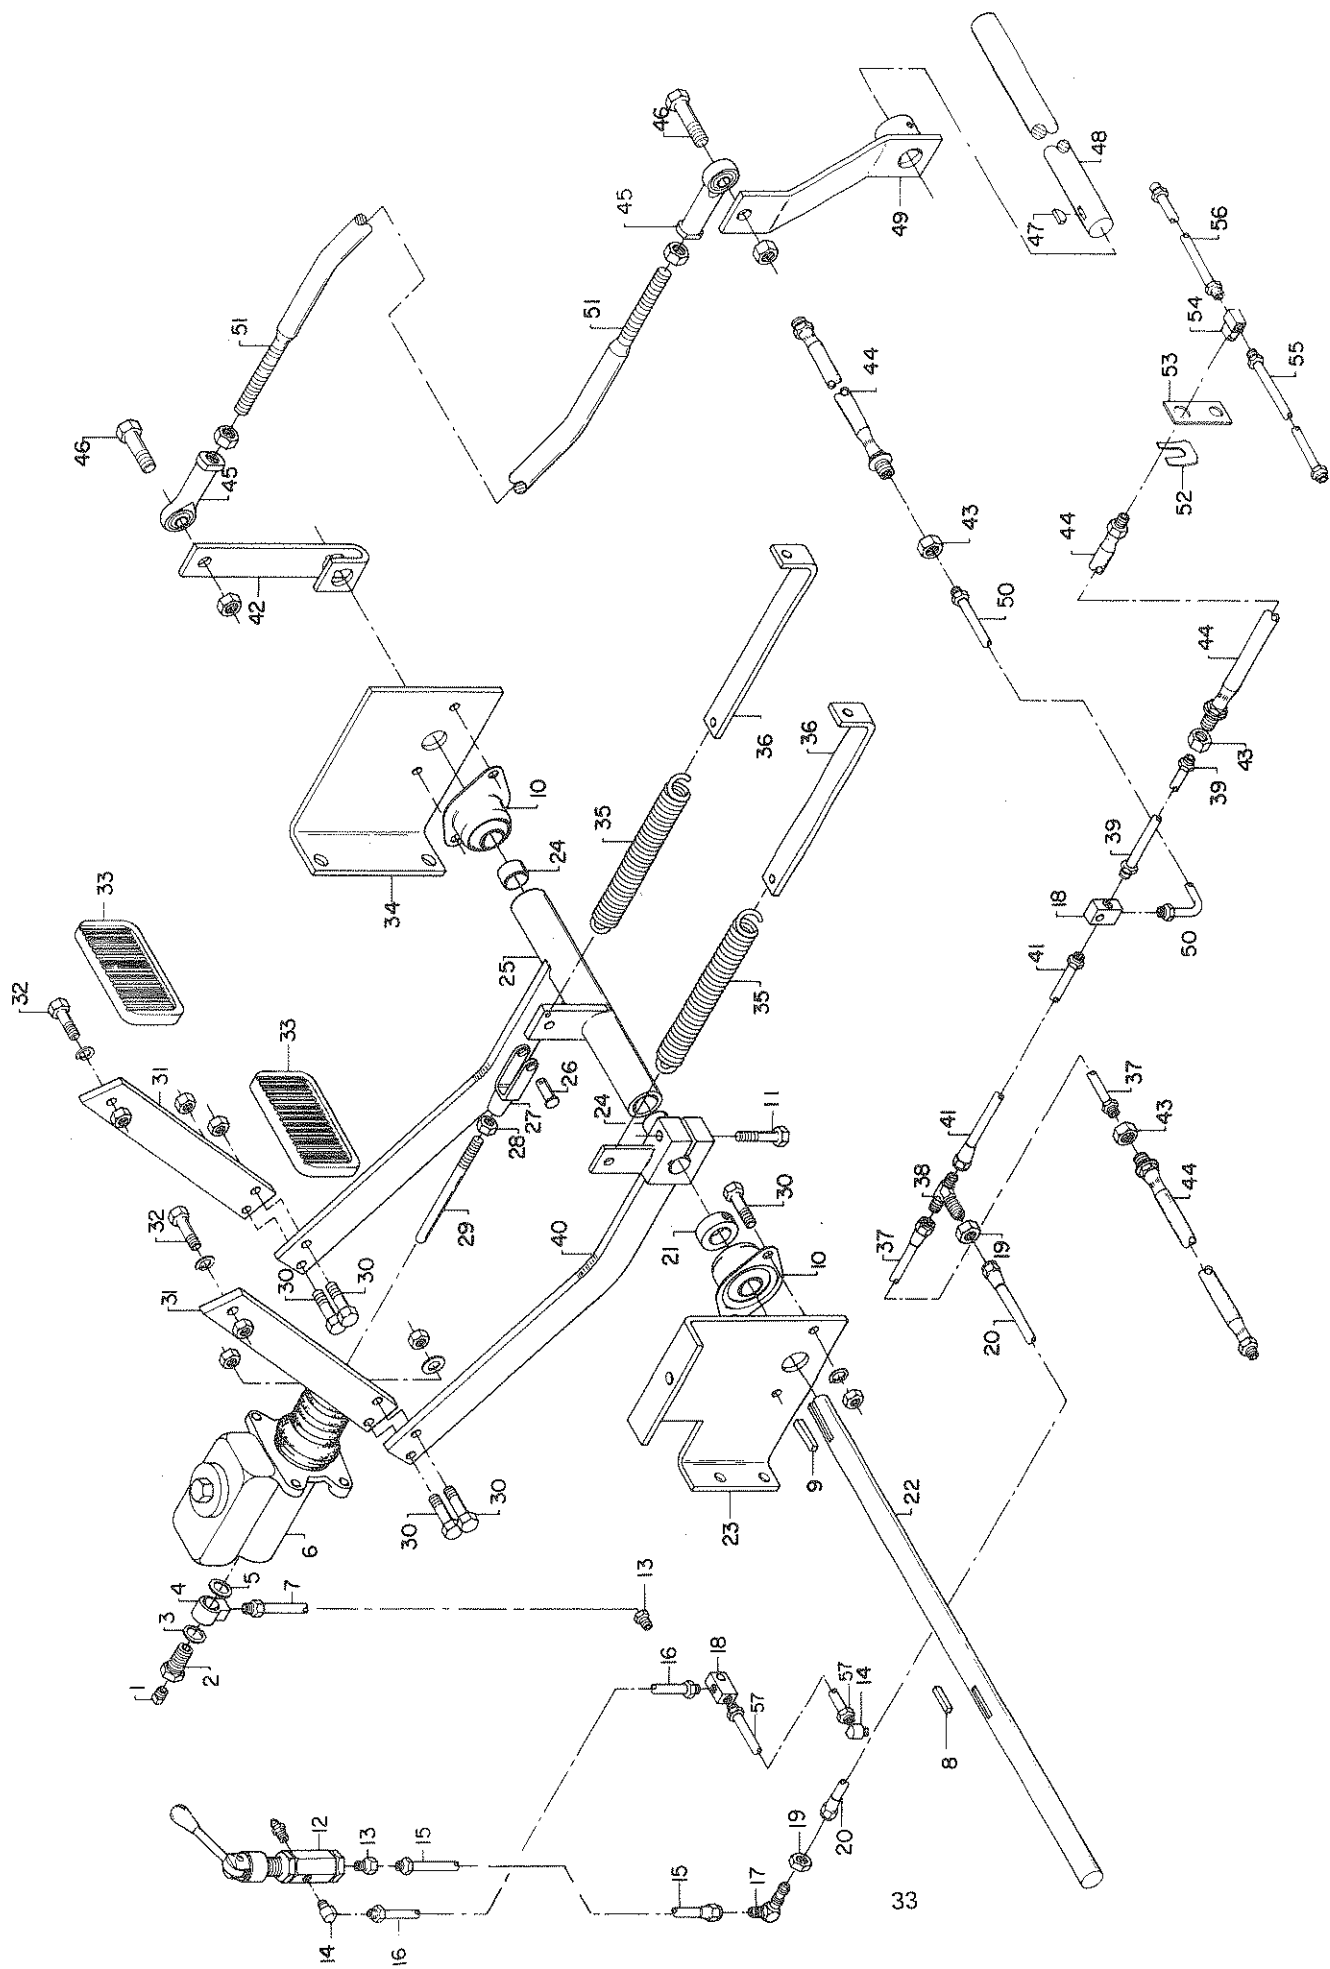


BRAKE AND CLUTCH

REF. NO.	PART NO.	DESCRIPTION
1	PPE0020125	1/8" Square Head Black Pipe Plug
2	19-142	Adapter, Stop Light, F 3474 Wagner
3	19-141	Washer, Stop Light Adapter, F 602 Wagner
4	19-140	Adapter, Stop Light, F2687 Wagner
5	19-139	Washer, Stop Light Adapter, F 603 Wagner
6	19-157	Brake Master Cylinder, F 27304 Wagner
7	TBE0008574	1/4" Brake Line, Cylinder to Vacuum Booster
8	ZZ 0000406	Key, 1/4" x 1/4" x 1"
9	ZZ 0000407	Key, 1/4" x 1/4" x 1 1/4"
10	F 0006758	Bearing
11	SCC0000206	5/16" x 2" NCHT Cap Screw
12	01-526	Brake Lever Lock, 8805 Mico
	01-527	Repair Kit for 01-526, 02-600-001 Mico
13	01-803	Brass Male Connector, 200 x 4 WH
14	01-807	1/4" x 90° Elbow, 400 x 4 WH
15	01-862	1/4" Brake Line, Lock to 90° Bulkhead
16	01-863	1/4" Brake Line, Lock to "T" Block
17	01-812	1/4" Bulkhead Union Elbow, C5525 x 4 WH
18	01-802	Brass Fitting, 7708 WH
19	NFH0004375	7/16" NF Hex Nut
20	TBE0009208	1/4" Brake Line, Bulkhead 90° to Bulkhead Tee
21	ZZ 0002013	Set Collar, 7/8"
22	SHF0007442	Pivot Shaft
23	BKT0007416	Clutch Shaft Bracket
24	F 0007247	Bushing
25	BRK0007484	Brake Pedal
26	06-126	3/8" Clevis Pin
27	06-125	3/8" Clevis
28	NFH0003750	3/8" NF Hex Nut, 2 used
29	19-151	Push Rod
30	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 4 used
31	19-148	Pedal Extension
32	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw, 6 used
33	F 0005979	Pedal Pad
34	BKT0007415	Clutch Shaft Bracket
35	F 0001517	Spring
36	19-155	Spring Bracket
37	TBE0009209	1/4" Brake Line, Bulkhead Tee to Left Front Brake
38	01-804	Bulkhead Branch Tee, C5725 x 4 WH
39	TBE0009212	1/4" Brake Line, Rear "T" Block to Rear Axle
40	CLH0007485	Clutch Pedal
41	TBE0009210	1/4" Brake Line, Bulkhead Tee to Rear "T" Block
42	LEV0007017	Clutch Lever
43	NFJ0006250	5/8" NF Jam Nut
44	19-191	Brake Hose, F 4000 Wagner
45	F 0006212	Rod End, TM-8N Sperico
46	SCC0000505	1/2" x 1 1/4" NCHT Cap Screw
47	ZZ 0000408	Woodruff Key, No. 808
48	19-202	Clutch Shaft
49	LEV0007413	Clutch Lever
50	TBE0009211	1/4" Brake Line, Rear "T" Block to Right Front Brake
51	ROD0007417	Clutch Rod
52	06-131	Spring Lock, 5188 WH
53	19-159	Brake Line Support
54	01-806	Brass Fitting, 7734 WH
55	TBE0009213	1/4" Brake Line, Left Rear Brake
56	TBE0009214	1/4" Brake Line, Right Rear Brake
57	TBE0008573	1/4" Tube, Tee to Vacuum Booster

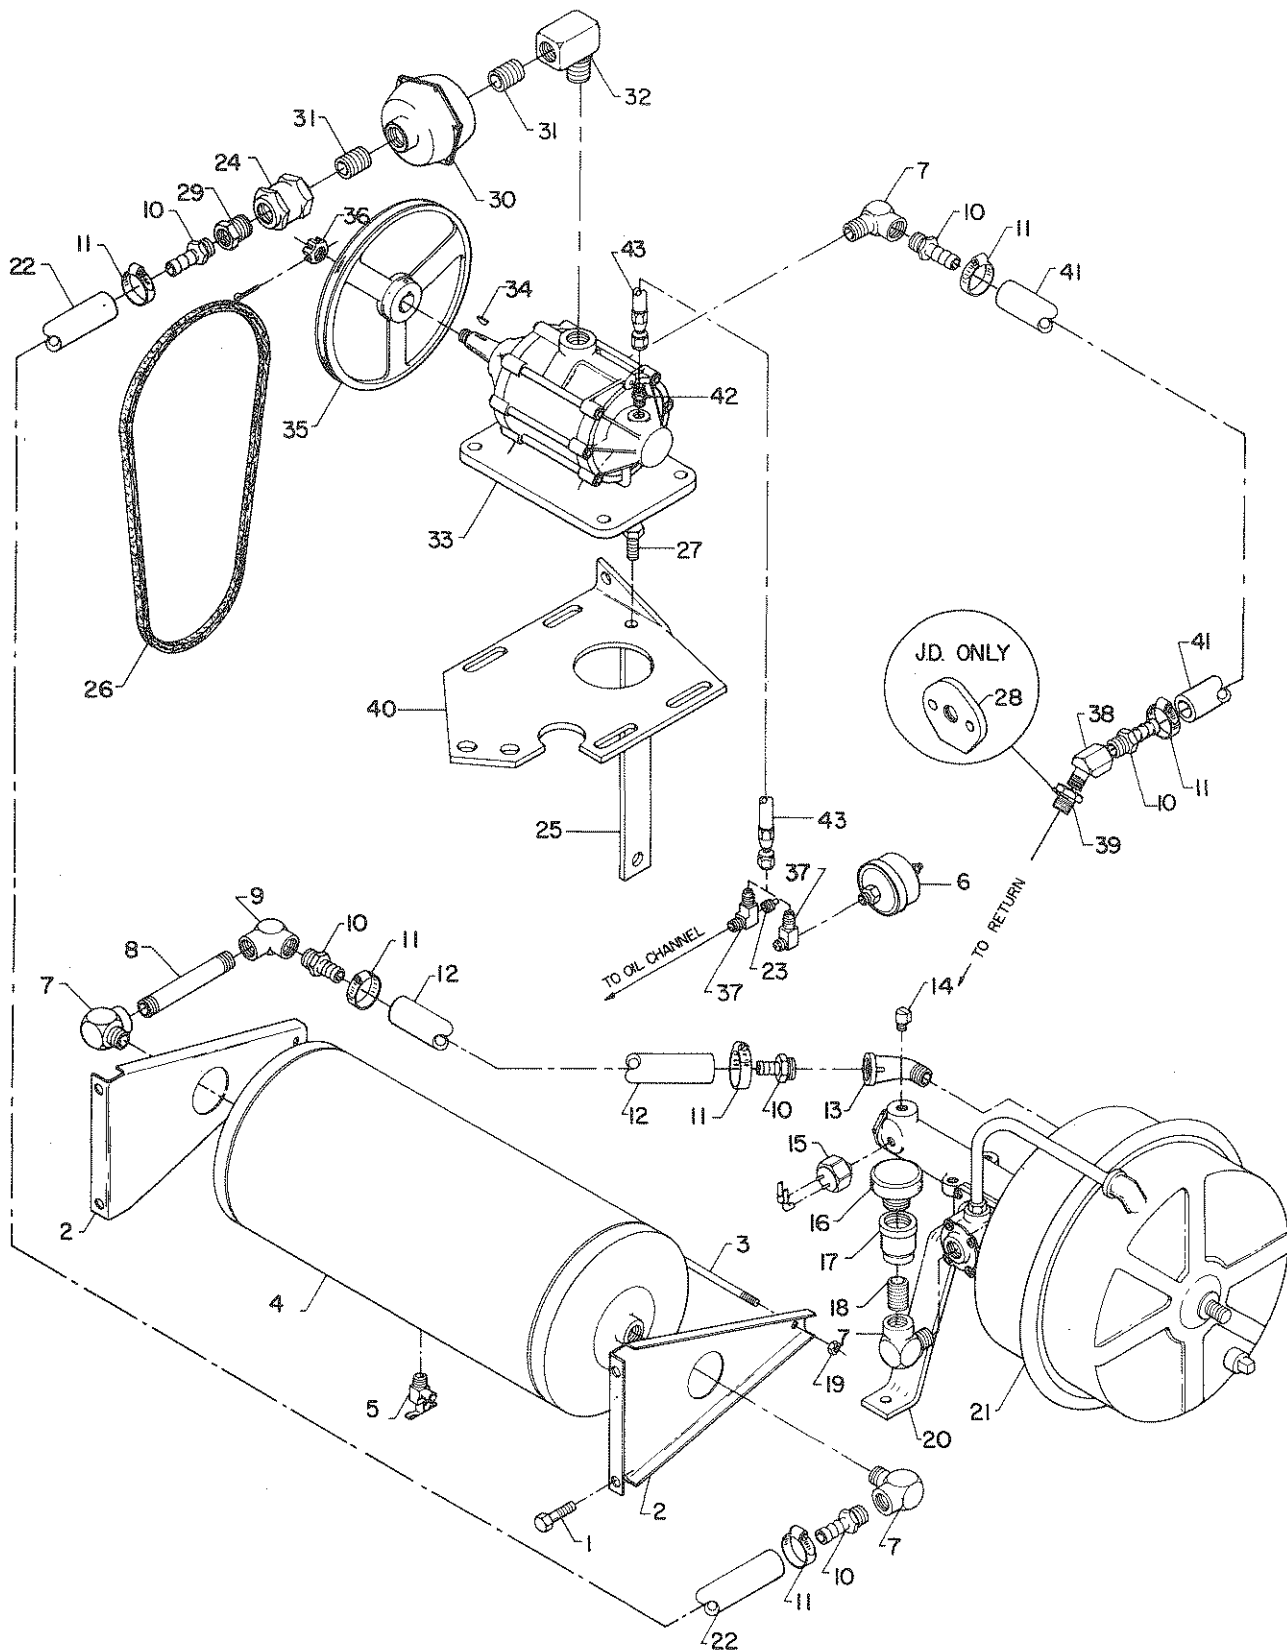


VACUUM BOOSTER AND PUMP

REF. NO.	PART NO.	DESCRIPTION
1	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 4 used
2	19-322	Mounting Bracket for Vacuum Tank
3	18-128	Linkage Rod, 1/4" x 18 1/4"
4	19-143	Vacuum Tank
5	F 0006828	Drain Plug
6	03-132	Oil Sending Unit, 3535 SW
7	HYD3409030	3/8" x 90° Steel Street Elbow
8	01-719	3/8" x 4" Extra Heavy Black Nipple
9	HYD3509030	3/8" x 90° Steel Elbow
10	FT 0000193	3/8" x 1/2" Hose Coupler
11	06-136	Hose Clamp
12	19-280	Vacuum Hose, 1/2" ID x 13"
13	PPE0050450	1/2" x 45° Street Elbow, 6 used
14	01-807	1/4" x 90° Brass Fitting
15	03-130	Stop Light Switch, SL134 Echlin
16	FT 0000530	Breather
17	PPE7503750	3/8" x 3/4" Pipe Bushing
18	01-718	3/8" Close Extra Heavy Black Nipple
19	NCH0002500	1/4" NC Hex Nut, 4 used
20	19-317	Vacuum Booster Brace
21	19-162	Vacuum Booster, C464 R Midland
22	19-279	Vacuum Hose, 1/2" x 78"
23	PPE0020250	1/4" Plug
24	19-164	Vacuum Check Valve, C11475 Midland
25	BRC0008512	Vacuum Pump Bracket Brace, AC
	BRC0008564	Vacuum Pump Bracket Brace, JD
26	05-243	Drive Belt, A62, AC
	05-244	Drive Belt, A71, JD
27	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw
28	JD 0008041	Fuel Pump Cover, JD
29	HYD3109043	1/2" x 3/8" Steel Bushing
30	19-220	Filter, BK18249 Bendix
31	01-720	1/2" Close Extra Heavy Black Nipple
32	HYD3409040	1/2" x 90° Steel Street Elbow
33	19-316	Vacuum Pump, 2500948 Bendix
34	ZZ 0000439	Woodruff Key, No. 60
35	05-216	Sheave, Vacuum Pump, JD & AC
36	NFC0005000	1/2" NF Castellated Nut
37	HYD0056020	1/4" Tee Adapter
38	HYD3359030	3/8" x 45° Steel Street Elbow
39	HYD3220043	Brass Bushing, 1/2" x 3/8"
40	BKT0008427	Vacuum Pump Mounting Bracket, JD
	BKT0008510	Vacuum Pump Mounting Bracket, AC
41	19-280	Return Hose, 1/2" x 13"
42	01-810	1/4" Hose Fitting, 48" x 4" x 4" WH
43	19-222	Oil Line, 44", JD
	19-223	Oil Line, 30", AC

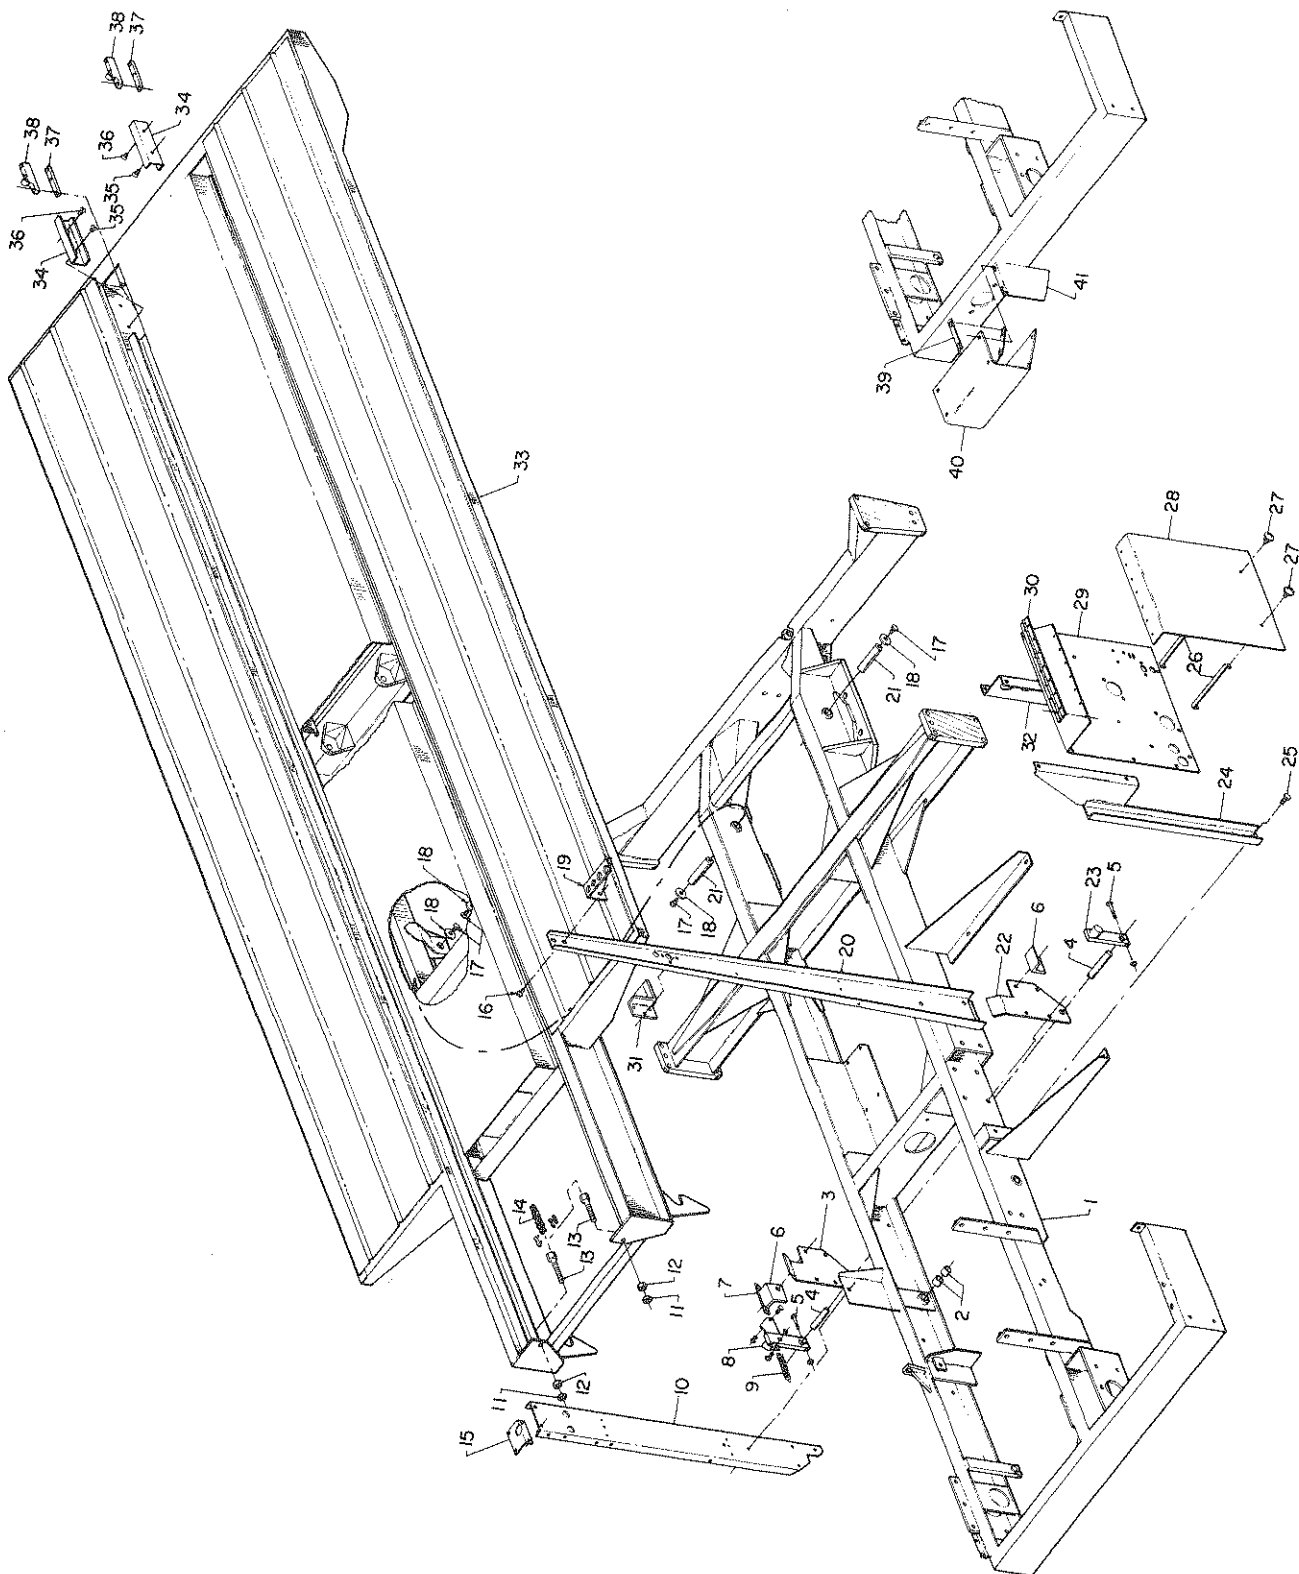


MAIN FRAME AND BED

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	RSF0008332	Main Frame	19	PLT0008046	Hose Mount Plate
2	F 0004027	Bushing, 4 used	20	TOW0024061	Tower
3	PLT0073471	Guide Plate, RH	21	PIN0007890	Pivot Pin, 2 used
4	SHF0008100	Safety Latch Shaft, RH	22	PLT0073470	Guide Plate, LH
5	SCC0000308	3/8" x 2 1/2" NCHT Cap Screw, 2 used	23	ARM0007522	Latch Arm, LH
	WLK0003750	3/8" Lock Washer, 2 used	24	SUP0007994	Valve Mount Plate Support
	NCH0003750	3/8" NC Hex Nut, 2 used	25	SCC0000503	1/2" x 1 1/4" NCHT Cap Screw, 4 used
6	SUP0073480	Bed Support Angle, (Weld On), RH		WLK0005000	1/2" Lock Washer, 4 used
	SUP0073481	Bed Support Angle, (Weld On), LH		NCH0005000	1/2" NC Hex Nut, 4 used
7	F 0000129	Spring	26	16-142	Valve Cover Holding Bracket, 2 used
8	ARM0007633	Latch Arm	27	F 0001007	Knob, 2 used
9	F 0000747	Spring	28	16-141	Valve Cover
10	SUP0007767	Pickup Hose Support Tower	29	PLT0007989	Valve Mounting Plate
11	NCJ0007500	3/4" NC Jam Nut, 2 used	30	16-140	Hinge, Valve Cover
12	NCH0007500	3/4" NC Hex Nut, 2 used	31	BKT0007498	Hose Reel Mounting Bracket
13	07-123	Anchor Bolt, 2 used	32	SUP0007995	Rear Valve Plate Support
14	CHN0080250	Drive Chain, No. 80, 250P, 2 used	33	RSF0007848	Bed Assembly
	05-212	Connecting Link, No. 80, 4 used	34	TRK0007376	Track Extension
15	BKT0006788	Valve Mount	35	SCO0000502	1/2" x 1" NC Flat Head Socket Cap Screw
16	SCC0000302	3/8" x 1" NCHT Cap Screw		WLK0005000	1/2" Lock Washer
	WLK0003750	3/8" Lock Washer		NCH0005000	1/2" NC Hex Nut
	NCH0003750	3/8" NC Hex Nut	36	SBH0000504	1/2" x 1 1/2" NC Button Head Cap Screw
17	SFC0000502	1/2" x 1" NFHT Cap Screw, 2 used	37	SPC0008036	Spacer, Rear Chain Anchor, 2 used
	WLK0005000	1/2" Lock Washer	38	ANC0007256	Push Off Chain Anchor
18	WAS0008448	Washer	39	16-126	Pump Guard Bracket, RH, (Weld On)
			40	16-127	Pump Guard
			41	16-125	Pump Guard Bracket, LH, (Weld On)

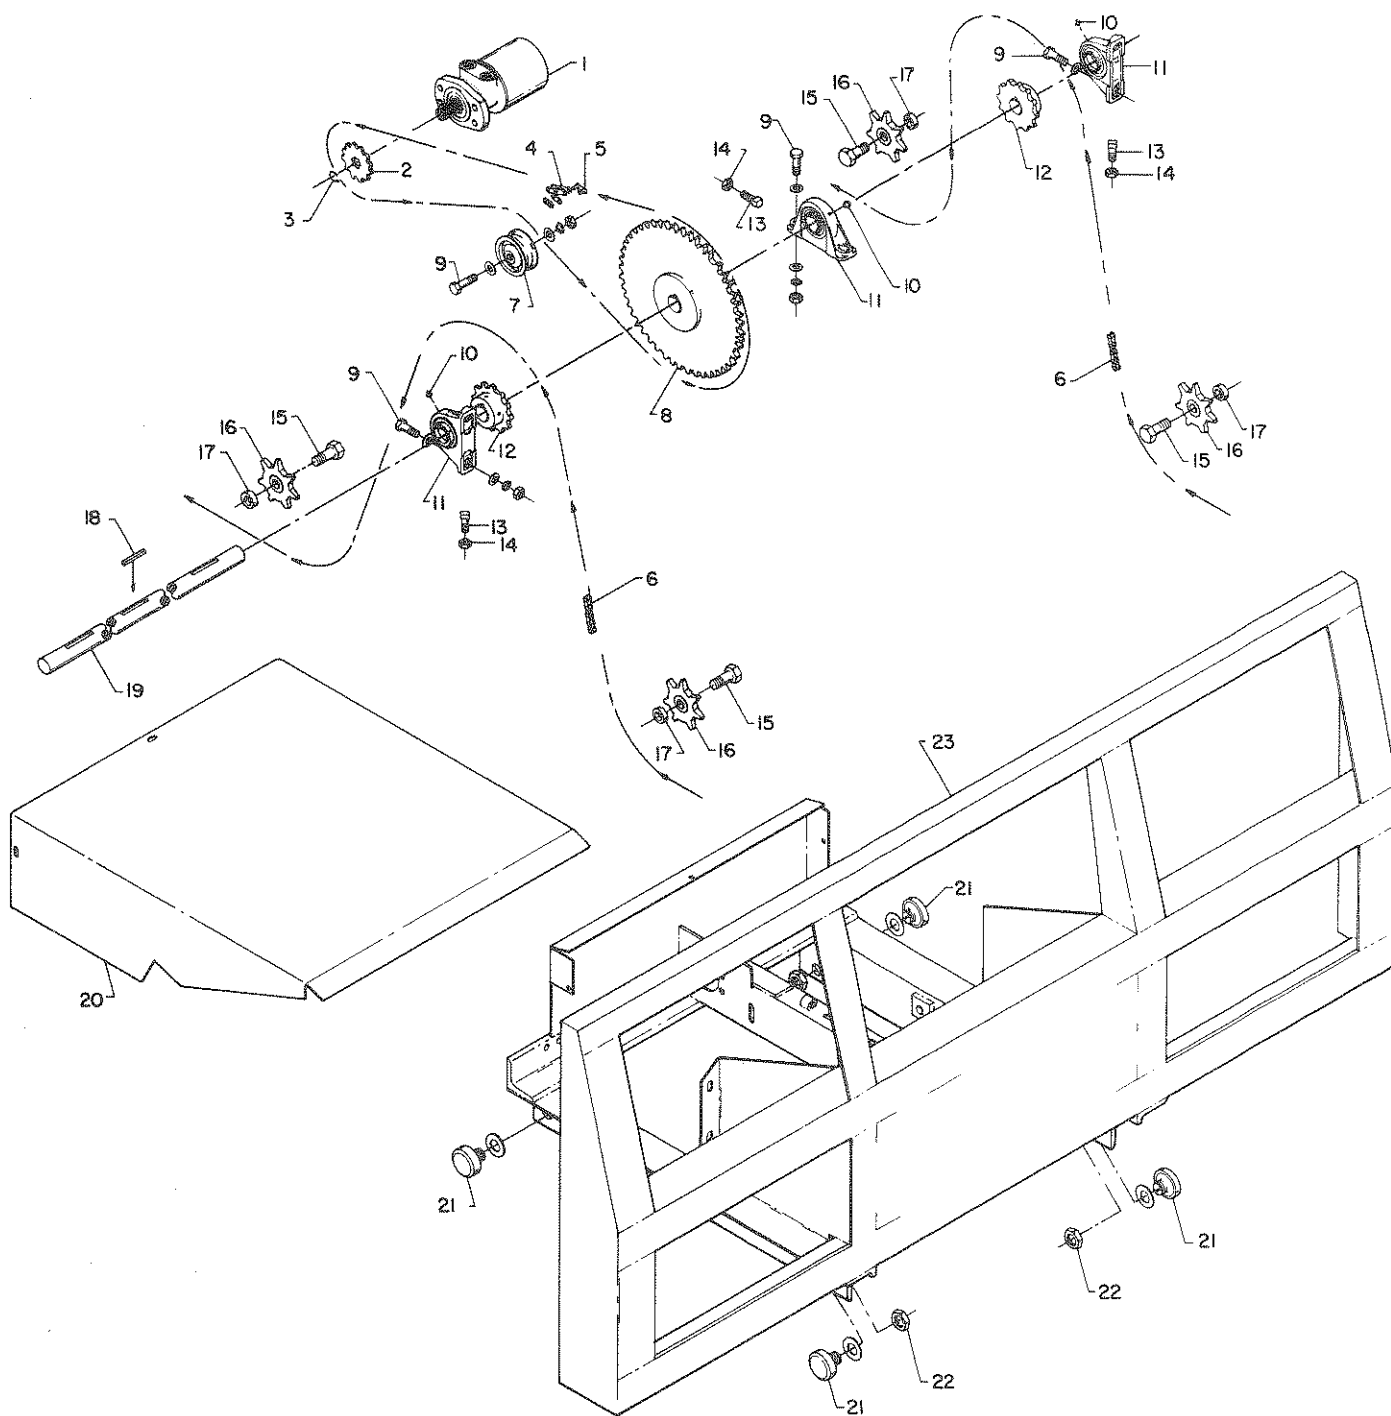


LOAD PUSHER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	01-607	Hydraulic Motor, MAB-16-002 Ross	13	SQS5001500	½" x 1½" Square Head Set Screw, 3 used
2	05-140	Sprocket, 60B13-6 Spline, 1"	14	NCJ0005000	½" Jam Nut, 3 used
3	06-118	Snap Ring, 5100-100	15	SCC0000810	¾" x 3" NCHT Cap Screw, 4 used
4	05-210	Chain	16	SPK0128012	Sprocket W/Bearing
5	F 0000760	Connecting Link	17	F 0000172	¾" Set Collar, 4 used
6	05-211	Chain	18	ZZ 0000441	Key, 3/8" x 3/8" x 2¼", 3 used
7	F 0000883	Idler Pulley	19	SHF0007534	Shaft, Load Pusher
8	05-219	Sprocket	20	SHD0007447	Shield, Load Pusher
9	SCC0000508	½" x 2½" NCHT Cap Screw	21	02-112	Roller, 4 used
10	ZZ 0000103	Zerk, 1/8" NPT	22	F 0001385	1" Nut, Fiber Lock
11	02-145	Bearing, 1/3 used	23	PUS0007472	Pusher Frame
12	05-214	Sprocket			

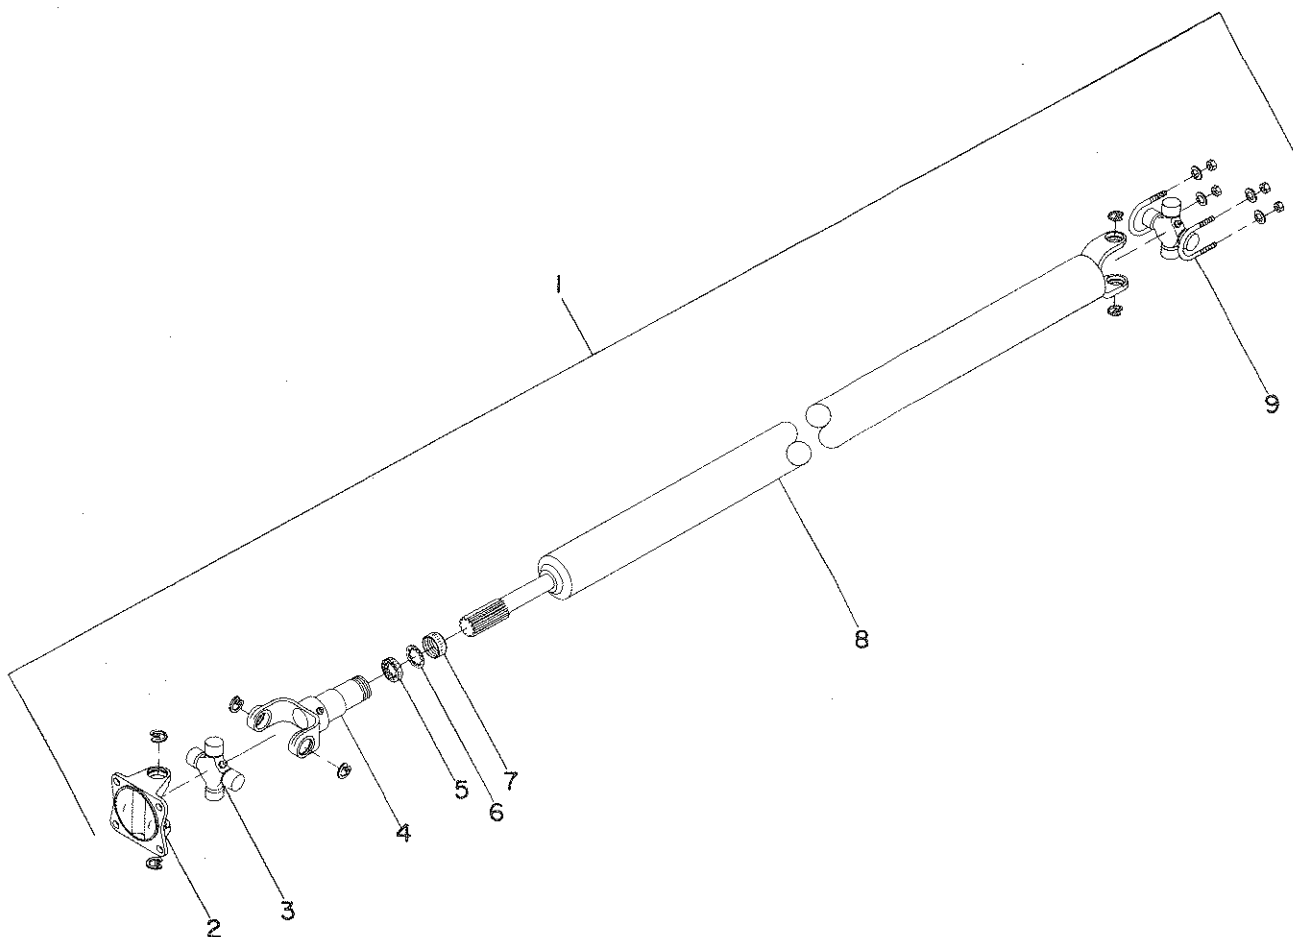


DRIVE LINE

REF. NO.	PART NO.	DESCRIPTION
1	19-909	Drive Line Assembly
2	19-209	Flange Yoke, 3-2-429 Spicer
3	19-124	Journal & Bearing Kit, 5-160X Spicer
4	19-214	Slip Sleeve Yoke, 3-3-118X Spicer
5	19-215	Cork Washer, 3-16-53 Spicer
6	19-216	Steel Washer, 3-½-15-53 Spicer
7	19-120	Dust Cap, 3-½-14-39 Spicer
8	19-212	Drive Line Shaft
9	19-125	"U" Bolt Assembly, 3-94-18X Spicer

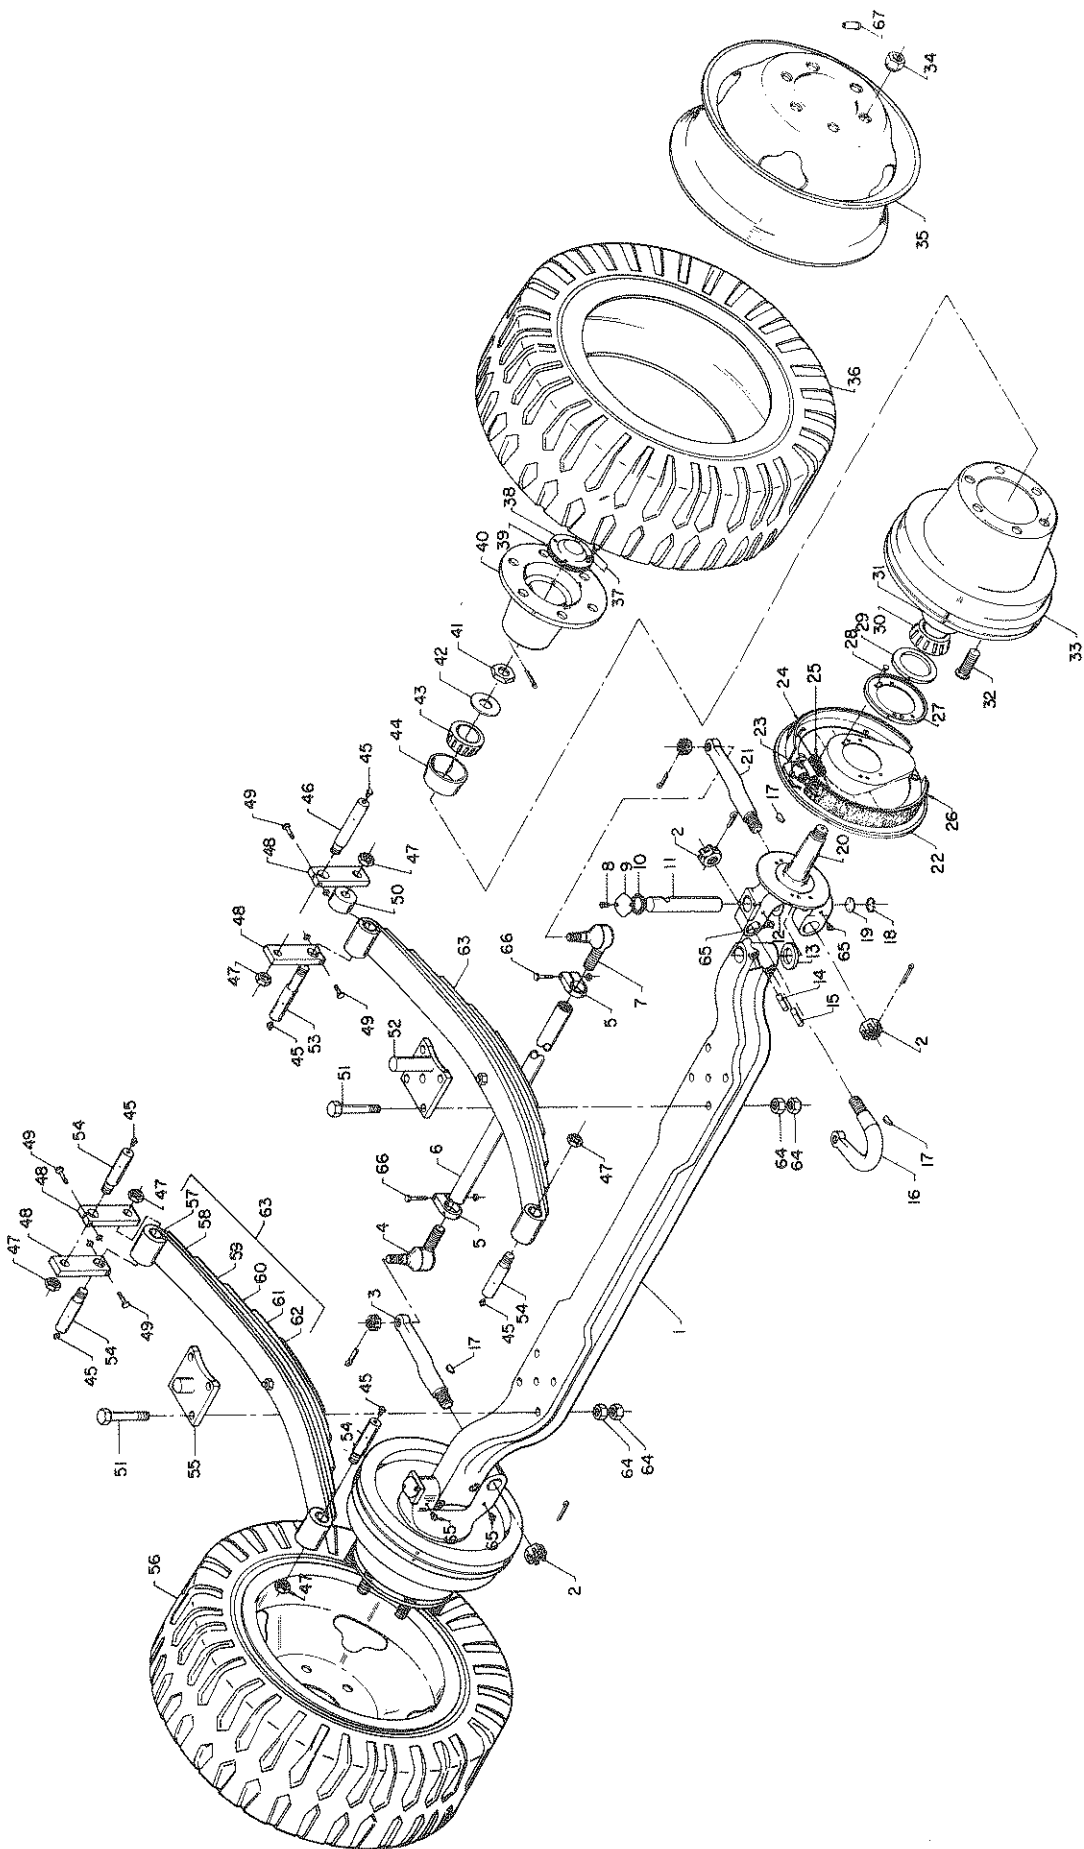


FRONT AXLE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	AXL0007505	Axle Center	34	19-269	Lug Nut, LH
2	19-255	Nut		19-270	Lug Nut, RH
3	19-258	Cross Tube Arm	35	WHL0660103	Wheel
4	19-233	Cross Tube Rod End, RH	36	TIR0090020	Tire, 900 x 20, 8 ply, Cross Country
5	19-266	Cross Tube Clamp, 2 used	37	19-264	Cap Screw
6	19-265	Cross Tube	38	19-262	Hub Cap
7	19-232	Cross Tube Rod End, LH	39	19-263	Gasket, Hub Cap
8	19-252	Screw, 4 used	40	19-271	Wheel Hub
9	19-235	Steering Knuckle Cap, 2 used	41	19-260	Axle Nut
10	19-236	Gasket, 2 used	42	19-261	Washer
11	19-237	Knuckle Pin, 2 used	43	19-249	Wheel Bearing Cone, Outer
12	SHM2203201	Shim, .010, 2203S201	44	19-248	Wheel Bearing Cup, Outer
	SHM2203200	Shim, .005, 2203R200	45	ZZ 0000101	90° Zerk, 6 used
13	19-259	Thrust Bearing	46	RSF0007311	Spring Bolt
14	19-240	Draw Key	47	NFE0008750	7/8" Fiber Lock Nut, 6 used
15	19-241	Draw Key	48	RSF0007310	Spring Shackle
16	ARM3133117	Steering Arm	49	SCC0000108	1/4" x 2 1/2" NCHT Cap Screw, 4 used
17	19-256	Key, 4 used		NCE0002500	1/4" NC Fiber Lock Nut
18	19-254	Retaining Lock, 2 used	50	SPC0007333	Spacer
19	19-253	Plug, 2 used	51	SFC0000817	3/4" x 5" NFHT Cap Screw
20	19-238	Steering Knuckle W/Bushing, LH	52	PLT0075130	Front Spring Plate Assembly, LH
	19-239	Steering Knuckle W/Bushing, RH	53	RSF0007312	Spring Bolt
21	19-257	Cross Tube Arm, LH	54	RSF0007313	Spring Bolt, 4 used
22	19-914	Complete Brake Assembly, LH	55	PLT0075131	Front Spring Plate Assembly, RH
	19-915	Complete Brake Assembly, RH	56	WHL0090020	Tire and Wheel Assembly
23	19-272	Wheel Cylinder	57	19-225	Top Leaf for Spring
24	19-275	Rear Brake Shoe	58	19-226	2nd Leaf for Spring
25	19-273	Spring, Brake Shoe Return	59	19-227	3rd Leaf for Spring
26	19-274	Front Brake Shoe	60	19-228	4th Leaf for Spring
27	19-243	Wheel Bearing Oil Slinger	61	19-229	5th Leaf for Spring
28	19-247	Rivet, Knuckle and Brake Assembly	62	19-230	Bottom Leaf for Spring
29	19-244	Oil Seal W/Wiper Assembly	63	19-210	Front Spring Assembly
30	19-245	Wheel Bearing Cone, Inner	64	NFH0007500	3/4" NF Nut, 16 used
31	19-246	Wheel Bearing Cup, Inner	65	ZZ 0000104	Zerk, 4 used
32	19-267	Wheel Stud, LH	66	SCC0000510	1/2" x 3" NCHT Cap Screw
	19-268	Wheel Stud, RH		NCE0005000	1/2" Fiber Lock Nut
33	19-250	Brake Drum	67	19-109	Valve Stem

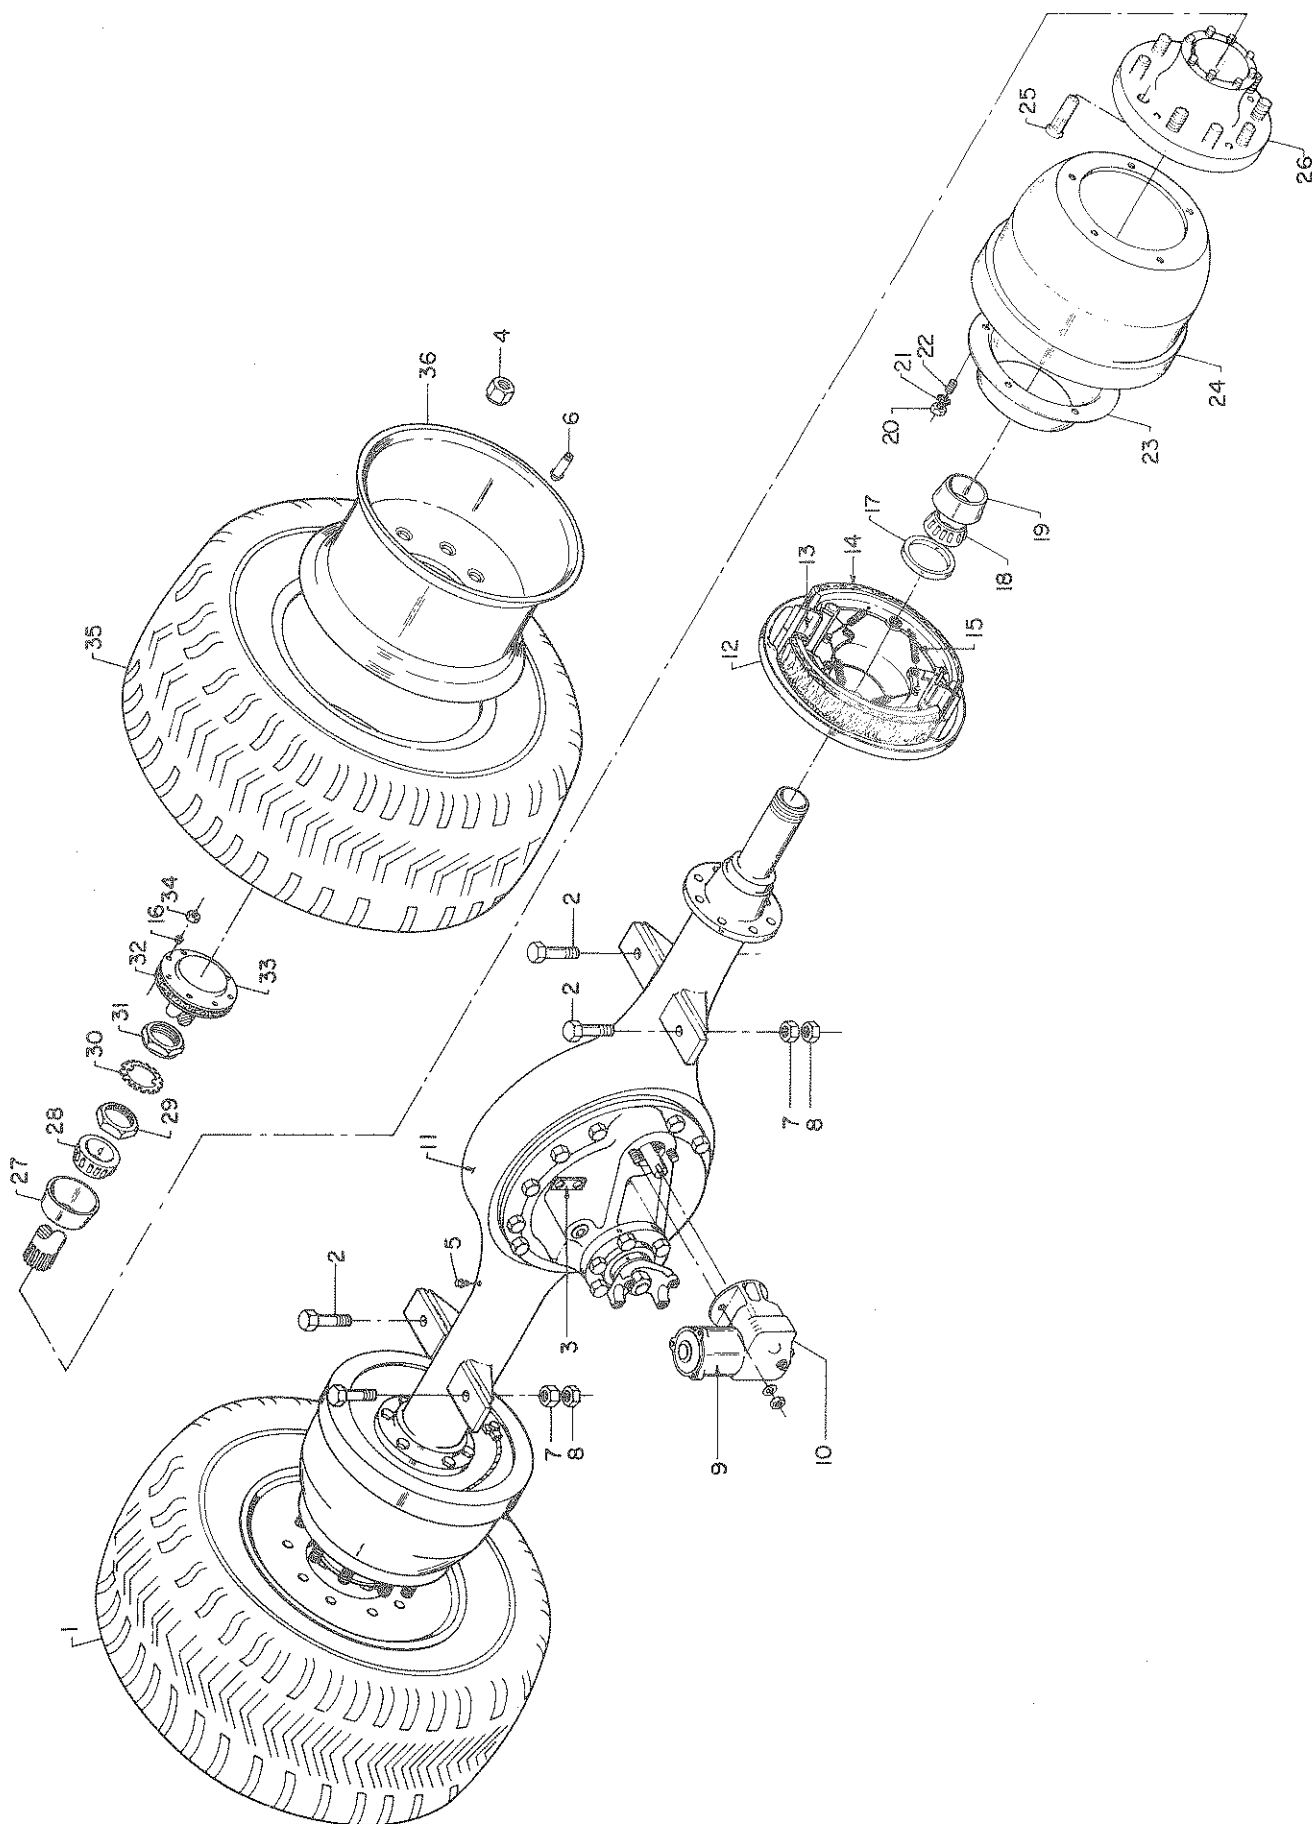

REAR AXLE ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	WHL0040195	Wheel and Tire Assembly
2	SFC0000810	3/4" x 3" NFHT Cap Screw, 4 used
3	19-159	Brake Line Support
4	ETN0037889	Wheel Nut, LH
	ETN0037888	Wheel Nut, RH
5	F 0001720	Vent
6	19-109	Valve Stem
7	NFH0007500	3/4" NF Hex Nut
8	NFJ0007500	3/4" NF Jam Nut
9	19-193	Motor Only, 2 Speed Shift
10	19-115	Two Speed Shift Unit with Motor
11	AXL0007694	Axle Complete with Pads
	AXL0687991	Axle Housing Only with Pads
12	WAG0075334	Brake Assembly, LH
	WAG0075335	Brake Assembly, RH
13	WAG0024489	Wheel Cylinder
14	WAG0068927	Brake Shoe, Set, 2 Used Per Wheel
15	WAG0019148	Brake Spring, 2 used
	WAG0019149	Brake Spring, 2 used
16	ETN0014571	Tapered Dowell, Axle Shaft, 16 used
17	ETN0042002	Oil Seal, Inner
18	ETN0035278	Bearing Cone, Inner, 495AX
19	BRG0000493	Bearing Cup, Inner, 493
20	ETN0099596	5/8" NF Lock Nut
21	ETN0050443	Washer
22	STD0000109	Stud, 2 1/2", NF and NC, W96 Leland
23	ETN0050432	Oil Slinger, 50432
24	BRK3120531	Brake Drum, 03-120531 Daton Walther
25	ETN0059192	Wheel Stud, LH
	ETN0059191	Wheel Stud, RH
26	ETN0050437	Wheel Hub W/Stud Bolts, RH, 50437
	ETN0050436	Wheel Hub W/Stud Bolts, LH, 50436
27	ETN0039520	Bearing Cup, Outer
28	ETN0030689	Bearing Cone, Outer
29	ETN0019186	Hub Nut, 2 used
30	ETN0030714	Hub Nut Lock
31	ETN0036997	Nut with Oil Seal, 2 used
32	ETN0036480	Gasket, Axle Shaft, 2 used
33	ETN0059502	Axle Shaft
34	ETN0075184	Nut, Axle Shaft Stud, 16 used
35	TIR4019195	Tire, 40X19X19.5 -12 ply, ND Duplex
36	WHL0030872	Rear Wheel, 10 Hole

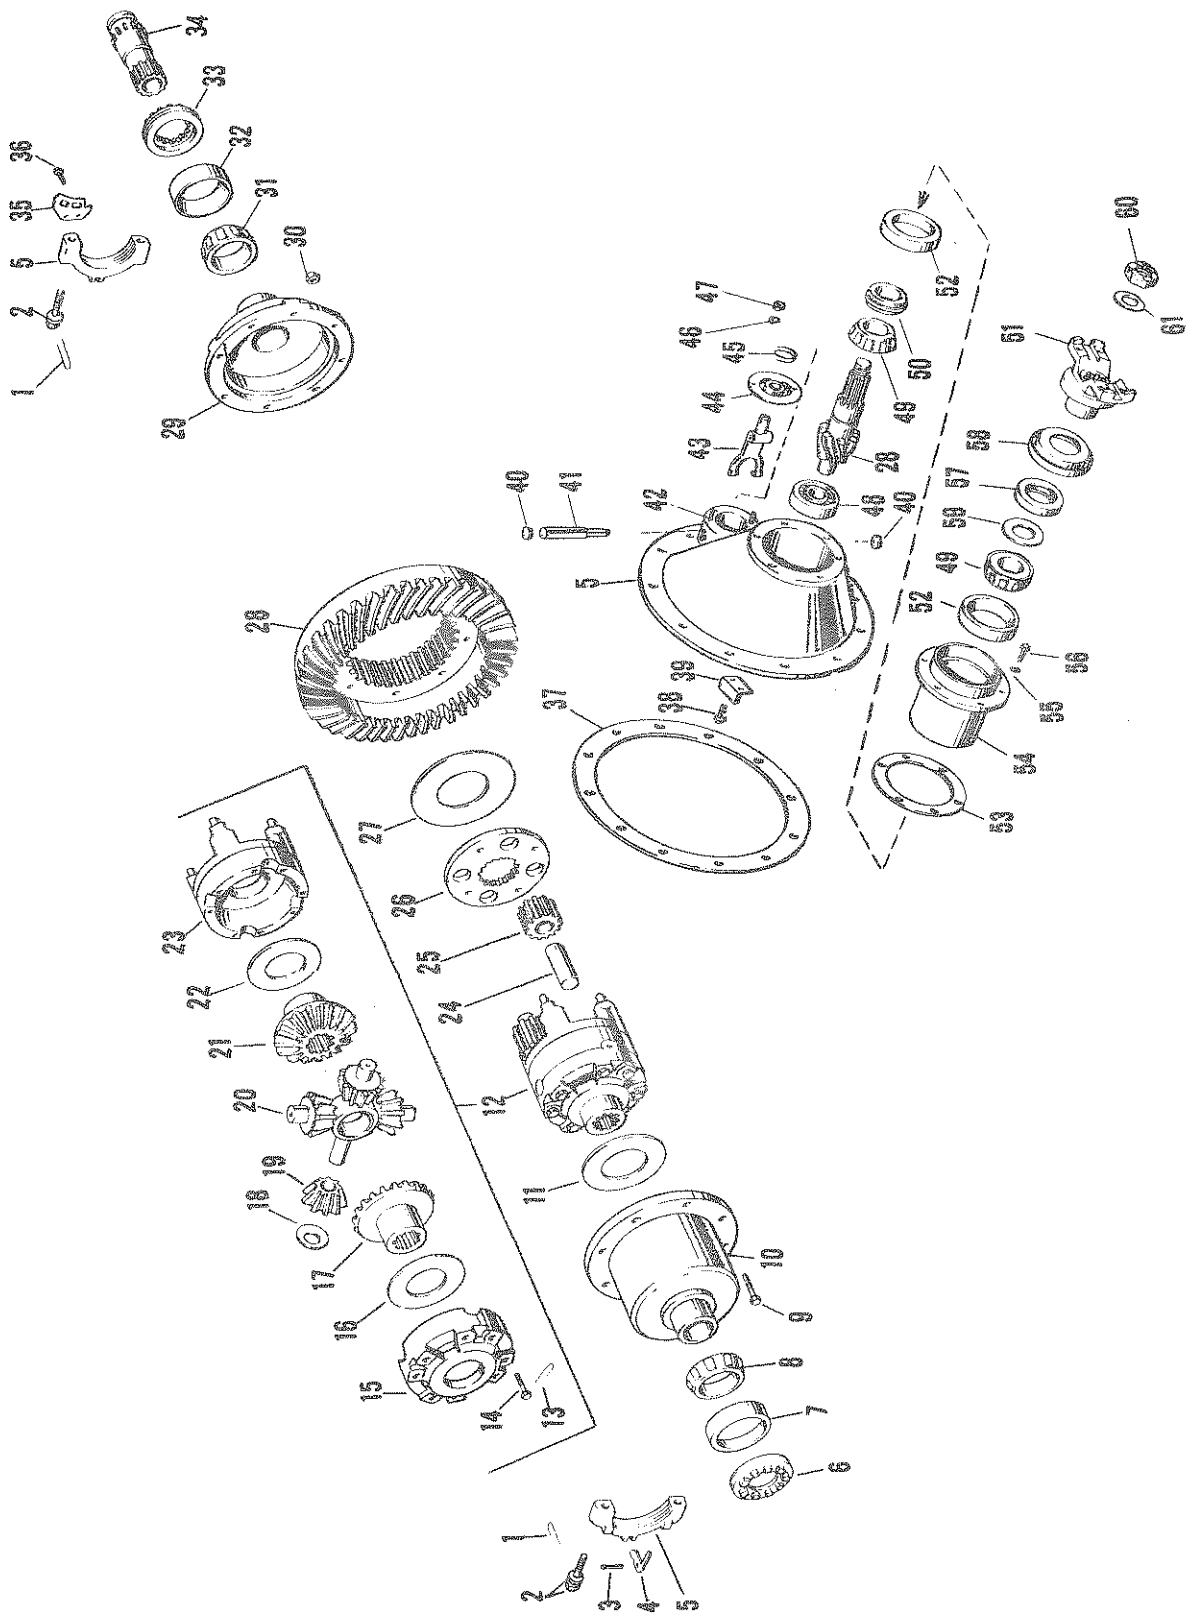


REAR AXLE DIFFERENTIAL BREAKDOWN

REF. NO.	PART NO.	DESCRIPTION
1	ETN0090536	Lock Wire
2	ETN0014970	Cap Screw
3	ETN0090873	Cotter Pin
4	ETN0013377	Adjuster Lock, RH
5	ETN0076930	Differential Carrier Housing Assembly with Bearing Caps
6	ETN0014950	Differential Bearing Adjuster, RH
7	ETN0009803	Differential Bearing Cap, RH
8	ETN0015094	Differential Bearing Cone, RH
9	ETN0044356	Bolt, Gear Support Cases to Gear
10	ETN0027860	Gear Support Case, RH Half
11	ETN0018346	Support Case Thrust Washer, RH
12	ETN0065515	Differential Assembly
13	ETN0023130	Lock Wire
14	ETN0015050	Cap Screw
15	ETN0025967	Differential Case, RH Half
16	*	Side Gear Thrust Washer
17	*	Side Gear, RH
18	*	Side Pinion Thrust Washer
19	*	Side Pinion
20	*	Spider
21	*	Side Pinion, LH
22	*	Side Pinion Thrust Washer
23	ETN0027880	Differential Case with Clutch Plate Pin
24	ETN0014935	Idler Pinion Pin
25	ETN0027875	Idler Pinion
26	ETN0074023	High Speed Clutch Plate
27	ETN0043269	Support Case Thrust Washer, LH
28	ETN0096800	Drive Gear and Pinion, Matched Including Nut
29	ETN0027859	Gear Support Case, LH Half
30	ETN0060598	Lock Nut
31	ETN0027876	Differential Bearing Cone, LH
32	ETN0015092	Differential Bearing Cup, LH
33	ETN0074022	Differential Bearing Adjuster, LH
34	ETN0074021	Slide Clutch Gear, 2 Speed
35	ETN0014949	Adjusting Lock, LH
36	ETN0009820	Cap Screw
37	ETN0071806	Carrier Gasket
38	ETN0067815	Oil Trough Screw
39	ETN0067814	Oil Trough
40	ETN0009797	Expansion Plug
41	ETN0047399	Shift Fork Shaft, 2 Speed
42	ETN0078400	Shift Unit Stud, 2 Speed
43	ETN0032425	Shift Assembly
44	ETN0064085	Shift Fork Seal and Spring
45	ETN0035585	Shift Fork Seal Spring
46	ETN0078401	Stud Flat Washer
47	ETN0063028	Stud Nut
48	ETN0015828	Pinion Pilot Bearing
49	ETN0033699	Pinion Bearing Cone, Inner
50	ETN0041568	Pinion Bearing Spacer, 0.638"
	ETN0041583	Pinion Bearing Spacer, 0.623"
51	ETN0042055	Assembly Yoke and Mud Slinger
52	ETN0012495	Pinion Bearing Cup
53	ETN0045461	.003 Shim
	ETN0062829	.005 Shim
	ETN0054562	.010 Shim
	ETN0062830	.020 Shim
	ETN0054463	.030 Shim
54	ETN0067817	Pinion Cage with Cups
55	ETN0029571	Lock Washer
56	ETN0030800	Cap Screw
57	ETN0064551	Oil Seal
58	ETN0079470	Oil Seal Retainer
59	ETN0012904	Companion Flange Flat Washer
60	ETN0095204	Pinion Nut
61	ETN0014354	Flat Washer

*SOLD ONLY AS KIT:


ETN0102739 Differential Assembly Repair Kit

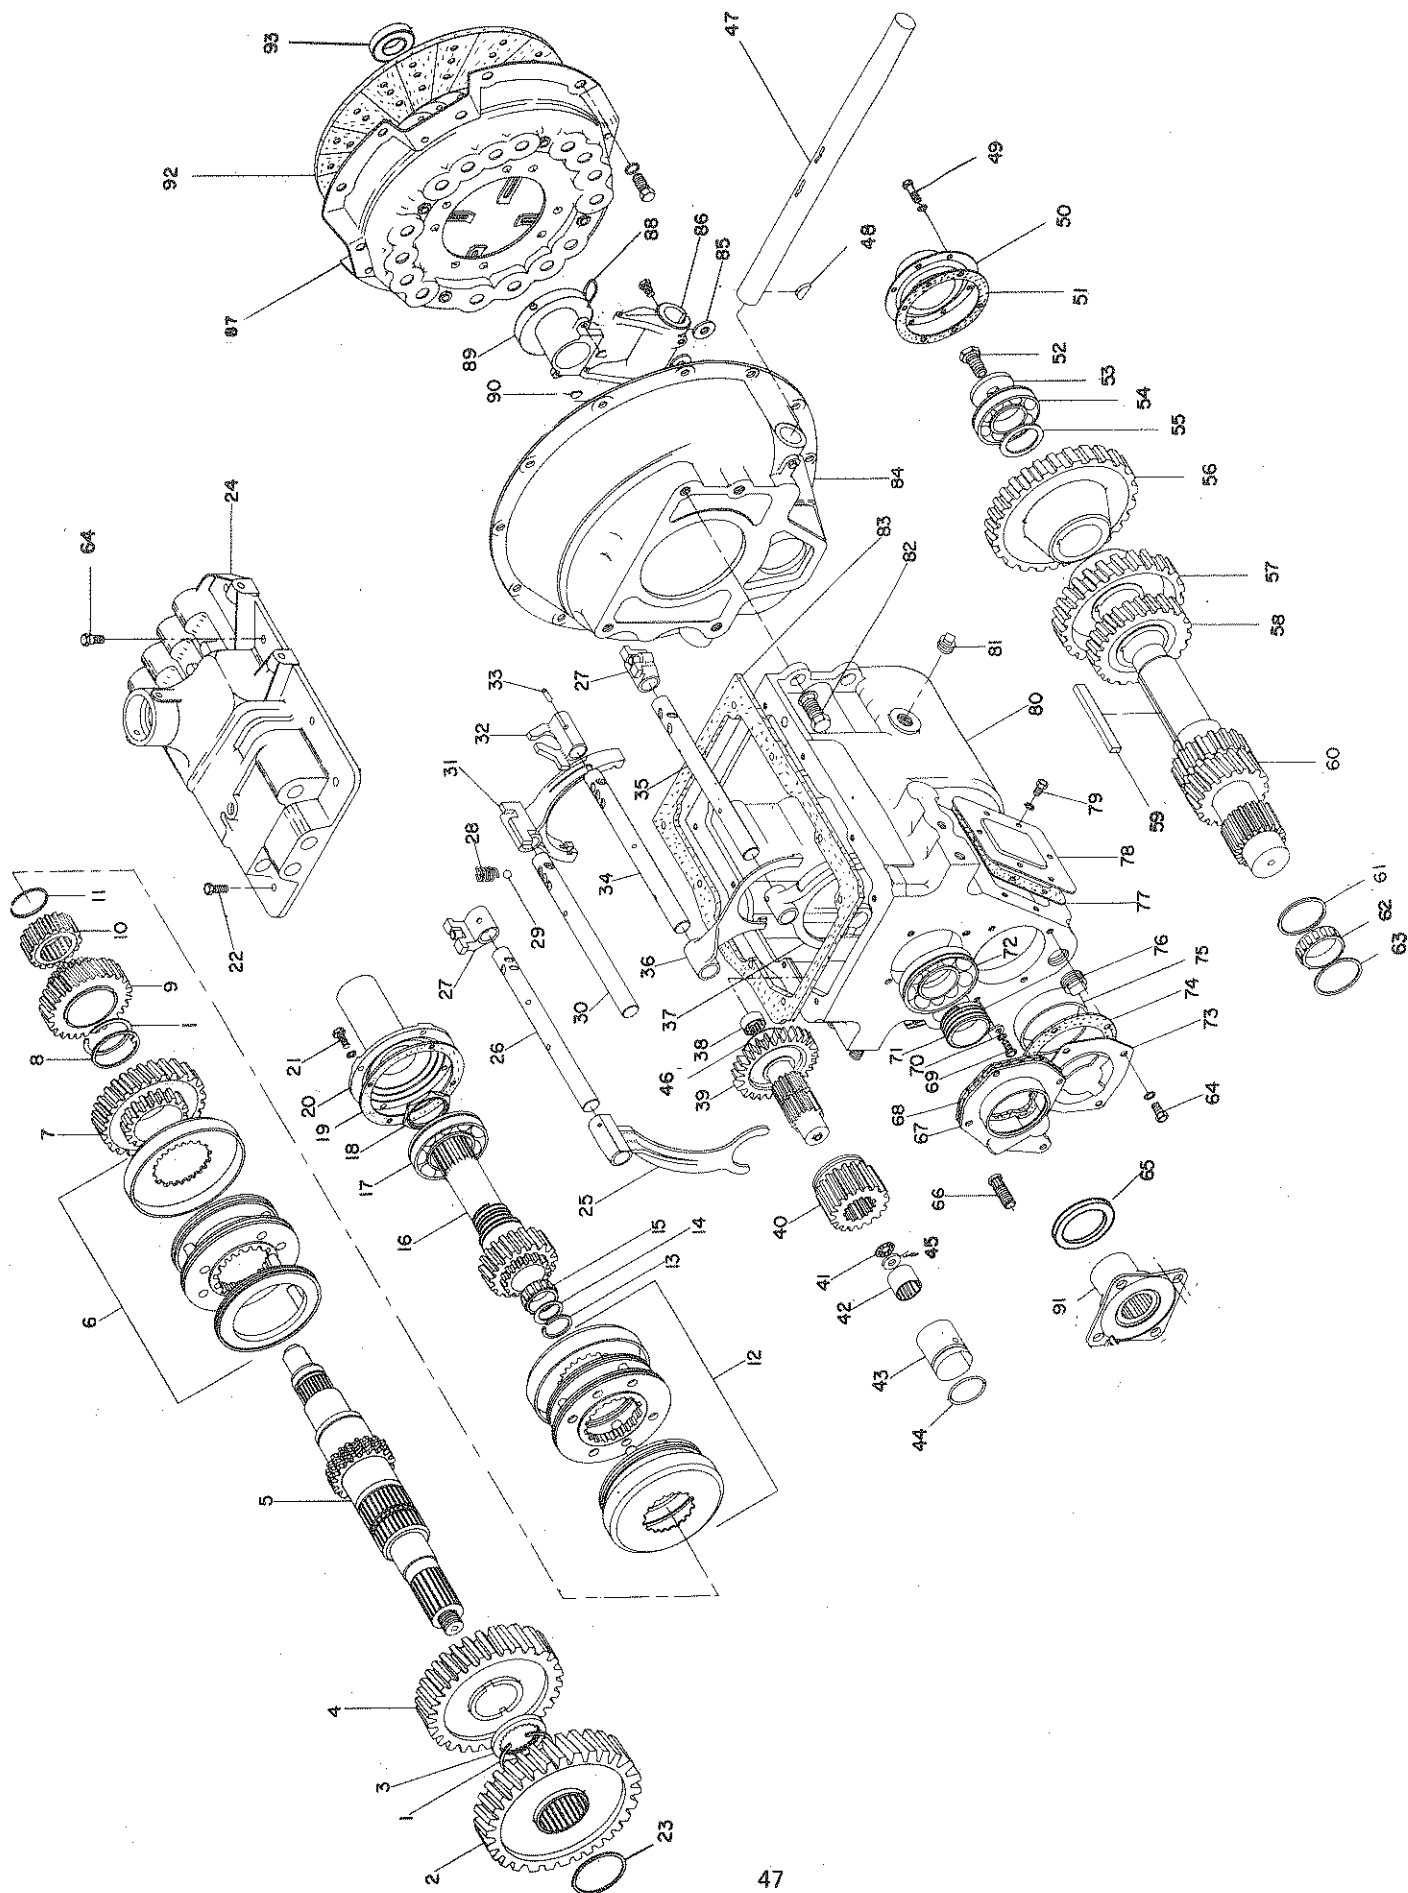

TRANSMISSION


19-922 — — — — — New Process 5 Speed

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	B 0097422	Snap Ring, 2 used	50	B 0097986	Retainer
2	B 0097844	Gear, M/S Low Speed	51	B 0092732	Gasket
3	B 0097974	Thrust Washer	52	B 0223736	Screw
4	B 0097978	Gear W/Bushing, 2nd Speed	53	B 0097979	Washer, Counter Shaft
5	B 0097848	Main Shaft	54	B 0092796	Bearing, Counter Shaft, MRC6208M
6	B 0094458	2 and 3 Synchronizer	55	B 0092917	Thrust Washer
7	B 0097999	Gear, 3rd Speed	56	B 0093644	Counter Shaft Drive
8	B 0097998	Washer	57	B 0092496	4th Speed Counter Shaft
9	B 0099003	Gear, 4th Speed	58	B 0092497	3rd Speed Counter Shaft
10	B 0095849	Gear, Synchromesh Clutch	59	B 0092716	Key
11	B 0096711	Snap Ring	60	B 0097847	Counter Shaft
12	B 0011564	4 and 5 Synchronizer	61	B 0094229	Spacer
13	B 0091484	Snap Ring	62	B 0091233	Roller, 24 used
14	B 0091486	Washer	63	B 0094228	Spacer, Rear
15	B 0091233	Roller, 14 Required	64	B 0061527	Screw
16	B 0099705	Main Drive	65	B 0090235	Seal, Main Shaft, 21120 C/R
17	B 0092695	Bearing, MRC211MFG	66	B 0091924	Bolt, 4 used
18	B 0092106	Nut	67	B 0093161	Retainer, Main Shaft
19	B 0038809	Gasket	68	B 0093257	Gasket
20	B 0094809	Retainer	69	B 0423351	Screw
21	B 0090128	Screw, 4 used	70	B 0038869	Lock Plate
22	B 0091739	Shoulder Screw, 2 used	71	B 0093628	Speedometer Gear
23	B 0099009	Stop, Low Speed Gear	72	B 0092712	Bearing, MRC 308MG
24	B 0097342	Case Cover Only	73	B 0097982	Retainer with Race
	B 0011353	Cover Assembly Complete	74	B 0091204	Gasket
25	B 0092719	Reverse Fork	75	B 0094227	Race, Cam Shaft
26	B 0091221	Reverse Shifter Rail	76	B 0093769	Drain Plug
27	B 0091217	Low Lug, 2 used	77	B 0035666	Gasket, PTO Cover, 2 used
28	B 0091504	Spring, 4 used	78	B 0035662	PTO Cover, 2 used
29	B 0147491	Poppet Balls, 10 used	79	B 0423351	Screw, 12 Required
30	B 0091224	Fourth and Fifth Rail	80	B 0011650	Gear Case
31	B 0093966	Fork, 4th and 5th	81	B 0444592	1/2" Plug
32	B 0091491	Lug, 2nd and 3rd	82	SCC0000705	5/8" x 1 1/4" NCHT Cap Screw, 4 used
33	B 0091239	1/8" Roll Pin, 7 used	83	B 0092794	Gasket
34	B 0092779	Rail, 2nd and 3rd	84	B 0094816	Bell Housing
35	B 0092717	Low Rail	85	B 0092421	Washer Key, 2 used
36	B 0091677	Fork, 2nd and 3rd	86	B 0092348	Yoke
37	B 0092718	Fork, Low	87	CLH0260280	Pressure Plate, JD Only
38	B 0092737	Bearing, Front, B1412		CLH01219BW	Pressure Plate, AC & IHC
39	B 0092533	Reverse Idler Gear	88	B 0092345	Spring, Pull Back
40	B 0092534	Reverse Shift Idler Gear	89	B 0093787	Sleeve Only
41	B 0093081	Thrust Bearing		B 0093798	Bearing
42	B 0092743	Bearing Race, B1816	90	B 0092429	Clutch Pad
43	B 0097991	Retainer, Reverse Idler Gear	91	B 0095249	Companion Flange
44	B 0092822	O-Ring	92	CLH0011967	Clutch Disc
45	B 0093079	Thrust Bearing Race	93	F 0005362	Pilot Bearing, 6205-2RSNR, AC & IHC
46	B 0099976	Thrust Washer		BRG0063052	Pilot Bearing, JD
47	19-202	Shaft			
48	F 0005389	Woodruff Key			
49	B 0095276	Screw, 6 used			

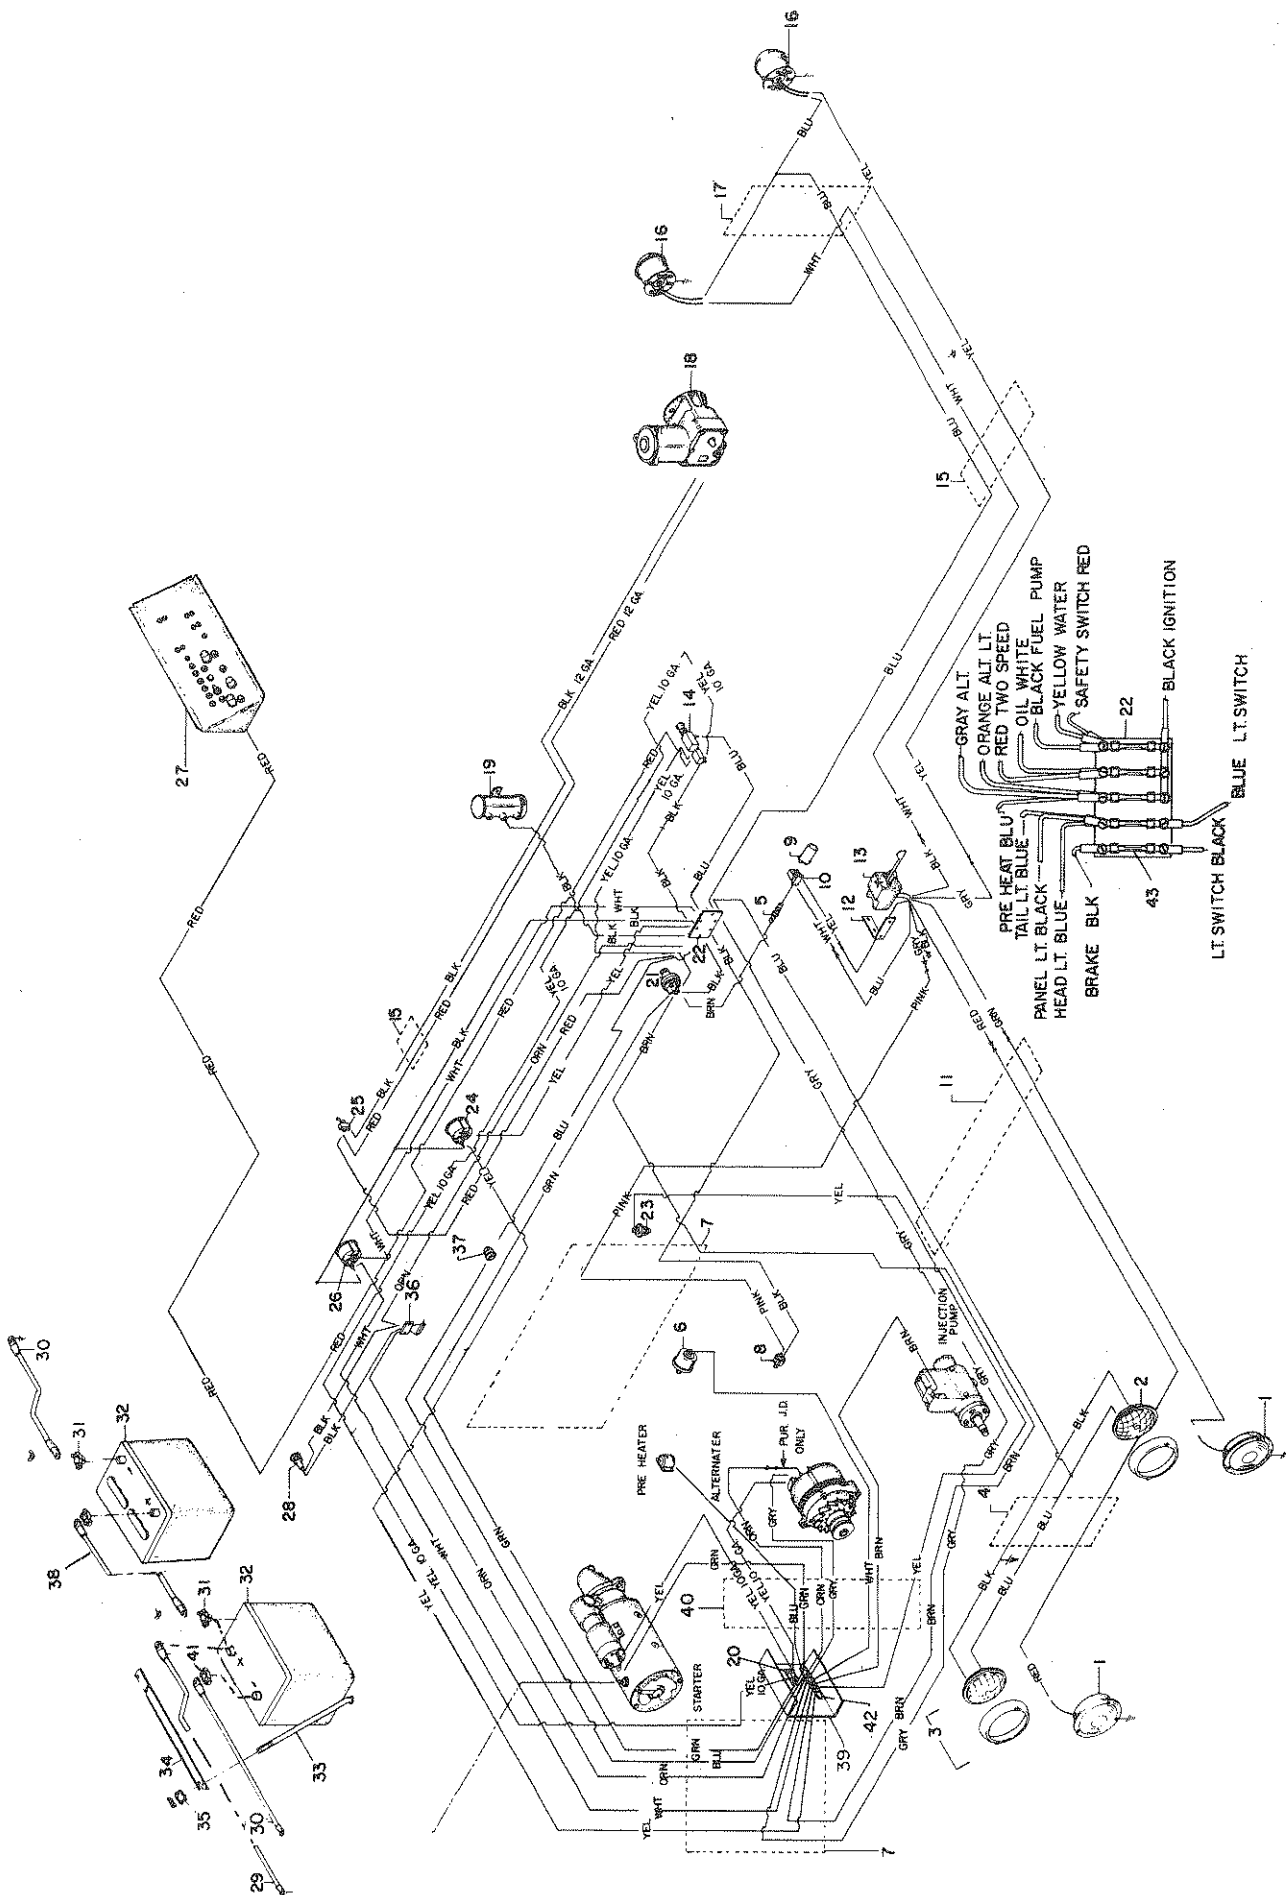


ELECTRICAL SYSTEM

REF. NO.	PART NO.	DESCRIPTION
1	03-155	Turn Signal Light, 6003-12-A Speaker
2	F 0005842	Sealed Beam Unit Only
3	F 0006428	Headlight with Housing
4	03-150	Wire Harness, Head Light and Turn Signal
5	03-112	Fuse, 14 AMP
6	03-132	Sending Unit, Oil Pressure, 279B SW
7	HRN0007533	Wire Harness, AC
	HRN0008504	Wire Harness, JD
8	03-130	Switch, Stop Light, SL 134 Echlin
9	03-113	Flasher, 550 Echlin
10	03-195	Flasher Base
11	HRN0009041	Wire Harness, Deck to Hood
12	03-196	Mounting Bracket, Signal Light Control
13	03-157	Control, Signal Light, No. 900 Signal Stat
14	F 0000862	Switch, Light
15	HRN0009044	Wire Harness, Deck to Rear
16	03-156	Tail and Stop Light, 182-2611 Napa
17	HRN0009042	Wiring Harness, Tail and Stop Light
18	19-115	Two Speed Shift Unit W/Motor
	19-193	Motor Only, 2 Speed Shift
19	03-134	Electrical Fuel Pump, No. 476087 Bendix
20	ELC0005540	Circuit Breaker, 3005-40 CH
21	03-110	Switch, Ignition, KS6180 Echlin
22	03-209	Fuse Block, 4625-01 CH
23	F 0006431	Sending Unit, Temperature, 362AN SW
24	F 0006421	Gauge, Temperature, 82306 SW
25	03-114	Switch, 2 Speed, 2 x 465 Grainger
26	03-116	Gauge, Oil, 82305 SW
27	03-901	Control Panel Complete, Cage
28	F 0006424	Amp Indicator Lamp, VPL-20-12V
29	03-199	Battery Cable, JD, 92 "
	03-200	Battery Cable, AC, 62"
30	03-201	Cable Ground, 13"
31	03-203	Battery Terminal, Positive, CP809
32	F 0006639	Battery, 2 Used with Diesel
33	F 0006551	Battery Holddown Bolt, 2 used
34	F 0006627	Battery Holddown, Diesel
35	F 0006328	Battery Holddown, Grommet
36	F 0006578	Resistor and Terminal Block, 10W-15 ohm
37	F 0005237	Switch, Solenoid Control
38	03-202	Battery Connecting Cable, 6½
39	SHD0007022	Junction Box Cover
40	HRN0009055	Wire Harness, AC, Junction Box to Engine
	HRN0009056	Wire Harness, JD, Junction Box to Engine
41	03-204	Battery Terminal, Negative, CP810
42	03-210	Terminal Block, 8 Post, 4721-P8 CH
43	03-193	15 Amp Fuse, AGC-15

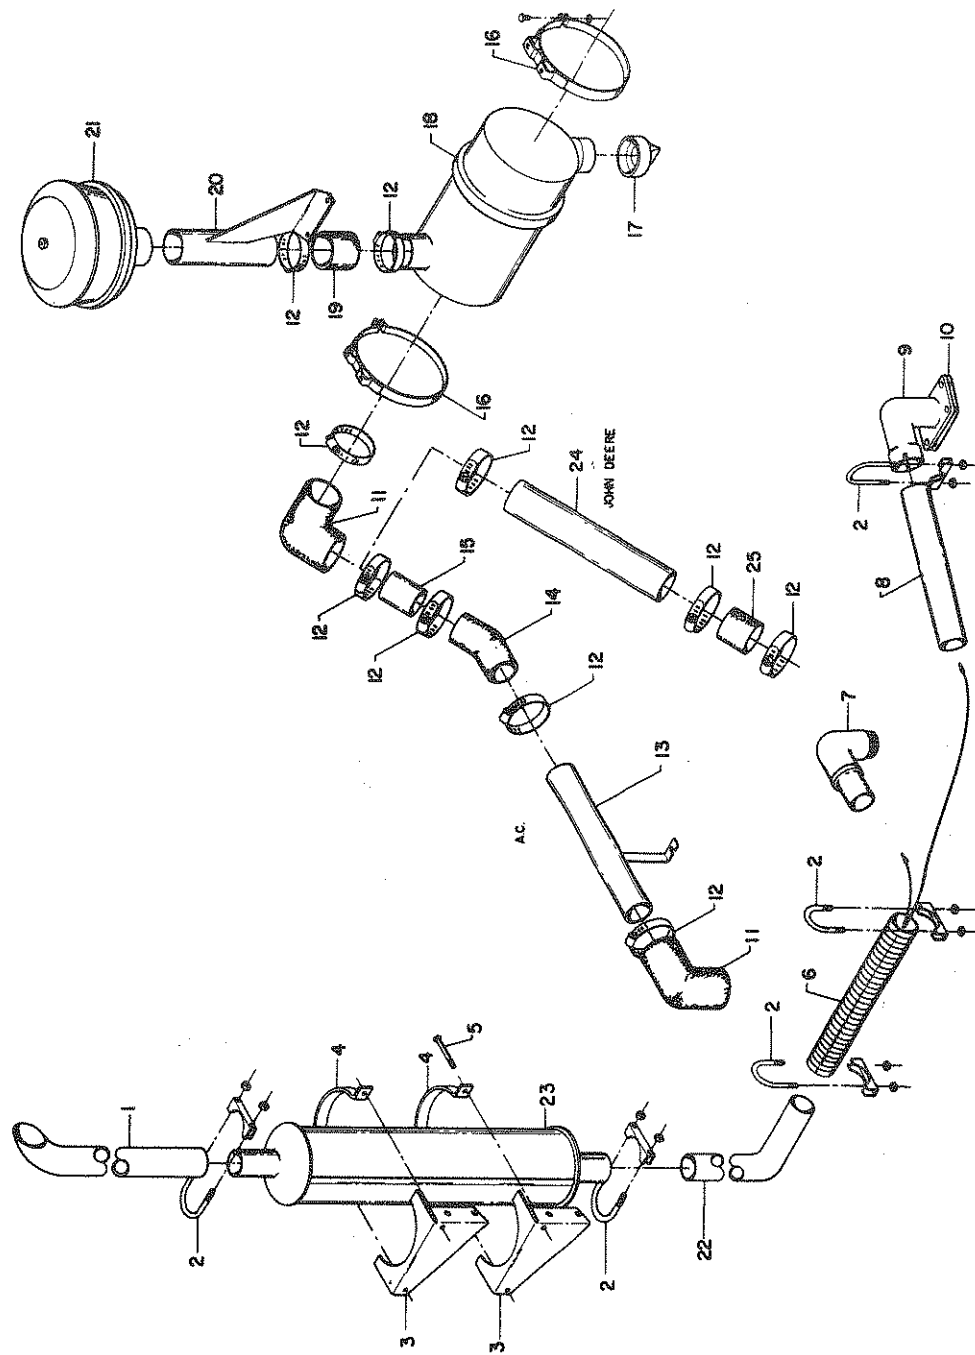


EXHAUST AND AIR CLEANER

REF. NO.	PART NO.	DESCRIPTION
1	EXH0007809	90° Exhaust Pipe
2	20-143	Muffler Clamp
3	BKT0007783	Muffler Clamp Bracket
4	STR0644420	Muffler Support Strap
5	SCC0000217	5/16" x 5½" NCHT Cap Screw
6	EXH0000101	Flex Tube, 40-007 NAPA
7	20-160	Exhaust Pipe Adapter, AC
8	20-206	Exhaust Pipe, 2½" OD x 13"
9	20-208	Manifold Adapter, JD
10	20-195	Gasket for JD
11	F 0006795	Rubber Elbow, 3"
12	F 0006793	Hose Clamp
13	FIL0007933	16" Air Filter Pipe
14	20-216	Rubber Elbow, 3" x 45°, 45 HL3
15	20-215	Pipe, 3" OD x 4"
16	20-129	Clamp, Air Cleaner
17	20-128	Bleeder, Air Cleaner
18	20-127	Air Cleaner
	20-133	Air Cleaner Element
19	20-130	Hose, 3" ID x 4"
20	20-131	Air Cleaner Stand
21	20-132	Pre Cleaner
22	20-153	Exhaust Elbow
23	20-140	Muffler
24	20-151	Pipe, 3" OD x 16"
25	20-210	Hose, 2¾" ID x 4"

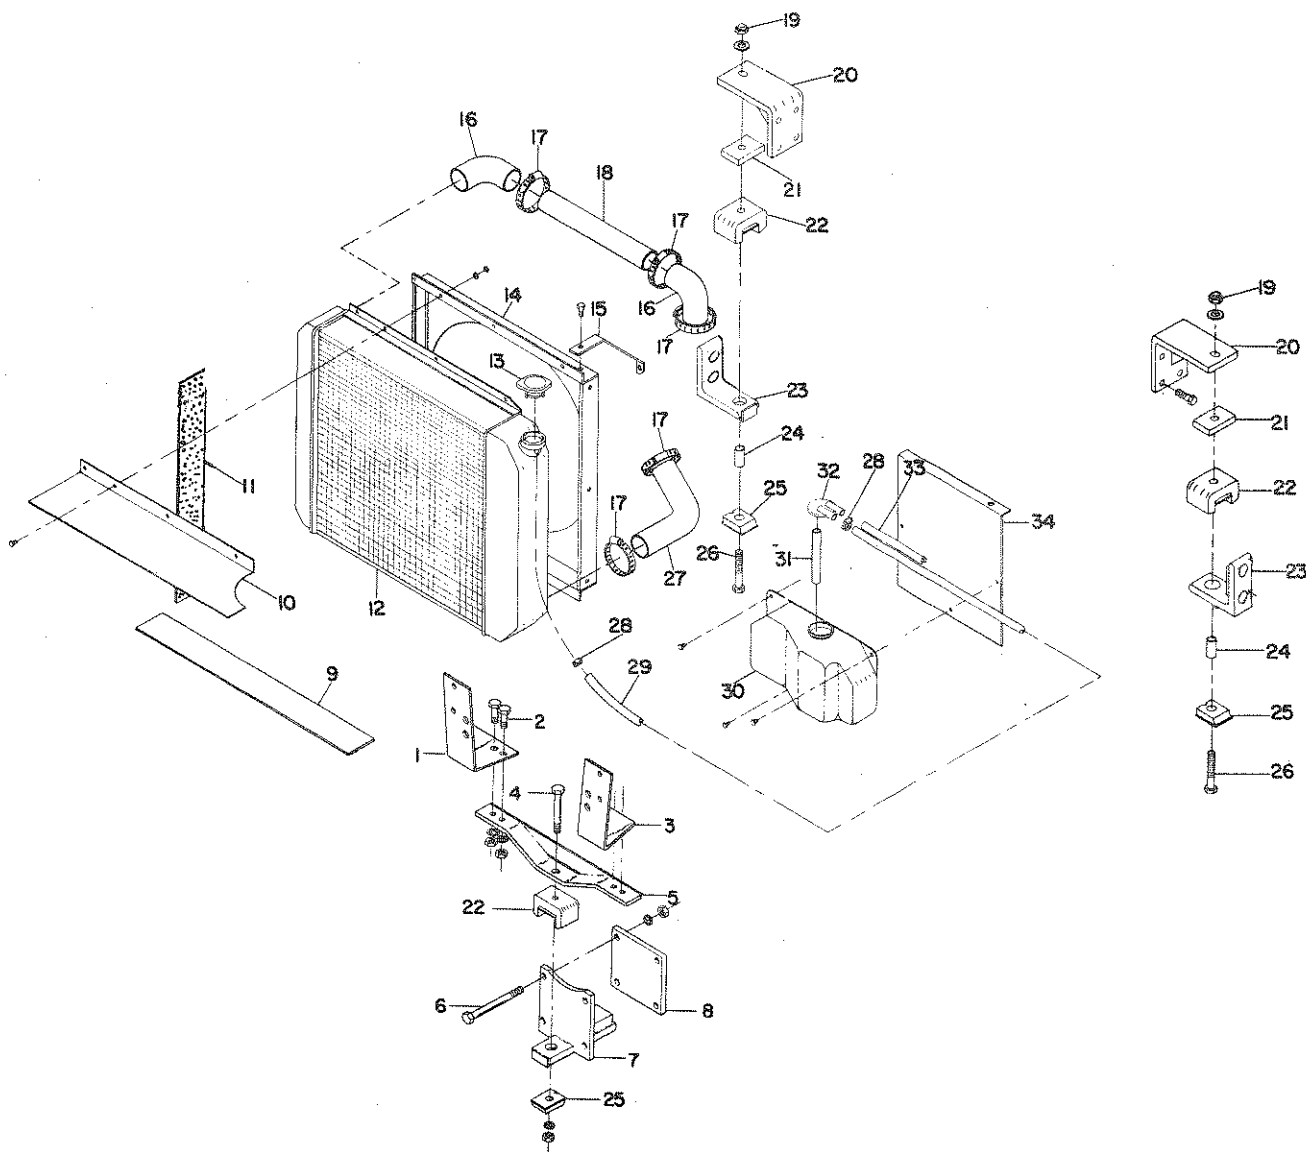




RADIATOR AND ENGINE MOUNTS – JOHN DEERE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	BKT0076150	Engine Mount, Front Bracket, RH	18	20-192	Pipe, 2" x 12"
2	SCC0000505	1/4" x 1 1/2" NCHT Cap Screw, 4 used	19	NCE0005625	9/16" NC Fiber Lock Nut
3	BKT0076151	Engine Mount Bracket, LH	20	MNT0007865	Engine Mount, 2 used
4	SCC0000614	9/16" x 4" NCHT Cap Screw	21	20-161	Spacer, 2 used
5	MNT0007620	Front Engine Mount Assembly	22	20-109	Motor Mount, 3-5113 BK, 2 used
6	SCC0000518	1/2" x 6" NCHT Cap Screw, 4 used	23	BKT0007444	Engine Support Bracket, 2 used
7	MNT0007619	Front Plate Bar Assembly	24	BSH0009502	Bushing, 1-7/8" Long, 2 used
8	MNT0007358	Front Engine Mount Anchor Plate	25	20-112	Motor Mount, 3-5115 BK, 2 used
9	BFL0000242	Wind Baffle, Bottom Section	26	SCC0000614	9/16" x 4" NCHT Cap Screw
10	20-178	Wind Baffle, Top Section	27	20-104	Radiator Hose
11	BFL0000204	Wind Baffle, Side Section	28	F 0008301	Hose Clamp
12	20-176	Radiator	29	20-184	1/4" x 30" Overflow Tube
13	F 0006821	Radiator Cap with Gasket	30	20-181	Overflow Tank
14	20-177	Shroud	31	20-186	Siphon Tube
15	20-199	Brace, Radiator	32	20-185	Filler Cap
16	20-174	Radiator Hose, 2" x 90°	33	20-180	1/4" x 5" Overflow Tube
17	F 0006830	Hose Clamp, 4-1204 BK, 6 used	34	BKT0007070	Overflow Tank Support Bracket

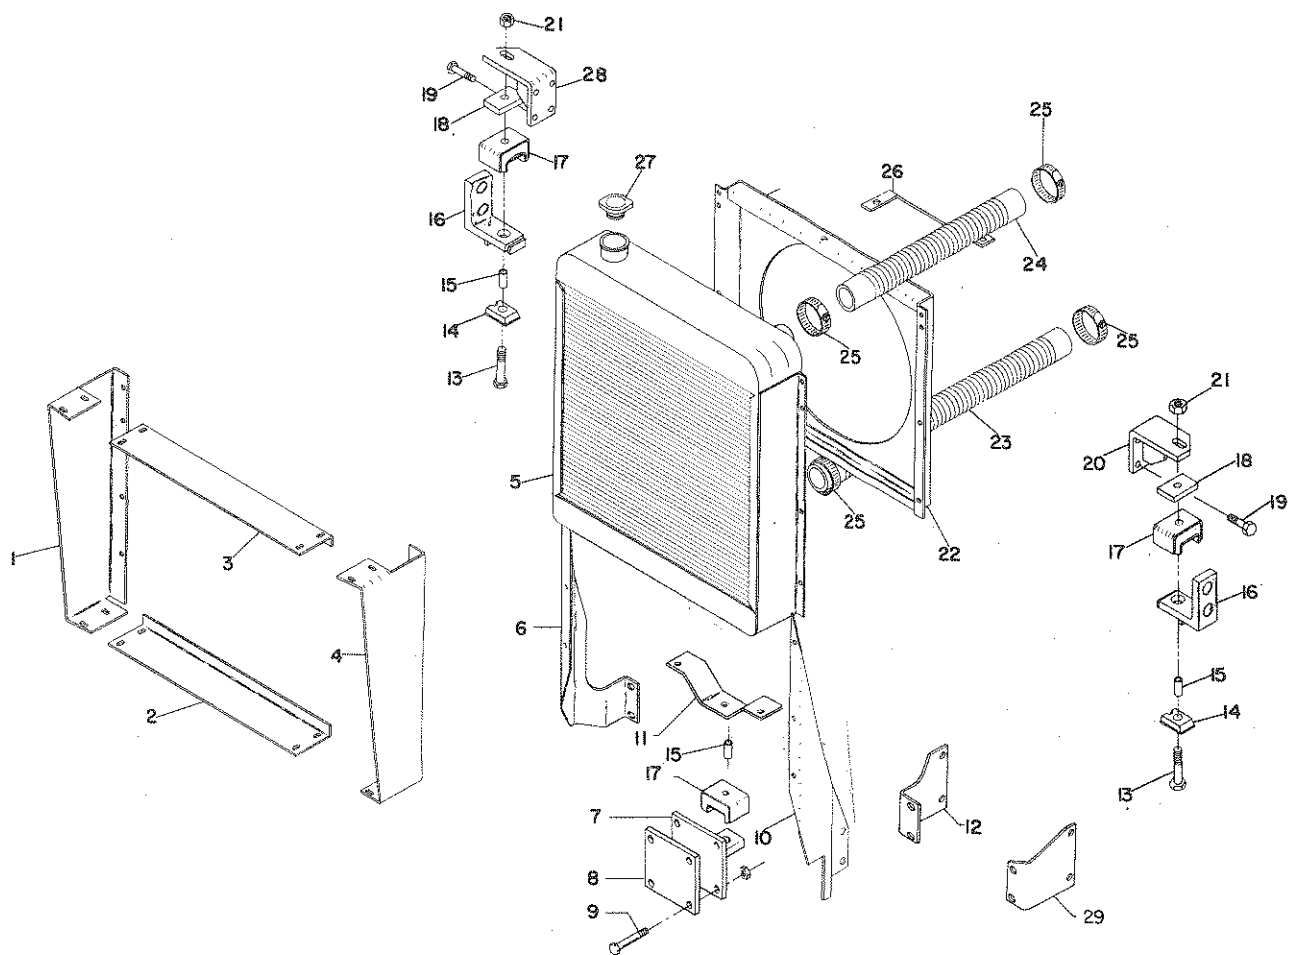

RADIATOR AND ENGINE MOUNTS, A.C.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	BFL0009223	Wind Baffle, Right Section	15	BSH0009502	Bushing, 1-7/8" Long
2	BFL0009221	Wind Baffle, Bottom Section	16	BKT0007444	Engine Support Bracket
3	BFL0009222	Wind Baffle, Top Section	17	20-109	Motor Mount
4	BFL0009224	Wind Baffle, Left Section	18	20-161	Spacer, 2 used
5	F 0006823	Radiator	19	SCC0000506	1/2" x 2" NCHT Cap Screw, 8 used
6	MNT0007370	Radiator Mount, Right Side	20	BKT0074450	Rear Motor Mount Bracket, LH
7	MNT0007360	Front Engine Mount	21	NCE0005625	9/16" NC Fiber Lock Nut
8	MNT0007358	Anchor Plate, Front Engine Mount	22	SHR0007591	Fan Shroud
9	SCC0000517	1/2" x 5 1/2" NCHT Cap Screw, 4 used	23	F 0006825	Radiator Hose, Upper, FM 62 Modoc
	WLK0005000	1/2" Lock Washer, 4 used	24	F 0006827	Radiator Hose, Lower, FM 59 Modoc
	NCH0005000	1/2" NC Hex Nut, 4 used	25	F 0006830	Hose Clamp
10	MNT0007372	Radiator Mount, Left Side	26	20-164	Top Radiator Brace
11	BKT0007364	Bracket, Front Engine Mount	27	F 0006821	Radiator Cap
12	MNT0007371	Radiator Mount, RH	28	BKT0074451	Rear Motor Mount Bracket, RH
13	SCC0000614	9/16" x 4" NCHT Cap Screw, 3 used	29	MNT0007386	Radiator Mount, LH
14	20-112	Motor Mount, 3-5115 BK, 3 used			

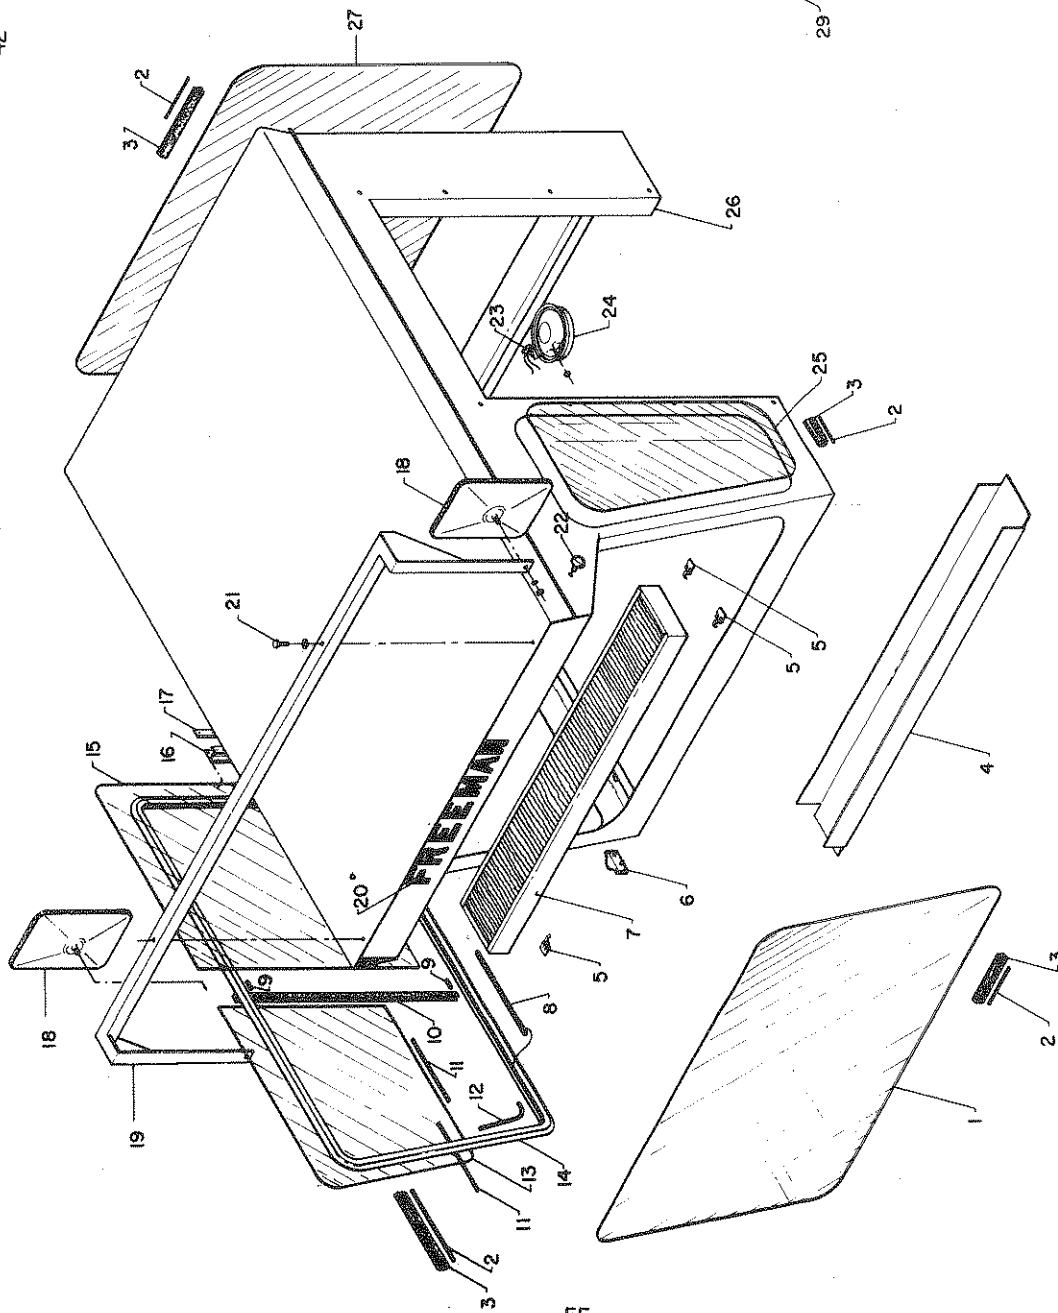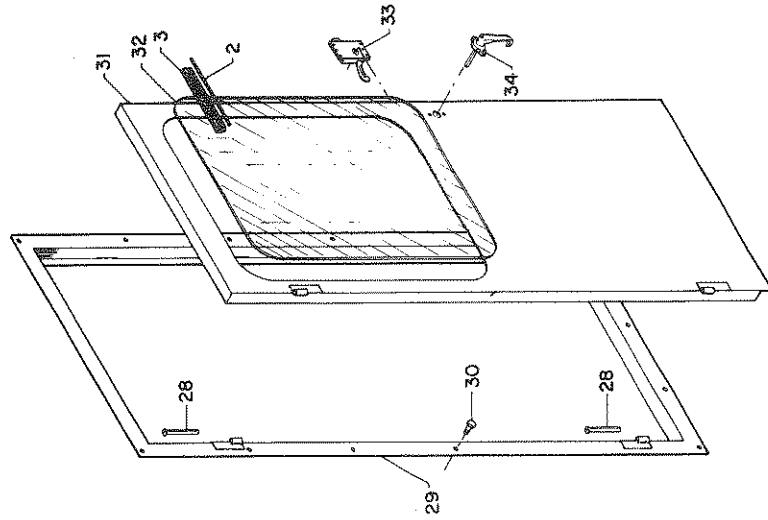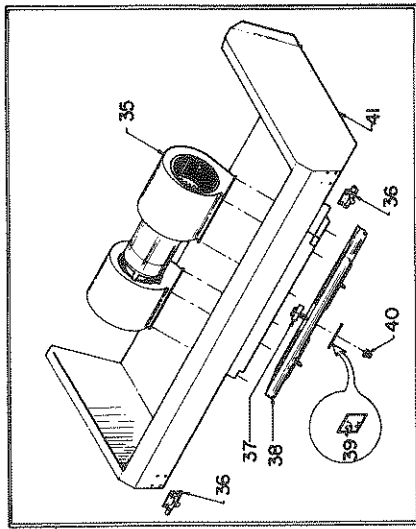


CAB

REF. NO.	PART NO.	DESCRIPTION
1	GLS0006951	Windshield Glass
2	WEA0000937	Filler Stays
3	WEA0001179	Weather Stripping
4	CVR0006779	Cover for Filter Opening
5	F 0006108	Latch, 4 used
6	F 0008264	Rubber Bumper
7	FIL0115154	Filter Element
8	CAB0000101	Felt
9	CAB0000102	Stop
10	CAB0000103	Center Bar
11	CAB0000104	Weather Stripping
12	CAB0000105	Large Weather Stripping
13	GLS0006956	Side Window Glass, Front
14	CAB0000106	Sliding Window Frame
15	GLS0006955	Sliding Glass, Rear
16	CAB0000107	Handle
17	CAB0000109	Latch
18	MIR4072308	Mirror, 2 used
19	BKT0006805	Rear View Mirror Mount
20	FD 0007114	Freeman Decal
21	SCC0000207	5/16" x 2 1/4" NCHT Cap Screw
22	BMP6021044	Door Stop
23	ELC0005020	Light Switch
24	F 0001505	Light
25	GLS0006953	Side Window Glass, Left
26	CAB0006864	Cab Complete with Blower
27	GLS0006952	Rear Window Glass
28	PIN0037540	Pin
29	DOR0006868	Door Frame
30	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw
31	DOR0006867	Door
32	GLS0006954	Door Window Glass
33	LOK0000055	Door Latch
34	F 0004527	Door Handle
35	BLO0000700	Blower
36	LAT0000290	Blower Latch
37	BLO0001065	Blower Switch
38	BLO0003316	Blower Vent
39	BLO0062318	Decal
40	KOB0000100	Switch Knob
41	BLO0006305	Blower Housing
42	BLO0000100	Blower Complete


PARTS NOT ILLUSTRATED

PART NO.	DESCRIPTION
RUG0006968	Rug
LIN0008269	Cab Lining Top Support
LIN0008278	Consol Lining, Left Side Front
LIN0008279	Consol Lining, Rear Section
LIN0008280	Consol Lining, Left Side Rear Section
LIN0008281	Consol Lining, Front Section
LIN0008282	Lining, Cab Roof
LIN0008283	Lining, Cab Door

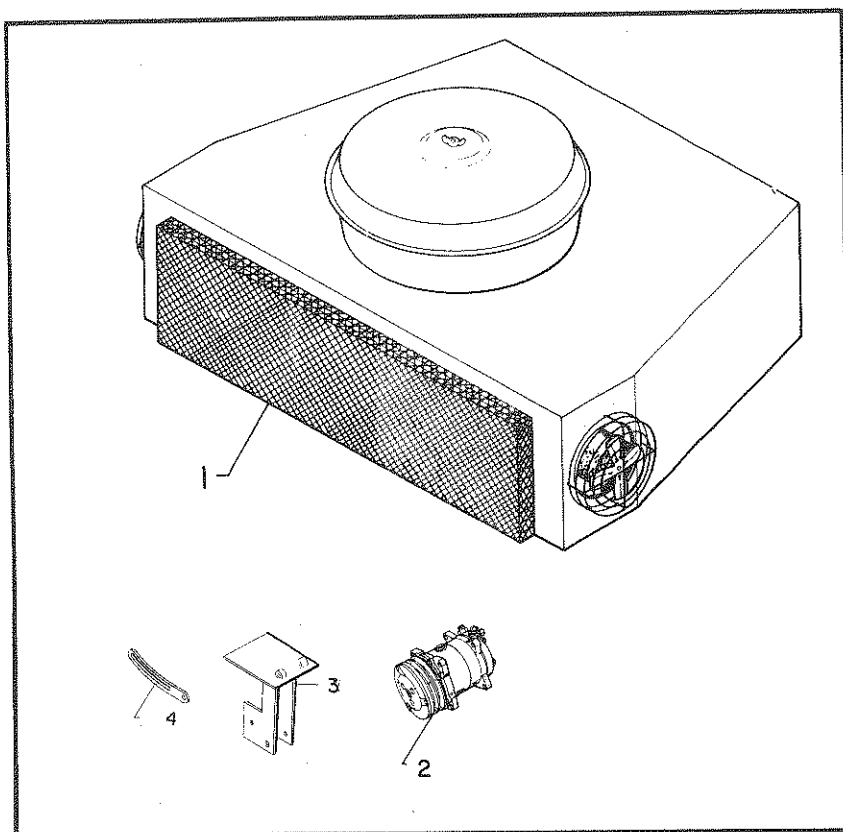


AIR CONDITIONER

REF. NO.	PART NO.	DESCRIPTION
1	ACN0048280	Air Conditioner Less Compressor
	ACN1120009	Fan Motor Only, 12 Volt
	ACN0960800	Fan Only
2	ACN0529945	Compressor with Standard Double Groove Clutch
3	MNT0006799	Air Conditioner Mount, JD
	MNT0007531	Air Conditioner Mount, AC
4	BKT0007018	Air Conditioner Tightner Bracket, JD
	BKT0752100	Air Conditioner Tightner Bracket, LH, AC
	BKT0752101	Air Conditioner Tightner Bracket, RH, AC
		LISTED BUT NOT SHOWN
	BLT0004710	Air Conditioner Belt, AC
	BLT2509905	Air Conditioner Belt, JD

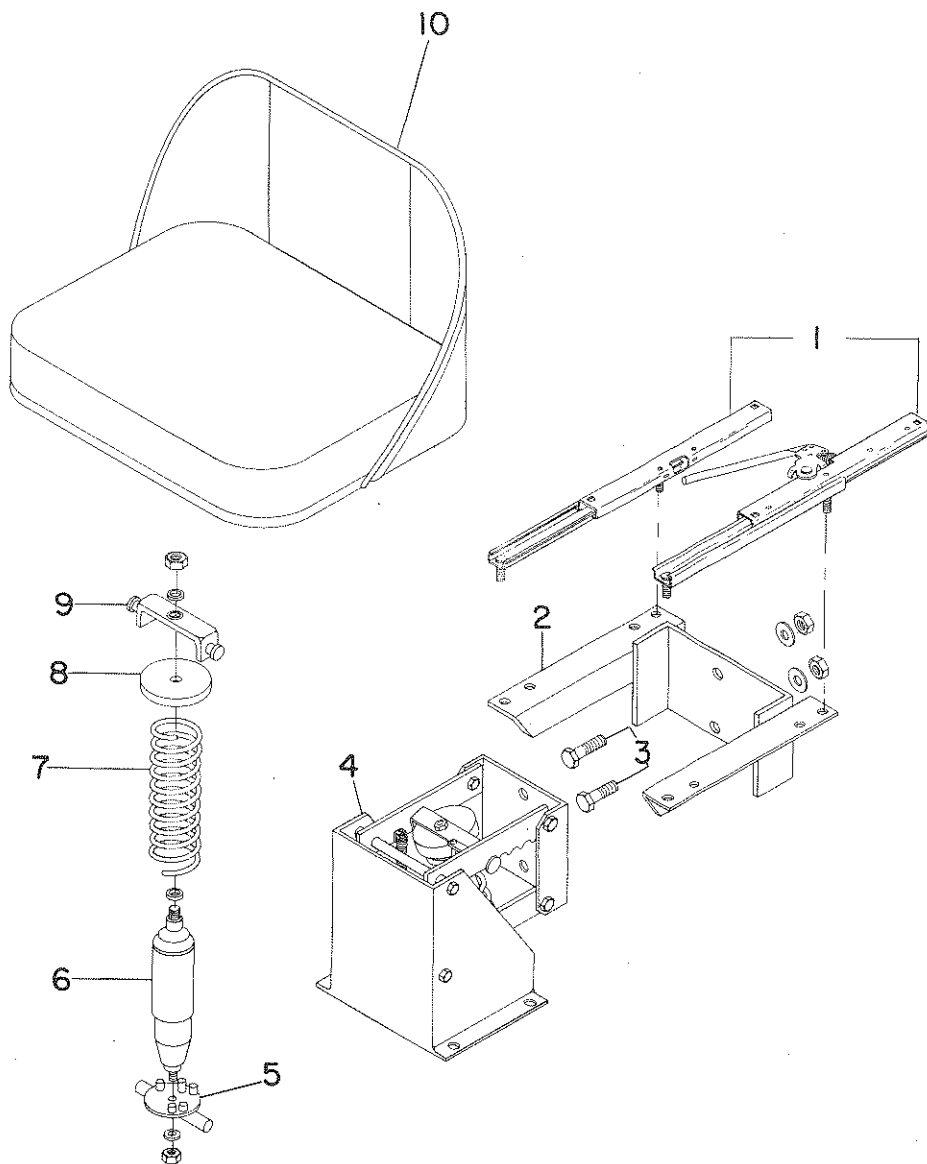

SEAT ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 0006858	Seat Adjusting Rails, Complete
2	F 0005867	Seat Bracket
3	SCC0000505	1/2" x 1 1/4" NCHT Cap Screw
4	F 0005703	Seat Spring & Hydraulic Assembly Complete
5	F 0005505	Plate, Bottom Pivot
6	F 0005866	Shock Absorber
7	F 0005705	Spring, Seat Assembly
8	F 0005502	Cup Washer
9	F 0005501	Spring & Cylinder Adjusting Bracket
10	F 0005918	Seat Assembly
	F 0005920	Bottom Seat Cushion
	F 0005921	Back Cushion

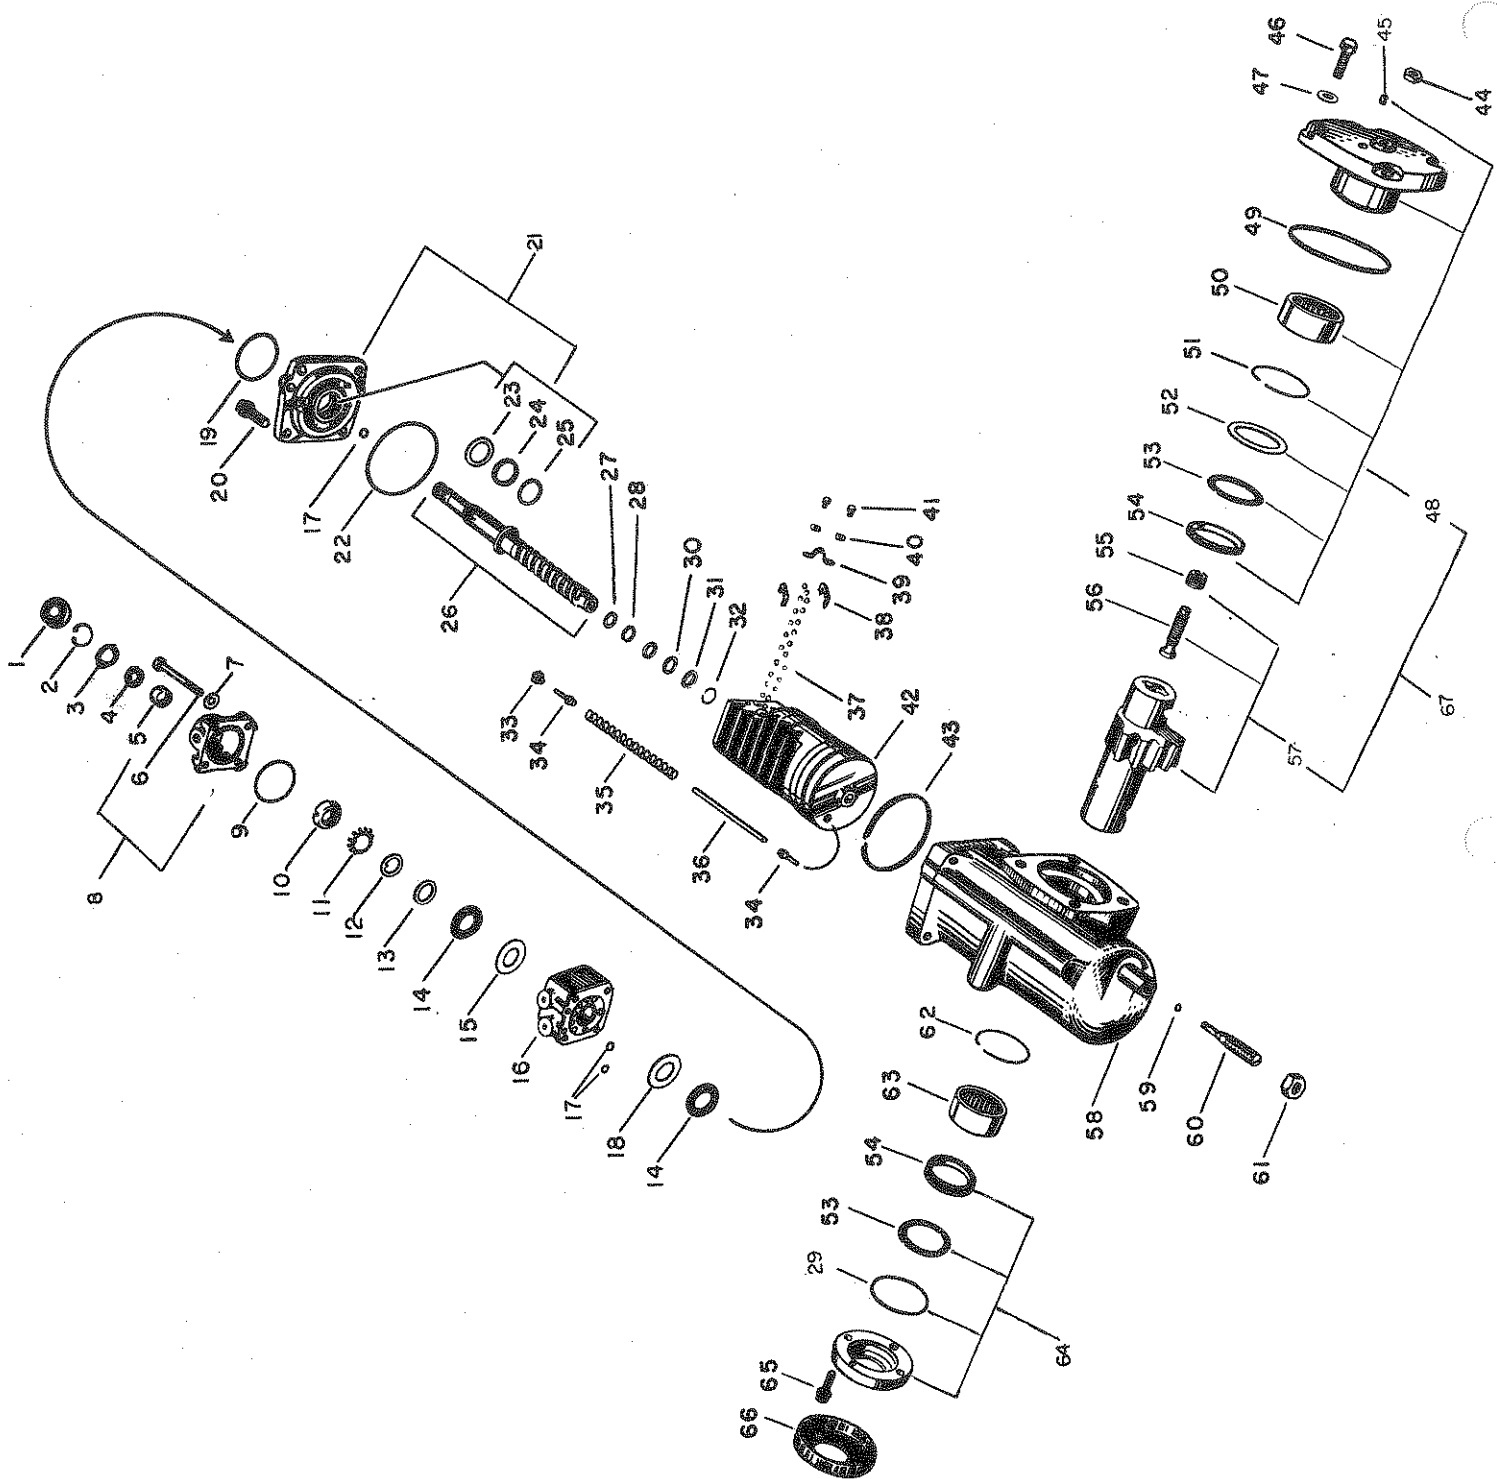


STEERING GEAR ASSEMBLY BREAKDOWN

17-209



HF 54008 TRW

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	TRW0402226*	Seal, Input Shaft Drive Dirt and Water	32	TRW0003430	Ring, Lower Worm Shaft Retaining
2	TRW0401314	Ring, Retaining	33	TRW0415414	Seat, Poppet, 2 used
3	TRW0029097	Washer, Seal Backup	34	TRW0040092	Poppet, 2 used
4	TRW0032356*	Seal, Input Shaft	35	TRW0401321	Spring
5	TRW0063029	Bearing, Input Shaft Needle	36	TRW0075002	Rod Poppet
6	TRWG186282	Cap Screw	37	TRW0215396	Ball, Steel, 2 used
7	TRW0028333	Washer		TRW0213684	Ball, Steel, 2 used
8	TRWHF5460A	Cover and Bearing Assembly, HF546001-A1	38	TRW0213685	Guide, Ball Return
9	TRW0032344*	Seal, Hydraulic Control Valve Cover	39	TRW0402302	Clip, Ball Return Guide
10	TRWG127708	Nut, Thrust Bearing Adjustment	40	TRW0028371	Lock Washer
11	*	Washer, External Tang Adjusting Lock Nut	41	TRWG179788	Hex Head Screw
12	TRW0028258	Washer, Internal Tang	42	TRWHF54704	Rack, Piston
13	TRW0028332	Washer, Thrust Bearing Race, Small	43	TRWC546001	Ring, Piston
14	TRW0065978	Bearing, Needle Thrust, 2 used	44	TRW0025031	Nut, Sector Shaft Adjusting Screw Jam
15	TRW0028288	Washer, Thrust Bearing Race, Large	45	*	Plug, Relief, Plastic
16	TRWV220007	Valve, Hydraulic Control	46	TRWG179858	Hex Head Cap Screw
17	*	Seal, Hydraulic Cylinder Port, 3 used	47	TRW0028334	Washer, 4 used
18	TRW0028288*	Washer Thrust Bearing Race, Large	48	TRWHF5450A	Side Cover Assembly, HF545002-A1
19	TRW0032344*	Seal, Hydraulic Control Valve Cover	49	*	Seal, Housing Side Cover
20	TRW0020205	Cap Screw, 12 Point, 4 used	50	TRW0069508	Bearing, Sector Shaft
21	TRW402306A	Adapter Assembly, 402306-A1	51	TRW0401222	Snap Ring
22	*	Seal, Hydraulic Control Valve Adapter	52	TRW0028366	Washer, Seal Backup, Steel
23	*	Washer, Seal Backup	53	*	Washer, Leather Backup
24	*	Seal, Hydraulic Control Valve Adapter	54	*	Seal Assembly, Sector Shaft
25	TRW0401320	Ring, Spiral Lock	55	TRW0062005	Retainer, Sector Shaft Adjusting Screw
26	TRWHF54303	Shaft, Input Worm	56	TRW0021246	Screw, Sector Shaft Adjusting
27	TRW0213679	Washer, Lower Worm Shaft Seal Backup	57	TRWHF5440A	Gear, Shaft and Adjusting Screw, HF544001-A1-409
28	*	Seal, Lower Worm Shaft	58	TRWHF5420A	Housing Assembly, HF542003-A1
29	*	Seal	59	*	"O" Ring, Pressure Unloader Screw
30	TRW0213677	Washer, Lower Worm Shaft Seal Cup Backup, Bronze	60	TRW0021244	Screw, Pressure Unloader Valve Adjusting
31	TRW0213627	Washer, Lower Worm Shaft Retaining Ring	61	TRWG272121	Nut, Pressure Unloader Valve Adjusting
			62	TRW0401324	Ring, Sector Shaft Bearing Retaining
			63	TRW0069509	Bearing, Sector Shaft
			64	TRW402303A	Trunnion Seal Carrier Assembly, 402303-A1
			65	TRW0020206	Cap Screw, 12 Point, 4 used
			66	TRW0032387	Seal, Sector Shaft Dirt and Water
			67	TRWHF54402	Side Cover and Gear Shaft Assembly, HF544001-A2-409
				*17-237	Seal Kit

AC.

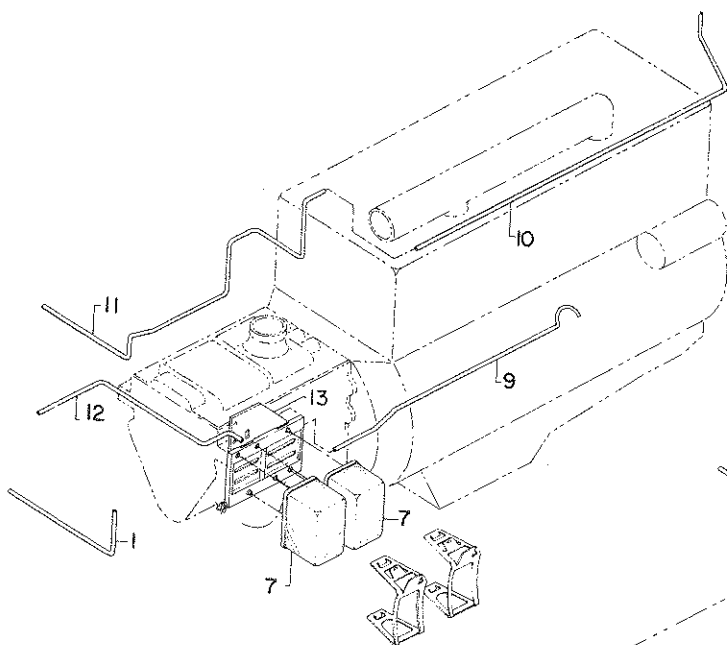


J.D.

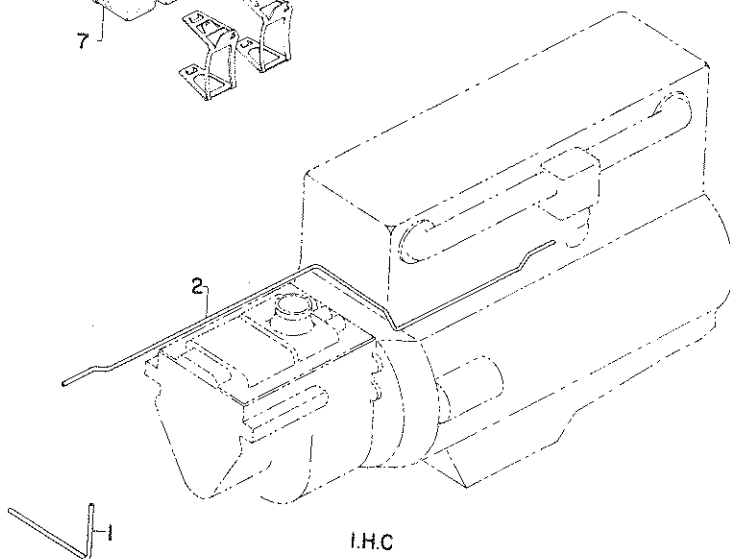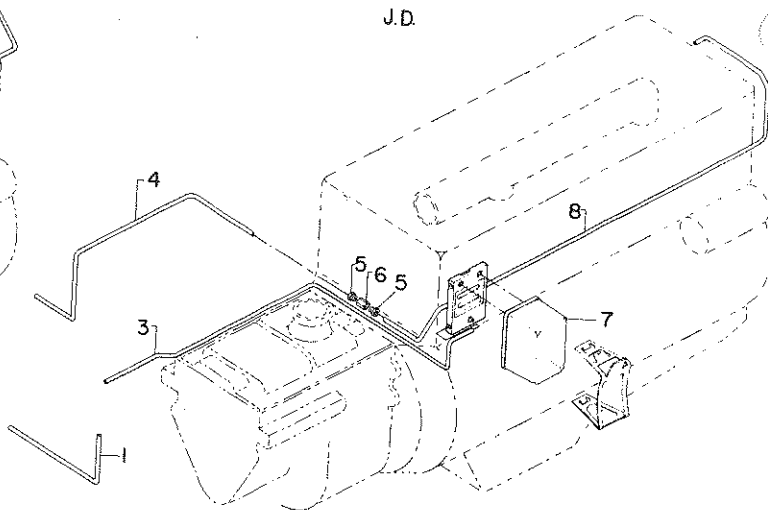

I.H.C

FUEL LINES


REF. NO.	PART NO.	DESCRIPTION
1	01-865	Fuel Line, IHC, JD, AC
2	01-866	Fuel Line, IHC
3	01-867	Fuel Line, JD
4	01-868	Fuel Line, JD
5	01-813	1/4" Inverted Flare Nut, 105" x 4" WH
6	01-814	1/4" Inverted Flare Union, 300" x 4" WH
7	20-213	Fuel Filter, AC, 18786 Roosa Master
	20-214	Water Seperator, AC, 19797 Roosa Master
	20-217	Fuel Filter and Water Seperator, JD, 18667 Roosa Master
8	01-869	Fuel Line, JD
9	01-870	Fuel Line, AC
10	01-871	Fuel Line, AC
11	01-872	Fuel Line, AC
12	01-873	Fuel Line, AC
13	BKT0005769	Fuel Filter Bracket, AC

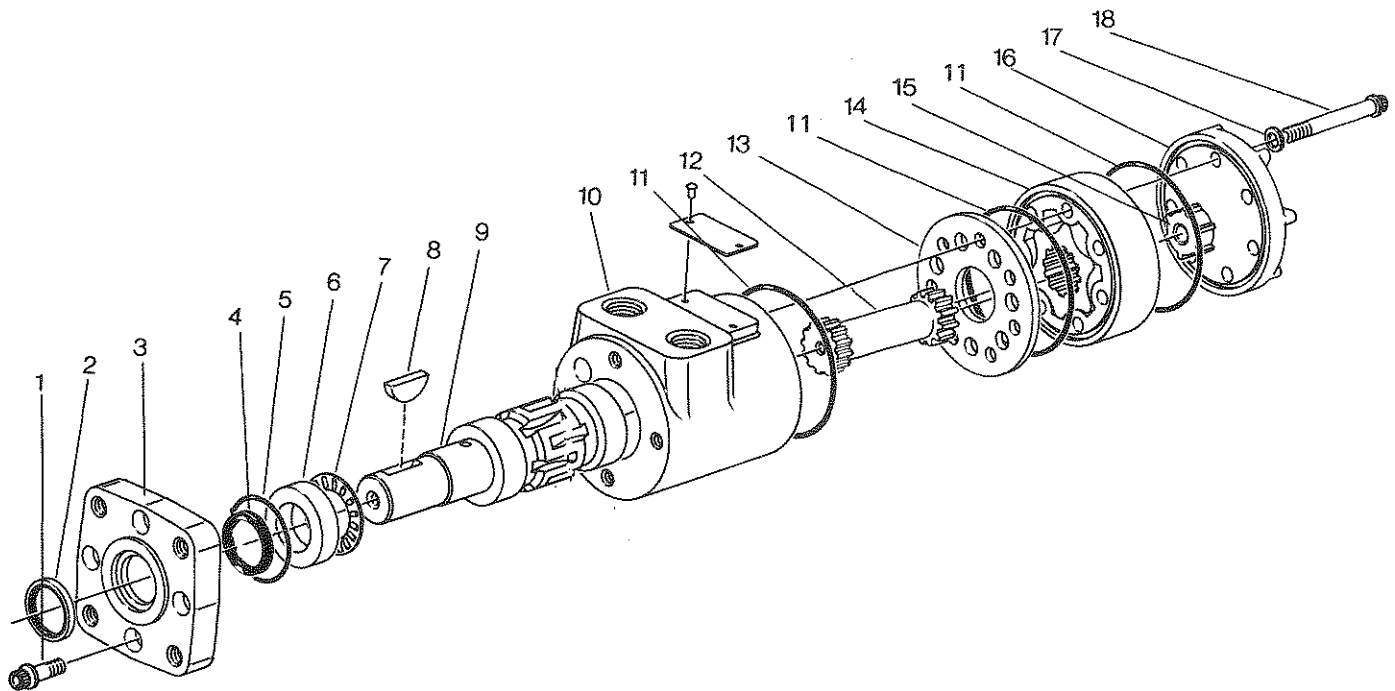

HYDRAULIC MOTOR BREAKDOWN MTR 1002007


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	CHR0005777	5/16" x 7/8" NF Cap Screw	12	CHR0000616	Drive
2	CHR0009055	Seal	13	CHR0007358	Plate, Spacer
3	CHR0007464	Flange, Mounting	14	CHR0007357	Gerotor Set
4	CHR0009057	Seal	15	CHR0006901	Spacer
5	CHR0015048	Seal, "O" Ring	16	CHR0007461	Cap, End
6	CHR0007462	Race, Bearing	17	CHR0006049	Washer, Seal
7	CHR0007537	Bearing, Thrust Needle	18	CHR0005389	5/16" x 2 1/2" NF Cap Screw
8	CHR0014193	Key, Woodruff			
9	CHR0007360*	Shaft, Output			
10	CHR0007359*	Housing			
11	CHR0005776	Seal, "O" Ring			
				CHR0060023	Seal Kit, Includes Ref. 4, 5, 11 and 17

* Sold Only As Matched Set of Housing and Shaft

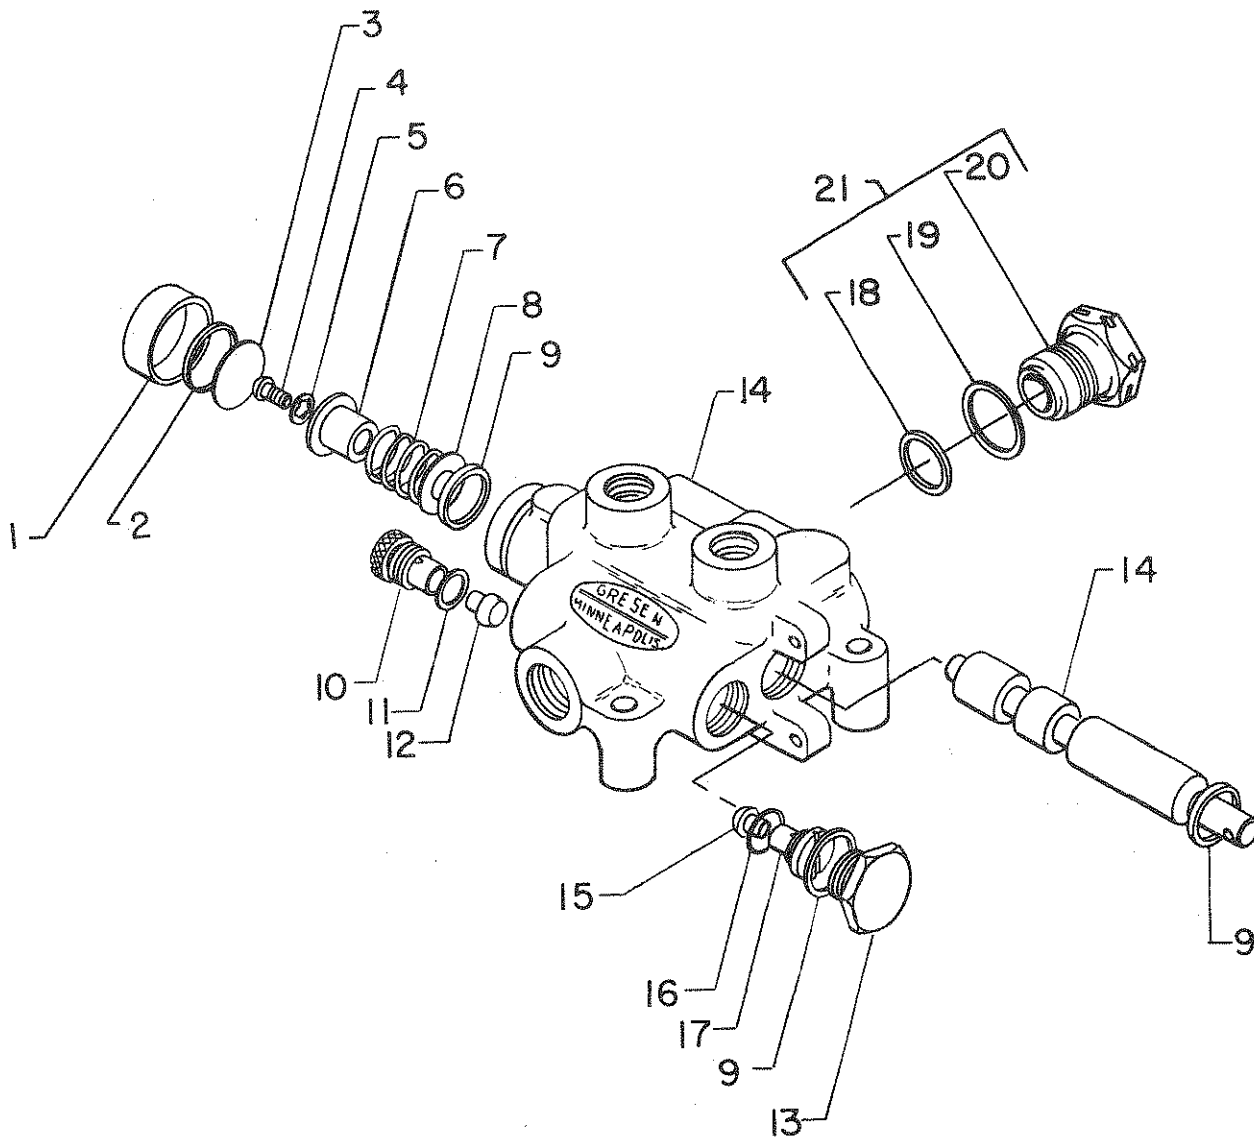


HYDRAULIC CONTROL VALVE BREAKDOWN
01-520
SPYE-3-NR GRESEN

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	GRS0000967	Rubber Bonnet	11	GRS0001141	Check Plug "O" Ring
2	GRS0000914	Stop Disc, Snap Ring	12	GRS0002781	Check Poppet
3	GRS0000912	Stop Disc	13	GRS0000983	Relief Plug Cap
4	GRS0000510	Spring Assembly Bolt	14	GRS2701903	Valve Housing and Spool
5	GRS0002529	Center Spring Lock Washer	15	GRS0002781	Check Poppet
6	GRS000911A	Stop Collar	16	GRS0002706	Relief Valve Seat "O" Ring
7	GRS0000913	Center Spring	17	GRS0002787	Relief Seat Plug, NR
8	GRS0001202	Stop Washer	18	GRS0000954	Seal, Nose
9	GRS0000932	Spool Seal, 3 used	19	GRS0003096	Seal, Sleeve
10	GRS0002783	Check Plug	20	GRS0003147	Power Beyond Sleeve
			21	GRS00K2021	Service Kit, Power Beyond

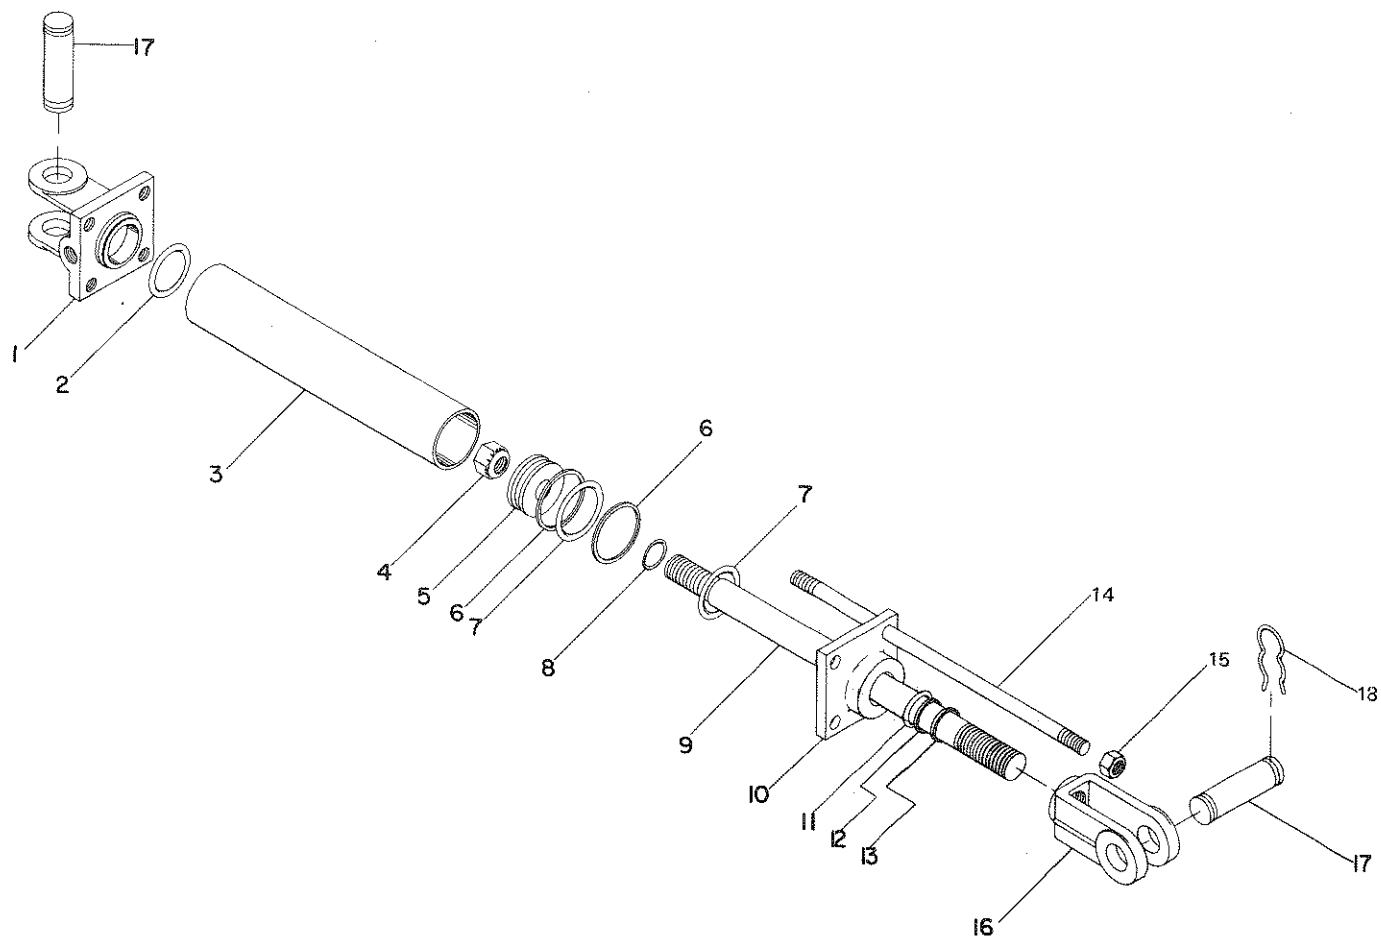


**PRINCE CYLINDER
F 0006519**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	CYL1411003	Butt	11	CYL2405214	B/U Washer
2	CYL2401326	"O" Ring	12	CYL2400214	"O" Ring
3	CYL5110008	Tube	13	CYL2501214	Wiper
4	CYL2200208	Lock Nut	14	CYL1713122	Tie Rod
5	CYL7110004	Piston	15	NCH0007500	3/4" Nut
6	CYL2405326	B/U Washer	16	CYL1000014	Clevis
7	CYL2400326	"O" Ring	17	CYL1904001	Clevis Pin
8	CYL2400018	"O" Ring	18	CYL1904002	Hair Pin Clip
9	CYL1040008	Piston Rod			
10	CYL8110006	Gland			
				F 0006599	Seal Kit for F 0006519 Cylinder

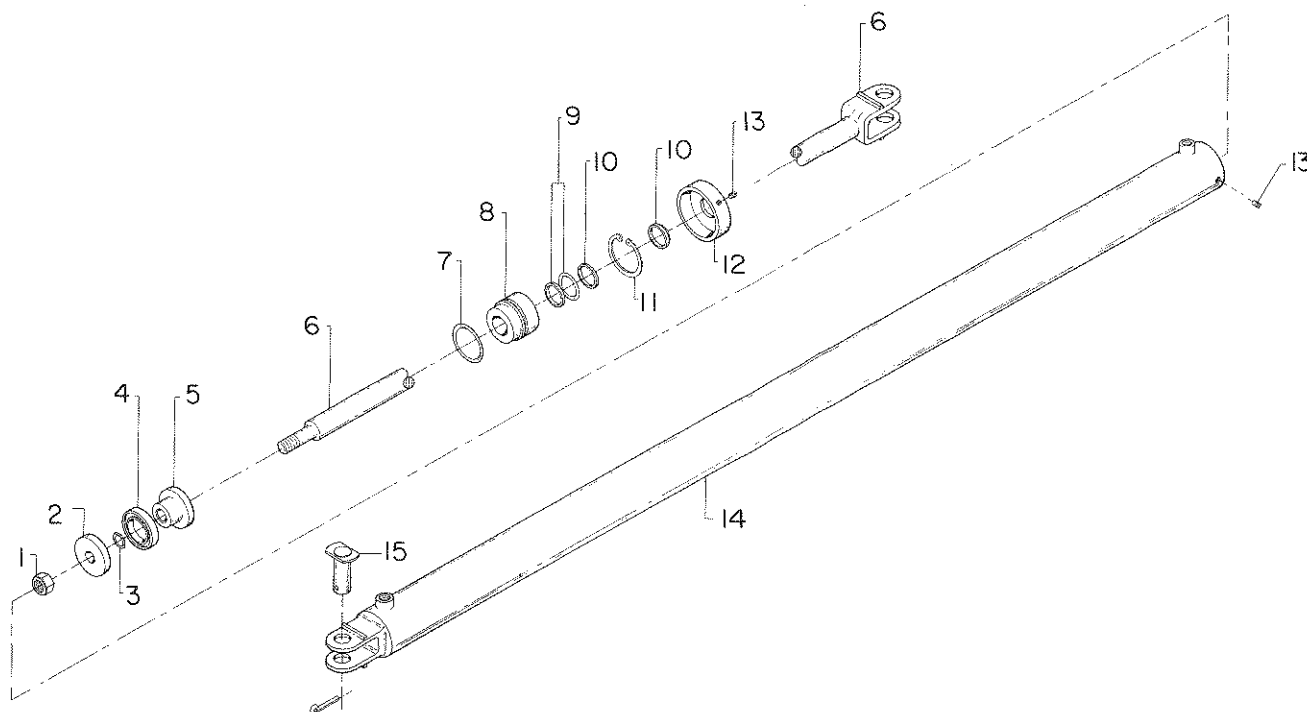


HYPOWER CYLINDER **01-566**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	HYP LC25N	Piston Nut	10	HYP HP25RW	Rod Wiper
2	HYP OU25W	Washer	11	HYP LC25LR	Lock Ring
3	HYP LC25SO	Small "O" Ring	12	HYP LC25RC	Rain Cap, Special
4	HYP OU297	Piston Packing, Sacoma	13	HYP LC25A	Set Screw
5	HYP OU25U	Piston, Special	14	HYPLC2563C	Tube, Special
6	HYPLC2563S	Shaft, Special	15	HYP LC25P	Clevis Pin
7	HYP LC25HO	Head "O" Ring			
8	HYP LC25E	Head, Special, 1 1/4" Rod			
9	HYP LC25US	Shaft Packing			
				HYPSACKL25	Repair Kit, 1 1/4" Rod

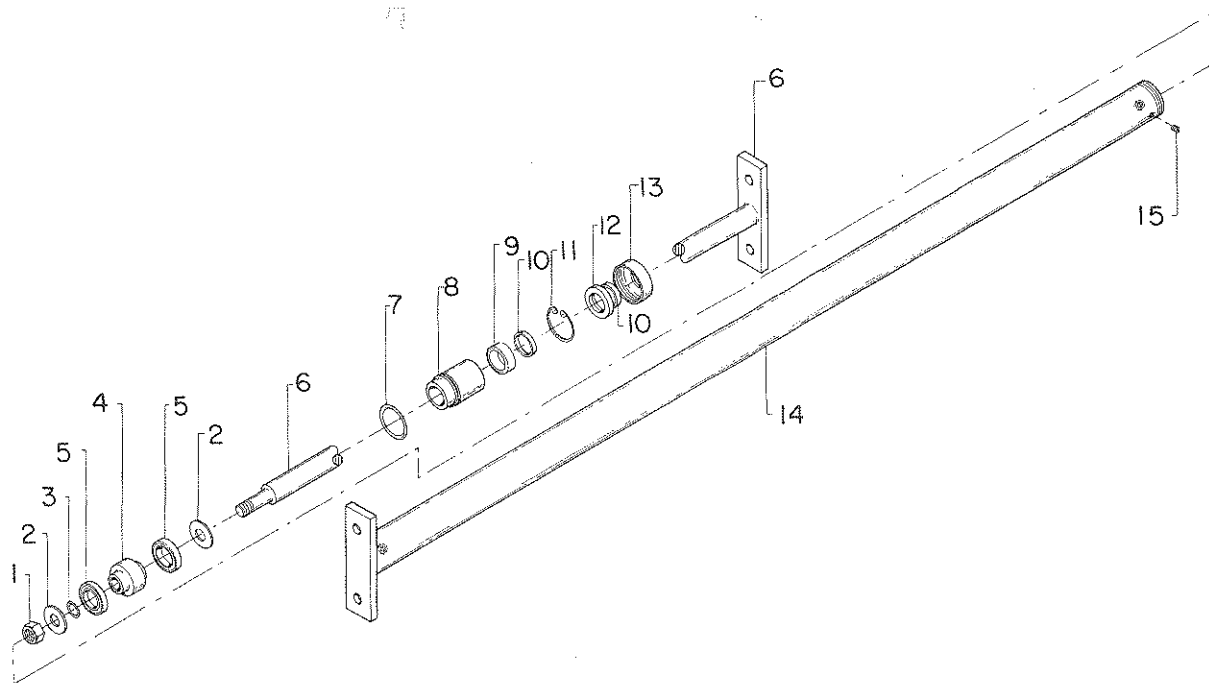

HYPOWER CYLINDER **01-552**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	HYP LC2N	Nut, 3/4"	10	HYP HP25RW	Rod Wiper, 2 used
2	HYP HP2W	Washer	11	HYP LC2LR	Lock Ring
3	HYP LC2SO	Small "O" Ring	12	HYPLC265SP	Spacer
4	HYP HP2V	Piston, Special, 3/4" Bore	13	HYP LC2SC	Steel Cap
5	HYP OU65	Piston Packing, Sacoma, 2 used	14	HYPLC2X65C	Tube, Special
6	HYPLC2X65S	Shaft, Special 1 1/4" Rod	15	HYP LC2A	Set Screw
7	HYP LC2O	Head "O" Ring			
8	HYP LC2E	Head, Special			
9	HYP OU84	Shaft Packing, Sacoma			
				HYPSAC0KL2	Repair Kit

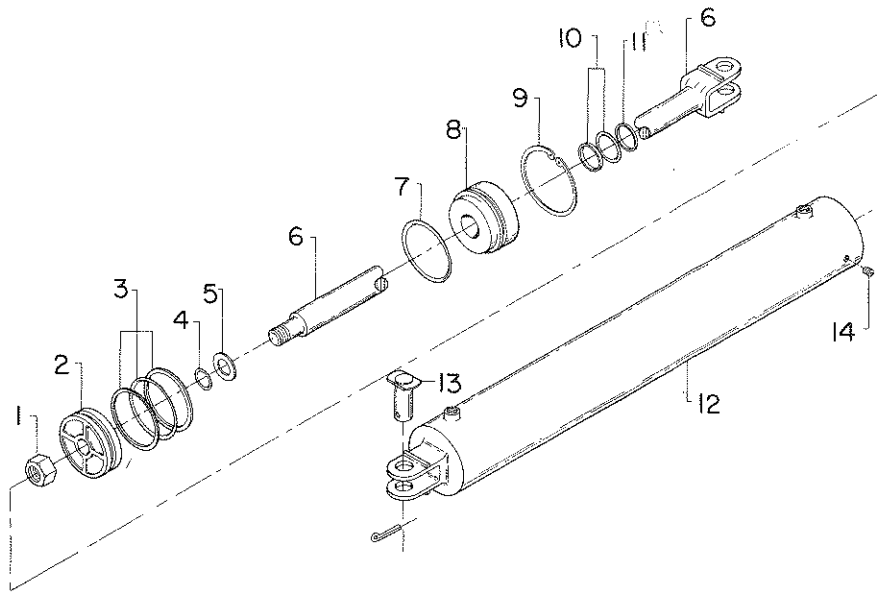


HYPOWER CYLINDER

01-555

REF.	PART	DESCRIPTION
1	HYP LC4N	Nut
2	HYP LC4V	Piston
3	HYP LC4PO	Piston "O" Ring Assembly
4	HYP LC4SO	Small "O" Ring
5	HYP LC4W	Steel Washer
6	HYP LC46S	Shaft
7	HYP LC4O	Head "O" Ring
8	HYP LC4E	Head
9	HYP LC4LR	Lock Ring
10	HYP LC4US	Shaft Packing
11	HYP LC4RW	Rod Wiper
12	HYP LC46C	Tube
13	HYP LC4P	Clevis Pin
14	HYP LC4A	Set Screw


01-560

Seal Kit, KL4

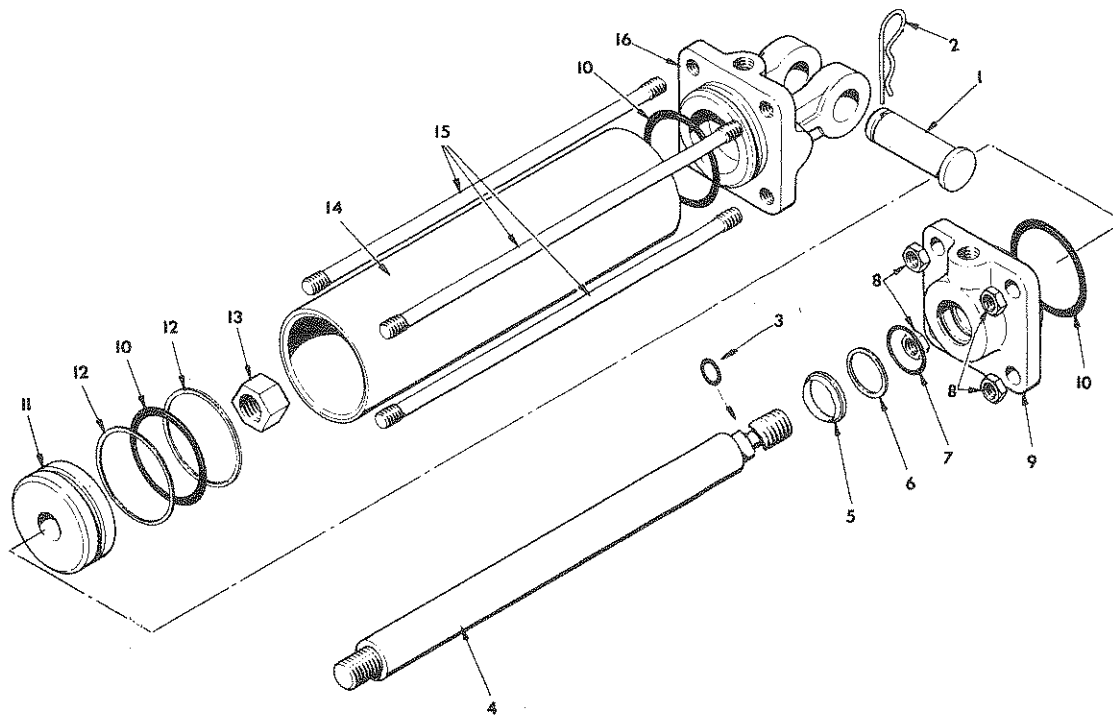


VICTOR CYLINDER 01-569

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	CYL0181106	Pin	11	CYL0412057	Piston
2	CYL0181107	Pin Clip	12	*	Back-up Ring
3	*	"O" Ring	13	NFH0008750	7/8" -14 NF Nut
4	CYL0411088	Rod	14	CYL0410112	Tube
5	*	Rod Wiper	15	CYL0419146	Tie Rod
6	*	Back-up Ring	16	CYL0414208	Bottom
7	*	"O" Ring Rod Packing			
8	NFH0003750	3/8" NF Nut			
9	CYL0414207	Head			
10	*	"O" Ring			
				*01-570	Seal Kit for 01-569 Cylinder

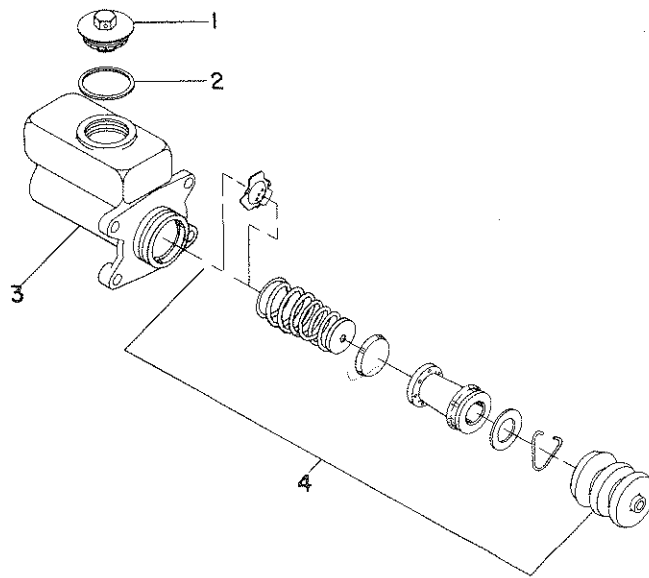

BRAKE CYLINDER


REF. NO.	PART NO.	DESCRIPTION
1	WAG0002162	Cap
2	WAG0002167	Gasket
3	19-157	Brake Master Cylinder Complete
4	WAG0019432	Kit, Includes Spring, Retainer Cup, Piston Plate, Snap Ring and Boot

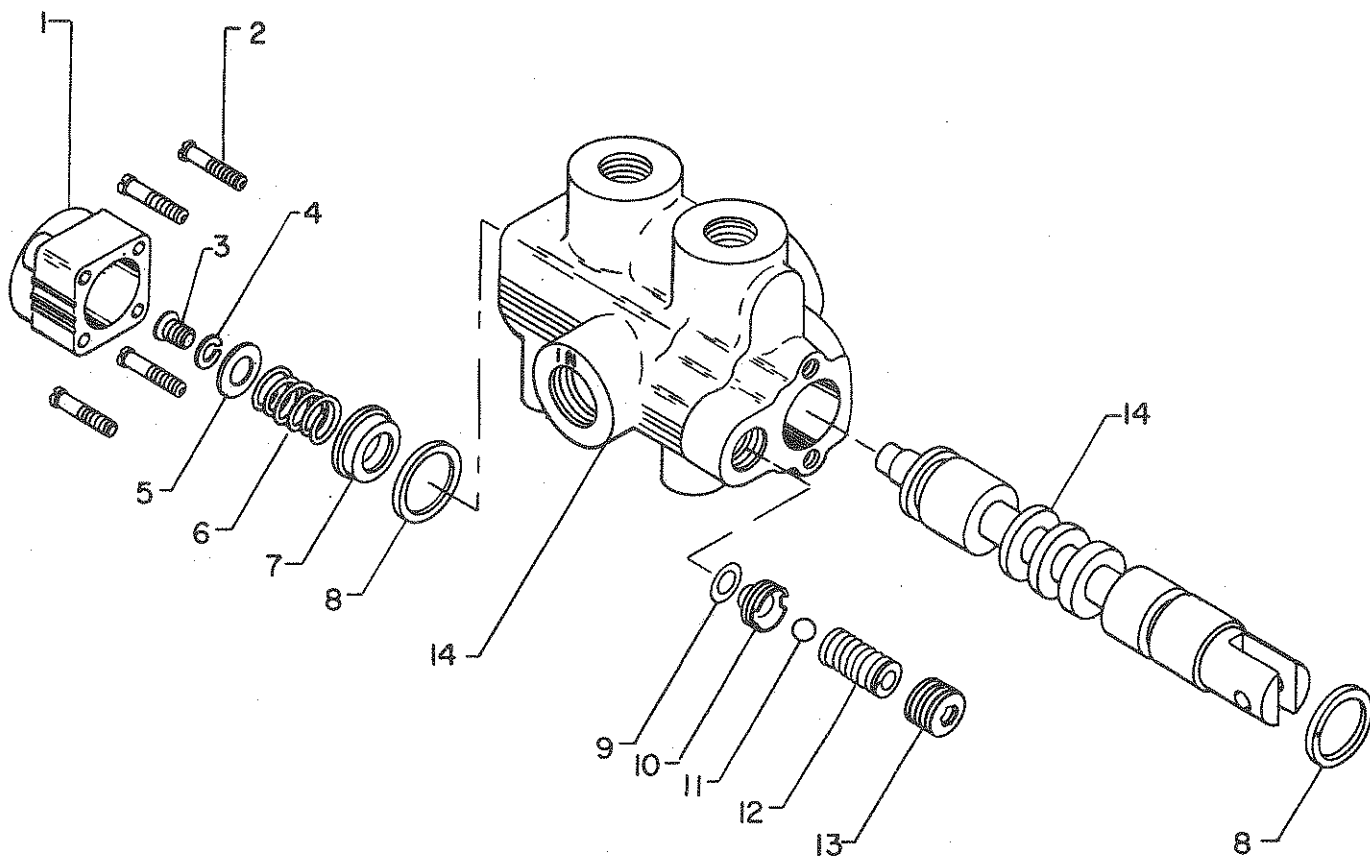

HYDRAULIC CONTROL VALVE BREAKDOWN
01-507 Index Valve
No. 400 Gresen

REF. NO.	PART NO.	DESCRIPTION
1	BON0008271	Bonnet
	GSK0008270	Gasket
2	GRS0000559	Bonnet Cap Screw, 4 used
3	GRS0000510	Spring Assembly Bolt
4	GRS0000564	Assembly Lock Washer
5	GRS0000509	Spring Washer
6	GRS0000557	Centering Spring
7	GRS0000577	Spool Collar
8	GRS0000555	"U" Cup Seal, 2 used
9	GRS0002503	Relief "O" Ring
10	GRS0002502	Relief Seat
11	GRS0002504	Relief Ball, 3/8"
12	GRS0000560	Relief Spring
13	GRS0000073	Relief Plug, 3/8"
14	GRS0575576	Valve Housing & Spool

RELAY BOX WIRING DIAGRAM

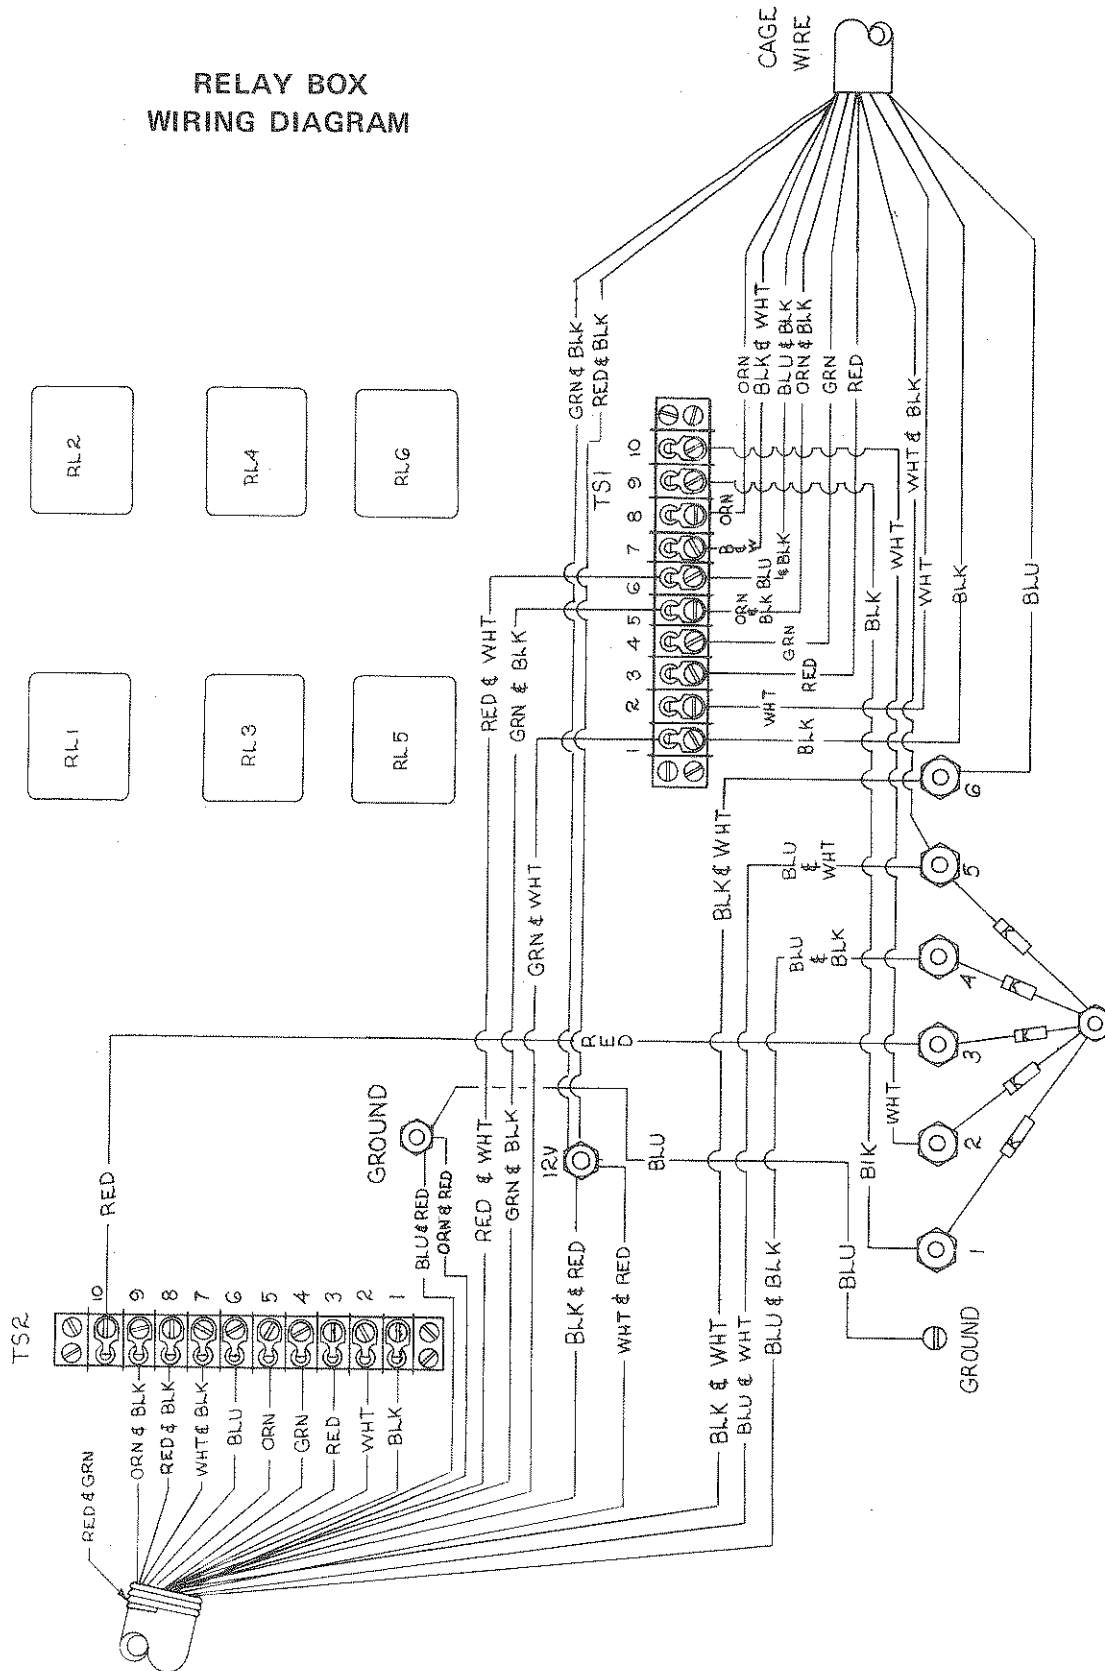



BE CAREFUL

1. KEEP ALL SHIELDS IN PLACE.
2. STOP ENGINE OR MOTOR BEFORE LEAVING OPERATORS POSITION TO ADJUST, LUBRICATE, CLEAN, OR UNCLOG MACHINE, UNLESS OTHERWISE SPECIFICALLY RECOMMENDED IN THE "OPERATOR'S MANUAL."
3. WAIT FOR ALL MOVEMENT TO STOP BEFORE SERVICING MACHINE.
4. KEEP HANDS, FEET, AND CLOTHING AWAY FROM POWER DRIVEN PARTS.
5. KEEP OFF EQUIPMENT UNLESS SEAT OR PLATFORM FOR OPERATION AND OBSERVATION IS PROVIDED.
6. KEEP ALL OTHERS OFF.
7. USE APPROPRIATE SIGNS OR WARNING LIGHTS WHEN OPERATING ON HIGHWAYS.
8. MAKE CERTAIN EVERYONE IS CLEAR OF MACHINE BEFORE STARTING ENGINE, MOTOR OR OPERATION.

INTENTIONALLY BLANK