


Freeman Automatic Pick-up Baler 1971 PARTS LIST

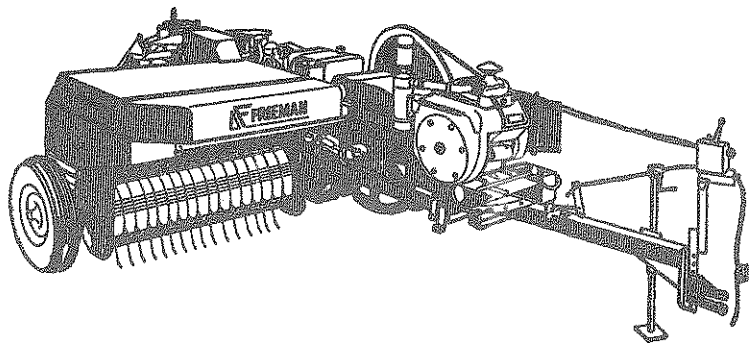


PULL TYPE

Model 330

manufactured and distributed by

J. A. FREEMAN & SON, INC.

PORTLAND, OREGON




1971

PARTS LIST

for

Model 330

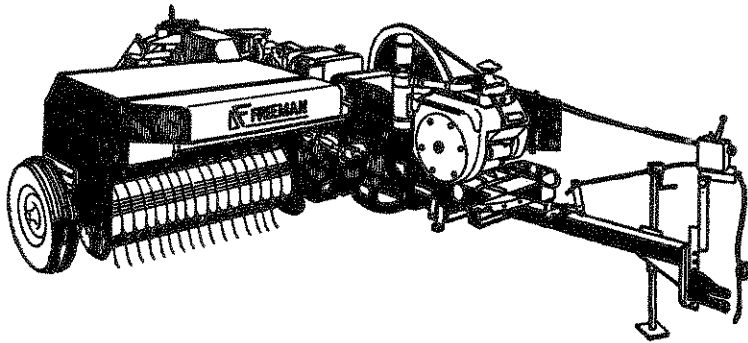

POLICY

1. It is the policy of J. A. Freeman & Son, Inc. to constantly improve its products whenever it is practical to do so.
2. J. A. Freeman & Son, Inc. reserve the right to redesign or change its equipment or component parts thereof without incurring any obligation to install or furnish such changes on equipment previously delivered.
3. Unauthorized changes or additions to equipment manufactured by J. A. Freeman & Son, Inc. relieves the company of further responsibility for warranted operation and breakage replacement.

INSTRUCTIONS FOR ORDERING PARTS

1. Part number and description of part.
 - (a) Parts should NOT be ordered from illustration only.
 - (b) Parts should NOT be ordered from numbers on castings.
2. Order by baler serial number and model.
3. Much delay and confusion can be avoided if parts numbers are arranged in sequence on all orders.
4. State how to ship: whether by truck, stage, mail, rail, express or freight, air express or air freight.
5. Claims for shortage or error in handling of an order for parts must be made upon receipt of goods.
6. Address all orders for parts as follows:

J. A. Freeman & Son
Parts Department,
2034 N. W. 27th Avenue,
Portland, Oregon 97210

Place serial number of machine here for your convenience:

Baler Serial No.

Motor Serial No.

Left and right of machine are understood to mean from a position facing in the direction of baler travel.

Permission must be secured before any parts are returned for credit. When parts are returned, the freight must be prepaid or arrangements made so that they can be brought in by our trucks.

"NOTE"

Parts are identified by reference numbers. See parts list for correct part numbers. DO NOT USE REFERENCE NUMBERS AS PART NUMBERS.

Table of Contents

Drawbar and engine mount	1
Flywheel and pinion shaft assembly	2
Bull gear assembly	3
Plunger connecting rod assembly	4
Model 330 plunger	5, 6
Bale chamber	7
Knotter trip assembly	8
Axle assembly	9
Pickup feeder house	10
Pickup cylinder assembly	11
Pickup drive	12
Feed arm drive	13
Feed arm and feed fork	14
Feed arm pivot shaft	15
Knotter brake assembly	16
Wire knotter	17, 18
Wire box and guides	19
Needles and needle yoke	20
Twine knotter, clutch and mounts	21, 22
Twine fingers, drive	23
Twine box & twine guides	24
Bale chute and weight indicator	25
Tension control ram assembly	26
Tension control bypass assembly	27
Tension control pump assembly	28
Drawbar and P.T.O. Mount	29
P.T.O. clutch	30
P.T.O. rear drive line	31
P.T.O. front drive line	32
P.T.O. gear box	33
Throttle and tension control stand	34
Fuel tank, battery and lights	35
Multi luber centralized lubrication system	36
Extra Items	37

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 7	 12	F 761	 7	F 1063	 30	F 1511	 37
F 8A	 12	F 765	 2	F 1071	 13	F 1512	 6
F 9A	 3	F 770	 37	F 1076	 33	F 1513	 8
F 34	 2	F 772	 6	F 1078	 33	F 1514	 8
F 55	 4	F 773	 6	F 1083	 33	F 1515	 8
F 72	 2	F 774	 6	F 1084	 33	F 1517	.. 8,20,23
F 73	 2	F 775	 6	F 1085	 33	F 1527	 4
F 83	 12	F 776	 6	F 1087	 33	F 1531	 8
F 96	 11	F 777	 6, 37	F 1093	 33	F 1537	 6
F 98	 11	F 778	 4, 6	F 1095	 33	F 1548	 20
F 99	 22	F 779	 6	F 1106	 32	F 1549	 20
F 100	 11	F 780	 6	F 1107	 32	F 1550	 20
F 101	 11	F 781	 6	F 1108	 32	F 1551	 20
F 122	 12	F 800	 37	F 1129	 34	F 1552	 20
F 126	 12	F 802	 13	F 1130	 34	F 1556	 14
F 129	 12	F 817	 2	F 1131	 34	F 1557	 14
F 172	.. 17, 20	F 822	 14	F 1132	 2	F 1558	 14
F 183	.. 1, 29	F 837	 7	F 1134	 4	F 1559	 14
F 188	 7	F 840	 12	F 1151	 7	F 1561	 14
F 212	 9	F 853	 3, 10	F 1153	 7	F 1563	 14
F 213	 9	F 856	.. 19,20,24	F 1189	 14	F 1568	 8
F 215	 9	F 857	.. 19,20,24	F 1193	 14	F 1572	.. 8,16,23
F 220	 7	F 862	 35	F 1195	 14	F 1574	 20
F 221	 2	F 874	 37	F 1221	 30	F 1576	 18
F 225	 3	F 878	 1	F 1222	 30	F 1579	 8
F 226	 3	F 883	 7	F 1226	 11	F 1589	 7
F 227	 6	F 886	 2	F 1235	 14	F 1601	 33
F 246	7,16, 18	F 889	.. 31, 32	F 1239	 15	F 1603	 14
F 268	 25	F 890	 32	F 1244	 15	F 1605	 1
F 278	 8	F 891	 31	F 1245	 15	F 1607	 1
F 281	 14	F 892	 31	F 1246	 15	F 1609	 6
F 298	 6	F 893	 35	F 1247	 15	F 1611	 20
F 299	 6	F 933	 4	F 1248	 15	F 1613	 2
F 304	 37	F 942	 37	F 1250	 15	F 1614	 2
F 312	 3	F 946	 19	F 1251	 15	F 1617	 8
F 318	 12	F 967	 2	F 1256	 3	F 1618	 8
F 354	 13	F 967A	 2	F 1259	 13	F 1619	 8
F 440	8, 18, 29	F 967B	 2	F 1260	 13	F 1620	.. 18, 22
	.. 1, 7	F 979	 6	F 1261	 13	F 1622	.. 18, 22
F 452	 23	F 985	 25	F 1267	 3	F 1623	.. 18, 22
F 480	 13	F 986	 6	F 1306	 13	F 1629	 6
F 481	 13	F 987	 25	F 1385	 13	F 1632	 8
F 482	 13	F 988	 25	F 1386	 13	F 1633	.. 18, 22
F 484	 13	F 990	 25	F 1392	 7	F 1634	 14
F 485	 13	F 993	 25	F 1407	 33	F 1635	 14
F 486	 13	F 994	 25	F 1409	 33	F 1636	 6
F 497	 7	F 995	 25	F 1410	 33	F 1638	 25
F 498	 2	F 997	 25	F 1411	 33	F 1639	 25
F 525	 24	F 998	 25	F 1412	30, 33	F 1643	 14
F 600	.. 7, 9	F 999	 25	F 1414	 33	F 1648	 14
F 635	 37	F 1002	 34	F 1415	 33	F 1649	 14
F 636	 37	F 1003	 34	F 1416	 33	F 1658	 34
F 637	 37	F 1004	 34	F 1417	 33	F 1661	.. 3, 15
F 638	 37	F 1005	 34	F 1418	 33	F 1662	 7
F 649	 37	F 1006	 34	F 1419	 33	F 1673	 14
F 657	 22	F 1007	 34	F 1420	 33	F 1675	 37
F 658	 22	F 1008	 34	F 1421	 33	F 1676	 37
F 659	 22	F 1011	 34	F 1427	 15	F 1677	 37
F 664	 37	F 1012	 34	F 1428	 15	F 1680	 22
F 698	 2	F 1013	 34	F 1433	 34	F 1686	 8
F 734	 37	F 1014	 34	F 1436	 4	F 1687	 8
F 735	 37	F 1015	 34	F 1441	.. 4, 6	F 1688	 35
F 736	 37	F 1017	 34	F 1450	 13	F 1689	 35
F 751	 6	F 1018	 34	F 1451	 34	F 1691	 35
F 753	 3	F 1019	 34	F 1452	 34	F 1697	 37
F 755	.. 18, 22	F 1020	 34	F 1497	 35	F 1699	 37
F 759	 7	F 1025	 34	F 1499	 35	F 1700	 22
F 760	 7	F 1026	 34	F 1505	 35	F 1701	 20

INDEX

II


Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 1702	 20	F 1827	 32	F 7033	 3	F 7299	 10
F 1720	 33	F 1828	 32	F 7034	 3	F 7312	 17
F 1721	 2	F 1829	 29	F 7035	 3	F 7313	 17
F 1728	 31	F 1830	 29	F 7036	 3	F 7318	 17
F 1736	 35	F 1830	 29	F 7037	 3	F 7329	 17
F 1760	 36	F 4014	.. 19, 20	F 7038	 3	F 7330	 17
F 1761	 36	F 4015	.. 19, 20	F 7039	 3	F 7337	 2
F 1762	 36	F 4016	 20	F 7040	 3	F 7345	 18
F 1763	 36	F 4024	 17	F 7046	 35	F 7346	 18
F 1764	 36	F 4030	 18	F 7049	 35	F 7349	 18
F 1765	 36	F 4046	 17	F 7055	 7	F 7354	 3
F 1766	 36	F 4050	 14	F 7062	 17	F 7355	 11
F 1767	 36	F 4067	.. 19, 25	F 7063	12, 18, 22	F 7356	 11
F 1768	 36	F 4068	.. 19, 25	F 7064	 17	F 7358	 3
F 1769	 36	F 4069	 19	F 7065	 17	F 7363	 29
F 1770	 36	F 4104	 22	F 7069	 18	F 7382	 11
F 1771	 36	F 4115	.. 18, 22	F 7072	 18	F 7391	 37
F 1772	 36	F 4133	.. 18, 22	F 7075	 17	F 7394	 10
F 1773	 36	F 4134	.. 18, 22	F 7076	.. 17, 18	F 7397	 7
F 1774	 36	F 4135	.. 18, 22	F 7077	 17	F 7418	 4
F 1776	 36	F 4136	.. 18, 22	F 7078	 17	F 7430	 1
F 1777	 35	F 4137	 18	F 7079	 17	F 7431	 18
F 1778	 33	F 4138	 18	F 7081	 17	F 7432	 18
F 1779	 33	F 4150	 20	F 7084	 17	F 7437	 2
F 1780	.. 30, 33	F 4159	.. 18, 22	F 7085	 17	F 7438	 3
F 1782	 36	F 4160	.. 18, 22	F 7086	 17	F 7439	 6
F 1783	 36	F 4161	.. 18, 22	F 7087	 17	F 7448	 16
F 1784	 36	F 4163	 19	F 7089	 17	F 7449	 16
F 1787	 29	F 4190	 19	F 7121	 7	F 7450	 16
F 1788	 29	F 4191	 19	F 7127	 10	F 7451	 16
F 1789	 29	F 4193	 37	F 7142	 10	F 7452	 16
F 1790	 30	F 4203	 19	F 7143	 10	F 7453	 16
F 1791	 30	F 4204	 19	F 7145	 10	F 7454	 16
F 1792	 30	F 4205	 19	F 7146	 11	F 7456	 18
F 1793	 30	F 4210	 19	F 7148	 11	F 7461	 18
F 1794	 30	F 4222	 19	F 7149	 11	F 7462	 3
F 1795	 30	F 4223	 19	F 7151	 11	F 7463	 3
F 1796	 30	F 4224	 19	F 7152	 10	F 7472	 10
F 1797	 30	F 4225	 19	F 7154	 11	F 7482	 10
F 1798	 30	F 5080	 34	F 7156	 11	F 7488	 2
F 1799	 30	F 5159	 19	F 7157	 10	F 7507	 7
F 1800	 30	F 5232	 35	F 7158	 10	F 7515	 19
F 1801	 31	F 5233	 35	F 7159	 10		
F 1802	 31	F 5445	 15	F 7160	 10		
F 1803	 31	F 5446	 15	F 7163	 10		
F 1804	 31	F 5499	 35	F 7164	 10		
F 1805	 31	F 5545	 34	F 7166	 10		
F 1806	 31	F 5554	 34	F 7176	 11		
F 1807	 31	F 5559	 34	F 7177	 11		
F 1808	 31	F 5842	 35	F 7180	 11		
F 1809	 31	F 5922	 37	F 7186	 11		
F 1810	 31	F 5941	 35	F 7187	 11		
F 1811	 31	F 6317	 24	F 7190	 11		
F 1812	 32	F 6318	 24	F 7193	 11		
F 1813	 31	F 7000	 2	F 7194	 1, 11		
F 1814	 31	F 7001	 1	F 7210	 2		
F 1815	 31	F 7002	.. 1, 29	F 7212	 35		
F 1816	 31	F 7003	.. 1, 29	F 7213	 29		
F 1817	 31	F 7004	.. 1, 29	F 7227	.. 8, 17		
F 1818	 31	F 7005	.. 1, 29	F 7228	 35		
F 1819	 31	F 7006	.. 1, 29	F 7236	 25		
F 1820	 31	F 7007	.. 1, 29	F 7239	.. 3, 14		
F 1821	 31	F 7010	.. 1, 29	F 7247	 18		
F 1822	 31	F 7014	 2	F 7248	 17		
F 1823	 32	F 7015	 2	F 7257	 18		
F 1824	 32	F 7016	 2	F 7275	 14		
F 1825	 32	F 7031	 3	F 7276	 14		
F 1826	 32	F 7032	 3	F 7283	.. 1, 29		

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 7517	10	F 7612	13	F 7765	6	F 7937	24
F 7519	18, 22	F 7617	37	F 7766	6	F 7939	24
F 7521	20	F 7624	25	F 7767	6	F 7940	22
F 7522	20	F 7626	37	F 7789	10	F 7942	22
F 7523	20	F 7627	3	F 7792	17	F 7943	22
F 7524	20	F 7629	3	F 7793	17	F 7947	22
F 7526	20	F 7631	3	F 7794	17	F 7948	22
F 7527	20	F 7633	10	F 7795	1, 29	F 7949	22
F 7528	16	F 7634	10	F 7796	17	F 7953	22
F 7529	14	F 7635	10	F 7797	7	F 7956	23
F 7532	14	F 7637	19	F 7798	7	F 7957	23
F 7533	14	F 7638	19	F 7799	1	F 7958	23
F 7534	14	F 7639	19	F 7800	1	F 7959	23
F 7535	12	F 7640	19	F 7812	6	F 7960	23
F 7537	1	F 7641	19	F 7813	6	F 7961	6
F 7538	1, 29	F 7642	19	F 7816	6	F 7962	6
F 7539	1	F 7643	19	F 7818	6	F 7963	6
F 7540	1	F 7644	19	F 7819	6	F 7964	6
F 7541	1, 24	F 7645	19	F 7822	6	F 7966	14
F 7542	4	F 7651	4	F 7823	6	F 7967	14
F 7543	4	F 7652	20	F 7824	6	F 7968	14
F 7544	4	F 7653	4	F 7825	6	F 7969	14
F 7545	4	F 7654	10	F 7826	6	F 7970	14
F 7546	12	F 7655	25	F 7827	7	F 7971	14
F 7547	20	F 7656	25	F 7828	7	F 7972	20
F 7548	3	F 7657	25	F 7829	12	F 7973	20, 24
F 7550	3	F 7658	25	F 7845	20	F 7976	22
F 7551	10	F 7659	25	F 7848	29	F 7977	22
F 7552	20	F 7660	14	F 7849	29	F 7978	22
F 7554	20	F 7661	25	F 7859	22	F 7980	18
F 7555	19, 24	F 7668	7	F 7860	22	F 7985	24
F 7556	19, 24	F 7671	36	F 7861	22	F 7986	22
F 7557	19	F 7673	37	F 7867	22	F 7987	18, 22
F 7559	16	F 7676	37	F 7868	22	F 7988	22
F 7560	16	F 7677	37	F 7869	22	F 7989	9
F 7561	16	F 7682	29	F 7870	22	F 7990	9
F 7565	1	F 7699	2	F 7871	22	F 7991	9
F 7566	1	F 7704	2	F 7872	22	F 7992	9
F 7567	1	F 7705	19	F 7873	22	F 7993	9
F 7568	20	F 7706	12	F 7874	22	F 7994	9
F 7569	20	F 7707	1	F 7875	22	F 7995	9
F 7570	18	F 7711	20	F 7876	22	F 7996	9
F 7571	18	F 7713	10	F 7882	22	F 7997	9
F 7572	11	F 7714	10	F 7883	22	F 7998	9
F 7573	11	F 7721	37	F 7884	22	F 7999	9
F 7577	14	F 7722	37	F 7889	24	F 8000	9
F 7578	13	F 7723	37	F 7890	24	F 8001	9
F 7579	10	F 7725	29	F 7891	24	F 8002	9
F 7585	16	F 7727	37	F 7892	22	F 8003	9
F 7586	16	F 7729	37	F 7893	22	F 8004	9
F 7587	16	F 7730	11	F 7898	24	F 8005	9
F 7588	20	F 7731	11	F 7903	20	F 8006	9
F 7590	1	F 7732	11	F 7904	16, 22	F 8007	9
F 7591	1	F 7734	11	F 7911	7	F 8008	9
F 7592	1	F 7735	6, 37	F 7914	4	F 8009	9
F 7597	11	F 7737	2	F 7916	4	F 8010	9
F 7598	11	F 7741	11	F 7917	4	F 8011	9
F 7599	11	F 7742	35	F 7925	4	F 8012	9
F 7600	25	F 7743	35	F 7927	24	F 8013	9
F 7603	13	F 7746	7	F 7928	24	F 8014	9
F 7604	14	F 7750	9	F 7929	24	F 8015	9
F 7605	14	F 7756	9	F 7930	24	F 8016	9
F 7606	14	F 7757	9	F 7931	24	F 8018	9
F 7607	14	F 7758	9	F 7932	24	F 8019	9
F 7608	19	F 7760	11	F 7933	24	F 8020	9
F 7609	37	F 7762	6	F 7934	24	F 8021	9
F 7610	14	F 7763	6	F 7935	24	F 8022	8
F 7611	4	F 7764	6	F 7936	24	F 8023	8

INDEX


IV

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 8024	13	F 8081	4	FT 61	27	FT 211	27
F 8025	13	F 8082	6	FT 62	27	FT 213	27
F 8026	13	F 8083	7	FT 63	27	FT 500	28
F 8027	13	F 8084	7	FT 67	27	FT 503	28
F 8028	9	F 8085	7	FT 68	27	FT 504	28
F 8029	9	F 8086	7	FT 72	27	FT 505	28
F 8030	9	F 8087	7	FT 73	26	FT 506	28
F 8031	22	F 8088	7	FT 74	26,27,37	FT 507	28
F 8032	22	F 8089	7	FT 75	26	FT 508	28
F 8033	23	F 8090	12	FT 82	28	FT 509	28
F 8049	22	F 8091	12	FT 87	27	FT 510	28
F 8050	22	F 8092	12	FT 101	28	FT 511	28
F 8051	22	F 8093	22	FT 107	26,27,28	FT 512	28
F 8052	22	F 8094	22	FT 113	28	FT 513	28
F 8053	22	F 8095	23	FT 114	28	FT 514	28
F 8054	22	F 8096	12	FT 123	27	FT 517	28
F 8055	4	F 8097	12	FT 136	26, 27	FT 518	28
F 8056	6	F 8098	12	FT 137	26	FT 519	28
F 8057	6	F 8102	11	FT 150	27, 28	FT 521	28
F 8058	6	F 8103	11	FT 157	2, 28	FT 523	28
F 8059	35	F 8104	7	FT 163	26	FT 524	28
F 8060	35	F 8105	7	FT 177	27	FT 525	28
F 8061	35	F 8111	7	FT 178	27	FT 527	28
F 8062	35	F 8112	7	FT 179	27	FT 528	28
F 8063	35	FT 10	26	FT 181	26	FT 529	28
F 8064	24	FT 11	26	FT 183	26	FT 530	28
F 8067	35	FT 12	26	FT 184	27	FT 533	28
F 8068	22	FT 13	26	FT 185	27	FT 534	28
F 8069	22	FT 14	26	FT 187	27, 28	FT 535	28
F 8070	22	FT 15	26	FT 188	27	FT 536	28
F 8071	22	FT 16	26	FT 191	27, 28	FT 537	28
F 8072	9	FT 18	26, 28	FT 192	27	FT 538	28
F 8075	4	FT 19	26	FT 193	27, 28	FT 539	28
F 8076	4	FT 50	27	FT 194	27	FT 541	28
F 8077	4	FT 53	27	FT 197	28	FT 542	28
F 8078	4	FT 54	27	FT 198	26		
F 8079	4	FT 55	27	FT 209	27		
F 8080	4	FT 58	27	FT 210	27		

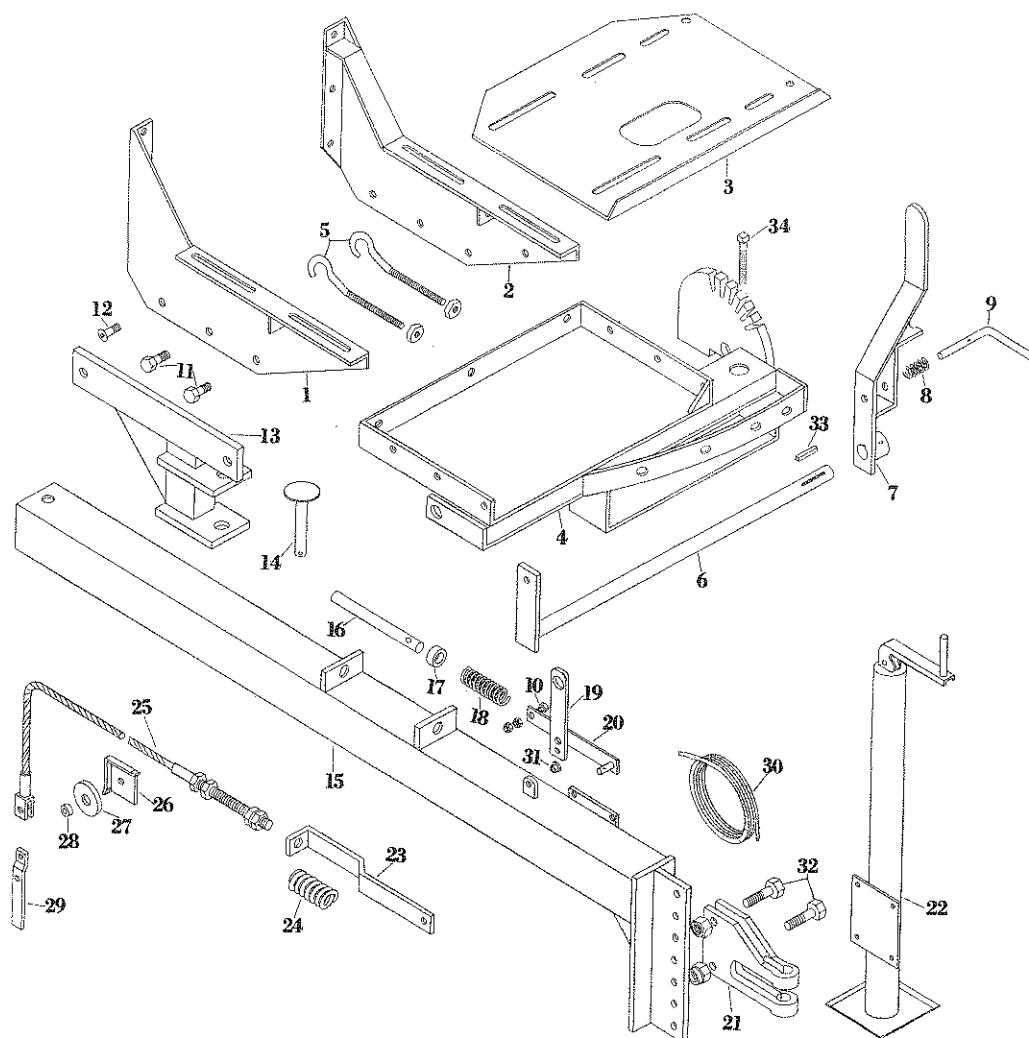


DRAWBAR AND ENGINE MOUNT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7799	Engine mount, R.H.	20	F 7795	Link, drawbar locking pin
2	F 7800	Engine mount, L.H.	21	F 183	Front end hitch
3	F 7707	Engine base plate	22	F 7430	Front end jack complete for engine balers
4	F 7537	Hitch base plate with pickup quadrant		F 878	Jack handle assembly
5	F 7010	Engine adjusting bolt (2 Used)		F 1605	Ram only for jack
6	F 7538	Pickup lift lever cross rod		F 1607	Thrust bearing for jack
7	F 7539	Pickup lift lever	23	F 7567	Cable connecting link for cushion spring
8	F 7541	Spring for F 7540 pin		F 7566	Cushion spring (pickup cable)
9	F 7540	Pickup lift lever adjusting pin	24	F 7565	Pickup lift cable with ends
10		1/2" x 2" N.C. Cap screw	25	F 7590	Sheave clip, pickup lift roller
11		1/2" x 1-1/4" N.F. Cap screw	26	F 7591	Roller for pickup lift
12		1/2" x 1-1/4" Button head bolt	27	F 7592	Bushing for F 7591 roller
13	F 7007	Pivot pin bracket	28	F 7194	Pickup lift bracket
14	F 7006	Drawbar pivot pin	29	F 7005	Rope, drawbar pin, 9'
15	F 7001	Drawbar for engine baler	30	F 440	Ferrule for F 7283 lever
16	F 7002	Drawbar locking pin	31		5/8" x 2-1/2" N.C. Cap screw
17	F 7004	Set collar, drawbar locking pin	32		1/4" x 1/4" x 2-1/2" Key
18	F 7003	Spring, drawbar locking pin	33		1/2" x 4" Square head set screw
19	F 7283	Actuating lever, drawbar locking pin	34		

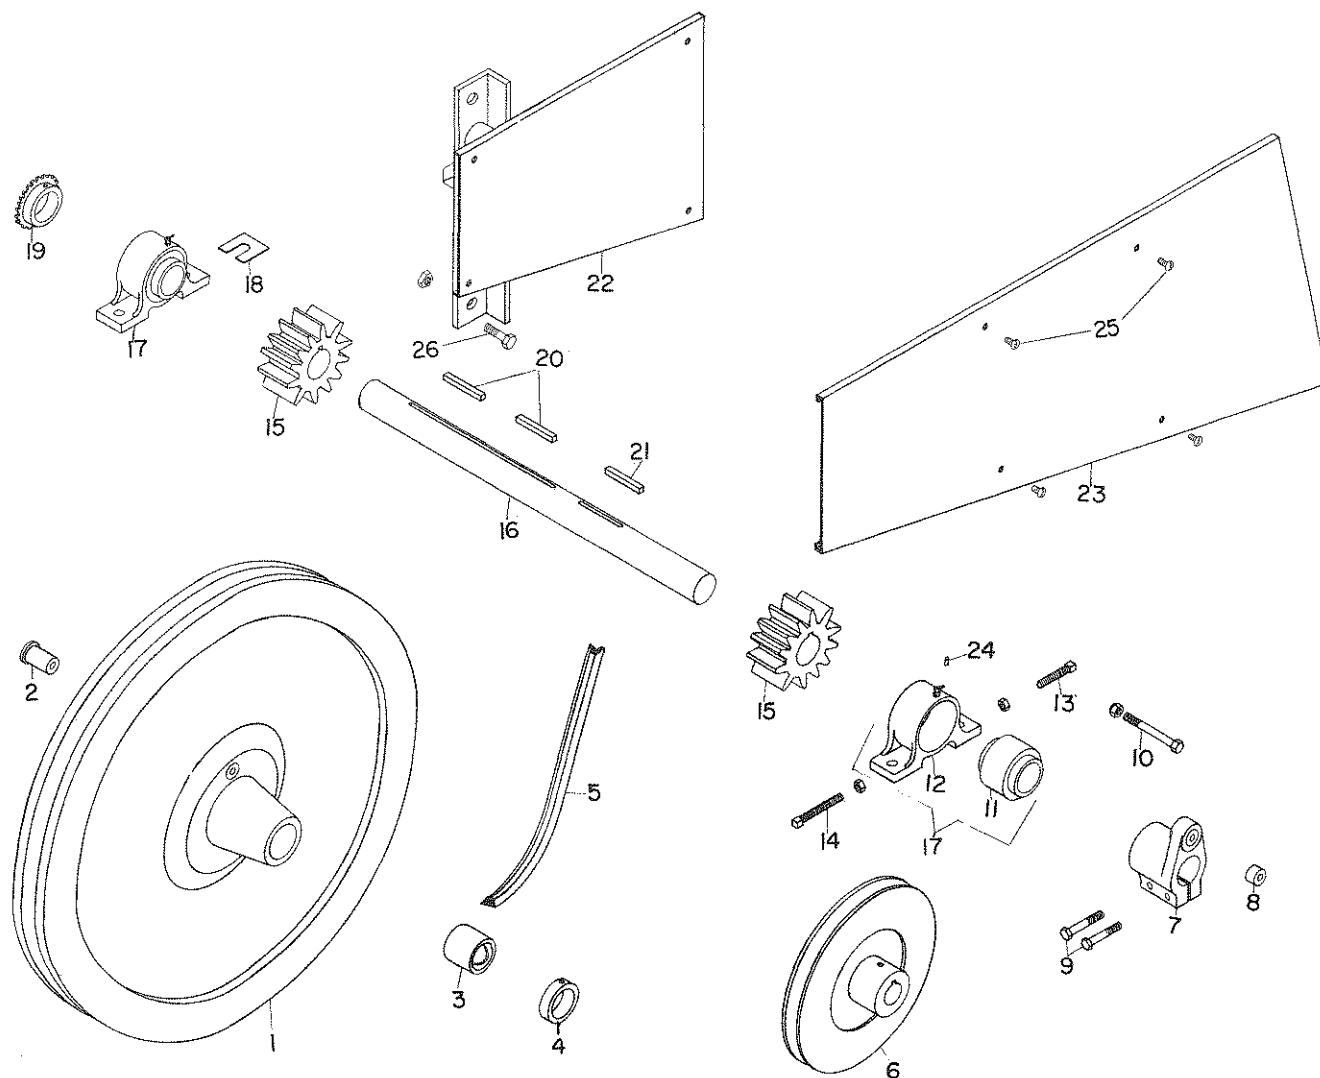


FLYWHEEL AND PINION SHAFT ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7704	Flywheel with bushings, motor drive	11	F 698	Bearing insert for F 765 cage
	F 1613	Flywheel with bushings, PTO drive	12	F 765	Bearing cage for F 34 bearing
2	F 1614	Shear bushing in flywheel, flanged	13	F 498	Set screw for F 34 bearings, rear, 1/2" x 2" (2 used)
3	F 886	Bushing for F 7704 and F 1613 flywheel	14	F 73	Set screw for F 34 bearings, front, 1/2" x 4" (2 used)
4	F 221	Set collar, pinion shaft, 2-1/8"	15	F 7437	Pinion gear, 12 tooth
5	F 7000	Drive belt, D-165, for VG4D and V461D engine	16	F 7210	Pinion shaft
	F 7337	Drive belt, D-162, for PTO	17	F 34	Bearing complete for pinion shaft, (2 used)
6	F 7014	Motor pulley 10" OD for VG4D 1-7/16" bore	18	F 967	Shim for F34 bearing, 16 ga.
	F 7699	Motor pulley, 10" OD for V461D 1-3/4" bore		F 967A	Shim for F34 bearing, 20 ga.
7	F 817	Shear hub for flywheel		F 967B	Shim for F34 bearing, 10 ga.
8	F 1132	Shear bushing in flywheel shear hubs	19	FT 157	Sprocket, drive for hydraulic pump
9		1/2" x 3-1/4" heat treated cap screws with lock nuts	20	F 7488	Tapered key for pinions, 3-1/2" (2 used)
10	F 7015	Shear bolt, 1/2" x 5" N.C. grade 2 bright cap screw	21	F 72	Key for shear hub, 1/2" x 1/2" x 3-1/2"
			22	F 7737	Bracket, drive belt shield with battery box
			23	F 7016	Drive belt shield
			24	F 1721	Lock pin for F 698 bearing insert
			25		1/4" x 3/4" round head machine screw
			26		1/2" x 1-1/2" NC Cap screw
			27		5/8" x 2-1/4" NC Cap screw

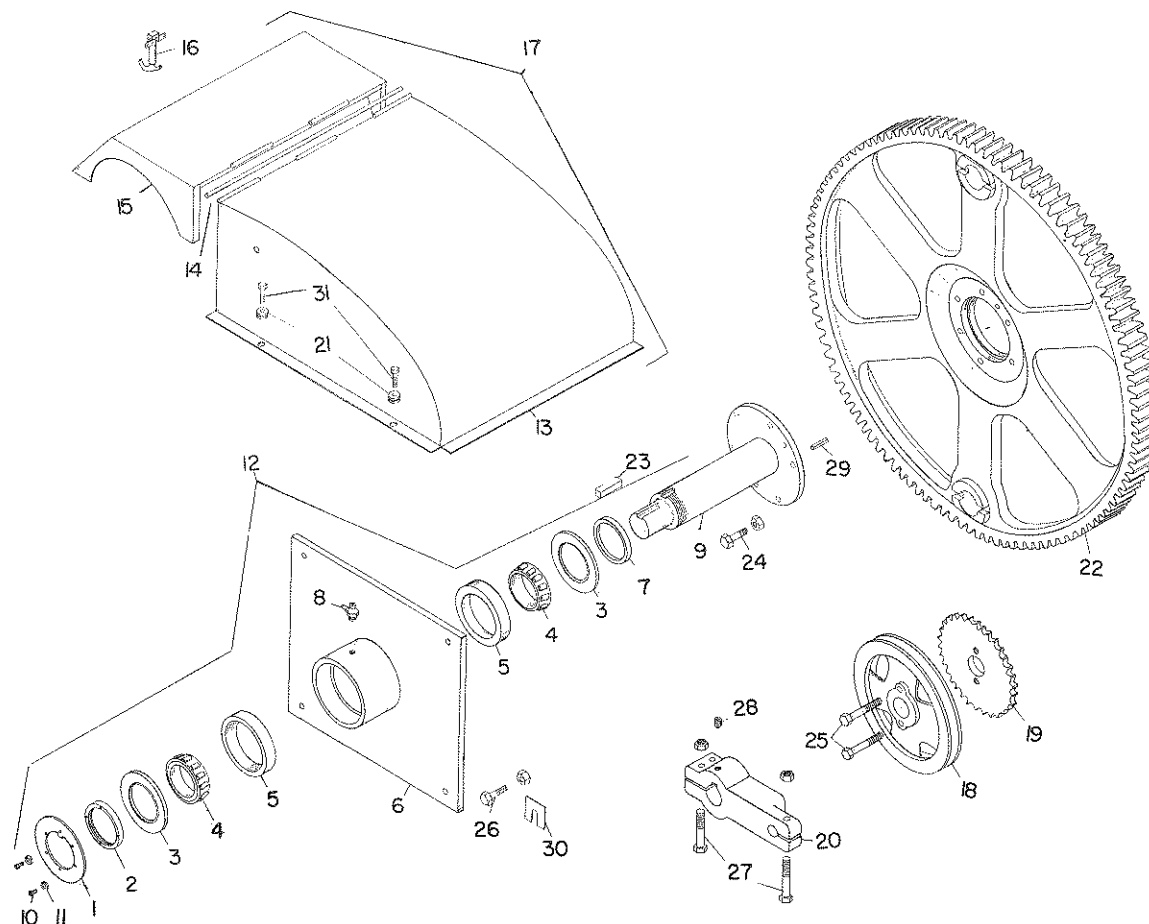


BULLGEAR ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7038	Locking washer	15	F 7631	Bullgear shield access door
2	F 7037	Adjusting nut for side plate bearing	16	F 853	Catch for bullgear shield
3	F 7035	Seal for side plate, #255833 (4 used)	17	F 7548	Bullgear shield complete with door
4	F 7033	Bearing for side plate, #33287 (4 used)	18	F 9A	Sheave, pickup drive
5	F 7034	Bearing cup for side plate, #33462 (4 used)	19	F 753	Sprocket, knotter drive (32T #60)
6	F 7354	Side plate, R.H. with bearing cups	20	F 1256	Crank arm
7	F 7036	Seal race	21	F 7550	Rubber grommet (4 used)
8	F 1661	Hydraulic shut-off fitting	22	F 7438	Bullgear, 88 tooth (2 used)
9	F 7031	Shaft, feed fork drive	23	F 225	Key, knotter drive shaft, 1/2" x 1/2" x 2"
10	F 7039	Screw for locking washer, 8-32 x 1/2" H.H. Cap Screw (4 used)		F 226	Key, feed arm drive shaft, 1/2" x 1/2" x 2-1/4"
11	F 7040	Lock washer for F 7039 screw, # 8 medium (4 used)	24		1/2" x 2-1/4" N.C. Cap screw
12	F 7358	Side plate, R.H. w/bearing and shaft, incl. Ref. 1-11	25		1/2" x 2-3/4" N.C. Cap screw
	F 7463	Side plate, L.H. w/bearing and shaft, incl. Ref. 1-11	26		5/8" x 2" N.F. Cap screw
13	F 7627	Bullgear shield less access door	27	F 312	1/2" x 3-1/4" N.F.H.T. Cap screw w/fiber lock nuts
14	F 7629	Bullgear shield hinge pin	28		1/2" x 1/2" Hollow head set screw, (3 used)
			29	F 7239	Roll pin, 3/8" x 1-1/2" for bullgear
			30	F 1267	Shim for aligning side plate
			31		1/4" x 1-1/4" N.C. Cap screw (4 used)

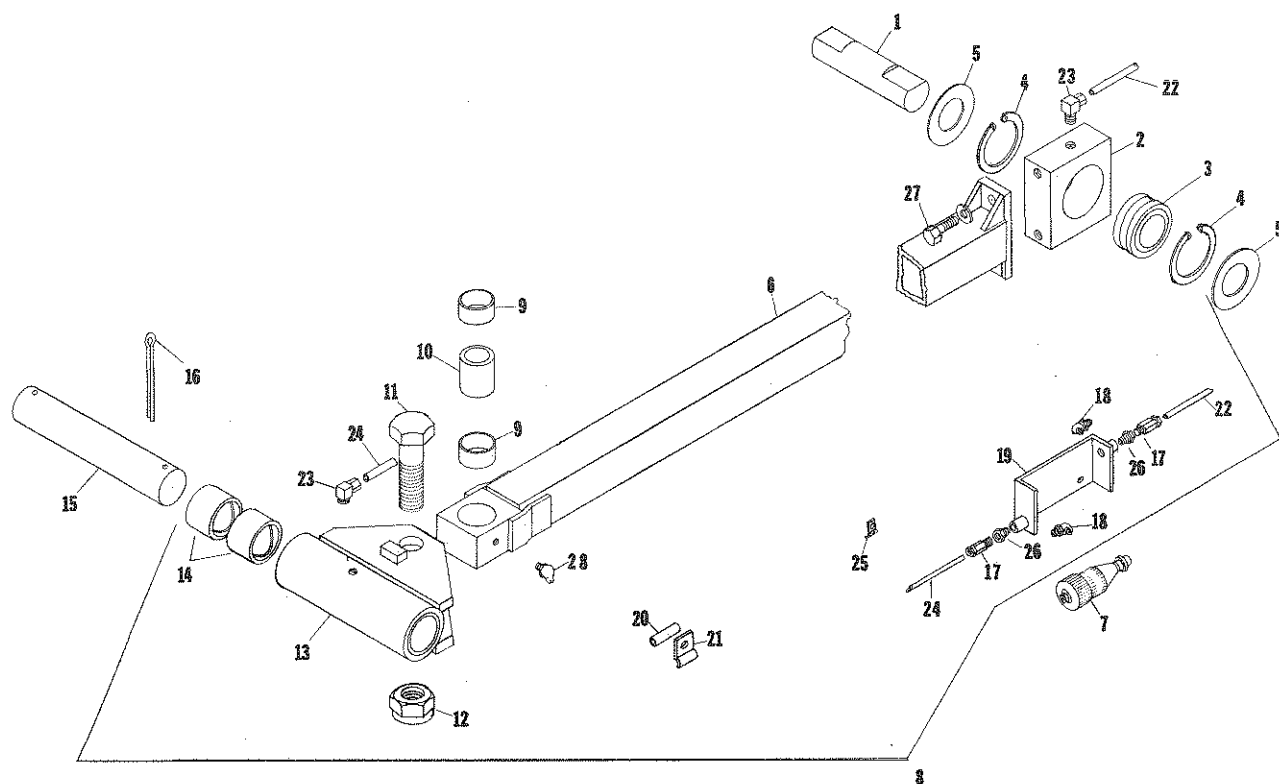


PLUNGER CONNECTING ROD ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7914	Plunger pin	14	F 1527	Bushing for F 7925 conn rod end
2	F 8075	Conn rod end housing, plunger end, complete w/bearing	15	F 1134	Crank pin, gear end
3	F 7916	Bearing for conn rod end housing	16	F 55	Key for crank pin (2 used)
4	F 7917	Snap ring	17	F 778	Connector, grease tubes, #308808
5		Washer, 1-3/4" x 2-1/2", 10 ga. machine bushing		F 8055	Steel sleeve for F 778 & F 1441, #31226
		Washer, 1-3/4" x 2-1/2", 14 ga. machine bushing	18	F 7651	Grease fitting on conn rod (2 used)
		Washer, 1-3/4" x 2-1/2", 18 ga. machine bushing	19	F 7542	Bracket for grease tubes on conn rod
6	F 8076	Connecting rod	20	F 933	Protector tube for grease tube
7	F 7543	Spring loaded grease cup	21	F 1436	Clip for grease tube protector
8	F 8081	Conn rod complete with ends	22	F 7545	Grease tube, 1/4", plunger pin to F 7542 bracket, 7"
9	F 8077	Steel bushing, conn rod swivel end, IR 2916	23	F 1441	Elbow for conn rod grease tube, Imp. 889L (2 used)
10	F 8078	Steel bushing	24	F 7544	Grease tube, 1/4", crank pin to F 7542 bracket, 36"
11	F 8079	Pivot pin for swivel end	25	F 7653	Clip for grease tube
12	F 8080	1-1/4" NF elastic stop nut	26	F 7418	1/4" x 1/8" pipe reducer bushing
13	F 7925	Conn rod end housing complete w/bushings, bull gear end	27		1/2" x 1-3/4" NC grade 8 cap screw
			28		1/4" x 28 x 45° grease fitting
				F 7611	Conn rod ends greasing kit including Ref. Nos. 17 to 26

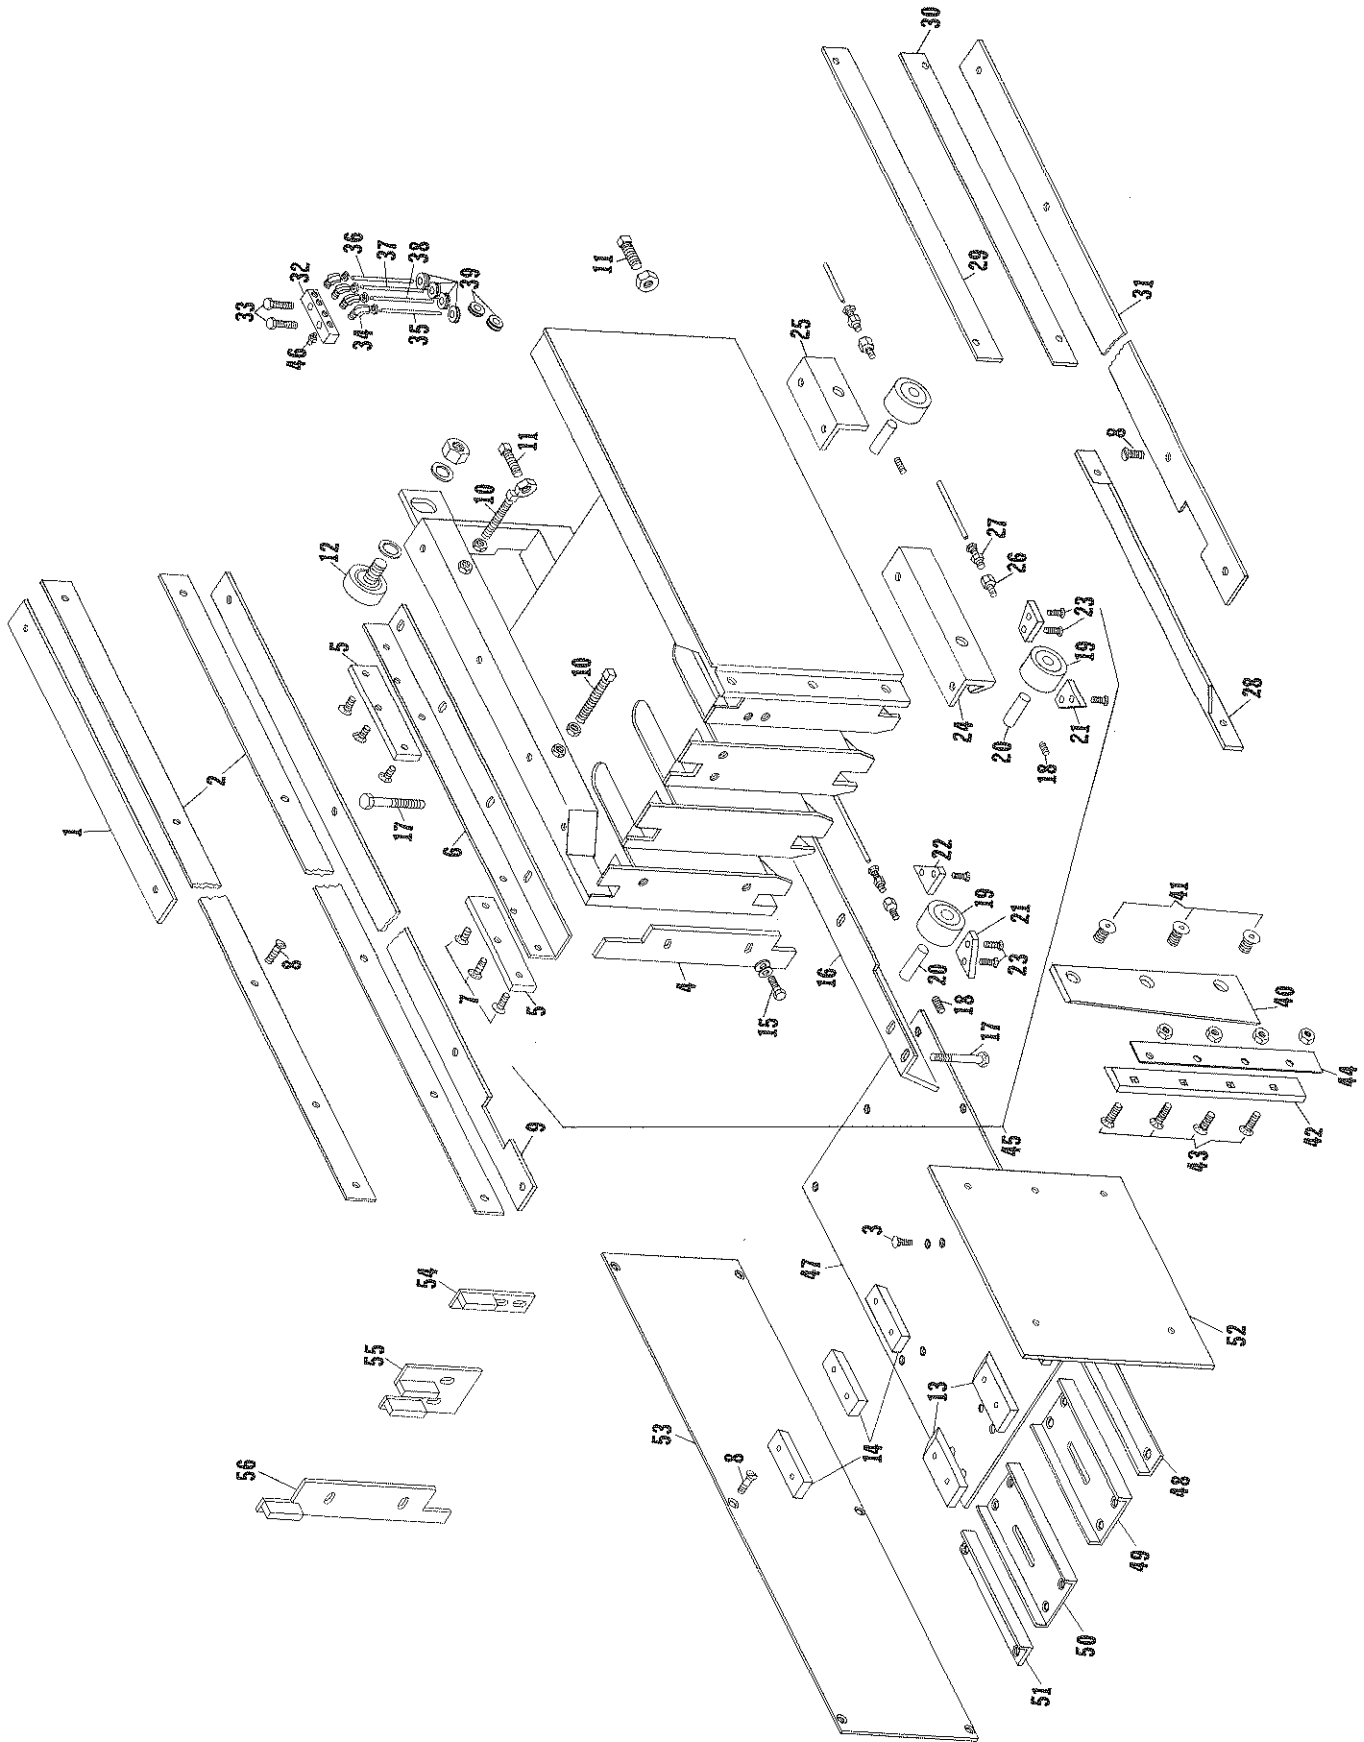


PLUNGER ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 7765	Plunger roller rail, top L.H.
2	F 7763	Plunger guide rail, top & bottom
3		3/8" x 1-1/4" #3 plow bolt
		3/8" x 1-1/2" #3 plow bolt
4	F 7963	Adjusting pad for plunger face, left side, 16" x 22" chamber
	F 7964	Adjusting pad for plunger face, left side, 17" x 22" chamber
5	F 1537	Hard slide for roller plunger (4 used)
6	F 7766	Hard slide mounting rail, L.H. top
7		5/16" x 1/2" FH machine screw (12 used)
8		5/16" x 1" FH machine screw for plunger rail
		5/16" x 1-1/2" FH machine screw for plunger rail
9	F 7762	Plunger roller rail, L.H. bottom
10		1/2" x 4" square head set screw, top rail (2 used)
		1/2" x 2-1/2" square head set screw, bottom rail (2 used)
11		3/4" x 1-3/4" square head set screw (2 used) plunger pin lock
12	F 1636	Roller for top of plunger
13	F 7822	Wire and twine track block, bottom
14	F 7823	Wire and twine track block, top
15		3/8" x 1" NC cap screw (3 used)
16	F 8082	Roller & slide mounting angle, L.H. bottom
17		3/8" x 3-3/4" NC cap screw (12 used)
18		1/4" x 3/8" Allen head set screw (4 used)
19	F 775	Roller for plunger (4 used)
20	F 776	Pin, plunger roller (4 used)
21	F 986	Wiper, rear (2 used)
22	F 774	Wiper, front (2 used)
23		1/4 x 3/4" FH machine screw (8 used)
24	F 773	Roller mounting angle, R.H. rear
25	F 772	Roller mounting angle, R.H. front
26	F 777	Adapter for grease tube (4 used)
27	F 778	Connector for grease tube (4 used)
28	F 7439	Knife guide under feed opening
29	F 299	Plunger slide, flat, upper R.H. side
30	F 298	Plunger slide, flat, lower R.H. side
31	F 7767	Plunger roller rail, R.H. bottom
32	F 979	Manifold for grease tubes
33		5/16" x 1-3/4" NC cap screw (2 used)
34	F 1441	Elbow, grease tube (4 used)
35	F 780	Grease tube, right rear, 36"
36	F 781	Grease tube, left front, 14"
37	F 779	Grease tube, left rear, 30"
38	F 779	Grease tube, right front, 30"
39	F 7735	Grommet, grease tube protector (6 used)
40	F 7764	Plunger knife
41	F 227	Bolt for plunger knife (3 used)
42	F 1609	Knife, stationary with square holes
43	F 1629	Bolt for F 1609 knife (4 used)
44	F 751	Shim for F 1609 knife, 14 ga.
	F 1512	Shim for F 1609 knife, 20 ga.
45	F 7961	Plunger complete, less knife, 16" x 22" chamber
	F 7962	Plunger complete, less knife, 17" x 22" chamber
46		1/8" P.T. grease fitting
47	F 7824	Bale chamber bottom
48	F 7813	Liner ext. for bale chamber bottom, R.H.
49	F 7816	Liner ext. for bale chamber bottom, R.H. center
50	F 7818	Liner ext. for bale chamber bottom, L.H. center
51	F 7819	Liner ext. for bale chamber bottom, L.H.
52	F 7812	Liner for bale chamber side, R.H.
53	F 7825	Liner for bale chamber side, L.H., 16" chamber
	F 7826	Liner for bale chamber side, L.H., 17" chamber
54	F 8056	Adjusting pad for plunger face, right side, twine only
55	F 8057	Adjusting pad for plunger face, center, twine only, 2 used
56	F 8058	Adjusting pad for plunger face, left side, twine only

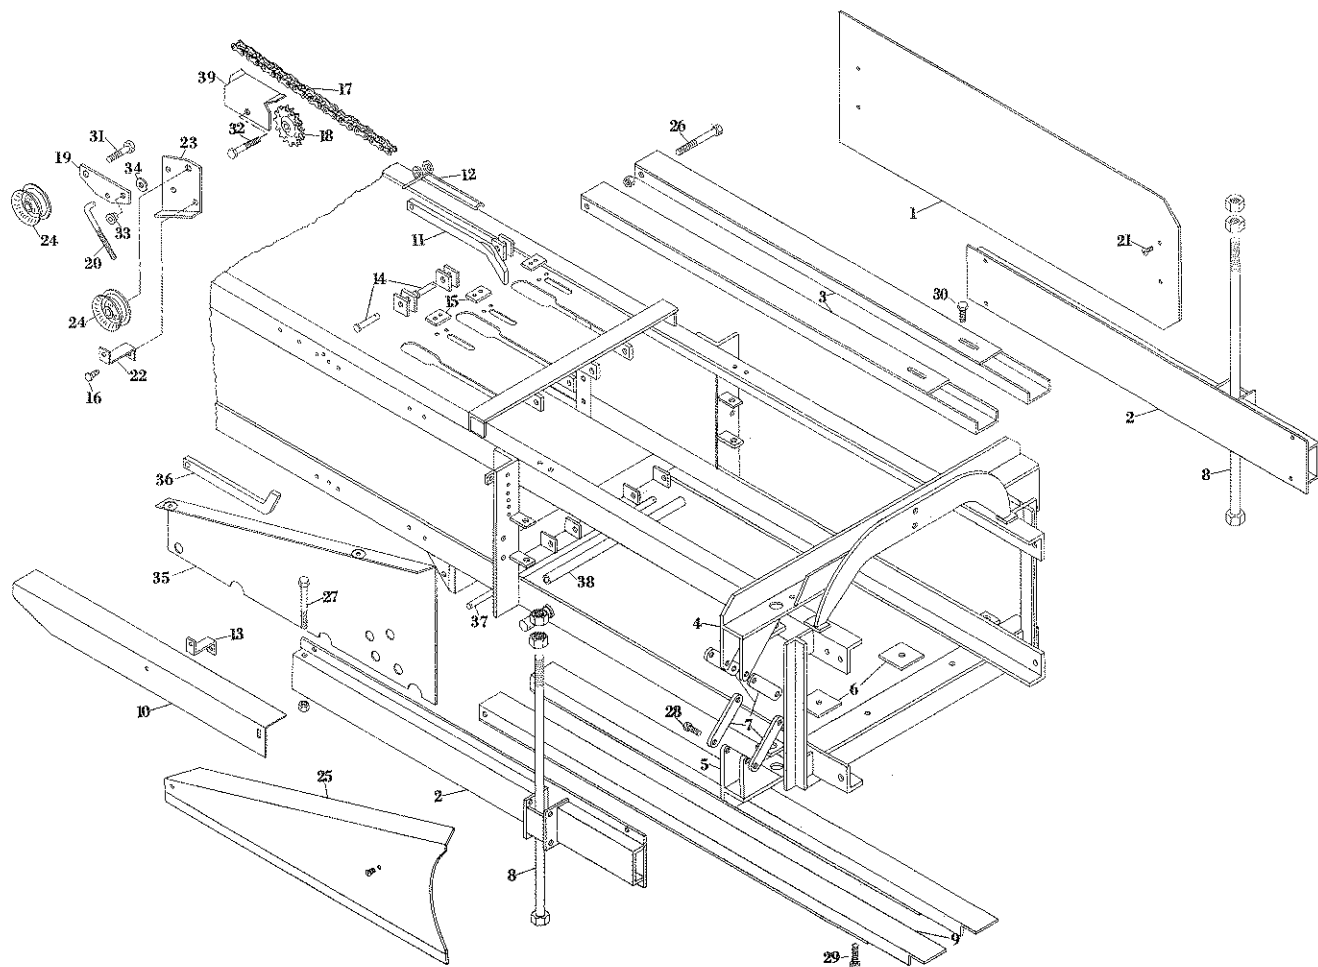


BALE CHAMBER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7507	Solid side (2 used)	19	F 8083	Chain tightener bracket
2	F 7121	Side tension rail (2 used)	20	F 8084	Chain tightener adjusting bolt, 3/8" x 3/4" NC Button head bolt (8 used)
3	F 7827	Top tension rail, (2 used)	21	F 8085	Bracket for knotter drive chain shield
4	F 7668	Top tension angle, 17" x 22" chamber	22	F 8086	Idler roller bracket
5	F 7746	Top tension angle, 16" x 22" chamber	23	F 883	Tightener and idler pulley for knotter drive chain
5	F 1153	Bottom tension angle, 17" x 22" chamber	24	F 8087	Shield, knotter drive chain
	F 1151	Bottom tension angle, 16" x 22" chamber	25		1/2" x 4" NC Cap screw, top & bottom tension
6	F 1662	Spacer shim, (2 used)	26		1/2" x 5-1/2" NC Cap Screw, Side tension rail (2 used)
7	F 497	Flat linkage bar (8 used)	27		1/2" x 1-1/4" NC cap screw, Tension link linkage (8 used)
8	F 600	Tension bolt, 3/4" x 27-3/4" (2 used)	28		3/8" x 2-1/2" NC Cap screw, Bottom tension rail (2 used)
9	F 7828	Bottom tension rail, (2 used)	29		3/8" x 1-1/4" NC Cap screw, Top tension rail (2 used)
10	F 7797	Front Knotter chain shield	30		1/2" x 2-3/4" N.C. Cap Screw (2 used)
11	F 837	Hay dog, top, wire	31		1/2" x 3-1/4" N.C. Cap screw
	F 7911	Hay dog, top, twine	32		Ferrule
12	F 188	Hay dog spring	33	F 440	Washer
13	F 7798	Front knotter chain shield bracket	34	F 8088	Inner chain shield, wire
14	F 220	Hay dog pin	35	F 8111	Inner chain shield, twine
15	F 1589	Rubber pads for hay dogs, w/screws	36	F 8089	Hay dog, bottom
16		3/8" x 3/4" NC Cap screw	37	F 8104	Bottom twine guide rod
17	F 1392	Knotter drive chain, twine tie balers (238P#60)	38	F 8105	Bottom Twine guide pipe
	F 7055	Knotter drive chain, wire tie baler (239P#60)	39	F 8112	Chain hold down
	F 759	Offset link, RC60			
	F 760	Connecting link, RC60			
	F 761	Roller link, RC60			
18	F 7397	Sprocket for chain divider (2 used)			

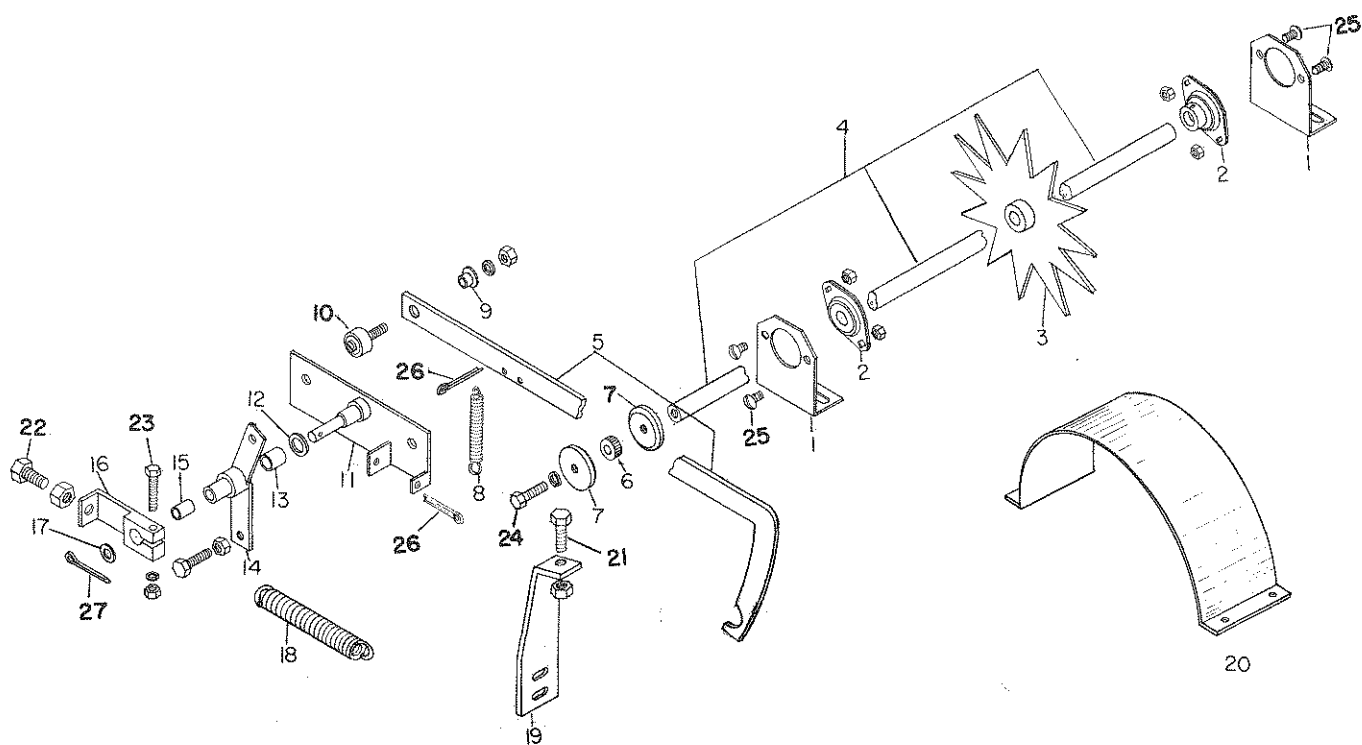


KNOTTER TRIP ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1617	Meter wheel shaft bracket (2 used)	15	F 1568	Bushing, rest lever, 1/2" x 5/8" x 1" oilite
2	F 1618	Meter wheel shaft bearing complete (2 used)	16	F 1515	Clutch stop lever
	F 1619	Meter wheel shaft bearing only	17		1/2" x 7/8" - 14 ga. machine bushing
3	F 1531	Meter wheel, 10"	18	F 1517	Trip spring
4	F 8022	Meter wheel shaft	19	F 1632	Meter trip bar stop with bolt
5	F 1686	Meter trip bar	20	F 1579	Shield for meter wheel
6	F 1687	Knurled friction disc	21		1/2" x 1-1/2" N.C. Cap Screw, trip bar stop
7	F 8023	Guide washer	22		1/2" x 1-1/4" N.C. Cap Screw, clutch stop
8	F 278	Spring	23		5/16" x 2" N.F. Cap Screw, clutch stop clamp
9	F 440	Ferrule	24		3/8" x 1-1/4" N.C. Cap screw, knurled roller and washers
10	F 1572	Cam follower bearing	25		5/16" x 3/4" N.C.B.H. machine screw, bearing to bracket
11	F 1513	Knotter trip mount	26		3/16" x 3/4" Cotter key
12		3/4" x 1-1/4" - 10 ga. machine bushing	27		1/8" x 1" Cotter key
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					

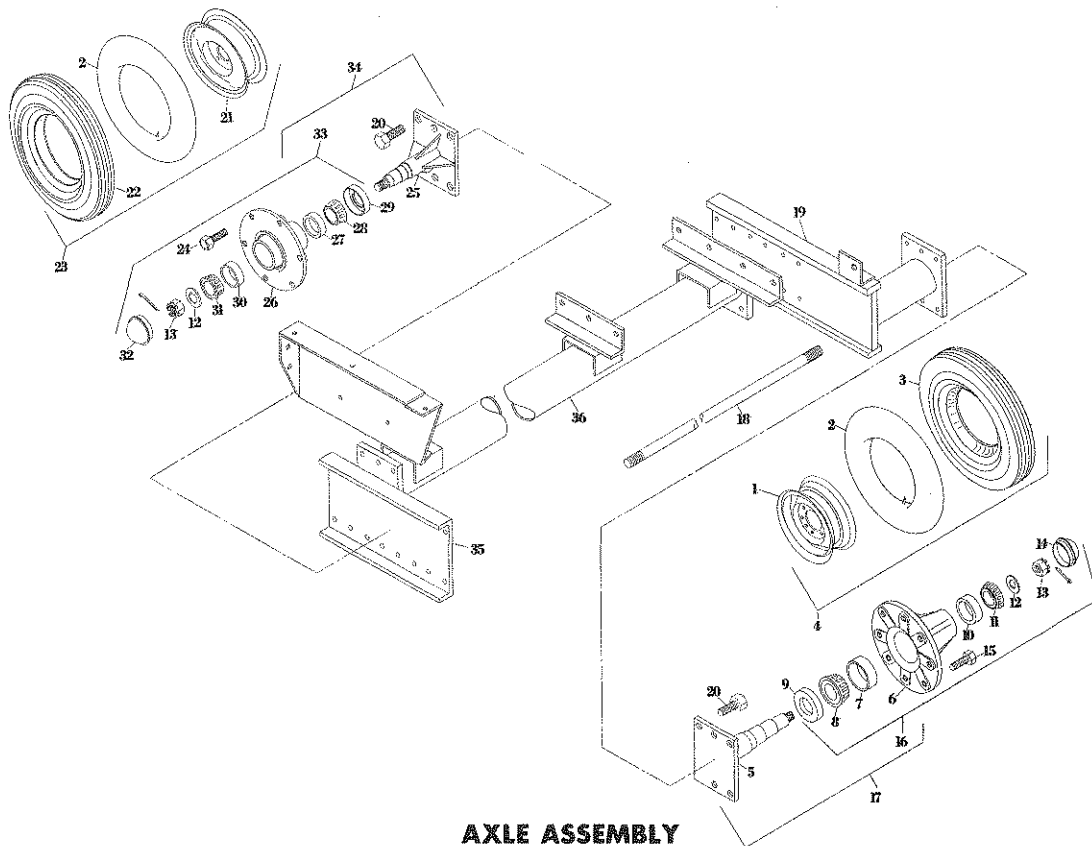


AXLE ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7989	Wheel, 8-hole, drop center, for F 7992 hub, L. H.	24	F 8072	Lug bolt for F 8007 hub
2	F 215	Inner tube, 7:50 x 16	25	F 8006	Spindle for F 8007 hub, R.H. side
	F 8029	Inner tube, for 11.5-15 flotation tire	26	F 8007	Hub with cups, R.H. side, 6 hole, Q777
3	F 213	Tire, 7:50 x 16-8-ply implement	27	F 8008	Inner wheel bearing cup for F 8007 hub, LM29710
4	F 7990	Drop center single wheel w/8-ply tire & tube mounted, L.H. 8 hole	28	F 8009	Inner wheel bearing cone for F 8007 hub, LM29749
5	F 7991	Spindle for F 7992 hub, L.H. side, 8 hole	29	F 8010	Grease retainer for F 8007 hub
6	F 7992	Hub with cups, L.H. side, Q778	30	F 8011	Outer wheel bearing cup for F 8007 hub, LM67010
7	F 7993	Inner wheel bearing cup for F 7992 hub, #25520	31	F 8012	Outer wheel bearing cone for F 8007 hub, LM 67048
8	F 7994	Inner wheel bearing cone for F 7992 hub, #25590	32	F 8014	Hub cap for F 8007 hub
9	F 7995	Grease retainer for F 7992 hub	33	F 8015	Single wheel hub w/bearings for 6-hole wheel less spindle, R.H.
10	F 7996	Outer wheel bearing cup for F 7992 hub, #25821	34	F 8016	Single wheel hub with spindle complete R.H. side
11	F 7997	Outer wheel bearing cone for F 7992 hub #25877	35	F 7756	Mounting channel, R.H. wheel
12	F 7998	Washer for spindle	36	F 7750	Tubular axle
13	F 7999	Nut for spindle		F 8018	Tandem wheel assembly, L.H. side to replace single assembly including one F 7757 plate, one F 8003 hub & spindle, & one F 7990 wheel & tire.
14	F 8000	Hub cap for F 7992 hub		F 8019	Tandem wheel assembly complete, L. H. side, including one F 7757 plate, two F 8003 hub & spindle, two F 7990 wheel & tire.
15	F 8001	Lug bolt for F 7992 hub		F 8020	Tandem wheel assembly, R.H. side, to replace single assembly including one F 8017 plate, one F 8016 hub & spindle and one F 8005 wheel & tire.
16	F 8002	Single wheel hub w/bearings for 8-hole wheel less spindle, L.H.		F 8021	Tandem wheel assembly complete, R.H. side, including one F 8017 plate, two F 8016 hub & spindle, two F 8005 wheel & tire.
17	F 8003	Single wheel hub with spindle complete L.H.			
18	F 600	Tandem axle base rod			
19	F 7757	Tandem wheel plate, L.H.			
20	F 7758	Bolt for spindle, 5/8" x 1-7/8" NFHT			
21	F 8004	Wheel, 6-hole, drop center for F 8007 hub, R.H.			
	F 8013	Flotation wheel, 6-hole for F 8007 hub R.H.			
22	F 212	Tire, 7:50 x 16, 4-ply implement			
	F 8028	Flotation tire, 11.5-15, 6-ply			
23	F 8005	Drop Center wheel with 4-ply tire & tube, mounted, R.H. 6-hole			
	F 8030	Flotation wheel with 11.5-15 6-ply tire & tube, mounted, R.H.			

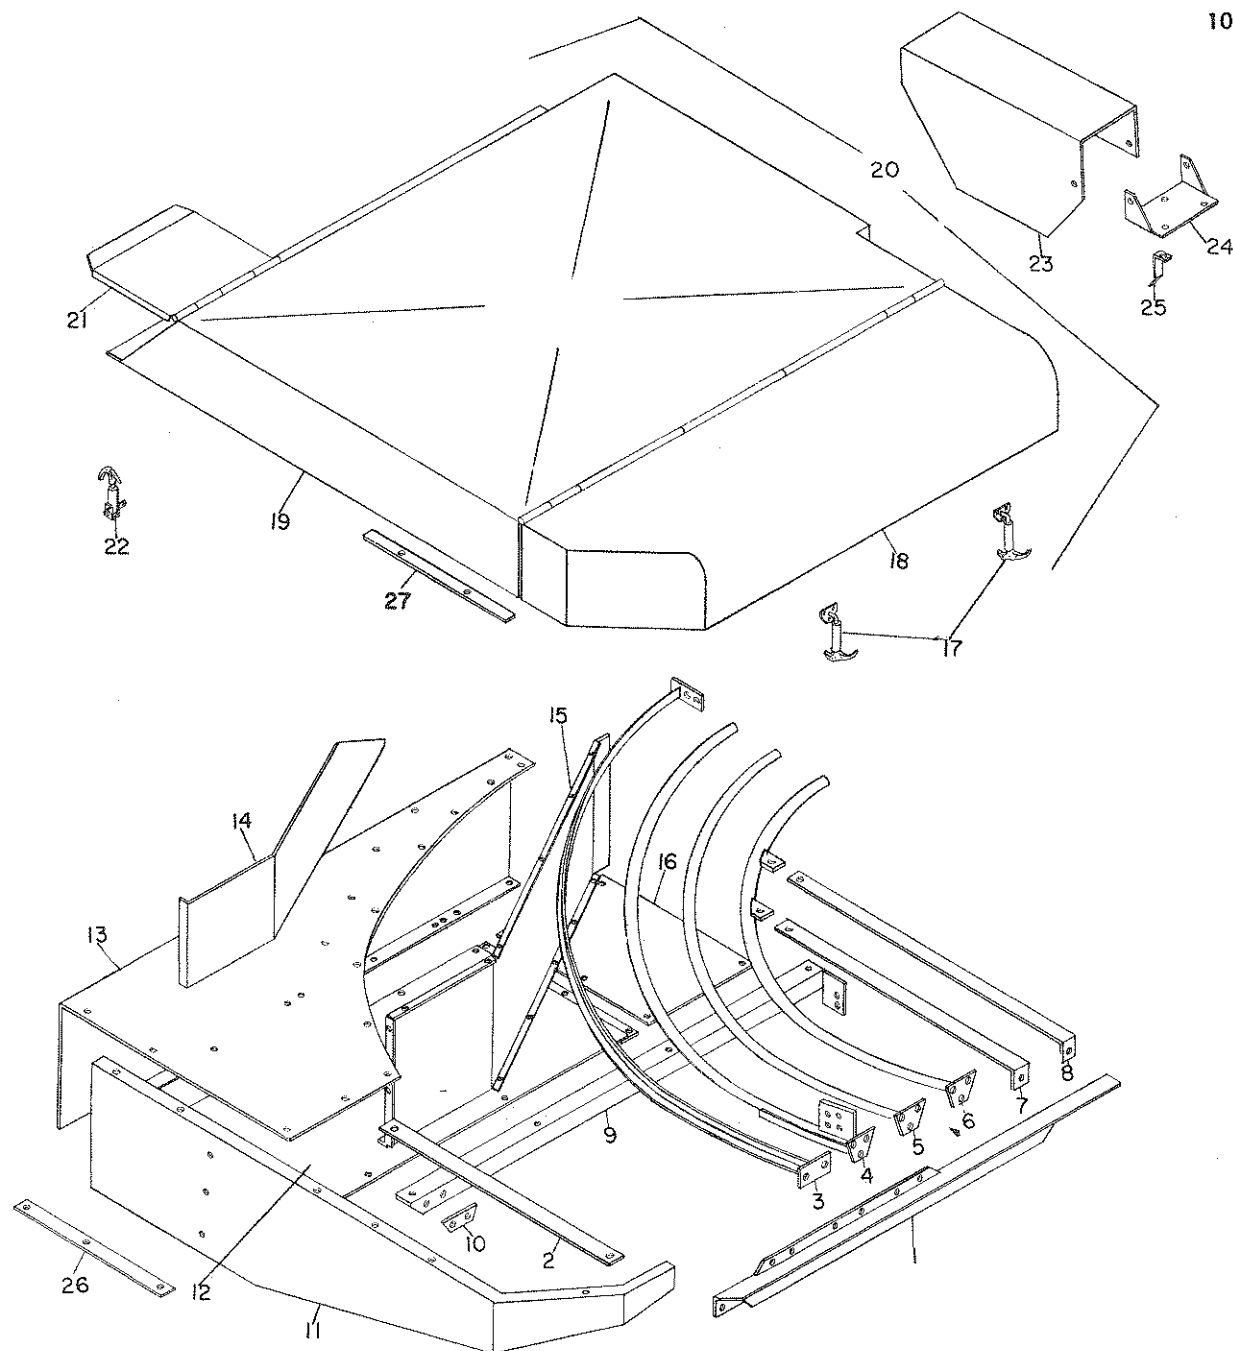


PICKUP FEEDER HOUSE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7482	Support angle for guard pipes	15	F 7152	Feeder house back sheet
2	F 7158	Hay hold down, outside	16	F 7145	Feeder house bottom wear plate
3	F 7299	Guard angle	17	F 7166	Catch for access door
4	F 7472	Guard pipe, outside with latch mounting plate	18	F 7633	Access door for F 7551 shield
5	F 7163	Guard pipe, center	19	F 7634	Shield over pickup, rear
6	F 7164	Guard pipe, inside	20	F 7551	Shield over pickup complete
7	F 7159	Hay hold down, center	21	F 7635	Tool box lid
8	F 7160	Hay hold down, inside	22	F 853	Catch for tool box cover
9	F 7157	Angle brace for feeder house bottom sheet	23	F 7517	Shield for needle yoke drive arm and brake
10	F 7394	Pickup stop	24	F 7579	Bracket knottter drive arm shield
11	F 7143	Feeder house end plate	25	F 7654	Brace for F 7579 bracket
12	F 7713	Feeder house bottom	26	F 7714	Feeder house bottom end shim, R.H.
13	F 7142	Feeder house rear and top section	27	F 7789	Shim for top of feeder house end plate
14	F 7127	Upright shield under hood			

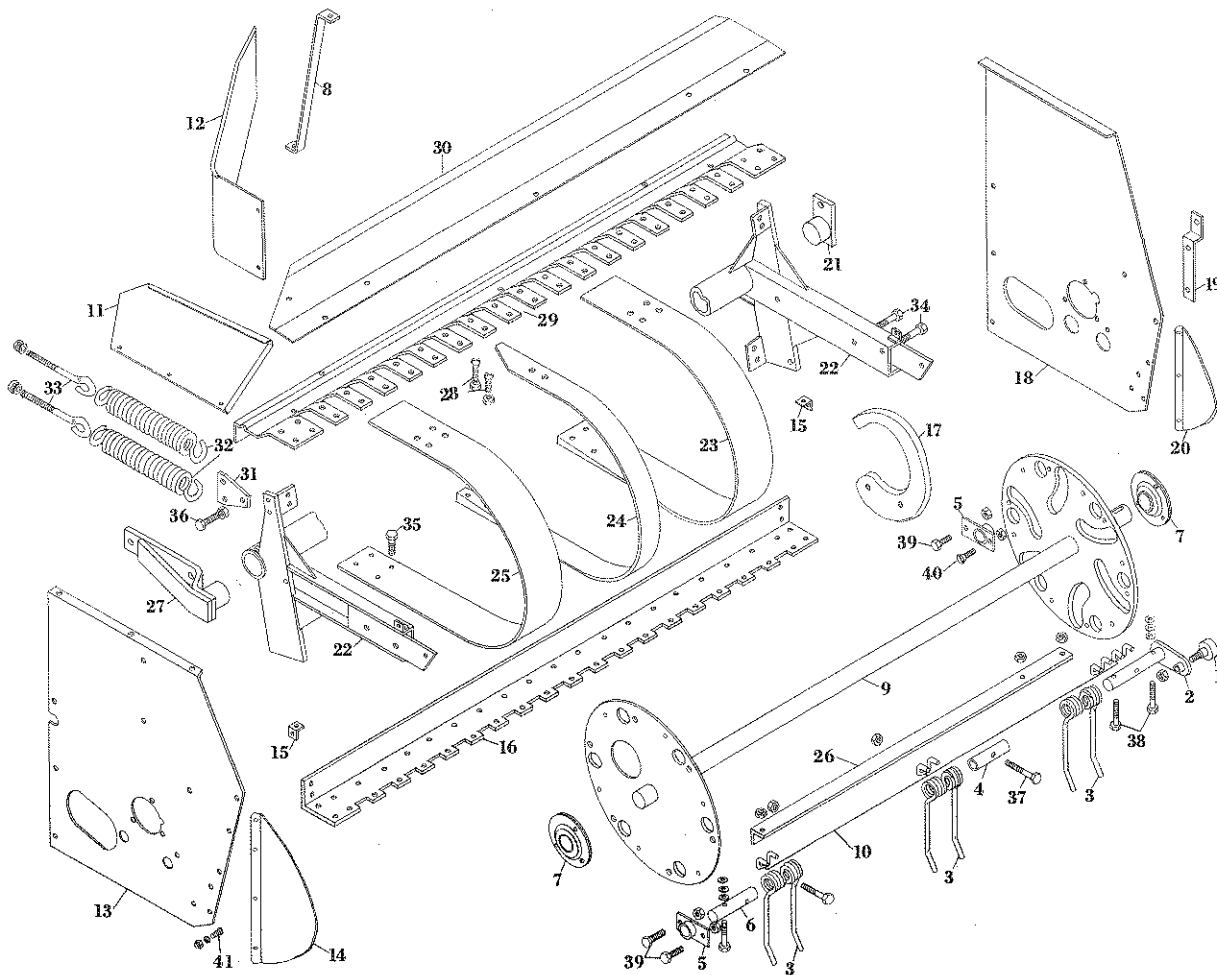


PICKUP CYLINDER ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7598	Roller for F 7597 cam lever	22	F 7177	Pickup frame
2	F 7599	Cam lever only	23	F 7732	Stripper, inside
	F 7597	Cam lever with roller (6 used)	24	F 7734	Stripper, center (17 used)
3	F 1226	Pickup finger, 6-1/2" shank (54 used)	25	F 7741	Stripper, outside
4	F 101	Pickup finger guide pipe (42 used)	26	F 7186	Tooth bar (6 used)
5	F 7187	Tooth bar bearing (12 used)	27	F 7382	Bearing, R.H., pickup mounting
6	F 98	Pin, tooth bar (6 used)	28		5/16" x 1" R.H. machine screw
7	F 8102	Bearing, pickup shaft	29	F 7730	Top stripper bar, formed
8	F 8113	Center brace for formed stripper bar	30	F 7731	Pickup joint sheet
9	F 8103	Pickup shaft with flanges	31	F 7156	Spring plate
10	F 100	Pickup finger guide (60 used)	32	F 7154	Spring for pickup balance (2 used)
11	F 7146	Skirt for fender	33	F 96	Eyebolt for pickup balance spring (2 used)
12	F 7149	Fender extension	34		1/2" x 2-1/2" NC cap screw
13	F 7573	Fender, outside	35		5/16" x 3/4" NC cap screw
14	F 7148	Fender flare, outside	36		7/16" x 1-1/2" NC cap screw
	F 7355	Fender flare extension, outside	37		5/16" x 2" NC HT cap screw
15	F 7193	Fender mounting clip (4 used)	38		5/16" x 2-1/4" NC cap screw
16	F 7180	Bottom stripper bar	39		5/16" x 1" NC cap screw
17	F 7190	Pickup cam	40		5/16" x 1" CS machine screw
18	F 7572	Fender, inside	41		1/4" x 1/2" R.H. machine screw
19	F 7194	Pickup lift bracket		F 7760	Pickup complete, less balance springs, lift bracket, and mounting bearings
20	F 7151	Fender flare, inside			
	F 7356	Fender flare extension, inside			
21	F 7176	Bearing, L. H., pickup mounting			

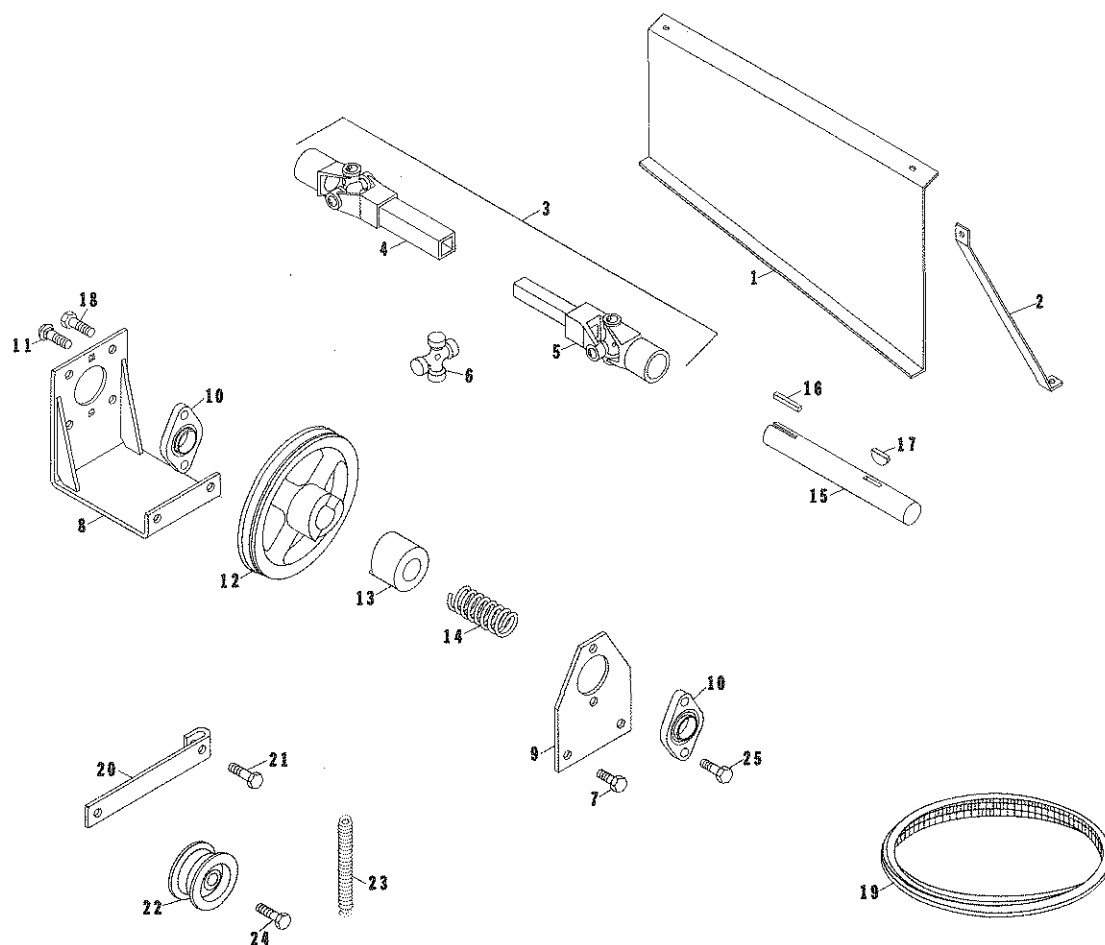


PICKUP DRIVE

REF. NO.	PART NO.	DESCRIPTION
1	F 7706	Pickup drive shaft shield
2	F 7829	Brace for pickup drive shaft shield
3	F 8098	Universal drive shaft complete
4	F 8096	Universal with square tube
5	F 8097	Universal with square shaft
6	F 318	Universal joint repair kit
7		3/8" x 1" NC Cap screw, 2 used
8	F 8090	Bearing mount bracket
9	F 8091	Bearing mount plate
10	F 7063	Bearing, 1-3/8"
11		3/8" x 1-1/4" #3 Plow bolt, 2 used
12	F 8A	Pickup driven sheave
13	F 7	Pickup clutch ring
14	F 126	Pickup clutch spring
15	F 8092	Pickup drive shaft
16	F 122	Key, 1/4" x 1/4" x 2-1/2"
17	F 83	Woodruff Key, 3/8" x 1-1/4"
18		1/2" x 1-1/2" NC Cap screw, 4 used
19	F 7535	Pickup drive belt, CX105
20	F 7546	Pickup drive belt tightener bracket
21		1/2" x 2-1/4" N.C. cap screw
22	F 840	Idler pulley, pickup belt tightener
23	F 129	Spring, pickup belt tightener
24		1/2" x 2-1/2" N.C. cap screw
25		3/8" x 1-1/2" N.C. cap screw

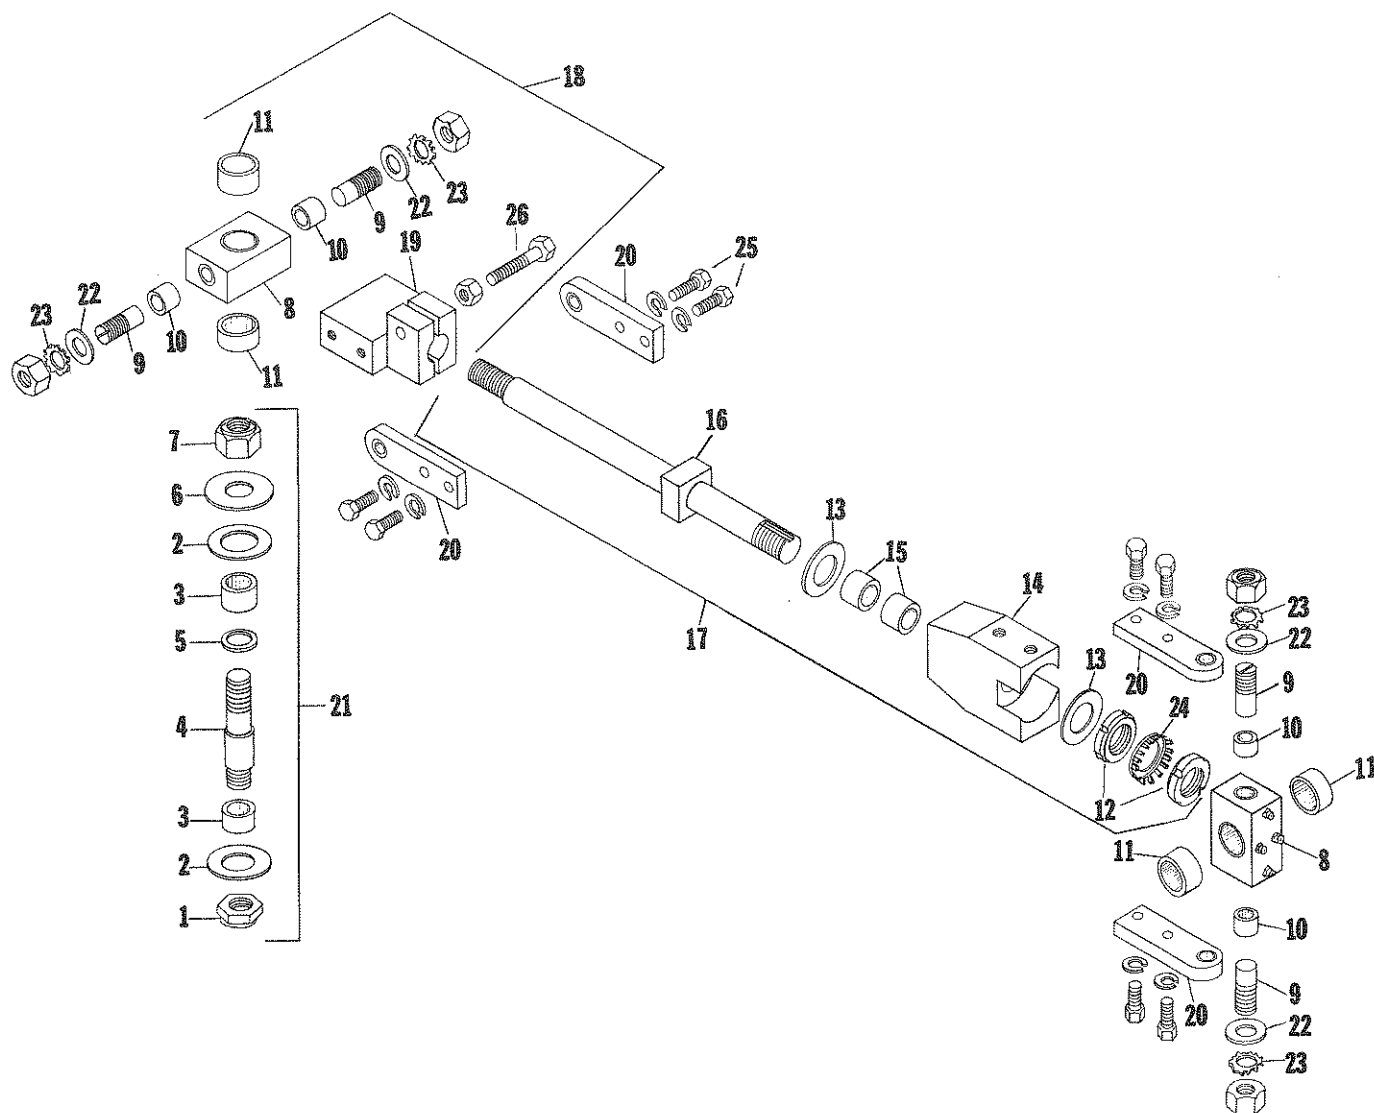


FEED ARM DRIVE

REF. NO.	PART NO.	DESCRIPTION	REF NO.	PART NO.	DESCRIPTION
1	F 1386	Lock nut 1" jam	12	F 8024	Adjusting nut, N-06
2	F 1260	Hardened washer, 1-3/8" x 2-1/2" x .025" (4 used)	13	F 7603	Thrust washer for F 7578 block
3	F 1071	Inner race for F 480 bearing, IR 1812 (4 used)	14	F 7578	Thrust bearing block
4	F 1306	Crank pin only	15	F 7612	Bushing for F 7578 block, 1-3/16" x 1-5/16" x 1-1/4"
5	F 1259	Spacer for F 1071	16	F 8025	Feed arm conn rod only
6	F 1261	Hardened washer, 1" x 2-1/2" x .065" (2 used)	17	F 8026	Feed arm conn rod assembly
7	F 1385	Lock nut 1" full	18	F 482	Universal joint complete, RH thread
8	F 486	Bearing block with bearings (2 used)	19	F 354	Adjusting block, RH thread
9	F 485	Bearing pin in F 484 strap (4 used)	20	F 484	Strap for universal (4 used)
10	F 481	Bearing in F 486 block (small) B1212 (4 used)	21	F 1450	Crank pin with races, washers and nuts complete
11	F 480	Bearing in F 486 block (large) B2212 (4 used)	22	F 802	Washer, bearing pin
			23		3/4" star lock washer
			24	F 8027	Lock washer, W-06
			25		1/2" x 1-1/2" NC Cap screw
			26		1/2" x 2-1/2" NC Cap screw

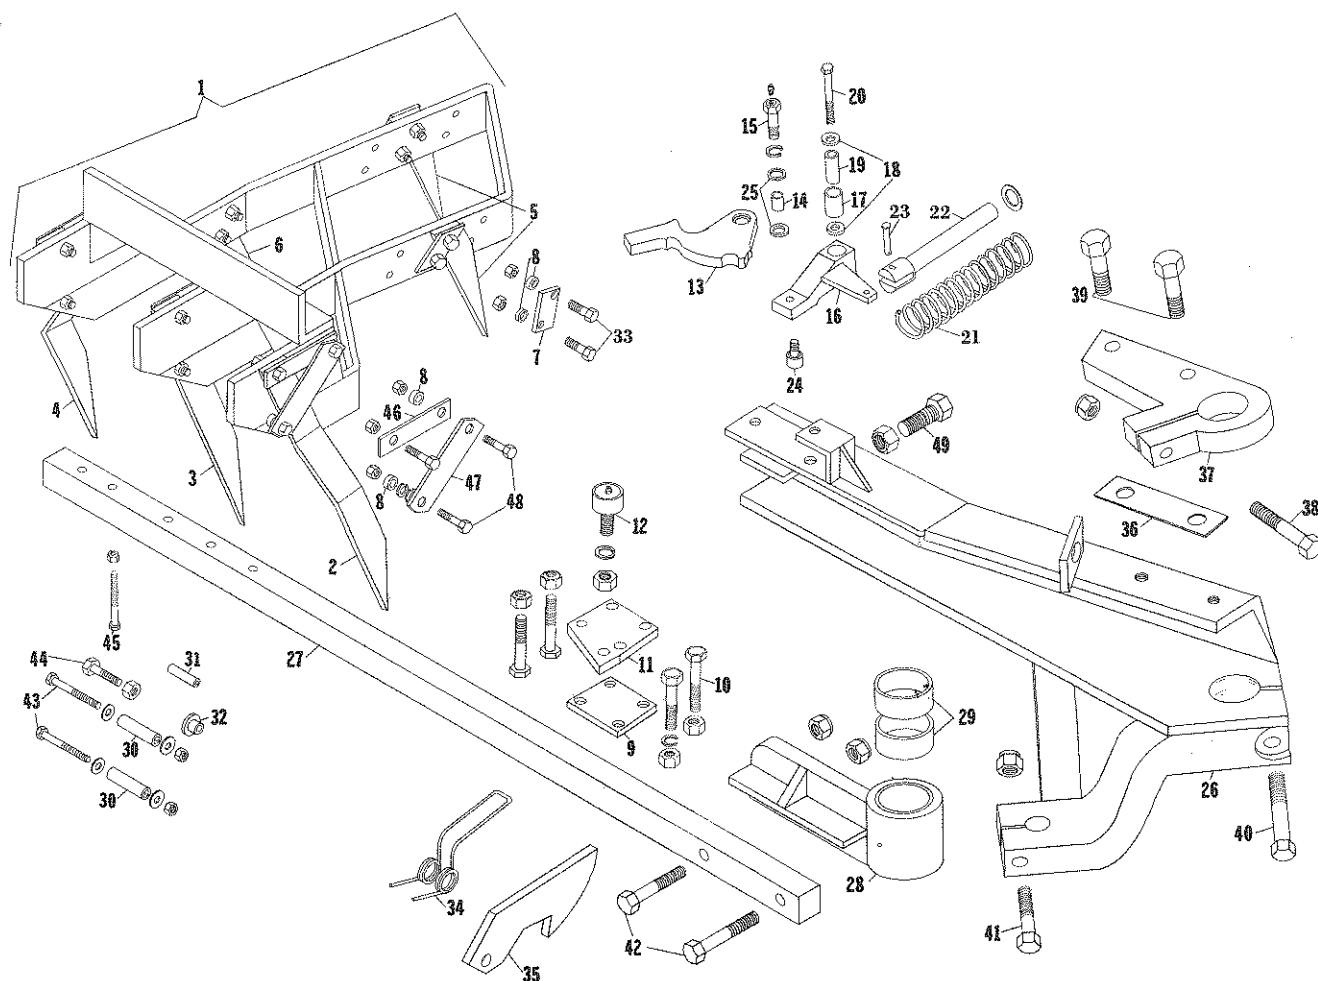


FEED ARM AND FEED FORK

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7966	Feed fork complete	29	F 1235	Bushing for torque shaft bearing, 2" x 2-1/2" x 1"
2	F 7967	Tine, trailing, inside, 1" offset	30	F 7275	Roll pin, 1/2" x 2" (2 used)
3	F 7968	Tine, trailing, center	31	F 7239	Roll pin, 3/8" x 1-1/2"
4	F 7969	Tine, trailing, outside, 2-1/2" offset	32	F 7276	Ferrule for F 1563
5	F 1603	Tine, leading, short (2 used)	33		7/16" x 1-1/2" N.F.H.T. cap screw
6	F 1189	Tine, outside center	34	F 281	Spring latch
7	F 1195	Clip for tines	35	F 1563	Catch for torque shaft
8	F 1193	Bushing and stop for tines	36	F 1648	Shim for straddle mount, 16 ga.
9	F 7532	Bottom plate		F 1649	Shim for straddle mount, 22 ga.
10	F 7534	Bolt, 3/8" x 2-3/4" N.F.H.T.	37	F 1634	Straddle mount plate for pivot shaft
11	F 7533	Roller plate			
12	F 4050	Latch roller	38		Bolt, 1/2" x 3" NF with nut, straddle mount plate clamp
13	F 7604	Latch	39		5/8" x 1-3/4" N.C. cap screw, straddle mount plate
14	F 7607	Bushing for F 7604 latch	40	F 1673	1/2" x 3" N.F. cap screw with lock nut, grade 8, feed arm clamp
15	F 7605	Latch hinge pin	41		1/2" x 4-1/4" N.F. cap screw with lock nut, clamp for feed arm pin
16	F 7606	Trip arm	42		1/2" x 3" N.F. cap screw with lock nut, torque shaft
17	F 1556	Trip arm bushing	43		5/16" x 2-1/2" N.C. cap screw, for spring and stop latch
18	F 1557	O ring (2 used)	44		7/16" x 1-1/2" N.C. cap screw, latch hinge pin
19	F 1558	Trip arm sleeve	45		3/8" x 2-1/2" N.F.H.T. cap screw (5 used)
20	F 1559	Trip arm pin	46	F 7970	Strap for feed fork tine, inside
21	F 1635	Trip arm spring	47	F 7971	Strap for feed fork tine, outside
22	F 1643	Trip arm spring rod	48		7/16" x 1-3/4" NFHT cap screw
23	F 1561	Trip arm spring rod clevis pin	49		5/8" x 1-3/4" NC cap screw w/nut
24	F 822	Cam follower for spring arm (CF1-S)			
25	F 7610	Quad ring for F 7604 latch			
26	F 7577	Feed arm			
27	F 7529	Torque shaft, 1-1/2"			
28	F 7660	Torque shaft bearing with bushing			

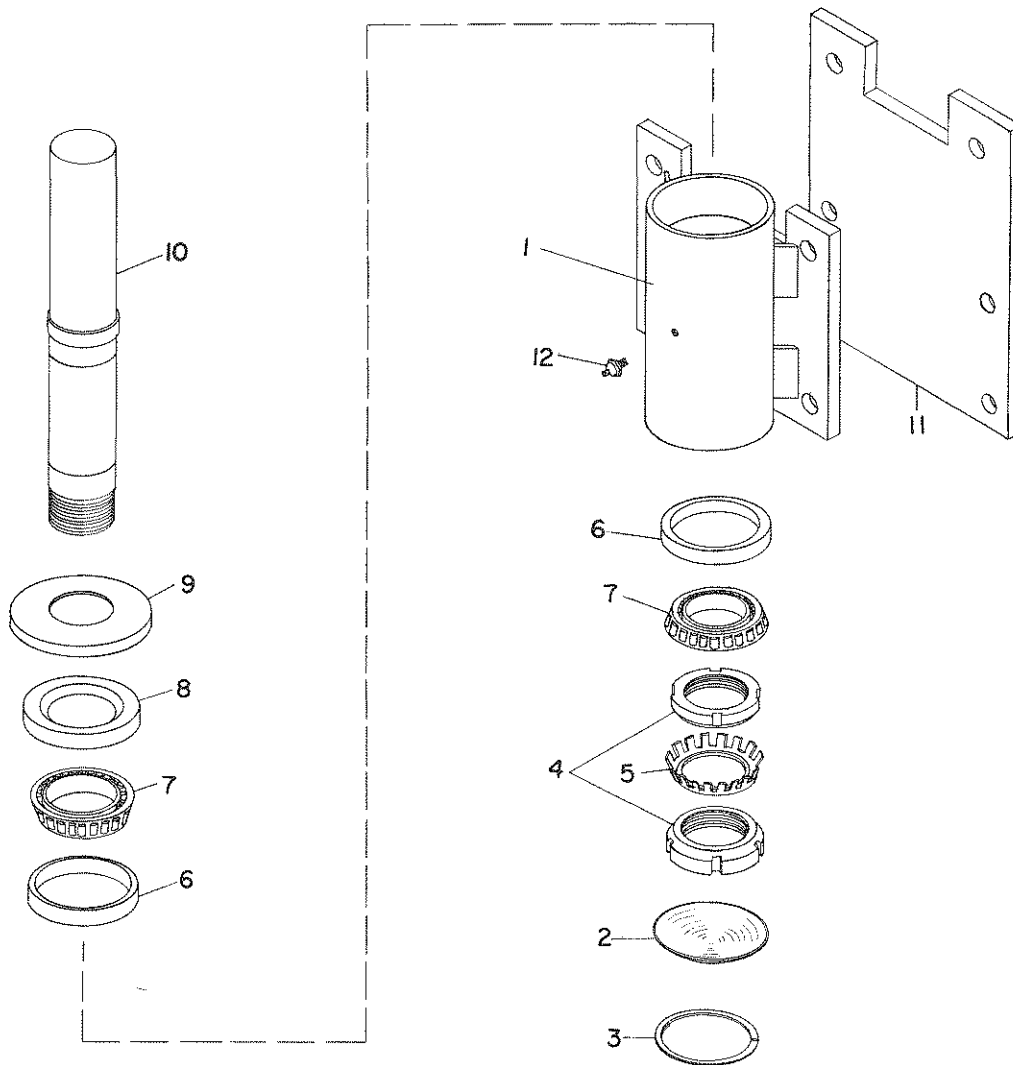


FEED ARM PIVOT SHAFT

REF. NO.	PART NO.	DESCRIPTION
1	F 1244	Feed arm bearing housing w/2-F5445 bearing cups
2	F 1248	Plug cap (HP 3750-134)
3	F 1247	Retaining ring (RR 375)
4	F 1245	Nut, bearing takeup (N-10) (2 used)
5	F 1246	Lock washer (W-10)
6	F 5445	Bearing cup (362A) (2 used)
7	F 5446	Bearing cone (368A) (2 used)
8	F 1428	Oil seal, used with F 1427 shaft (nat. 55093)
9	F 1239	Dust cap
10	F 1427	Pivot shaft
11	F 1250	Pivot shaft plate, 16" chamber
	F 1251	Pivot shaft plate, 17" chamber
12	F 1661	Hydraulic shut-off fitting # 1940B

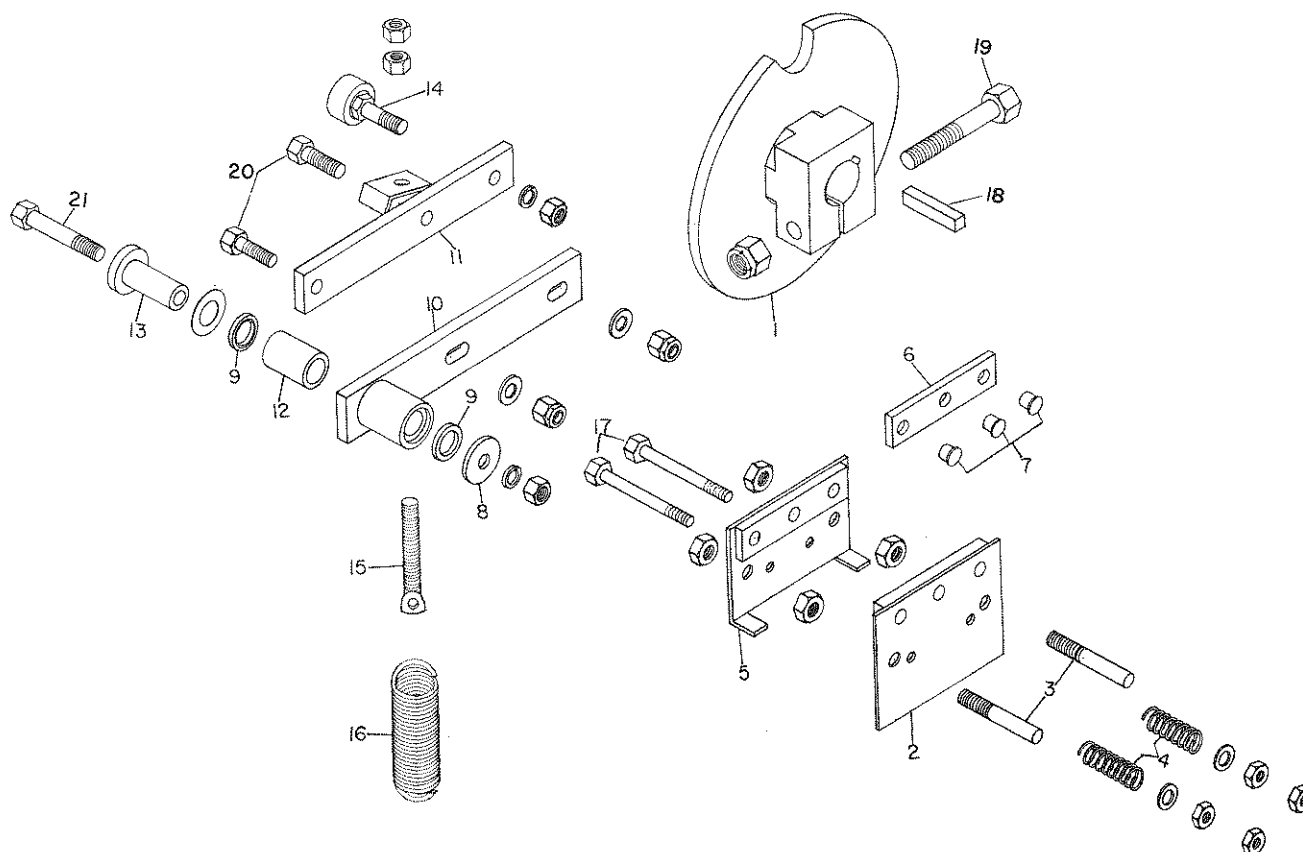


KNOTTER BRAKE ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7528	Brake disc with hard notch, 1-3/8"	13	F 7585	Saddle lever sleeve
2	F 7450	Outside brake plate with lining	14	F 1572	Cam follower, saddle lever
3	F 7451	Brake plate stud (2 used)	15	F 7448	Saddle lever spring eyebolt
4	F 7453	Brake plate spring (2 used)	16	F 7559	Saddle lever spring
5	F 7449	Inside brake plate with lining	17	F 7452	Brake plate bolt, 1/4" x 3-1/2"
6	F 7454	Brake lining with rivets (2 used)			N.C.
7		Rivets for brake lining (6 used)	18	F 7904	3/8" x 3/8" x 2" key for brake disc
8	F 246	Saddle lever washer	19		1/2" x 3-1/4" N.C. cap screw w/fibre lock nut for brake clamp
9	F 7587	Seal for saddle lever anchor (63123 Victor)	20		5/16" x 1-1/4" N.C. cap screw w/fibre lock nut for saddle lever
10	F 7561	Saddle lever lower half with bushing	21		3/8" x 3-1/2" N.C. cap screw w/fibre lock nut for saddle lever anchor
11	F 7560	Saddle lever upper half with spring anchor			
12	F 7586	Bushing for saddle lever, 3/4" x 1" x 1-1/2"			

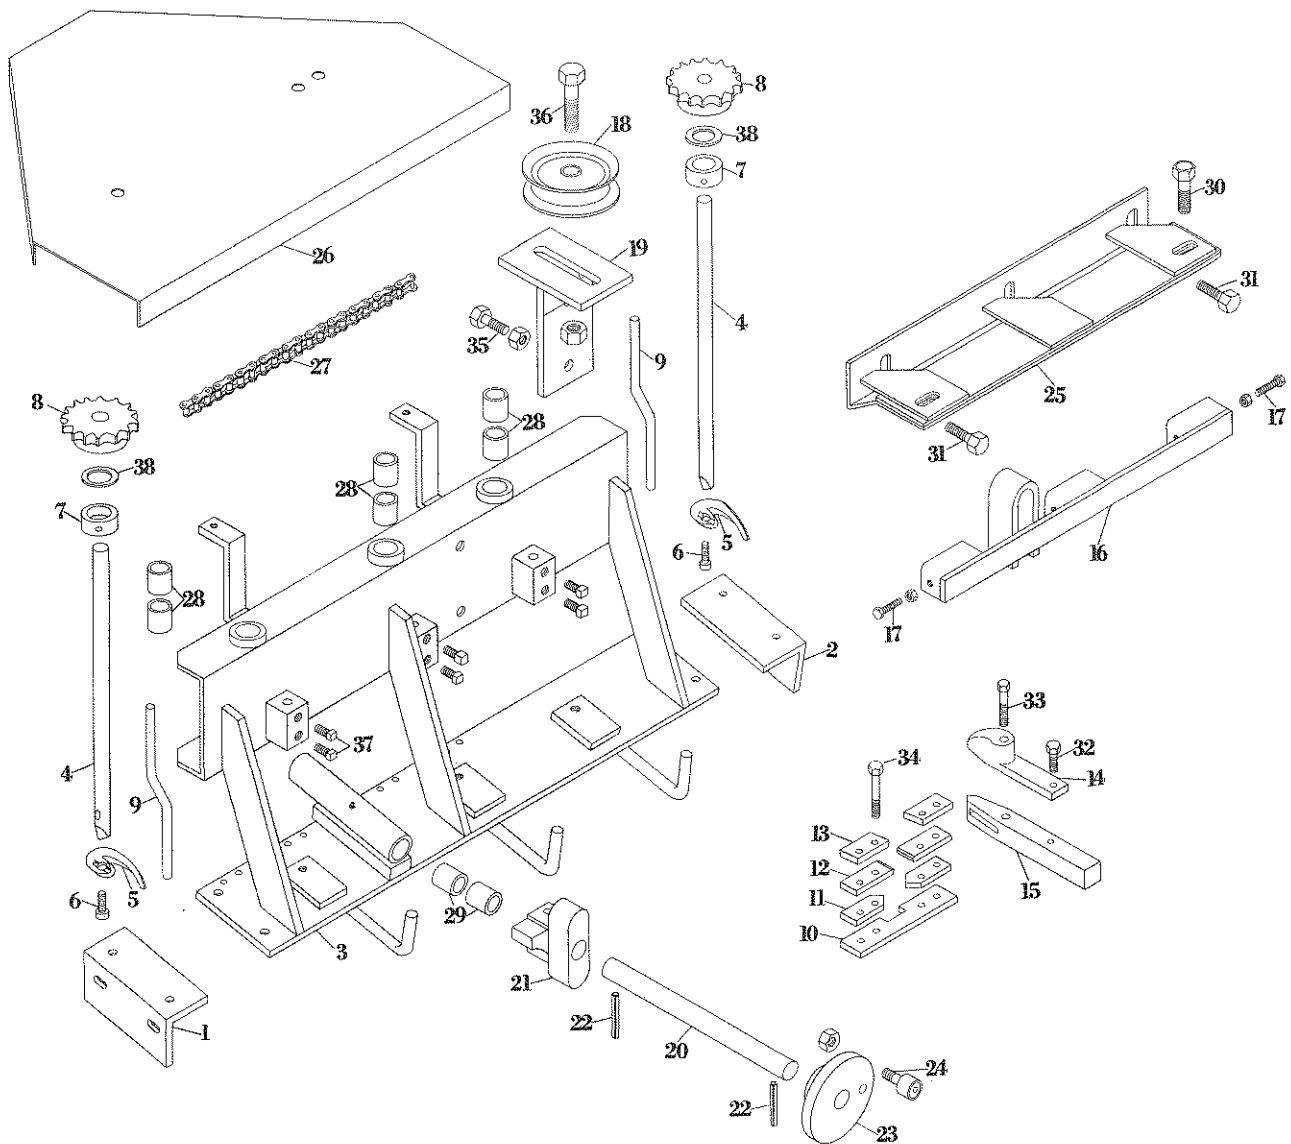


WIRE KNOTTER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7062	Knotter mounting angle, L. H.	21	F 7075	Shuttle bar drive cam
2	F 7065	Knotter mounting angle, R.H.	22	F 7076	Roll pin, 1/4" x 1-1/2"
3	F 7793	Twister and shuttle bar frame	23	F 7078	Shuttle bar crank flange
4	F 7089	Twister shaft	24	F 7079	Cam follower
5	F 4046	Twister hook	25	F 7794	Upper wire guide bracket
6	F 7248	Twister hook bolt	26	F 7064	Shield
7	F 172	Set collar, 3/4"	27	F 7796	Twister drive chain, 77P # 40
8	F 4024	Sprocket, twister shaft, 15T	28	F 7227	Bushing, twister shaft
9	F 7318	Wire holder rod	29	F 7227	Bushing, cam shaft
10	F 7087	Wire knife	30		3/8" x 1-1/4" N.C. cap screw
11	F 7086	Gripper spacer, bottom	31		3/8" x 1" N.C. cap screw
12	F 7085	Wire gripper	32		5/16" x 3/4" N.C. cap screw
13	F 7084	Gripper top plate	33		3/8" x 2-1/2" N.F.H.T. cap screw
14	F 7312	Wire divider	34		5/16" x 1-3/4" N.F.H.T. cap screw
15	F 7313	Wire gripper tongue	35		3/8" x 1" N.C. cap screw
16	F 7792	Shuttle bar with adjusting screws	36		1/2" x 2" N.C. cap screw
17	F 7081	Shuttle bar adjusting screws	37		3/8" x 3/4" N.C. square head set screw
18	F 7330	Chain tightener pulley	38		Washer, 10 ga., 3/4"
19	F 7329	Chain tightener pulley bracket			
20	F 7077	Cam shaft			

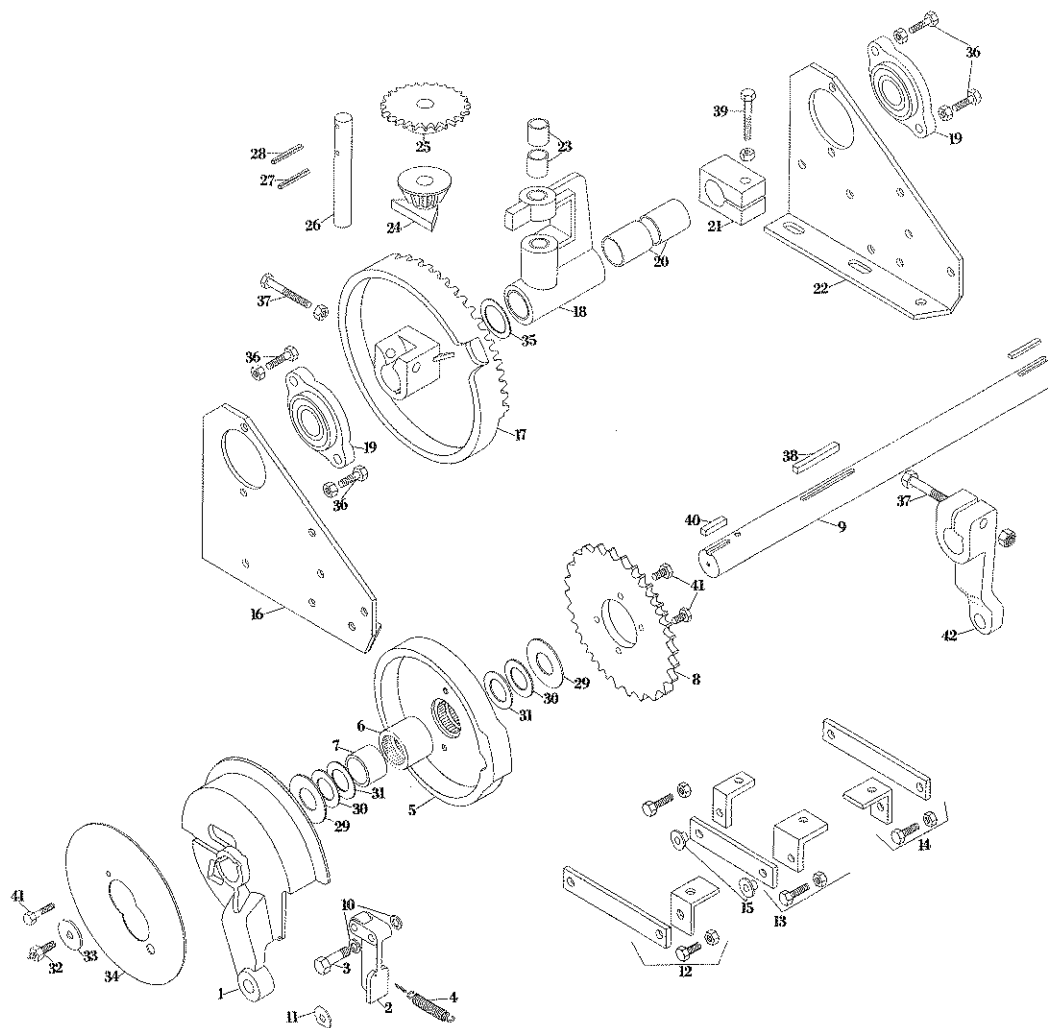


WIRE KNOTTER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7519	Clutch w/pawl, 1-3/8"	23	F 7247	Bushing for F 7072 frame, 7/8" x 1" x 1"
2	F 1622	Clutch pawl	24	F 7431	Pinion
3	F 1633	Clutch pawl pin	25	F 7257	Twister drive sprocket, 40B25
4	F 4115	Spring, clutch pawl	26	F 7069	Pinion shaft
5	F 4133	Notched clutch disc with F 4134 bearing, 1-3/8"	27	F 7076	Roll pin, pinion to shaft, 1/4" x 1-1/2"
6	F 4134	Bearing for F 4133 disc	28	F 4030	Roll pin, sprocket to shaft 1/4" x 2"
7	F 4135	Inner race for F 4134 bearing	29	F 4136	Hardened washer, 1-3/8" I.D., 16 ga.
8	F 755	Clutch sprocket (32T-#60)	30	F 4159	Knotter shaft spacer washer, 10 ga.
9	F 7456	Knotter shaft	31	F 4161	Knotter shaft spacer washer, 18 ga.
10	F 1623	Washer, 7/16" I.D. x 7/8" O.D. x .025"	32	F 1576	Adapter with 1950 zerk, end of knotter shaft
11	F 1620	Clutch pawl pin lock	33	F 246	Knotter shaft end washer, L. H.
12	F 7349	Brace w/angle, L.H.	34	F 7987	Shield for knotter clutch
13	F 7346	Brace w/angle, center	35	F 4159	Washer spacer, 10 ga., 1-3/8" I.D.
14	F 7345	Brace w/angle, R.H.		F 4160	Washer spacer, 14 ga., 1-3/8" I.D.
15	F 440	Ferrule for F 7346 brace		F 4161	Washer spacer, 18 ga., 1-3/8" I.D.
16	F 7571	Knotter mount, L. H.	36		3/8" x 1-1/2" NC cap screw
17	F 7432	Intermittent gear	37		1/2" x 3" NC cap screw
18	F 7072	Pinion frame	38		3/8" x 3/8" x 2-3/4" Key
19	F 7063	Bearing, knotter shaft (2 used)	39		1/2" x 2-3/4" NC cap screw
20	F 4137	Bushing for F 7072 frame, 1-3/8" x 1-1/2" x 2"	40		3/8" x 3/8" x 2" key
21	F 4138	Clamp collar	41		3/8" x 1" NC Cap screw
22	F 7570	Knotter mount, R.H.	42	F 7461	Needle yoke drive arm
				F 7980	Wire knotter complete with clutch & brake

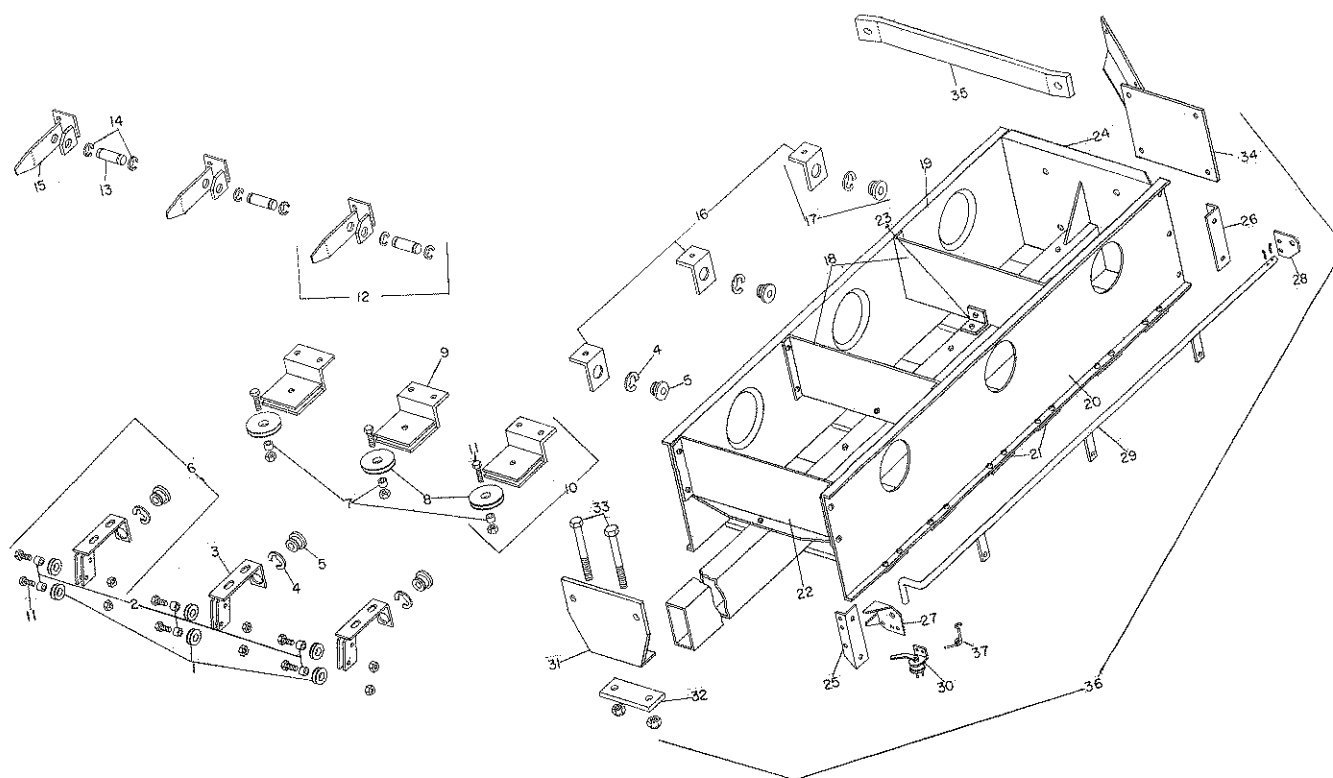


WIRE BOX AND WIRE GUIDES

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 4014	Roller for wire guide and needle	21	F 7640	Wire box bottom slats
2	F 4015	Bushing for F 4014 roller	22	F 7641	Wire box end, left
3	F 4222	Wire guide frame only (lower rear)	23	F 7642	Wire box divider angle
4	F 857	Snap ring for F 856 bushing	24	F 7643	Wire box base with end plate
5	F 856	Wire guide bushing	25	F 7644	Angle for wire alarm mounting bracket, L. H.
6	F 4205	Wire guide complete, lower rear	26	F 7645	Angle for wire alarm mounting bracket, R.H.
7	F 4068	Bushing for F 4067 roller	27	F 4191	Mounting bracket for wire alarm rod, L. H.
8	F 4067	Roller, lower front wire guide	28	F 4190	Mounting bracket for wire alarm rod, R.H.
9	F 4223	Wire guide frame only, lower front	29	F 7608	Rod for wire alarm
10	F 4069	Wire guide complete, lower front	30	F 946	Switch only for wire alarm
11		Bolt with lock nut, 1/4" x 1" N.C. Cap screw	31	F 7555	Wire box mounting bracket
12	F 4203	Upper wire guide complete with pin	32	F 7556	Bottom support plate for F 7555
13	F 4204	Upper wire guide wear pin	33		Bolt with nut, 1/2" x 5-1/2" N.C. Cap screw
14	F 5159	Snap ring for wear pin	34	F 7557	Wire box mounting bracket, R.H.
15	F 4225	Upper wire guide, bracket only	35	F 7705	Brace for F 7557 RH wire box bracket
16	F 4163	Wire guide bracket, rear	36	F 7515	6 compartment wire box complete with braces and harness
17	F 4224	Wire guide bracket complete with bushing	37	F 4210	Spring for wire alarm rod
18	F 7637	Wire box divider			
19	F 7638	Wire box side, front			
20	F 7639	Wire box side, rear			

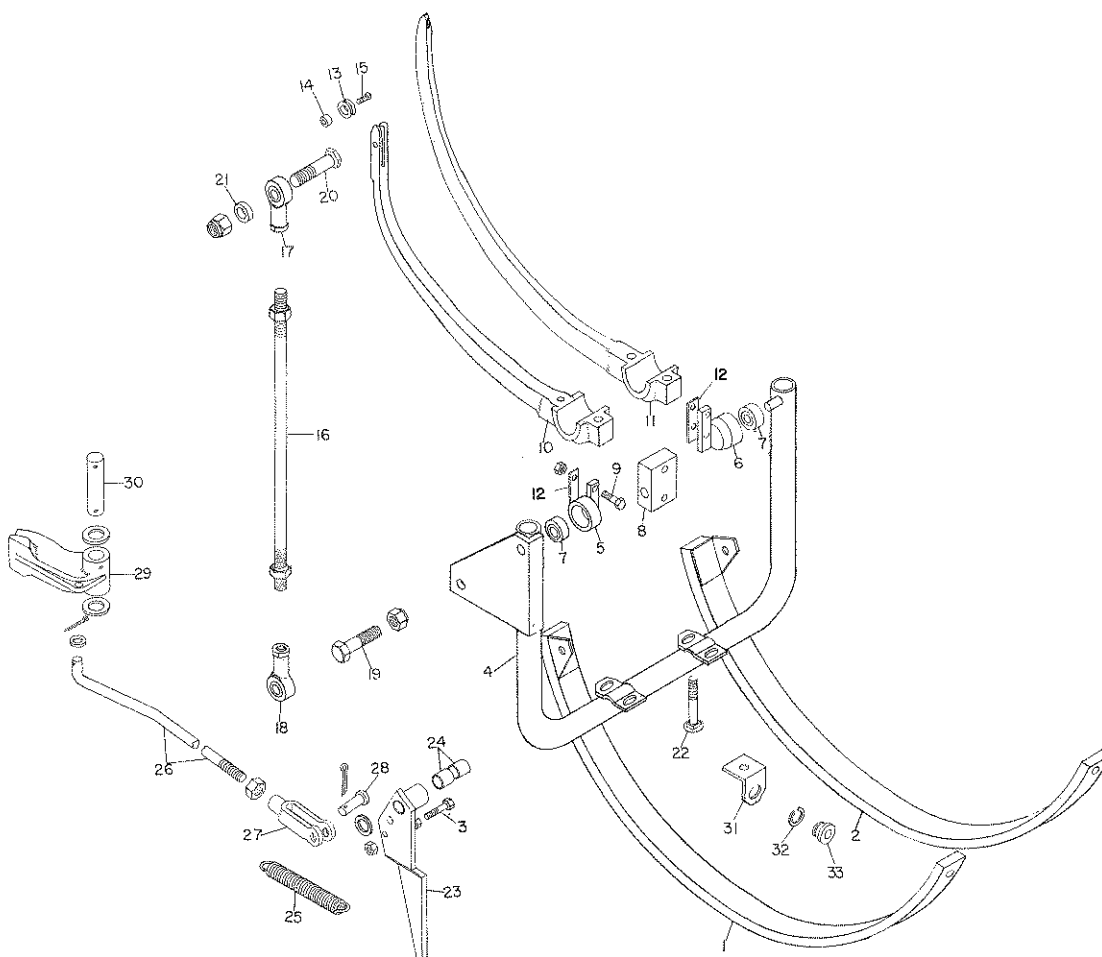


NEEDLE AND YOKE ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7569	Needle guard, L. H.	16	F 7554	Needle yoke drive rod, wire
2	F 7568	Needle guard, R. H.		F 1548	Needle yoke drive rod, twine
3		3/8" x 2" N.C. Cap screw	17	F 1550	Needle yoke drive rod end, L.H. thread
4	F 7903	Needle yoke, wire	18	F 1549	Needle yoke drive rod end, R.H. thread
	F 7972	Needle yoke, twine	19	F 1552	Bolt, drive rod to needle yoke with nut
5	F 7522	Needle yoke bearing complete, L. H., wire only	20	F 1551	Bolt, drive rod to clutch with nut
6	F 7521	Needle yoke bearing complete, R.H. wire only		F 1574	Bolt, drive rod to R.H. needle yoke drive arm
7	F 7523	Bearing for F 7521 and F 7522, KP12A wire only	21	F 172	Spacer collar used on twine tie only
8	F 4150	Needle yoke bearing, R.H. and L. H., twine only	22	F 7552	Bolt, needle to yoke with nut, 1/2" x 3-1/4" carriage
9		1/2" x 1-3/4" NC cap screw	23	F 7652	Plunger dog return lever
		1/2" x 2-1/4" NC cap screw	24	F 7845	Bushing for plunger dog return lever, 7/8" x 1" x 7/8"
10	F 7711	Needle, wide base, wire	25	F 1517	Plunger dog return spring
11	F 1611	Needle, cast iron curved, twine	26	F 7524	Plunger dog return rod
12	F 1702	Shim for wire needle yoke bearing	27	F 7526	Clevis for dog return rod
	F 1701	Shim for twine needle yoke bearing	28	F 7527	Clevis pin for F 7526 clevis
13	F 4014	Roller for needle and wire guide, 21/32" bore	29	F 7547	Plunger stop dog
14	F 4015	Bushing for F 4014 roller	30	F 7588	Plunger dog pin
15	F 4016	Bolt, needle roller	31	F 7973	Holder for needle twine guide bushing
			32	F 857	Snap ring for F 856
			33	F 856	Twine guide bushing

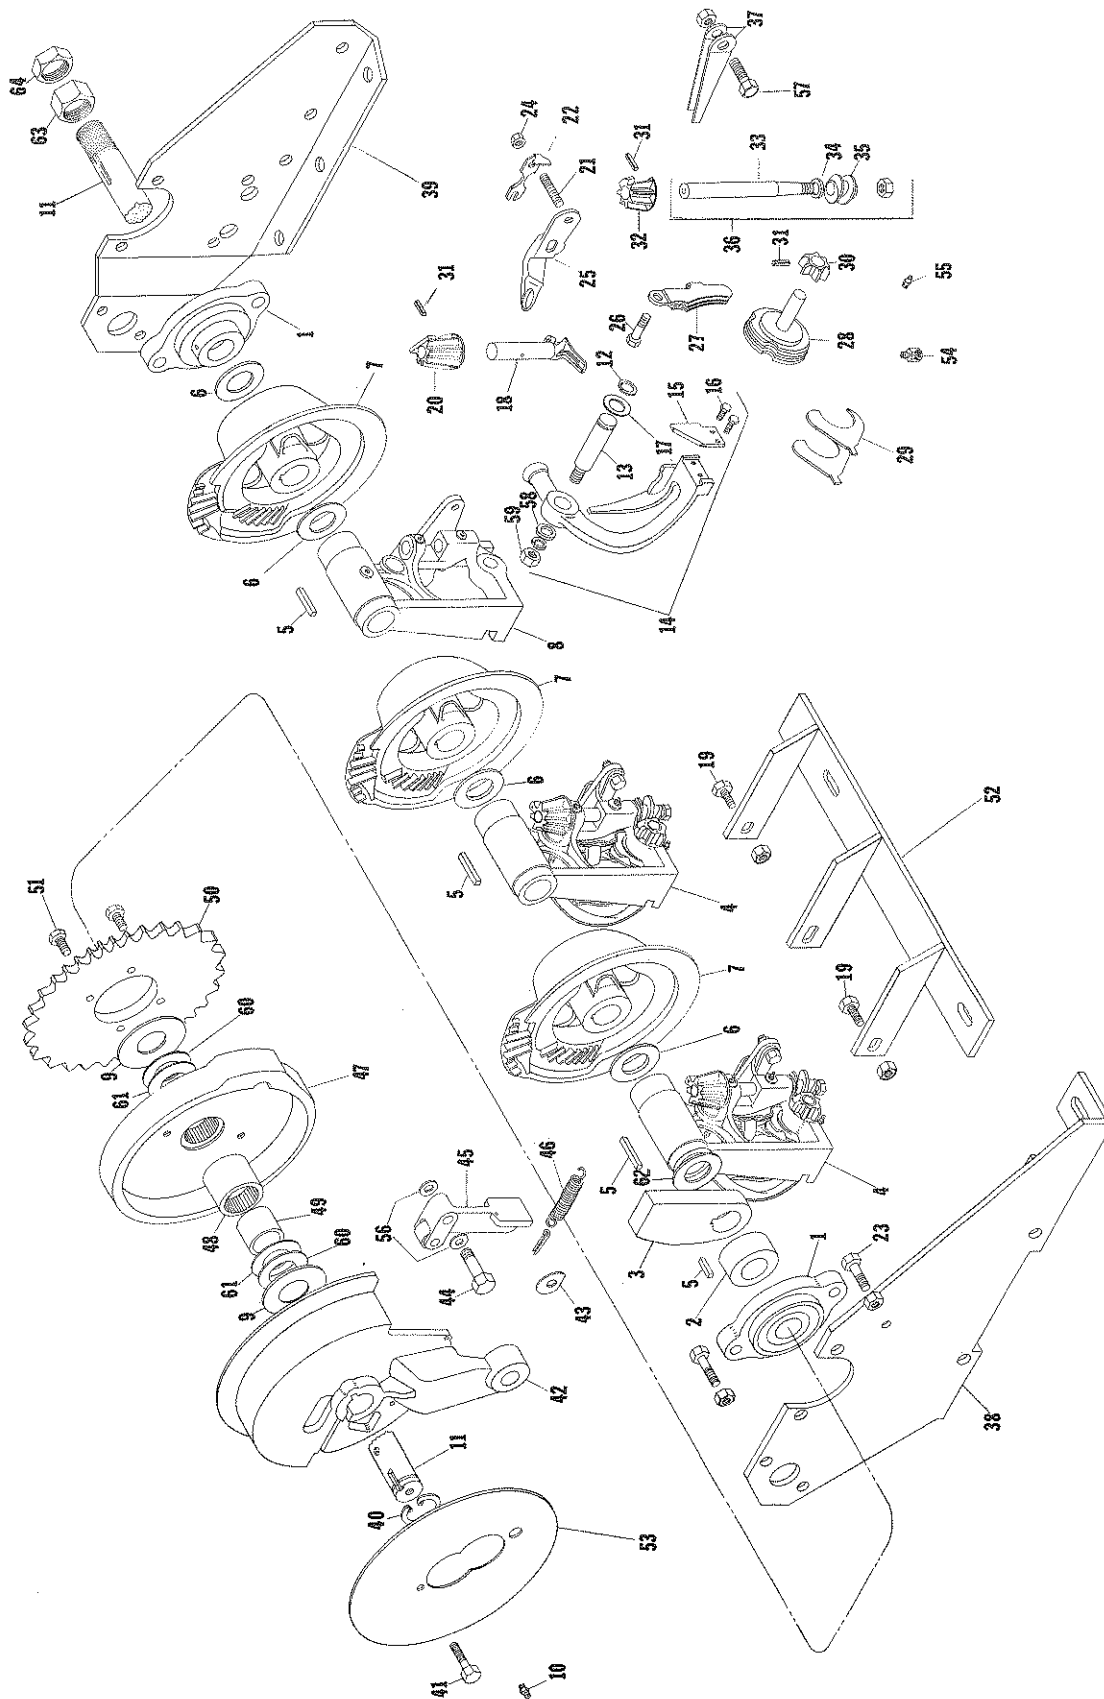


TWINE KNOTTER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7063	Knotter shaft bearing, 1-3/8"	34	F 1680	Washer, knotter worm shaft, 28 ga.
2	F 99	1-3/8" set collar		F 657	Washer, knotter worm shaft, 10 ga.
3	F 7940	Twine finger drive cam		F 658	Washer, knotter worm shaft, 14 ga.
4	F 8053	Knotter frame complete		F 659	Washer, knotter worm shaft, 18 ga.
5	F 4104	Key, 3/8" x 3/8" x 1-1/2", cam gear	35	F 7875	Knotter worm only
	F 7904	Key, 3/8" x 3/8" x 2", clutch	36	F 7876	Knotter worm and shaft complete
	F 8054	Key, 3/8" x 3/8" x 3/4", Cam	37	F 8052	Twine holder spring, 2 used
6	F 4159	Knotter shaft spacer washer, 10 ga.	38	F 8093	Twine knotter mount, L.H.
	F 4160	Knotter shaft spacer washer, 14 ga.	39	F 8094	Twine knotter mount, R.H.
	F 4161	Knotter shaft spacer washer, 18 ga.	40	F 7988	Snap ring, # 5160-137
	F 7977	Knotter shaft spacer washer, .010"	41		3/8" x 1" N.C. Cap screw
	F 7978	Knotter shaft spacer washer, .005"	42	F 7519	Clutch w/pawl, 1-3/8" shaft
7	F 7942	Knotter cam gear	43	F 1620	Clutch pawl pin lock
8	F 7943	Knotter frame only	44	F 1633	Clutch pawl pin
9	F 4136	Hardened washer, 1-3/8" I.D., 16 ga.	45	F 1622	Clutch pawl
10		1/8" P.T. straight grease fitting #1710B	46	F 4115	Spring clutch pawl
11	F 7986	Knotter shaft, adjustable, 330T, 1-3/8"	47	F 4133	Notched clutch disc w/F4134 bearing
12	F 7976	Snap ring for knife arm pin			Bearing
13	F 7884	Knife arm pin	48	F 4134	Inner race
14	F 8050	Knife arm complete	49	F 4135	Sprocket, knotter clutch, 60A32
15	F 8049	Twine knife	50	F 755	3/8" x 1" NC cap screw
16	F 7859	Twine knife screw	51	F 7953	Knotter head anchor
17	F 7860	Knife arm washer	52	F 7987	Shield for knotter clutch
18	F 7861	Knotter bill hook	53	F 7882	Zerk, 90°
	F 8068	Knotter bill hook pinion spacer washer .020"	54	F 7883	Zerk, straight
		Knotter bill hook pinion spacer washer, .035"	55	F 1623	Washer, clutch pawl
	F 8069	Trigger for F 7861 Knotter bill hook	56		3/8" x 1" cap screw
		Pin for F 8070 trigger	57		Knife arm shaft washer
19	F 8070	3/8" x 1-1/4" NC Cap screw	58	F 7892	Knife arm shaft nut
20	F 8071	Pinion, knotter hook, steel cut	59	F 7893	Knotter shaft spacer washer, 10 ga.
21	F 1700	Knotter hook cam adjusting screw	60	F 4159	Knotter shaft spacer washer
22	F 7948	Knotter hook cam adjusting spring	61	F 4161	Knotter shaft spacer washer, 10 ga.
23	F 7947	7/16" x 1-1/2" NF Cap screw	62	F 4159	(use 1)
24		Knotter hook cam adj. screw nut			Knotter shaft spacer washer, 14 ga.
25	F 7949	Twine holder bolt			(use 2)
26	F 8051	Twine holder			(use 1)
27	F 7867	Twine disc			1-3/8" NF Hex nut
28	F 7868	Twine disc cleaner	63		1-3/8" NF Hex Jam nut
29	F 7869	Pinion, twine holder disc	64		
30	F 7870	Roll pin			Twine knotter assy. complete w/mounts, clutch assy., & brake assy.
31	F 7871	Pinion, knotter worm	F 8031		Twine knotter shaft assy. w/clutch & brake disc
32	F 7872	Pinion, knotter worm			
33	F 7873	Knotter worm shaft	F 8032		
	F 7874				

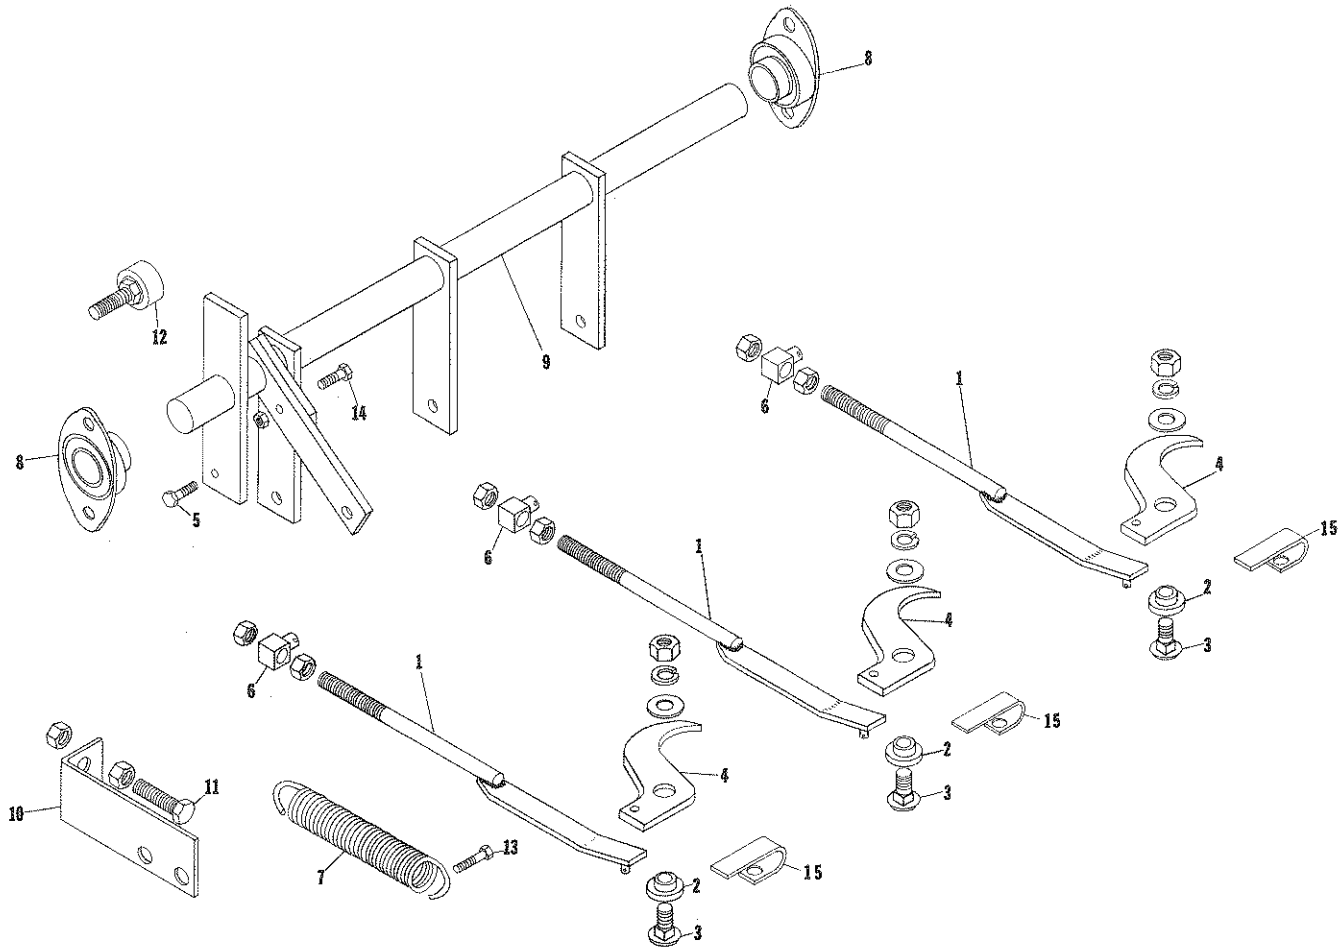


TWINE FINGER DRIVE

REF. NO.	PART NO.	DESCRIPTION
1	F 7956	Twine finger drive rod
2	F 7960	Bushing, twine finger
3		3/8" x 1-1/4" carriage bolt w/nut, Grade 8
4	F 7957	Twine finger
5		1/4" x 1" NC cap screw
6	F 452	Twine finger link block
7	F 1517	Spring, twine finger return
8	F 8095	Bearing, twine finger drive rod
9	F 7958	Twine finger drive shaft assembly
10	F 7959	Twine finger stop bracket
11		3/8" x 1-1-2" NC cap screw
12	F 1572	Cam follower
13		5/16" x 1-1/2" NC cap screw
14		1/4" x 1" NC cap screw
15	F 8033	Twine finger bolt guard

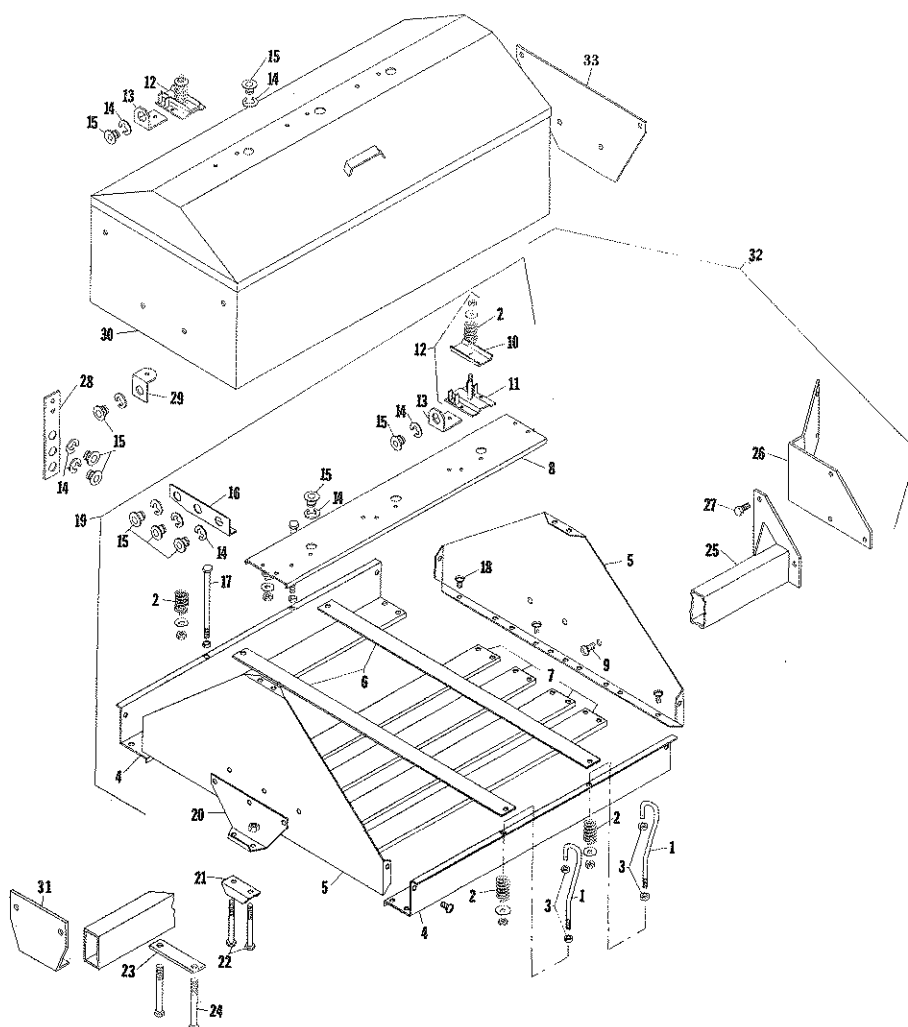


TWINE BOX AND TWINE GUIDES

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7927	Twine box hold down rod	20	F 7937	Twine box bracket
2	F 7541	Spring, twine box hold down	21	F 6318	Twine box clamp
3	F 7928	Set collar, 5/16"	22		3/8" x 5" NC Cap screw
4	F 7929	Twine box side	23	F 7556	Bottom support plate for F 7555
5	F 7930	Twine box end	24		1/2" x 5-1/2" NC cap screw
6	F 7931	Twine box hold down	25	F 7938	Twine box base tube with end mount
7	F 7932	Twine box bottom	26	F 7939	Twine box mounting bracket, R.H.
8	F 7933	Twine box top section	27		3/8" x 1" NC cap screw
9		3/8" x 3/4" flat head machine screw	28	F 525	Holder for twine guide bushing
10	F 7890	Twine tension top	29	F 7973	Holder for needle twine guide bushing
11	F 7889	Twine tension base	30	F 8064	Twine box, 6 compartment, dome lid
12	F 7891	Twine tension assembly	31	F 7555	Twine box tube mounting bracket, left hand
13	F 7898	Twine guide bushing holder	32	F 7985	Twine box, 9 compartment, large plastic twine balls, complete with base tube and mounting brackets
14	F 857	Snap ring for F 856	33	F 6317	Twine box bracket
15	F 856	Twine guide bushing			
16	F 7934	Twine guide bracket			
17	F 7935	Twine box hold down bolt			
18		1/4" x 1/2" flat head machine screw			
19	F 7936	Twine box complete, 9 compartment large plastic twine ball, Ref. 1-18			

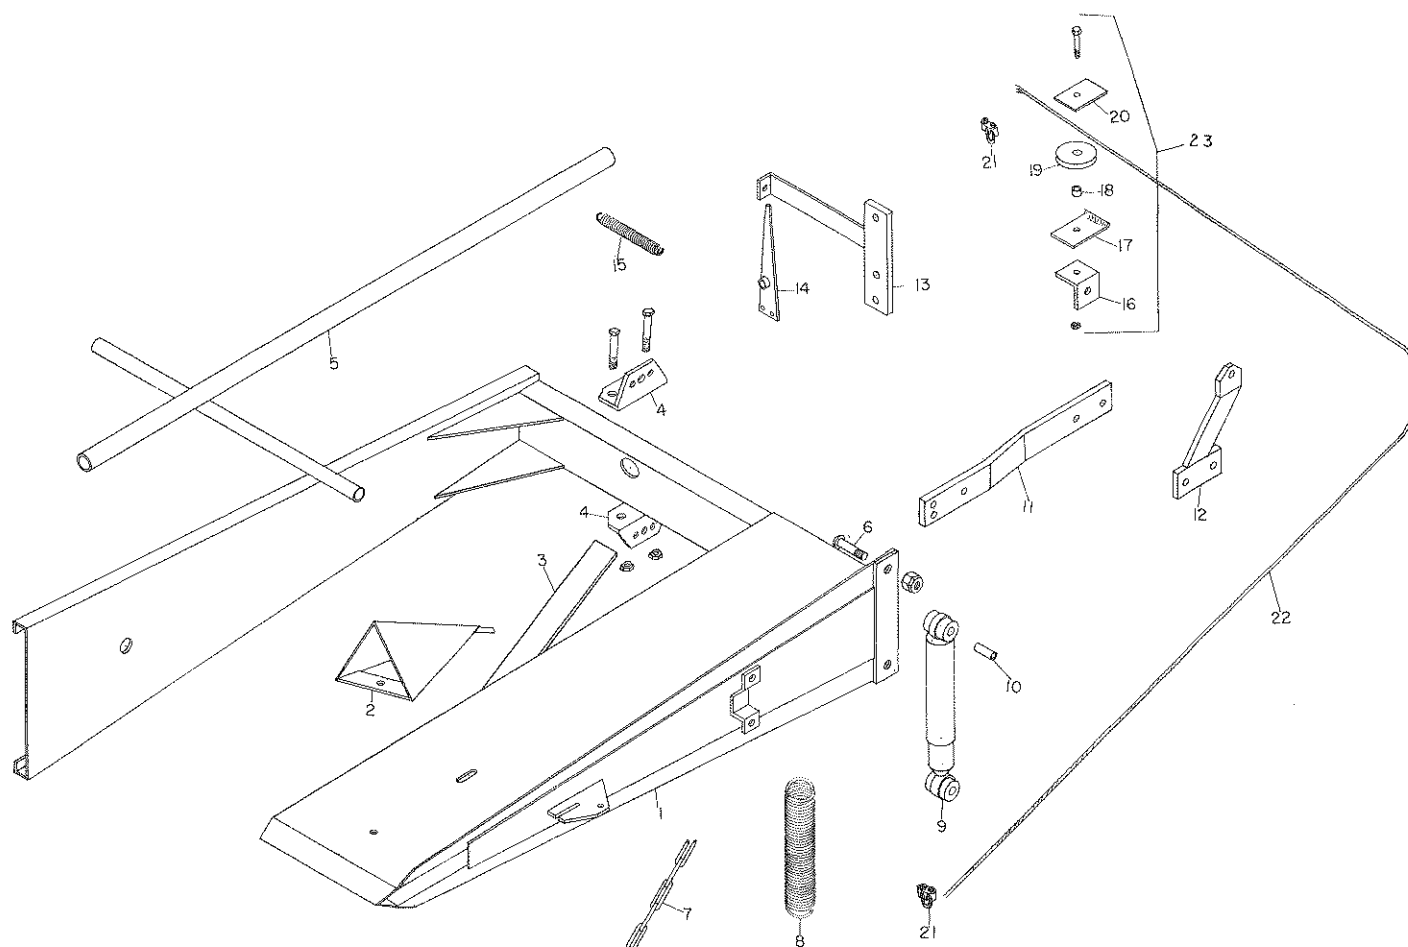


BALE CHUTE AND WEIGHT INDICATOR

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7600	Bale chute, frame only	10	F 993	Bushing for shock absorber
2	F 7655	Bale turner	11	F 1638	Shock absorber support
3	F 7656	Bale skid	12	F 1639	Cable bracket
4	F 7657	Bale skid bracket, 2 used	13	F 997	Weight indicator bracket
5	F 7624	Flat chute adapter for combination chute	14	F 998	Indicator hand
6	F 7658	Button head bolt, 1/2" x 1-1/2"	15	F 268	Indicator return spring
7	F 7659	Chain, bale chute	16	F 999	Mounting angle for F 7236 sheave
8	F 985	Spring, bale chute, 3-tie turning	17	F 994	Shield for F 4067 roller
9	F 987	Spring, bale chute, 3-tie flat	18	F 4068	Bushing for F 4067 roller
	F 988	Shock absorber	19	F 4067	Roller for F 7236 sheave
			20	F 995	Plate for F 4067 roller
			21	F 990	Cable clamp, 1/8" (2 used)
			22	F 7661	Indicator cable, 1/8" aircraft 65"
			23	F 7236	Sheave complete, bale weight indicator

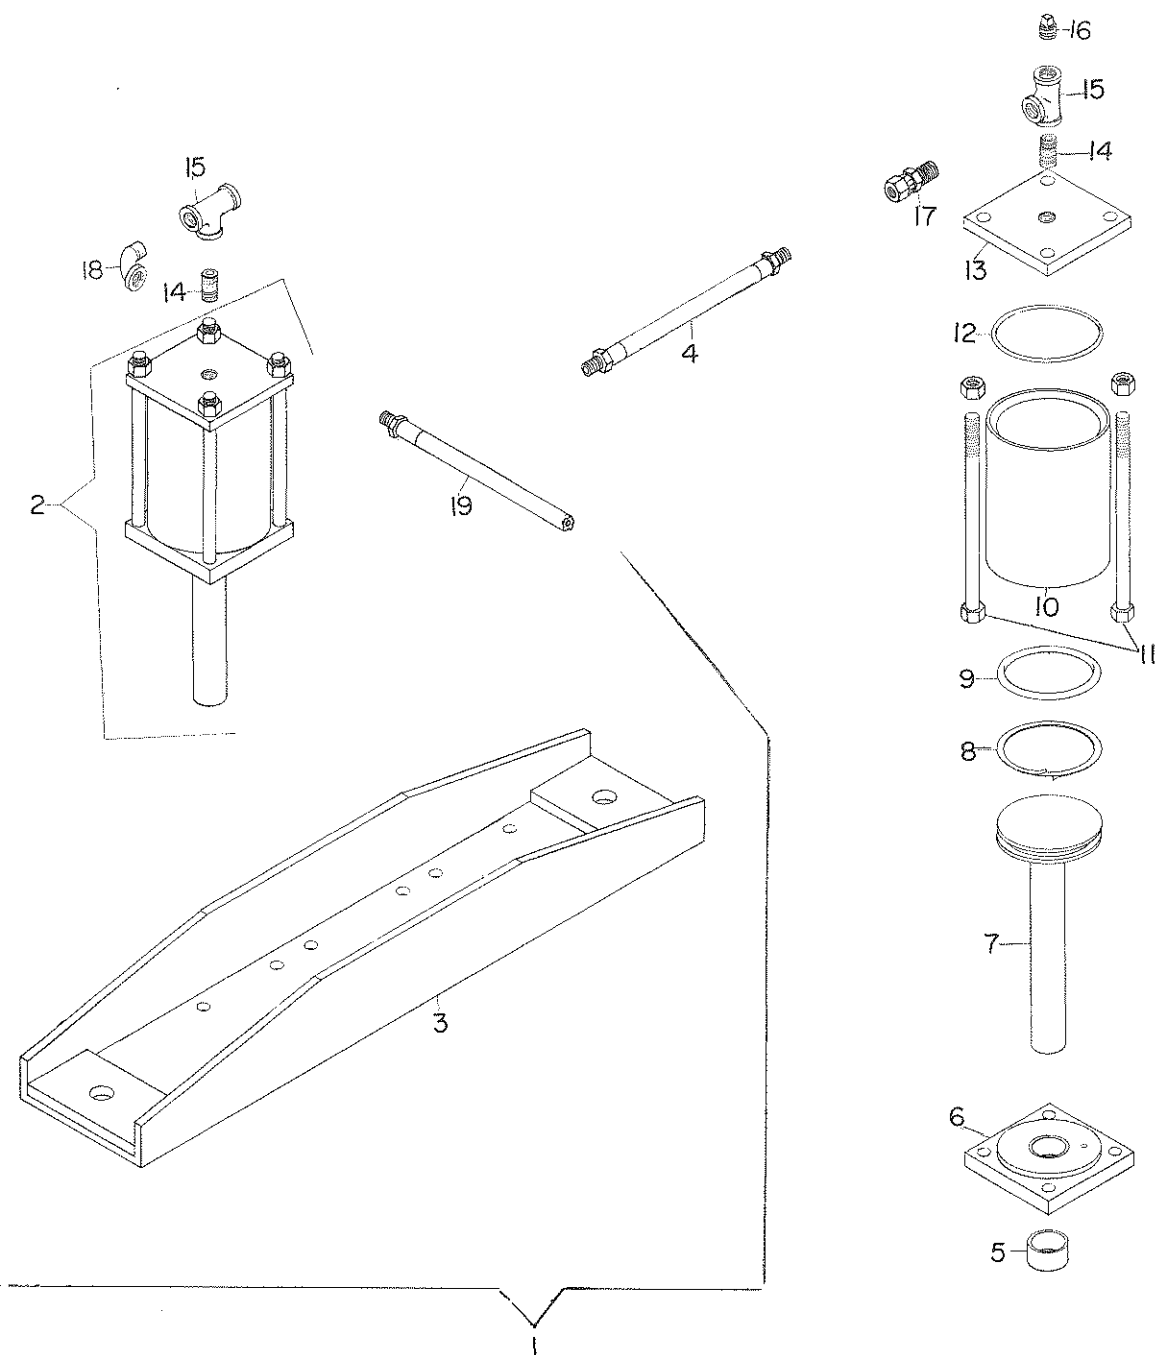


TENSION CONTROL RAM ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 183	Dual ram assy., complete	9	FT 12	O-ring for piston
2	FT 198	3" cylinder complete with top and bottom	10	FT 10	Cylinder
3	FT 181	Cylinder frame	11	FT 16	Tie bolt, 3/8" x 7" N.F.H.T. with nut (4 used)
4	FT 163	Pressure hose, ram to ram, 13-1/4"	12	FT 15	O-ring top seal
5	FT 19	Bushing for FT 14 (1" x 1-1/4" x 5/8")	13	FT 13	Cylinder top
6	FT 14	Cylinder bottom with bushing	14	FT 73	Nipple, 1/4" x 1-1/2"
7	FT 11	Piston	15	FT 74	Tee, 1/4"
8	FT 137	Back up ring for FT 12 (MS-28782 -37)	16	FT 75	Pipe plug, 1/4"
			17	FT 107	Union Swivel, 1/4"
			18	FT 18	Street elbow, 1/4"
			19	FT 136	Pressure hose, bypass to ram, 24"

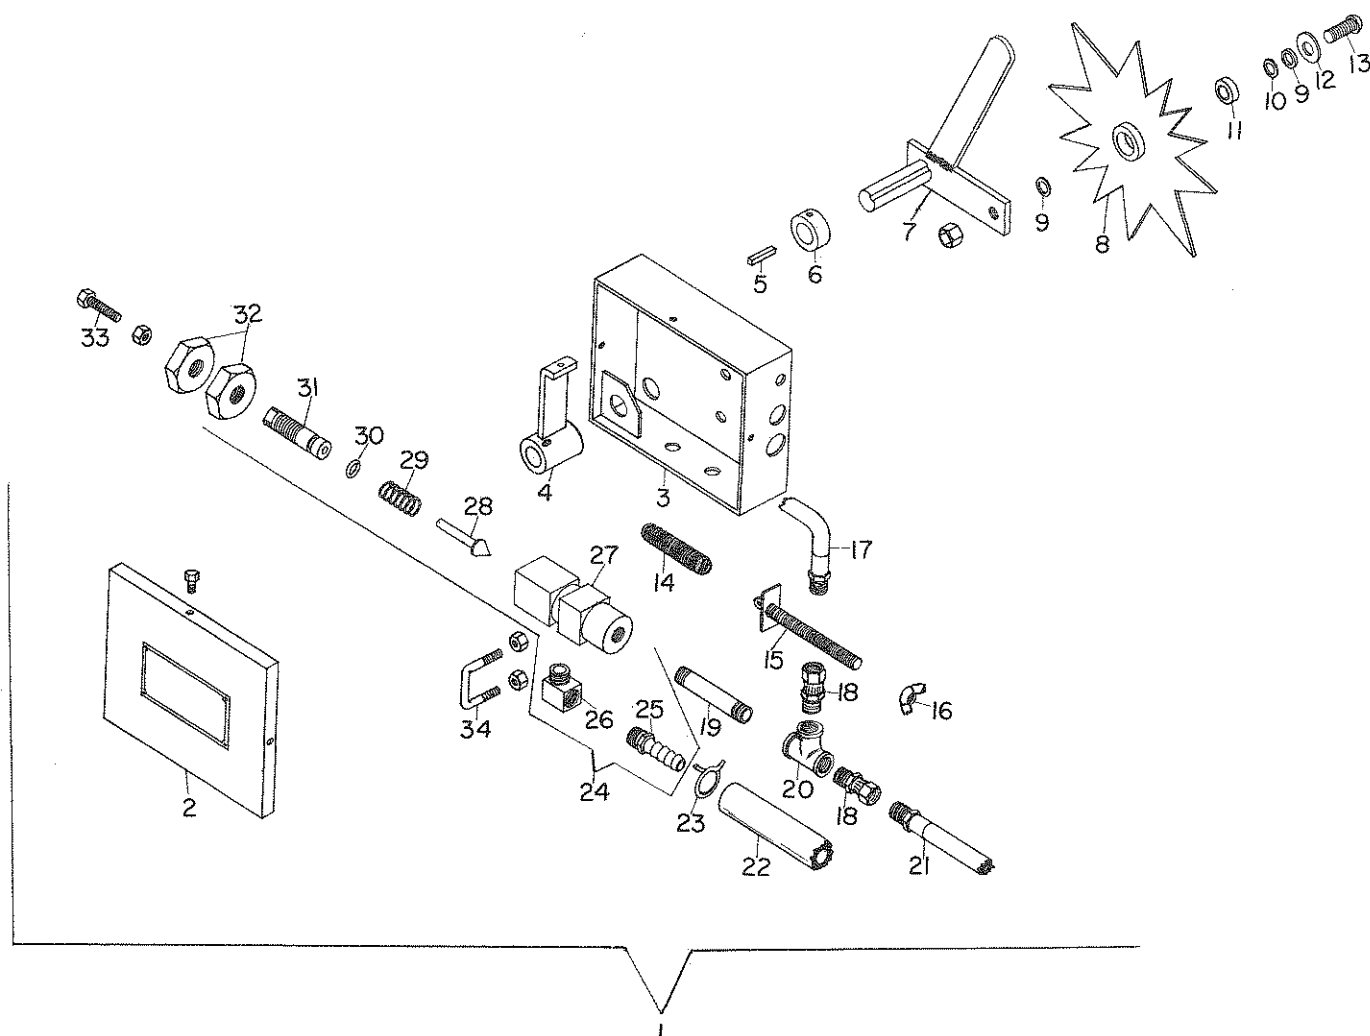


TENSION CONTROL BYPASS BOX

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 192	Bypass box complete with 1/2" return hose, less pressure hose	18	FT 107	Union swivel
2	FT 50	Bypass box cover	19	FT 72	Pipe nipple, 1/4" x 3"
3	FT 194	Bypass box	20	FT 74	Tee
4	FT 67	Bypass lever	21	FT 150	Pressure hose, pump to bypass 90"
5		Key, 3/16" x 3/16" x 1"	22	FT 191	Bypass return hose, 1/2" x 93"
6	FT 68	Spacer, penetration wheel arm	23	FT 187	Hose clamp, 1/2"
7	FT 177	Penetration wheel arm	24	FT 185	Bypass assembly complete for 1/2" return hose
8	FT 178	Penetration wheel with bearing	25	FT 193	Hose nipple (1/2" hose)
9	FT 209	Washer, 14 ga., 3/8" x 5/8"	26	FT 188	3/8" street elbow, weatherhead (3400 x 3/8")
10	FT 210	Washer, 18 ga., 3/8" x 5/8"	27	FT 184	Bypass cylinder, 1/2" hose (sq. stock)
11	FT 179	Bearing, penetration wheel (BR 9904)	28	FT 87	Bypass check pin
12	FT 123	Washer, 3/8"	29	FT 63	Spring, bypass check pin
13	FT 211	Button head bolt, 3/8" x 1"	30	FT 53	O-ring, bypass
14	FT 213	Adjusting screw tension spring	31	FT 54	Plunger, less nuts
15	FT 61	Adjusting screw (eyebolt)	32	FT 55	Jam nut, 5/8"
16	FT 62	Wing nut for adjusting screw	33		1/4" x 1-1/4" N.C. cap screw
17	FT 136	Pressure hose, bypass to ram, 24"	34	FT 58	U-bolt

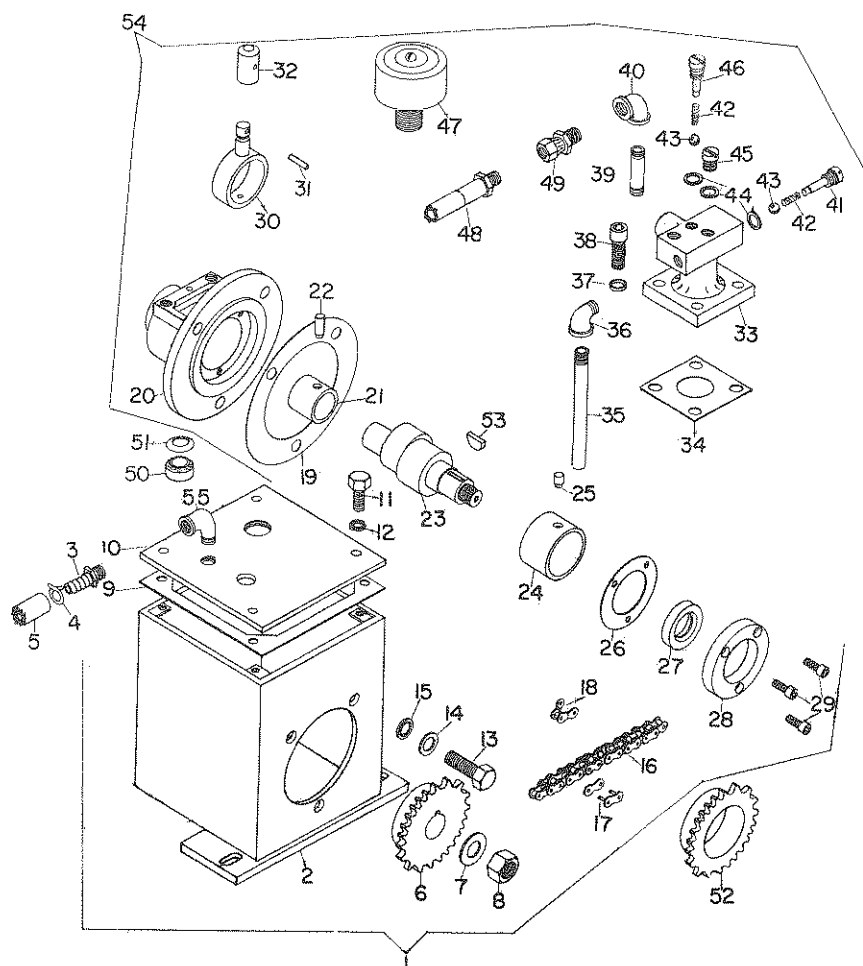


TENSION CONTROL PUMP ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	FT 537	Pump and tank assembly complete, less hose 1/2"	29		Allen screws for retaining ring 1/4" x 3/4"
2	FT 536	Tank only for 1/2" hose	30	FT 500	Connecting rod
3	FT 193	Hose nipple 1/2" hose	31	FT 506	Piston pin
4	FT 187	Hose clamp 1/2"	32	FT 505	Piston
5	FT 191	Return hose 1/2"	33	FT 524	Head
6	FT 101	Sprocket, driven 22T	34	FT 521	Head gasket
7		Flat washer 9/16"	35	FT 535	1/4" x 6" nipple
8		Nut 5/8 SAE jam	36	FT 18	Street elbow, 1/4"
9	FT 528	Tank cover gasket	37		7/16" high collar lock washer
10	FT 542	Tank cover	38		7/16" Allen screw
11		Cap screw 5/16" x 3/4" N.C.	39	FT 534	1/4" x 2" nipple
12	FT 538	Washer seal for tank cover bolts 5/16"	40	FT 82	90° elbow
13		Cap screw 7/16" x 3/4" N.C.	41	FT 517	Check valve pin (intake)
14		7/16" flat washer	42	FT 513	Check ball spring (2 used)
15	FT 539	Washer seal for pump mounting bolts 7/16"	43	FT 512	Check ball (2 used)
16	FT 197	Chain, pump drive, 69P. # 41	44	FT 514	Gasket (3 used)
17	FT 114	Connecting link, # 41	45	FT 519	Plug
18	FT 113	1/2 (offset) link, # 41	46	FT 518	Check valve pin (outlet)
19	FT 527	Pump base gasket	47	FT 530	Filter assembly
20	FT 525	Crankcase, 7/16" tapped hole	48	FT 150	Pressure hose, pump to bypass
21	FT 508	Crankshaft bushing, inner	49	FT 107	Union swivel
22	FT 510	Anchor pin for FT 508 bushing	50	FT 529	Outlet gasket
23	FT 503	Crankshaft	51	FT 533	Washer for FT 529
24	FT 509	Crankshaft bushing, outer	52	FT 157	Sprocket, drive for hydraulic pump
25	FT 511	Anchor pin for FT 509 bushing	53		Woodruff Key, 1/4" x 3/4"
26	FT 541	Gasket for FT 504 retaining ring	54	FT 523	Pump complete less tank (Ref. No's. 20 to 46 incl.)
27	FT 507	Oil seal (450045)	55		3/8" street elbow
28	FT 504	Retaining ring			

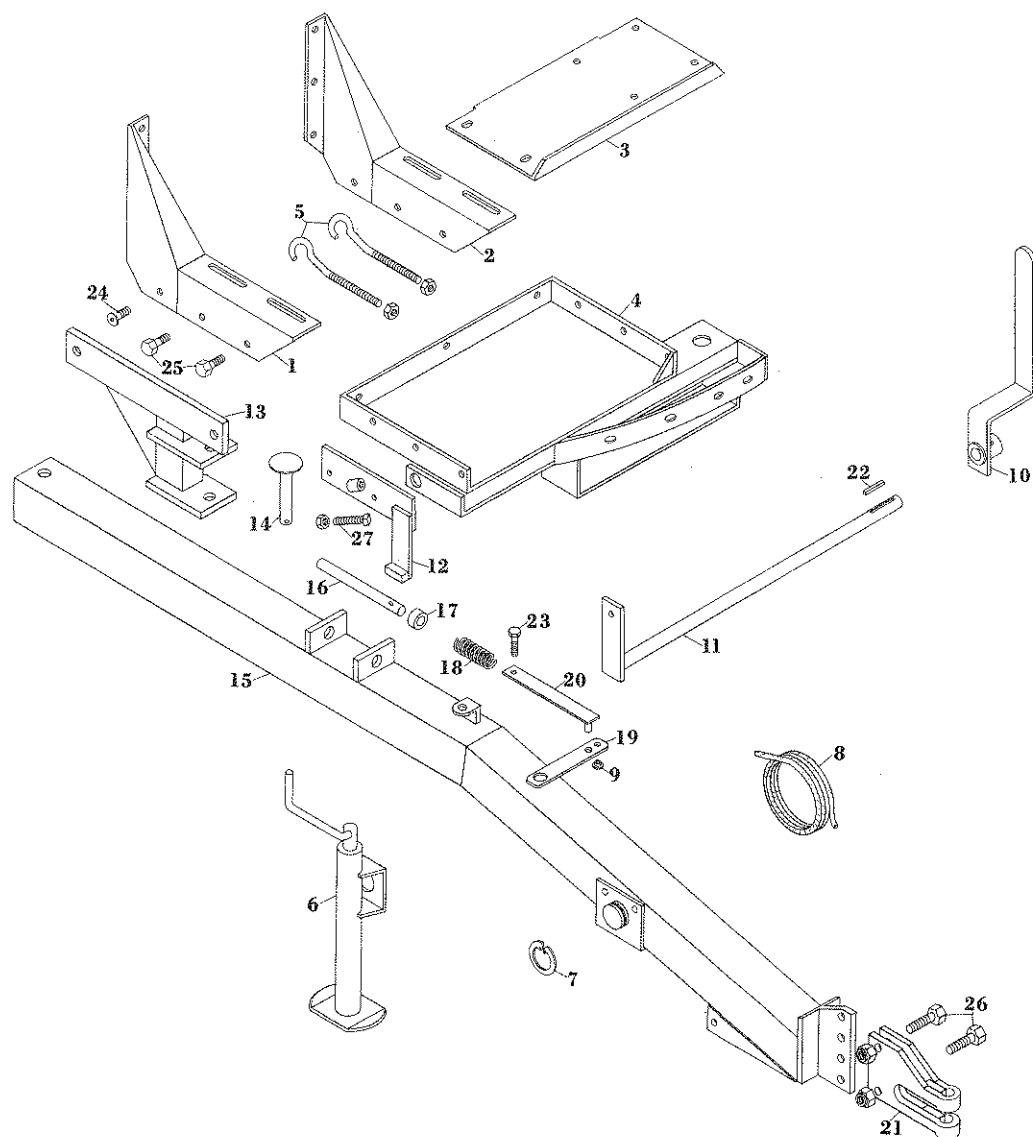


DRAWBAR AND P.T.O. MOUNT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 7848	P.T.O gear box mount, R.H.	13	F 7007	Pivot pin bracket
2	F 7849	P.T.O gear box mount, L.H.	14	F 7006	Draw bar pivot pin
3	F 7363	P.T.O gear box plate	15	F 1787	Draw bar for P.T.O. baler
4	F 7213	Hitch base plate	16	F 7002	Drawbar locking pin
5	F 7010	Adjusting bolt, 2 used	17	F 7004	Set collar for drawbar locking pin
6	F 1788	Front end swinging jack	18	F 7003	Spring, drawbar locking pin
	F 1829	Lock pin assembly	19	F 7283	Actuating lever, drawbar locking pin
	F 1830	Acme nut	20	F 7795	Link, drawbar locking pin
	F 1831	Thrust bearing	21	F 183	Front end hitch
7	F 1789	Snap ring	22		1/4" x 1/4" x 2-1/2" key
8	F 7005	Rope, drawbar pin, 9'	23		1/2" x 2" N.C. cap screw
9	F 440	Ferrule	24		1/2" x 1-1/4" N.C. Button head bolt
10	F 7725	Pickup lift lever, P.T.O. baler	25		1/2" x 1-1/4" N.F. cap screw
11	F 7538	Pickup lift lever cross rod	26		5/8" x 2-1/2" N.C. cap screw
12	F 7682	Pickup lift lever stop bracket	27		1/2" x 1-1/2" Square head set screw

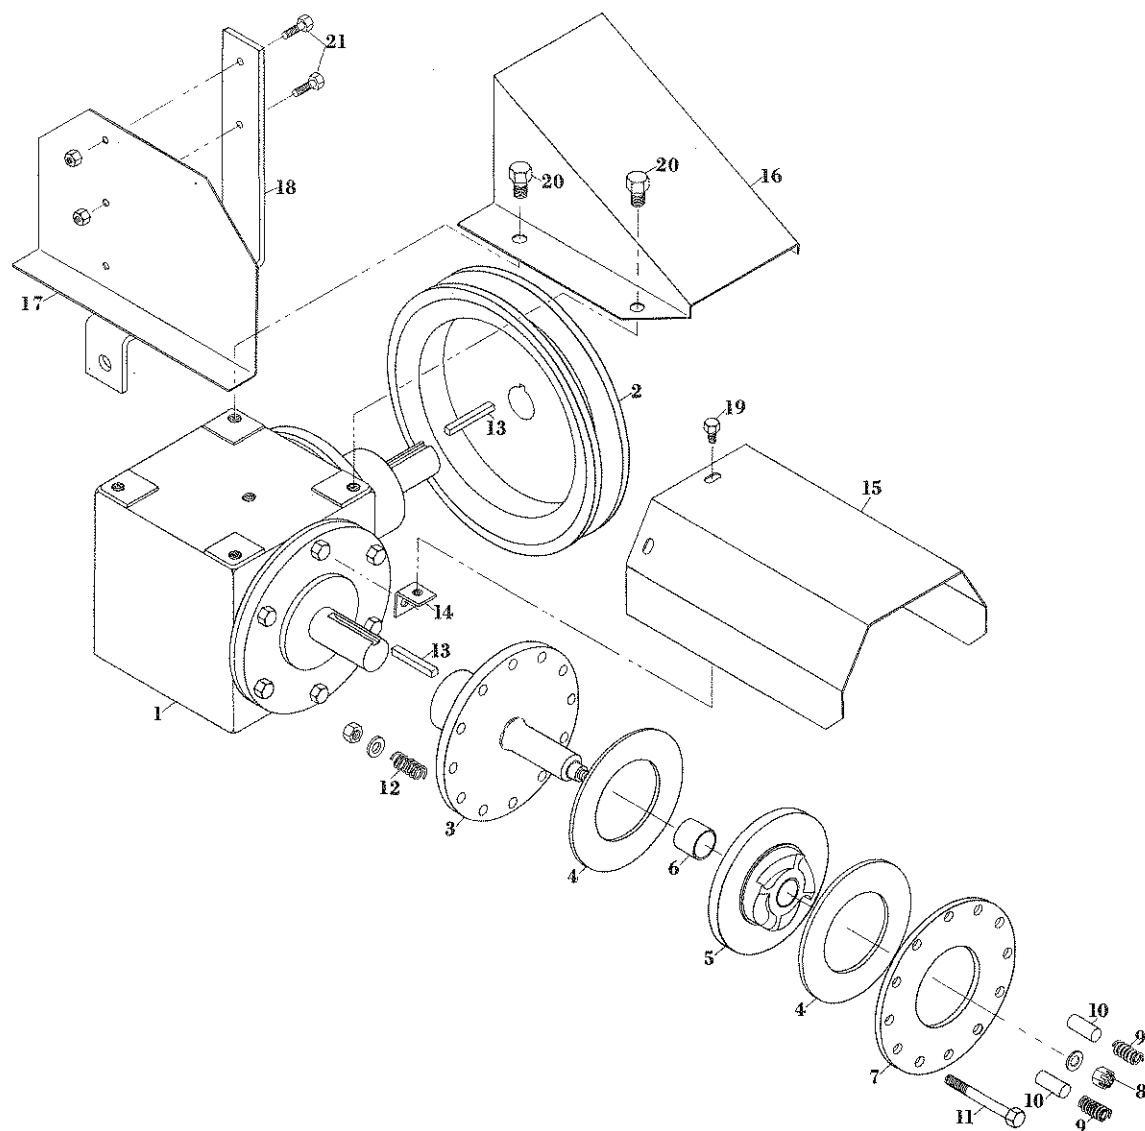


P.T.O. CLUTCH

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1412	Gear box complete, 540 rpm	12	F 1797	Spring, 12 used
2	F 1780	Gear box complete, 1000 rpm	13		5/16" x 5/16" x 1-1/8" key
3	F 1796	Clutch Pilot	14	F 1800	Clip, shield, 3 used
4	F 1793	Friction Disc, 2 used	15	F 1799	Shield, rear "U" joint
5	F 1794	Clutch Plate Assembly, w/bushing	16	F 1063	Shield, Sheave
6	F 1795	Bushing	17	F 1221	Shield, P.T.O. Flywheel
7	F 1792	Clutch Plate	18	F 1222	Bracket for F 1221 Shield
8		3/8" N.C. slotted nut	19		1/4" x 3/4" N.C. cap screw, 3 used
9	F 1790	Spring, 2 used	20		1/2" x 1" N.C. cap screw, 2 used
10	F 1791	Clutch pin, 2 used	21		1/4" x 3/4" Round head machine screw, 2 used
11		3/8" x 3-1/4" Hex head cap screw, 12 used			

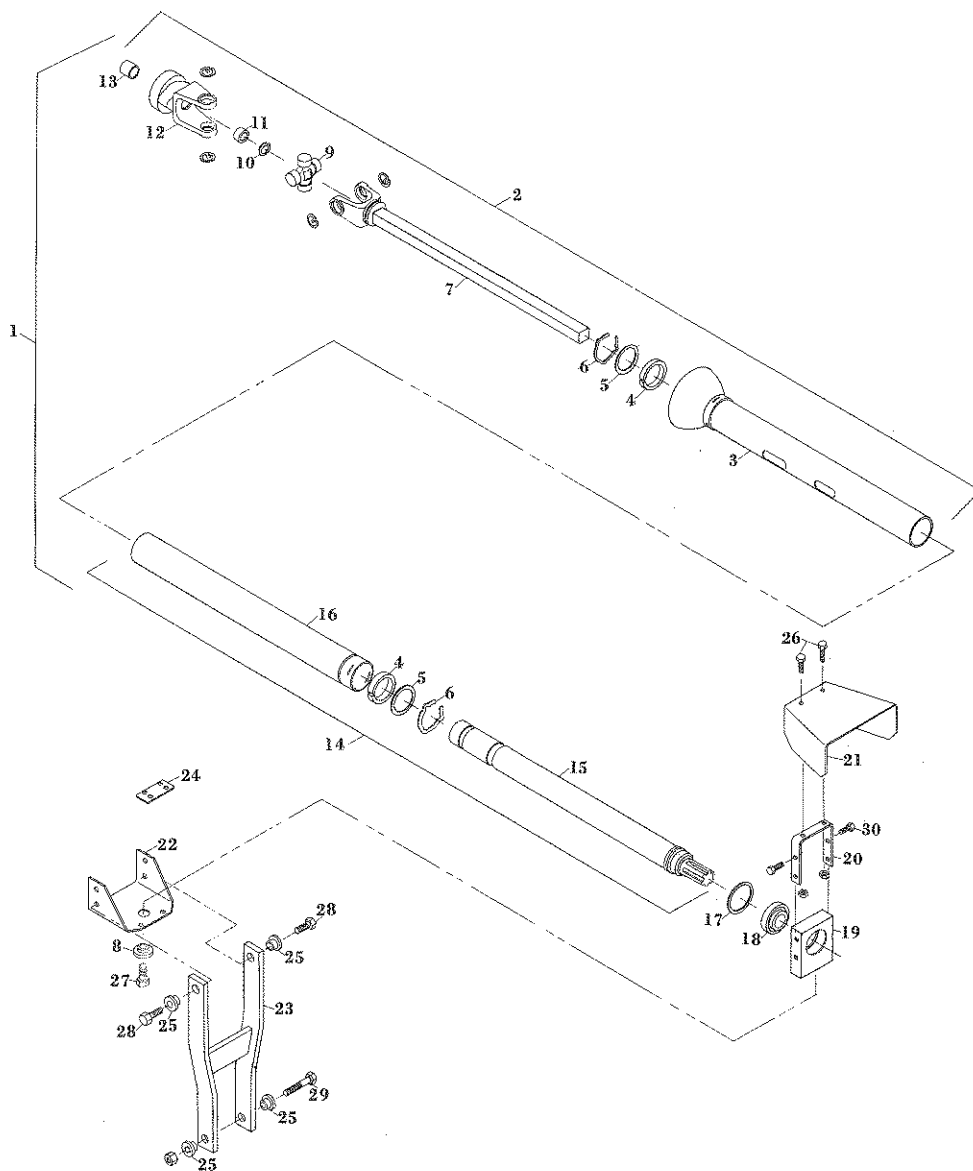


P.T.O. REAR DRIVE LINE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1802	Telescoping driveline complete, 922-18-39117	15	F 1821	Tube & stub shaft assembly
2	F 1813	Telescoping driveline, rear half	16	F 1822	Outer shield tube
3	F 1814	Bell and inner shield tube	17	F 1806	Retaining ring, RR287 Spirolox
4	F 892	Nylon bushing, 2 used	18	F 1807	Ball bearing, 207KRR Fafnir
5	F 891	Thrust washer, 2 used	19	F 1808	Pedestal bearing housing
6	F 1728	Shield snap ring, 2 used	20	F 1805	Shield bracket, front universal joint
7	F 1815	Yoke and shaft assembly	21	F 1804	Shield, front universal joint
8	F 1801	Swivel bushing Pedestal bearing	22	F 1809	Pedestal bearing bracket
9	F 889	Universal cross repair kit	23	F 1810	Bearing pedestal
10	F 1816	Bearing retainer ring, N 5000-137	24	F 1803	Adaptor, shield
11	F 1817	Ball bearing, flange yoke, 9103 PP Fafnir	25	F 1811	Pedestal tilt bushing, 4 used
12	F 1818	Flange yoke	26		1/4" x 3/4" N.C. cap screw, 2 used
13	F 1819	Bushing, flange yoke	27		5/8" x 1-1/2" N.C. cap screw
14	F 1820	Telescoping drive line, front half	28		1/2" x 1-1/2" N.C. cap screw, 2 used
			29		1/2" x 2" N.C.H.T. cap screw, 2 used
			30		5/16" x 3/4" N.C. cap screw, 4 used

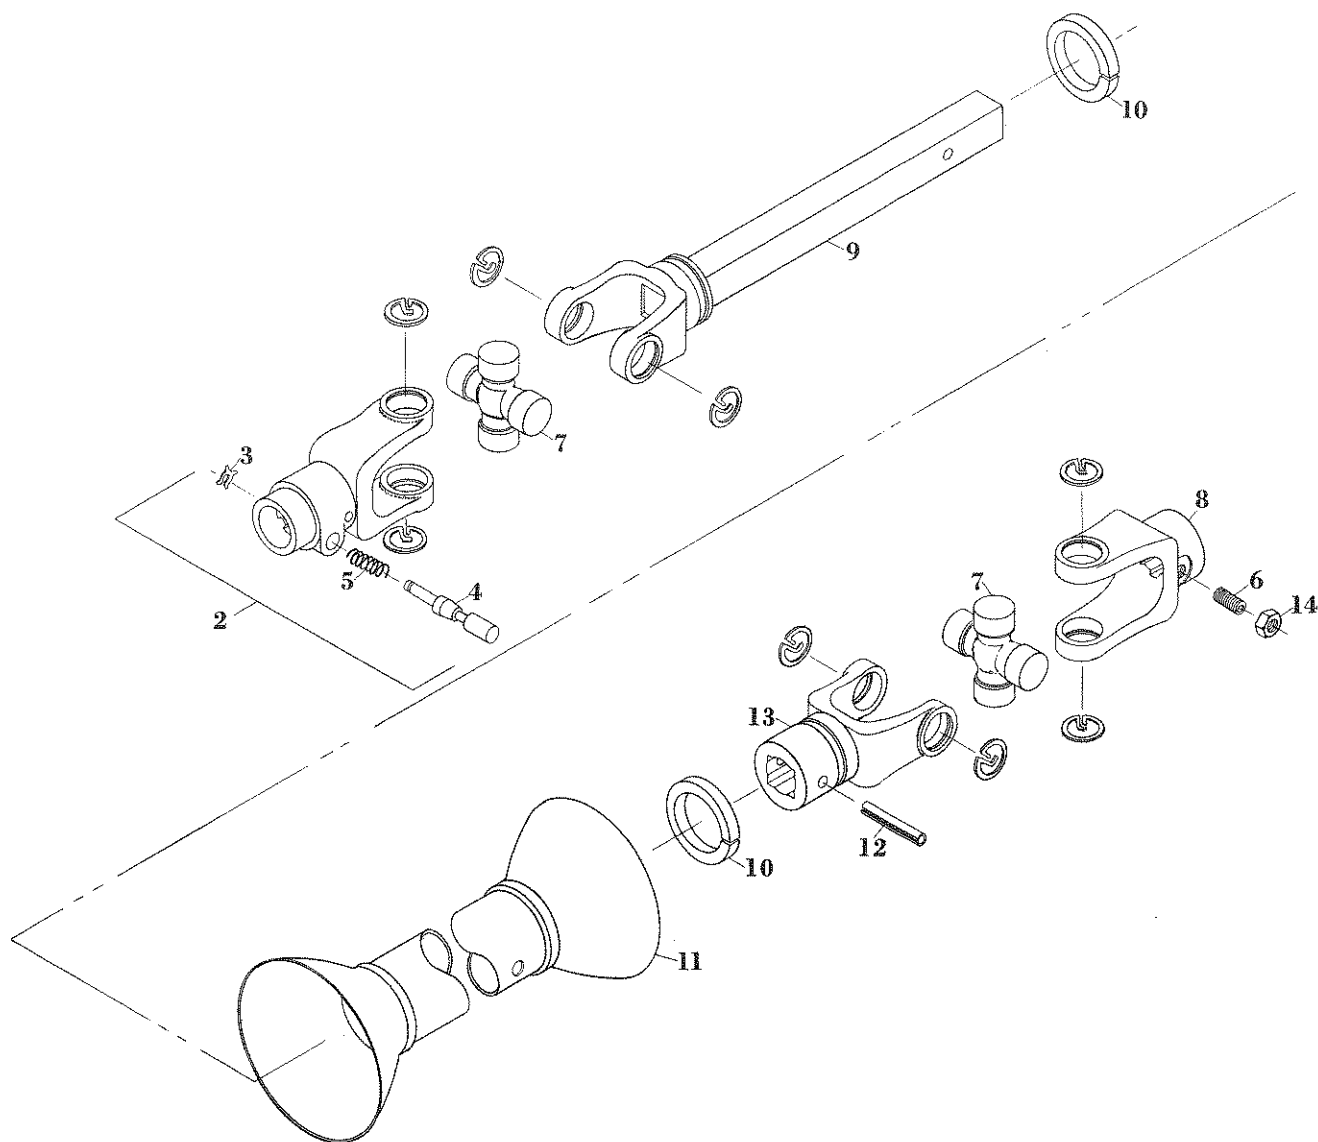


P.T.O. FRONT DRIVE LINE

REF. NO.	PART NO.	DESCRIPTION
1	F 1812	P.T.O. driveline assembly, front, 922-17-20179
2	F 890	Yoke assembly, QD, 1-3/8" - 6 spline, w/lock pin
3	F 1107	Lock pin washer
4	F 1106	Lock pin
5	F 1108	Spring lock pin
6	F 1828	Set screw, 1/2" x 1-1/4" NF Hex Socket
7	F 889	Universal cross repair kit
8	F 1823	Yoke, 1-3/8" - 6 spline
9	F 1824	Yoke & shaft assembly
10	F 1827	Nylon Bushing, 2 used
11	F 1825	Yoke & Bell Assembly
12		Roll pin, 3/8" x 2"
13	F 1826	Yoke, 1-3/16" square
14		1/2" N.F. jam nut

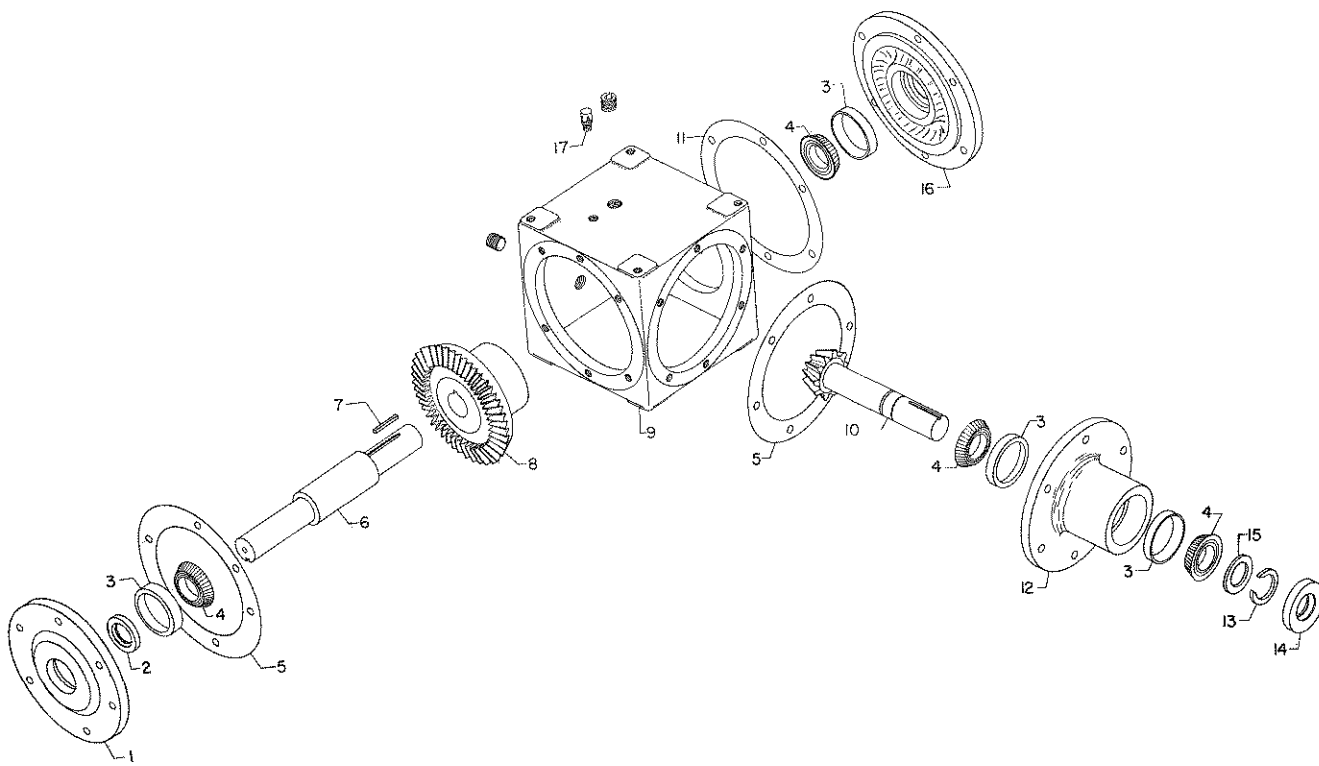


P. T. O. GEAR BOX

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1076	Cap, drive shaft bearing (open end)	9	F 1407	Case for gear box
2	F 1085	Seal, drive shaft (CR186112)	10	F 1410	Pinion and shaft, 13T for 540 rpm box
3	F 1084	Bearing cup, pinion and drive shaft (LM 48510)		F 1779	Pinion and shaft, 21T for 1000 rpm box
4	F 1083	Bearing cone, pinion and drive shaft (LM 48548)	11	F 1417	Gasket (.005 thick) for F 1409
5	F 1095	Gasket, (.005 thick) for F 1076 and F 1078		F 1418	Gasket (.010 thick) for F 1409
	F 1414	Gasket, (.010 thick) for F 1076 and F 1078		F 1419	Gasket (.015 thick) for F 1409
	F 1415	Gasket, (.015 thick) for F 1076 and F 1078	12	F 1078	Housing, pinion shaft bearing
	F 1416	Gasket, (1/32" thick) for F 1076 and F 1078	13	F 1087	Snap ring, pinion shaft
6	F 1601	Drive shaft	14	F 1421	Grease seal for pinion shaft (CR256112)
7	F 1093	Key, drive shaft and sheave, 5/16" x 5/16" x 2"	15	F 1420	Steel shim (.003 thick)
8	F 1411	Bevel gear, 39T, for 540 rpm box	16	F 1409	Cap, drive shaft bearing (closed end)
	F 1778	Bevel gear, 34T, for 1000 rpm box	17	F 1720	Vent
				F 1412	Gear box complete less sheave, 540 rpm
				F 1780	Gear box complete less sheave, 1000 rpm

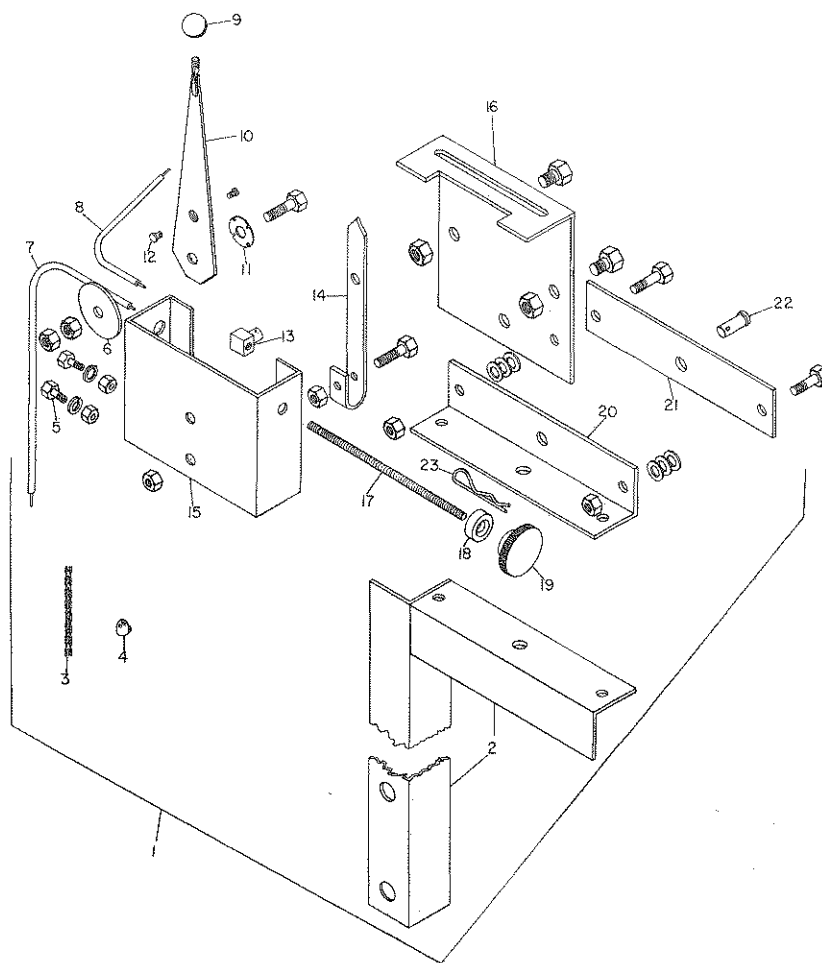


THROTTLE AND TENSION CONTROL STAND

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1025	Control box complete, baler mounted	8	F 1129	Cable complete for throttle control, 12 feet
	F 1026	Control box complete, tractor mounted		F 1011	Conduit, throttle control, 12 feet
	F 1451	Control box complete less cable and standard		F 1012	Wire, throttle control, 13 feet
2	F 1658	Standard only	9	F 5554	Knob for throttle lever
3	F 1015	Chain, throttle control, 4"	10	F 1433	Throttle lever
4	F 5080	Cable stop, throttle control	11	F 1002	Conical washer
5	F 5559	Beech nut with nut and washer	12	F 5545	Swivel fasteners (throttle)
6	F 1003	Friction disc	13	F 1005	Adjusting stud nut (tension)
7	F 1130	Cable complete for tension control, 24 feet	14	F 1004	Indicator tension control
	F 1013	Conduit, tension control, 24 feet	15	F 1008	Control box
	F 1014	Wire, tension control, 25 feet	16	F 1452	Control box cover
			17	F 1006	Adjusting rod
			18	F 1131	Thrust bearing
			19	F 1007	Control knob for F 1006
			20	F 1017	Mounting base angle
			21	F 1018	Mounting base plate
			22	F 1020	Clevis pin, 3/8" x 1"
			23	F 1019	Hairpin cotter key

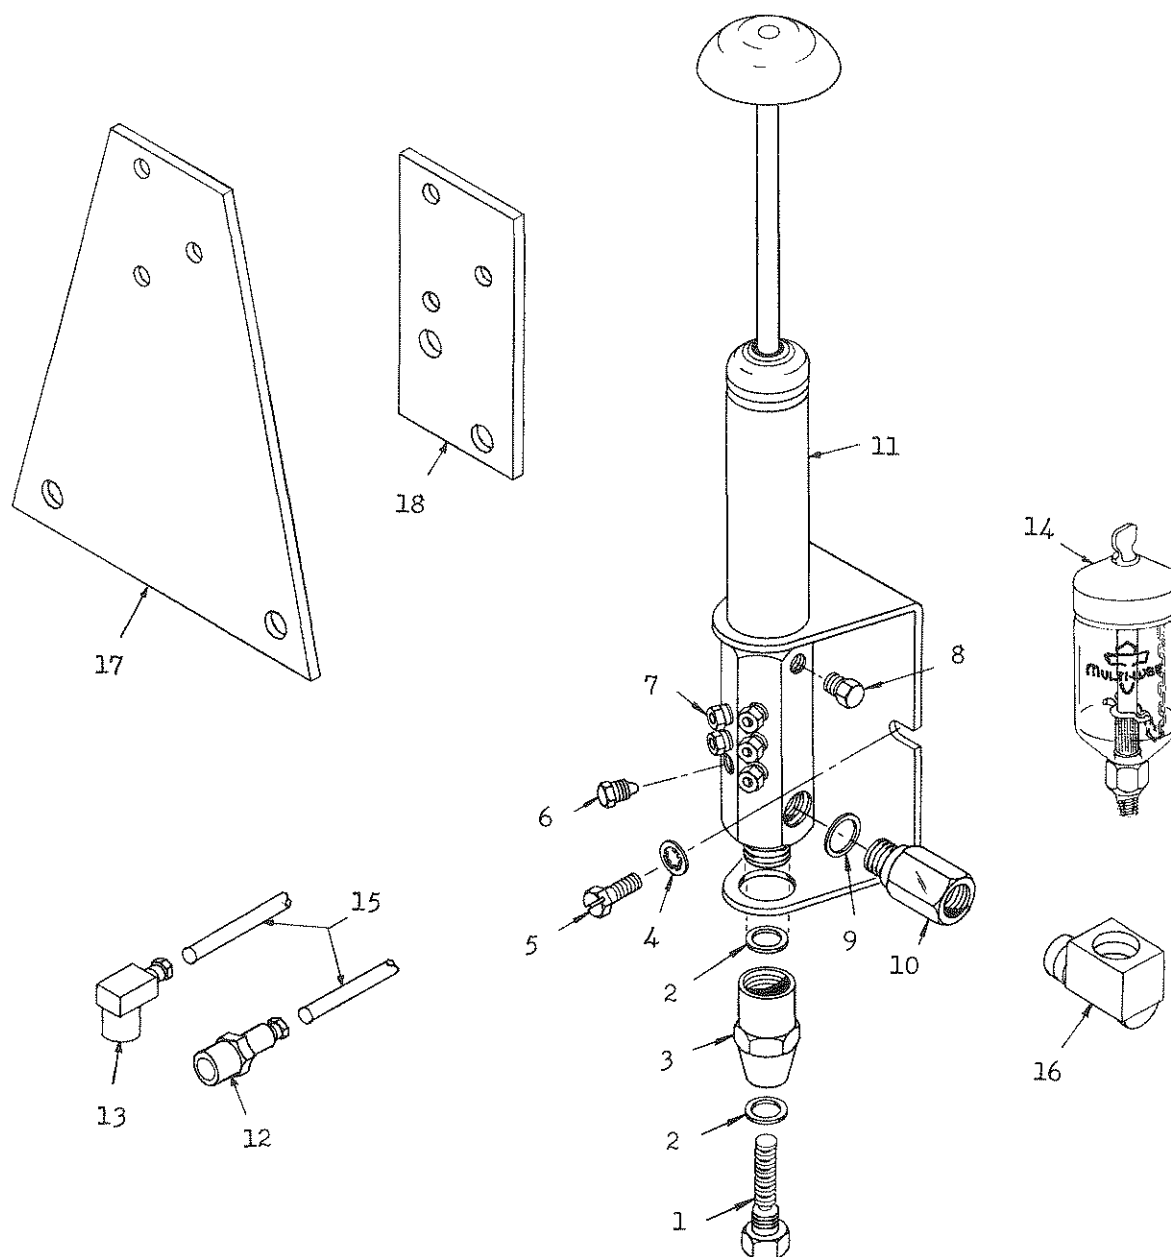

MULTI-LUBER CENTRALIZED LUBRICATION SYSTEM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1760	Stop plug for Multi-luber	13	F 1772	Coupler, 90° snap on for Multi-luber
2	F 1761	Gasket for Multi-luber	14	F 1773	Lubricant reservoir for Multi-luber
3	F 1762	Cap for Multi-luber	15	F 1770	Tubing, 1/8" L.P. Nylon (60 ft. used)
4	F 1763	Lock washer for Multi-luber	16	F 1782	Street elbow, 1/4"
5	F 1764	Hex screw for Multi-luber	17	F 1783	Mounting bracket for Multi-luber, twine
6	F 1765	Plug for Multi-luber	18	F 1784	Mounting bracket for Multi-luber, wire
7	F 1766	Compression nut for Multi-luber			
8	F 1767	Plug for Multi-luber			
9	F 1768	Gasket for Multi-luber			
10	F 1769	Adapter for Multi-luber			
11	F 1774	Injector pump for Multi-luber, Ref. 1-10			
12	F 1771	Coupler, straight snap on for Multi-luber		F 1776	Multi-luber complete w/reservoir, 60 ft. tubing & 12 couplers

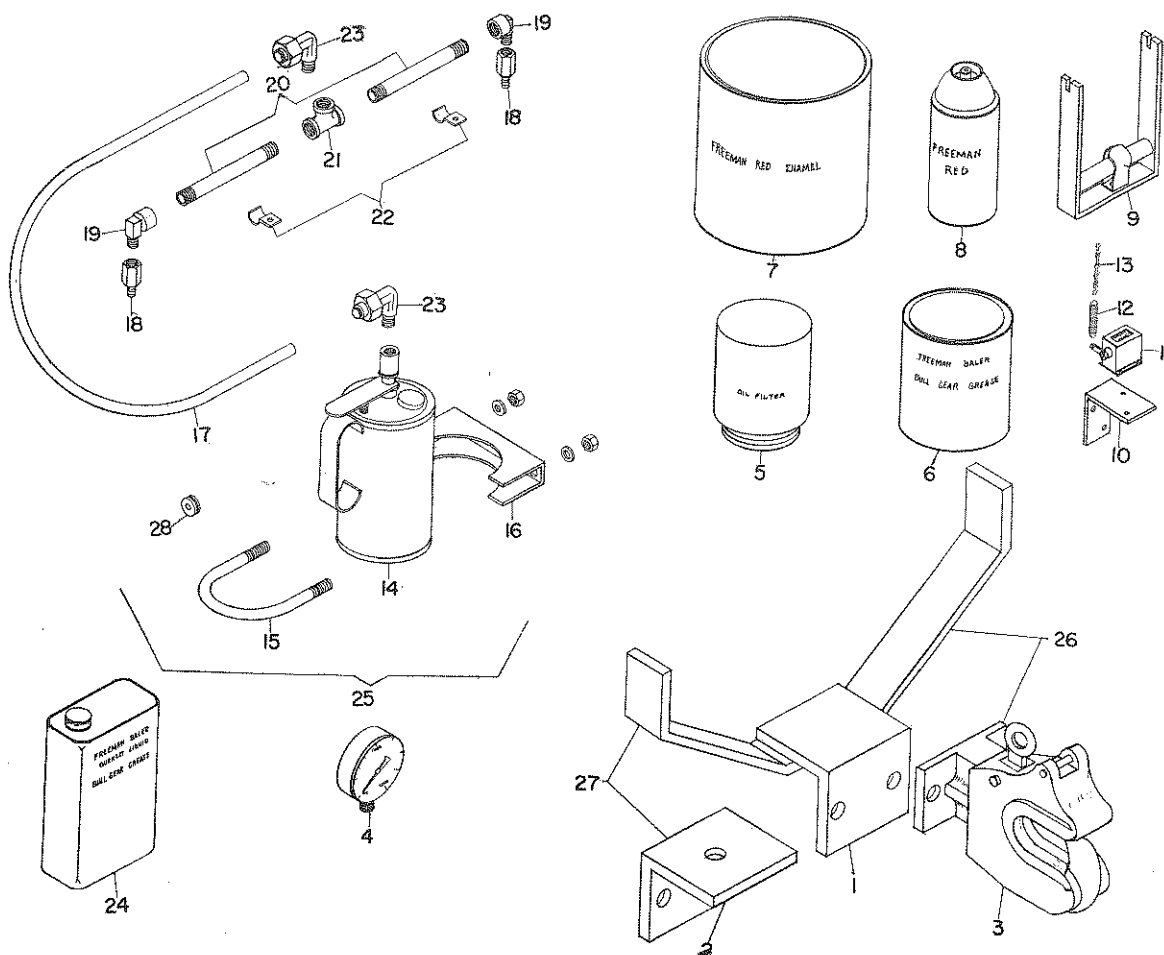

EXTRA ITEMS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 1699	Trailer hitch frame	12	F 638	Spring, bale counter
2	F 736	Trailer hitch angle for clevis pin	13	F 637	Chain, bale counter
3	F 1697	Holland hitch for trailer hitch	14	F 7671	Oil can with pump
4	F 800	Hydraulic gauge (2000 lbs.)		F 7729	Spring for pump
5	F 1511	Oil filter cartridge 4 thread base (VH4D and VG4D)	15	F 7721	U bolt, grease can
	F 5922	Oil filter cartridge (V461D)	16	F 7722	Grease can clamp base
6	F 664	Bullgear grease (2 lb. can)	17	F 7673	Nylon tubing, pull-type baler 20"
	F 874	Bullgear grease (1 gal.) 10 lbs.	18	F 777	Adapter, 2 used (51942)
7	F 649	Freeman red baler paint (1 gal.)	19	F 7677	90° brass elbow (2 used)
	F 942	Freeman red baler paint (1 qt.)	20	F 7727	1/4" x 5" pipe nipple (2 used)
	F 1675	Freeman white baler paint (1 gal.)			22" bale chamber
	F 1676	Freeman white baler paint (1 qt.)	21	FT 74	1/4" pipe tee
8	F 770	Freeman red baler paint, spray can	22	F 7723	Clip for grease nipple (125 jiffy)
	F 1677	Freeman white baler paint, spray can	23	F 7676	90° nylon elbow 2 used
9	F 4193	Wire splicer	24	F 7609	Quickset lubricant 1 qt.
10	F 7391	Bale counter mounting angle		F 7626	Quickset lubricant 1 gal.
11	F 304	Bale counter (Veeder Root)	25	F 7617	Bullgear luber kit
	F 635	Arm w/screw for F 304	26	F 734	Trailer hitch frame with Holland hitch
	F 636	Reset knob for F 304	27	F 735	Trailer hitch frame with pin hitch
			28	F 7735	Grommet

