


Freeman Automatic Self-Propelled Baler

Hydrostatic Drive
Supplement for 1979-80
200 & 330 Twine & Wire

PARTS LIST

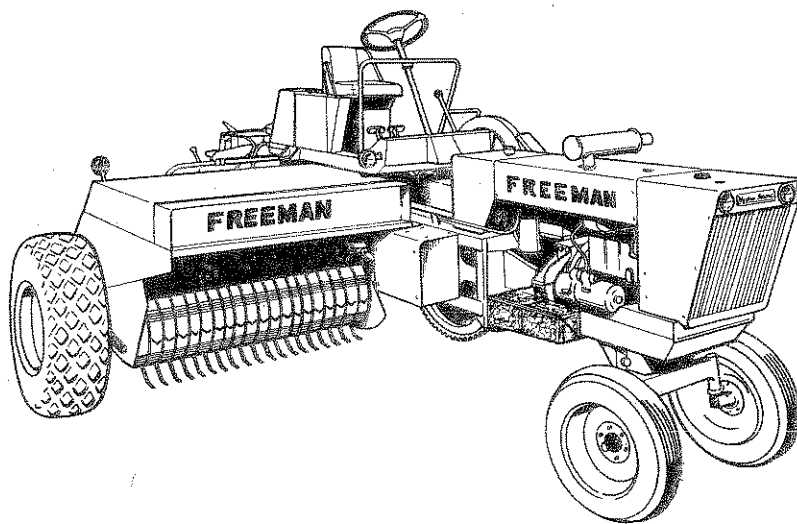

manufactured and distributed by

J. A. FREEMAN & SON, INC.

PORTLAND, OREGON

PB00000155



BE CAREFUL


1. KEEP ALL SHIELDS IN PLACE.
2. STOP ENGINE OR MOTOR BEFORE LEAVING OPERATORS POSITION TO ADJUST, LUBRICATE, CLEAN, OR UNCLOG MACHINE, UNLESS OTHERWISE SPECIFICALLY RECOMMENDED IN THE "OPERATOR'S MANUAL."
3. WAIT FOR ALL MOVEMENT TO STOP BEFORE SERVICING MACHINE.
4. KEEP HANDS, FEET, AND CLOTHING AWAY FROM POWER DRIVEN PARTS.
5. KEEP OFF EQUIPMENT UNLESS SEAT OR PLATFORM FOR OPERATION AND OBSERVATION IS PROVIDED.
6. KEEP ALL OTHERS OFF.
7. USE APPROPRIATE SIGNS OR WARNING LIGHTS WHEN OPERATING ON HIGHWAYS.
8. MAKE CERTAIN EVERYONE IS CLEAR OF MACHINE BEFORE STARTING ENGINE, MOTOR OR OPERATION.

Supplement

PARTS LIST

for

Self Propelled Hydrostatic Drive 200 & 330 Twine & Wire

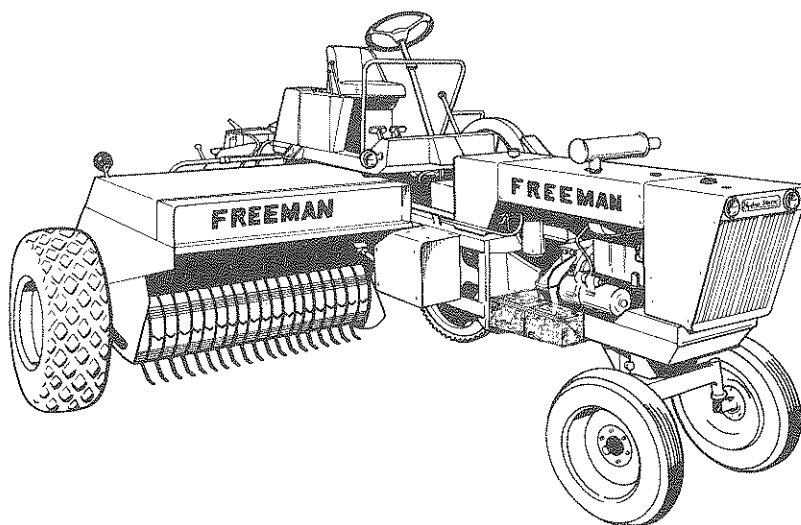

POLICY

1. It is the policy of J. A. Freeman & Son, Inc. to constantly improve its products whenever it is practical to do so.
2. J. A. Freeman & Son, Inc. reserve the right to redesign or change its equipment or component parts thereof without incurring any obligation to install or furnish such changes on equipment previously delivered.
3. Unauthorized changes or additions to equipment manufactured by J. A. Freeman & Son, Inc. relieves the company of further responsibility for warranted operation and breakage replacement.

INSTRUCTIONS FOR ORDERING PARTS

1. Order by part number and description of part.
 - (a) Parts should NOT be ordered from illustration only.
 - (b) Parts should NOT be ordered from numbers on castings.
2. Order by baler serial number and model.
3. Much delay and confusion can be avoided if parts numbers are arranged in sequence on all orders.
4. State how to ship: whether by truck, stage, parcel post, air parcel post, UPS, or air freight.
5. Claims for shortage or error in handling of an order for parts must be made upon receipt of goods.
6. Address all orders for parts as follows:

J.A. Freeman & Són, Inc.
Parts Department,
2034 N.W. 27th Avenue,
Portland, Oregon 97210

Place serial number of machine here for your convenience:

Baler Serial No. _____

Motor Serial No. _____

Left and right of machine are understood to mean from a position facing in the direction of travel.

Permission must be secured before any parts are returned for credit. When parts are returned, the freight must be prepaid or arrangements made so that they can be brought in by our trucks.

"NOTE"


Parts are identified by reference numbers. See parts list for correct part numbers. DO NOT USE REFERENCE NUMBERS AS PART NUMBERS.

TABLE OF CONTENTS

Page 2	Front End AC433T
Page 4	Steering Hydraulic System 433T
Page 6	Operator Platform 1980
Page 8	Gear Shift Control and Operators Seat
Page 10	Pickup Lift
Page 12	Pickup Feed House
Page 14	Rear Axle
Page 15	Exhaust System AC433T
Page 16	Radiator & Shrouds AC433T
Page 18	Electrical System AC433T
Page 20	Electrical System JD
Page 21	Deck Rail
Page 22	Update Change for Sp Parts Book
Page 24	200 Plunger
Page 26	330 Plunger
Page 28	S.P. Cab


Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F83	.2	F5918	.8	F6503	.2	F6727	.10
F96	.10	F5920	.8	F6504	.2	F6728	.10
F169	.18,20	F5921	.8	F6505	.2	F6729	.10
F214	.2,14	F5941	.18,20	F6506	.2	F6730	.10
F246	.8	F5948	.6	F6507	.2	F6732	.2
F281	.12	F5949	.6	F6508	.2	F6733	.2
F440	.8	F5954	.18,20	F6509	.2	F6735	.14
F462	.2	F5979	.14	F6510	.2	F6735	.14
F862	.18,20	F5984	.14	F6511	.4	F6737	.14
F884	.2	F6018	.10	F6519	.2,4	F6740	.14
F893	.6	F6032	.6	F6539	.18,20	F6741	.14
F934	.2	F6069	.6	F6548	.18,20	F6742	.14
F946	.18,20	F6170	.14	F6551	.18,20	F6743	.14
F993	.6	F6175	.6	F6552	.18,20	F6744	.14
F1002	.8	F6182	.6	F6553	.18,20	F6745	.14
F1497	.18,20	F6183	.6	F6554	.18,20	F6746	.14
F1563	.10	F6184	.6	F6555	.18,20	F6747	.14
F1624	.2	F6212	.10	F6558	.18,20	F6748	.14
F1625	.2	F6235	.14	F6560	.18,20	F6749	.14
F1626	.2	F6270	.6	F6562	.6	F6750	.14
F1627	.2	F6271	.6	F6578	.18,20	F6752	.14
F1628	.2	F6272	.6	F6587	.2	F6755	.14
F1653	.2	F6273	.6	F6599	.4	F6756	.14
F1654	.2	F6274	.6	F6605	.2	F6757	.14
F1689	.6	F6278	.6	F6622	.2	F6758	.14
F4210	.14	F6279	.6	F6623	.2	F6759	.14
F4511	.6	F6280	.6	F6625	.18,20	F6760	.14
F4512	.14	F6281	.6	F6627	.18,20	F6761	.14
F4514	.2	F6282	.6	F6630	.4	F6762	.14
F4515	.2	F6283	.6	F6631	.4	F6763	.14
F5023	.2	F6290	.6	F6635	.10	F6764	.14
F5031	.4	F6291	.6	F6638	.10	F6765	.8
F5032	.4	F6292	.4	F6639	.10	F6766	.8
F5039	.2	F6294	.4	F6659	.10	F6767	.8
F5040	.2	F6413	.6	F6687	.10	F6768	.8
F5049	.10	F6415	.4	F6688	.4	F6769	.8
F5055	.6	F6421	.18,20	F6689	.4	F6770	.8
F5075	.14	F6422	.18,20	F6690	.4	F6771	.8
F5076	.14	F6424	.18,20	F6691	.4	F6772	.8
F5121	.10	F6431	.18,20	F6692	.4	F6773	.8
F5236	.18,20	F6451	.10	F6693	.4	F6774	.8
F5237	.18,20	F6460	.18,20	F6694	.4	F6776	.8
F5501	.8	F6473	.2	F6695	.4	F6777	.8
F5502	.8	F6474	.2	F6705	.2	F6778	.8
F5505	.8	F6475	.2	F6706	.10	F6779	.8
F5546	.6	F6476	.2	F6707	.10	F6780	.8
F5551	.6	F6481	.6	F6708	.10	F6781	.8
F5554	.10	F6482	.6	F6710	.10	F6782	.8
F5613	.4	F6483	.2	F6711	.10	F6783	.8
F5648	.14	F6488	.4	F6712	.10	F6784	.14
F5650	.2	F6489	.4	F6718	.10	F6785	.14
F5703	.8	F6490	.4	F6719	.10,14	F6786	.14
F5705	.8	F6498	.4	F6720	.10	F6790	.8
F5769	.8	F6499	.2	F6723	.10	F6809	.18
F5842	.18,20	F6500	.2	F6724	.10	F6811	.16
F5854	.2	F6501	.2	F6725	.10	F6812	.16
F5866	.8			F6726	.10	F6821	.16
F5867	.8						

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F6828.....	16	BKT9656.....	4,16	JD0006488.....	2	SHR0009660.....	16
F6830.....	16	BKT9661.....	16	JD0006496.....	2	SMF0001001.....	2
F6832.....	10	BKT9863.....	16	JD0647900.....	2	SMF002002.....	6
F6835.....	8	BKT9864.....	16	LUB007600.....	6	SPC0007201.....	2
F6838.....	10	BLT42.....	4	NCH0000375.....	10	SPC0009675.....	16
F6843.....	18,20	BLT51.....	4	NCH0000750.....	14	SRG0007095.....	12
F6849.....	14	BRC7183.....	6	NCH0004375.....	14	STP0070899.....	18,20
F6850.....	18,20	BRC9758.....	15	NFE0000500.....	6	STR0009761.....	12
F6988.....	4	BSH0175014.....	2	NFE0000563.....	2	STR0009762.....	12
F6989.....	4	CAP2014.....	15	NFJ0005000.....	8,10	TNK0009231.....	6
F6990.....	4	CLP7085.....	6	PIN5001250.....	10	WCT0000313.....	18,20
F6991.....	4	CLP35751.....	15	PLY0007628.....	4	WCT0000375.....	10
F7145.....	12	COT0000100.....	12	PPE500250.....	8	WCT0000438.....	4
F7152.....	2	COT0000301.....	10	RAD0009620.....	16	ZZ0000100.....	2,10
F7154.....	10	COT0000503.....	2	RD0007045.....	8	ZZ0000101.....	2,14
F7157.....	12	COT0000802.....	10	SCC0000002.....	14	ZZ0000102.....	14
F7159.....	12	COT0001001.....	14	SCC0000003.....	14	ZZ0000400.....	14
F7160.....	12	CPL4900603.....	16	SCC0000101.....	6,10	ZZ0000406.....	10
F7164.....	12	CRB3130750.....	2	SCC0000107.....	2	ZZ0000713.....	14
F7194.....	10	CWL0009674.....	2	SCC0000109.....	6	ZZ0000722.....	14
F7239.....	12	CWL0009679.....	2	SCC0000110.....	18,20	05-130.....	12
F7275.....	12	CWL0009685.....	2	SCC0000201.....	6,14	20-127.....	15
F7276.....	12	DCK8047.....	6	SCC0000202.....	4,8,14	20-129.....	15
F7299.....	12	DCK8048.....	6	SCC0000204.....	8		
F7394.....	12	DCK9228.....	6,8	SCC0000205.....	8		
F7472.....	12	DCK9583.....	21	SCC0000206.....	8,14		
F7579.....	12	EXH00041003.....	15	SCC0000208.....	2,8		
F7654.....	12	FD00007114.....	12	SCC0000302.....	4,16,21		
F7713.....	12	FD00007116.....	12	SCC0000303.....	6		
F7714.....	12	FH00004907.....	12	SCC0000304.....	10,15		
F8050.....	18,20	FH00007088.....	12	SCC0000305.....	2		
F8059.....	18,20	FH00007118.....	12	SCC0000306.....	8		
F8060.....	18,20	FNG0009744.....	2	SCC0000312.....	4		
F8062.....	18,20	FTO0000074.....	4	SCC0000404.....	12		
F8261.....	12	FTO0000075.....	4	SCC0000504.....	2,6		
F8264.....	10,12	FTO0000109.....	10	SCC0000505.....	8		
F8305.....	4	FTO0000217.....	4	SCC0000704.....	4,14		
F8375.....	12	FTO0000219.....	4	SCC0000819.....	14		
F5688066.....	4	HSE0002519.....	16	SCC0002003.....	6,10		
AC0000503.....	15	HOS0007247.....	16	SCC0002008.....	2,12		
ACL4901003.....	15	HOS0007609.....	16	SCC0003005.....	6		
ACL4901012.....	15	HOS0064122.....	16	SCC0020001.....	2		
ACL4901018.....	15	HOS0064306.....	15	SCC0020003.....	6		
ACL4901036.....	15	HRN0000211.....	20	SCC0050001.....	6		
BAT212.....	18,20	HYD7629040.....	4	SFC0000504.....	2		
BAT7244.....	18,20	JD0006487.....	2	SFC0000505.....	2		
BKT6491.....	4			SFC0000513.....	2,6		
BKT6492.....	4,16			SHD0007096.....	12		
BKT6493.....	4			SHD0007151.....	12		
BKT7083.....	6			SHD0007152.....	12		
BKT7873.....	6			SHD0007153.....	12		
BKT9189.....	6			SHD0007154.....	12		
BKT9626.....	15,16			SHD0007512.....	12		
BKT9638.....	4,16			SHD0009651.....	16		
BKT9646.....	16			SHD0009850.....	16		
				SHM0007089.....	12		

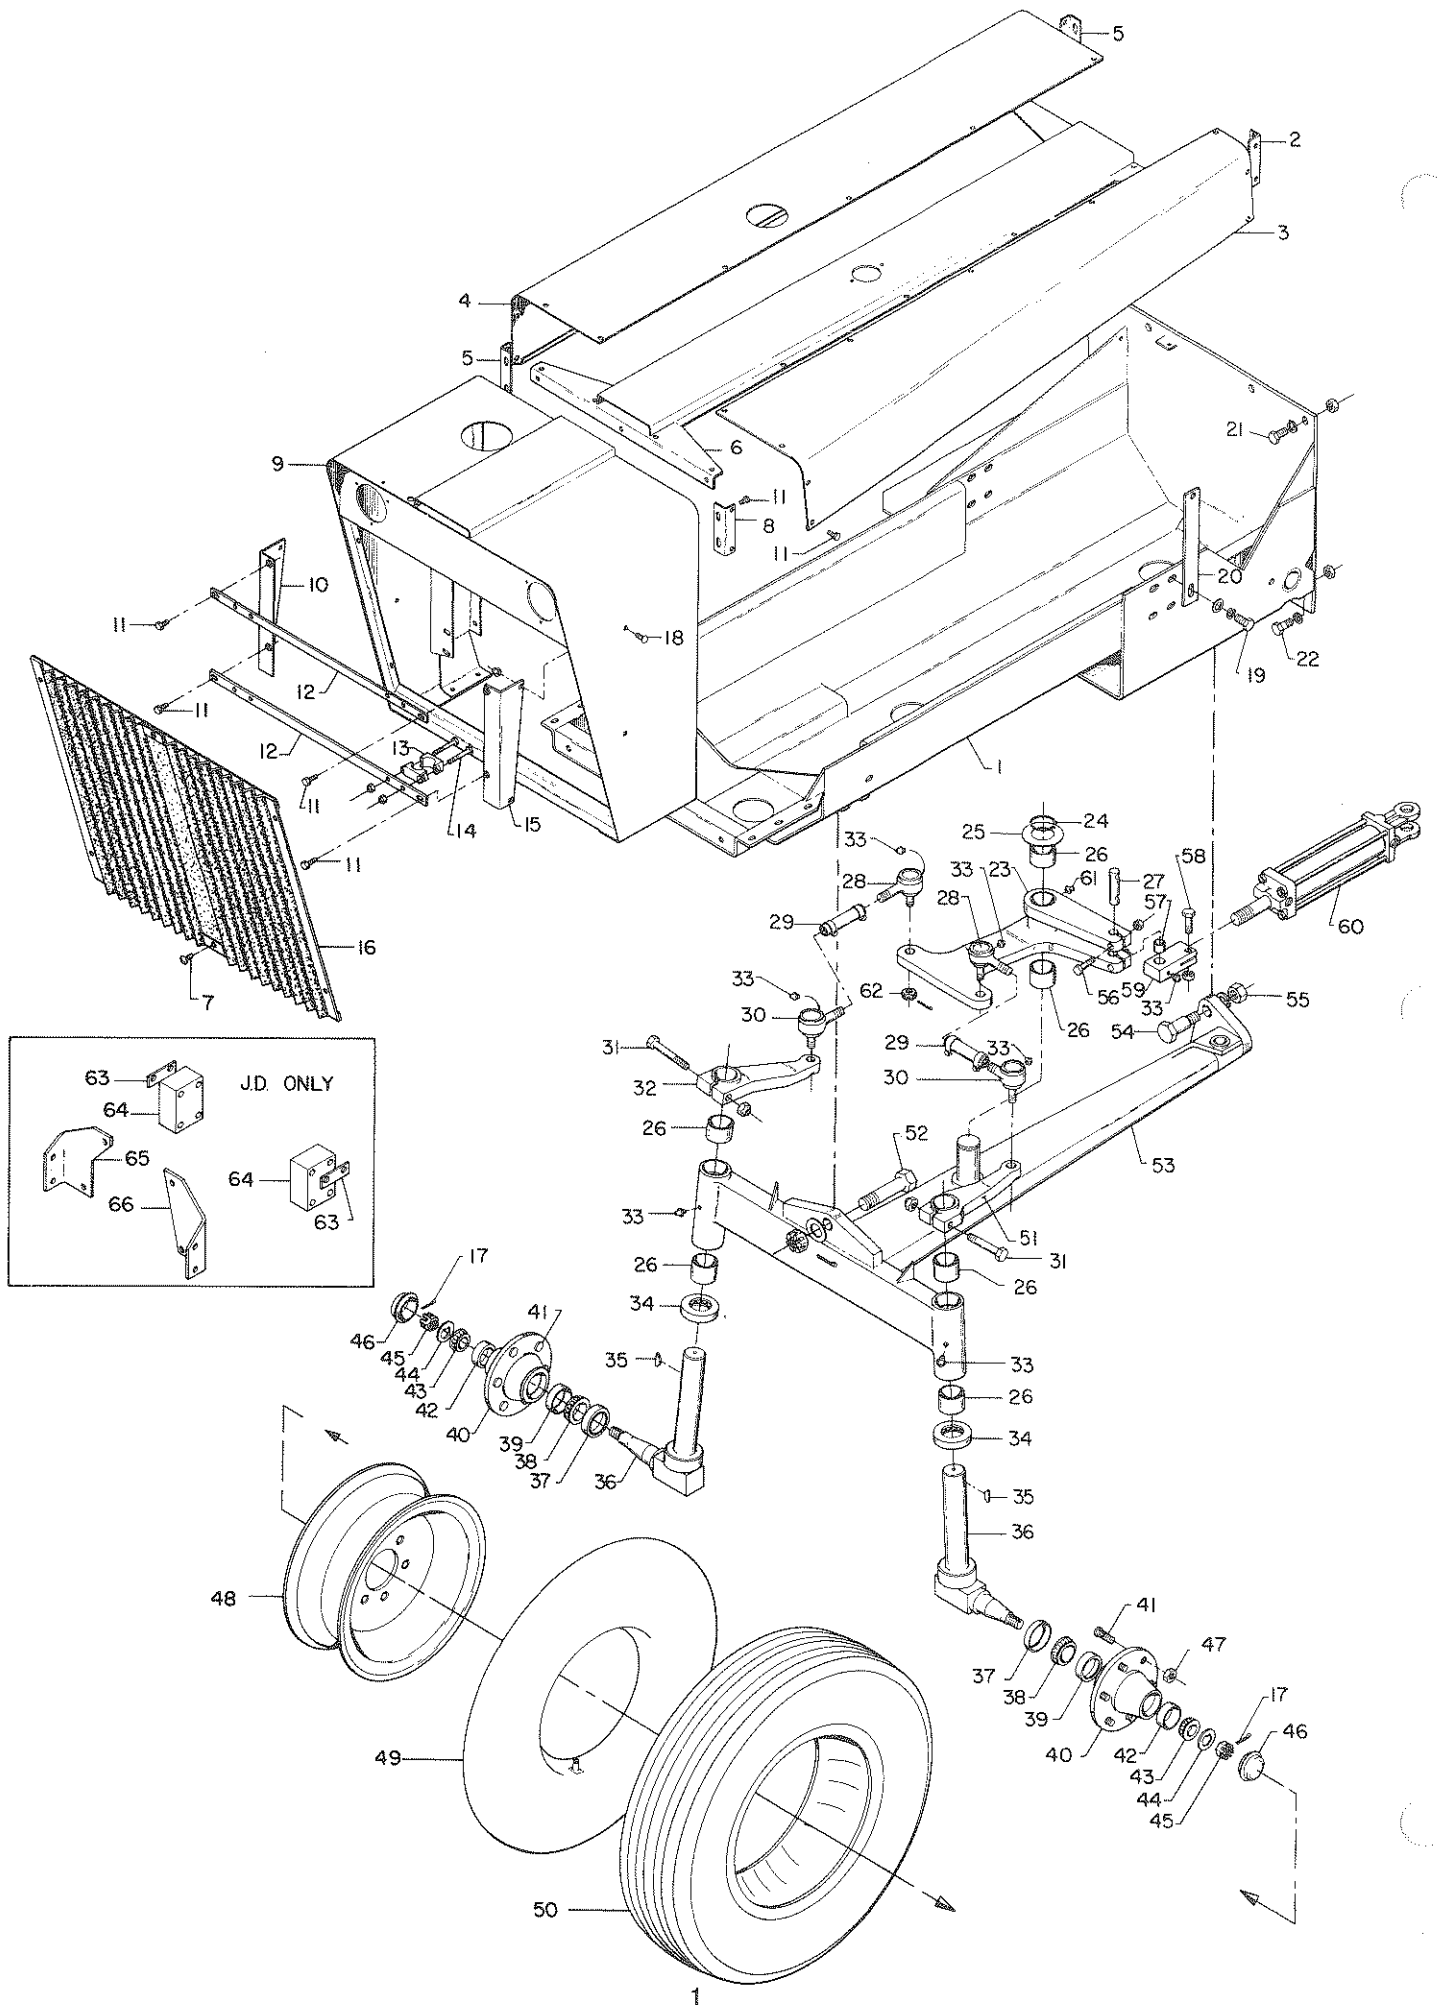


FRONT END FOR AC 433T

REF. NO.	PART NO.	DESCRIPTION
1	JD0647900	Front end main frame section, J.D.
	FNG9744	Front end main frame section, A.C. 433T
2	F6473	Hood bracket, left rear
3	JD6487	Engine cowling, left side, J.D.
	CWL9674	Engine cowling, left side, A.C. AC 433T
4	F6705	Engine cowling, right side, J.D.
	CWL9679	Engine cowling, right side, A.C. AC 433T
5	F6474	Hood bracket, right side, 2 used
6	JD6496	Engine cowling, Center, J.D.
	CWL9685	Engine cowling, Center, A.C. Ac 433T
7	SMF0001001	1/4" x 3/4" machine screw
8	F6475	Hood bracket, left front
9	F6476	Engine front cowling
10	F6732	Oil cooler bracket, R.H.
11	SCC0020001	5/16" x 3/4" N.C. cap screw
12	F6622	Oil cooler bar, 2 used
13	F6623	Oil cooler clamp, 2-piece, 4 sets used
14	SCC0000107	1/4" x 2-1/4" N.C. cap screw
15	F6733	Oil cooler bracket, L.H.
16	F6605	Front end grill
17	COT0000503	Cotter key, 1/8" x 1-1/4"
18	CRB3130750	5/16" x 3/4" carriage bolt
19	SCC0000504	1/2" x 1-1/2" N.C. cap screw
20	F6483	Top front belt guide
21	SFC0000504	1/2" x 1-1/2" N.F.H.T. cap screw
22	SFC0000505	1/2" x 1-3/4" N.F.H.T. cap screw
23	F6503	Steering bell crank
24	F6508	Snap ring, 175
25	BSH0175014	1-3/4" x 14 GA machinery bushing
26	F5854	Spindle bushing, 1-3/4" x 2" x 1-1/2", 2 pair used
27	F6501	Cylinder rod pin
28	F6504	Tie rod end, R.H.
29	F6505	Drag link
30	F6506	Tie rod end, L.H.
31	SFC0000513	1/2" x 3-3/4" N.F.H.T. cap screw w/locknut
32	F6509	Steering arm, right
33	ZZ100	Zerk, 1/4" - 28, 1641B, 90°
34	F5769	Thrust bearing, D21
35	F83	Woodruff key, 3/8" x 1-1/4"
36	F6587	Front spindle, R.H. & L.H.
37	F1627	Front wheel grease seal, 54605 K.H.
38	F1625	Front wheel bearing, inner, No. LM29749
39	F1653	Cup for bearing, inner, No. LM29710
40	F1624	Front wheel hub, 6 hole
41	F462	Lug bolt, 12 used
42	F1654	Cup for bearing, outer, No. L44610
43	F1626	Front wheel bearing, outer, No. L44640
44	F884	Spindle washer
45	F934	Nut for spindle
46	F1628	Hub cap
47	F214	Lug nut, 12 used, No. 15085
48	F5650	Wheel, front, 6 hole
49	F5040	Tube for front tire, 6:70 x 15
50	F5039	Tire, front, 6:70 x 15, 6-ply
51	F6510	Steering arm, left
52	F6507	Front axle pivot bolt w/castellated nut
53	F6539	Front axle assembly
54	F5023	Front axle shoulder bolt
55	NCH0000750	3/4" N.C. hex nut
56	SCC00208	5/16" x 2-1/2" N.C. cap screw
57	F6500	Bushing, 3/4" x 7/8" x 1-1/4"
58	SCC0000305	3/8" x 1-3/4" N.C. cap screw
59	F6499	Steering cylinder rod end
60	F6519	Steering cylinder, 2" x 8"
61	ZZ101	90° zeri, 1911 B
62	NFE0000563	9/16" N.F. castilated nut, 4 used
63	SPC7201	Shim
64	JD6488	Spacer
65	F4514	Right front motor mount
66	F4515	Left front motor mount

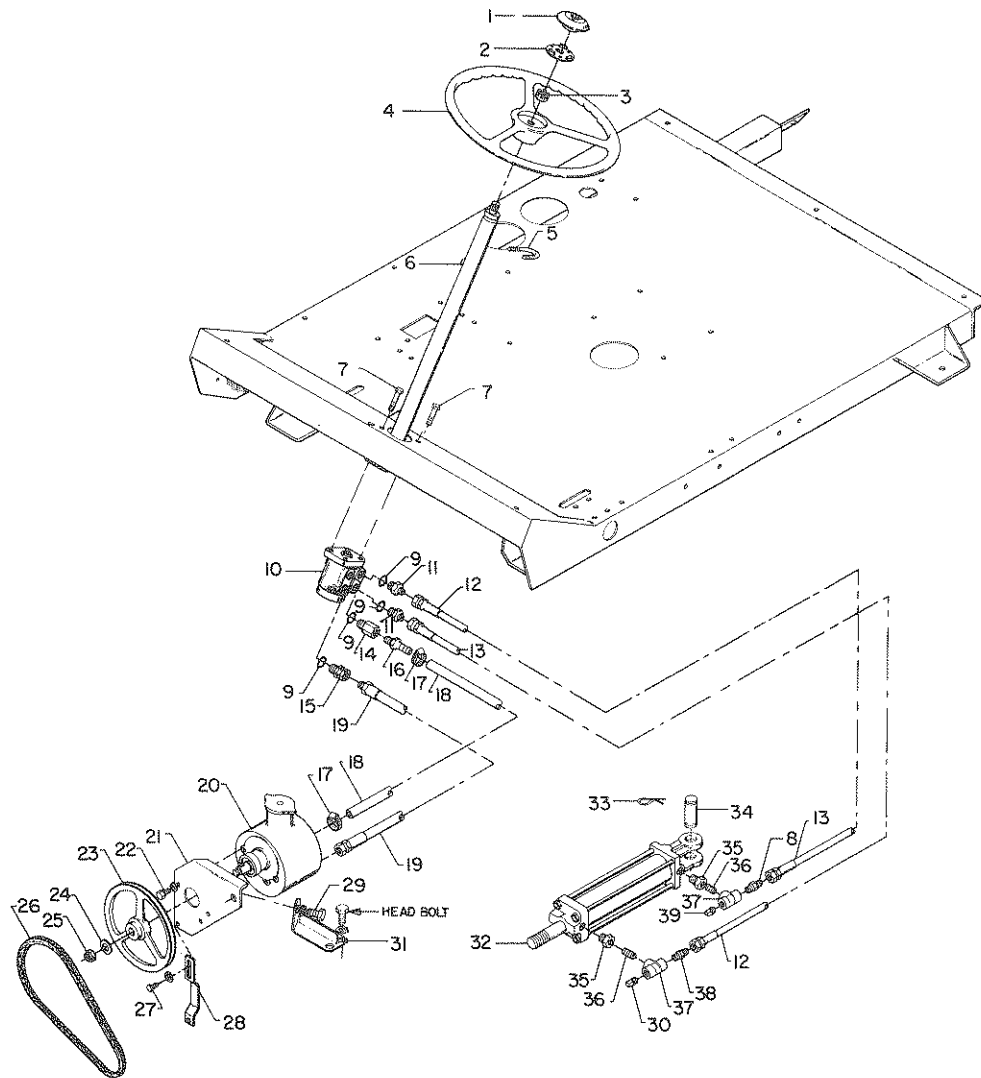

STEERING HYDRAULIC SYSTEM FOR 433T

REF. NO.	PART NO.	DESCRIPTION
1	F5031	Steering column cap
2	F5032	Steering column cap holder
3	F6323	Nut, 13/16"-20
4	F6292	Steering wheel
5	F6324	"U" bolt
6	F6415	Steering orbitrol column
7	SCC0000303	3/8" x 1-1/4" N.C. cap screw w/lock and flat washer
8	F6294	Pipe spacer
9	HYD7629040	"O" ring, 4 used
10	F6991	Steering orbitrol control unit
11	F6989	3/8" J.I.C., "O" ring adapter, C5315 x 6 x 8 WH
12	F6631	1/4" hydraulic hose, 66"
13	F6630	1/4" hydraulic hose, 76"
14	F6990	3/8" "O" ring adapter, C3269 x 8 x 6 WH
15	F6988	3/8" straight "O" ring swivel fitting, 9315 x 8 x 6 WH
16	F6488	Barbed hose end, 3/8"
17	F8301	Hose calmp, GS - 4 Murray
18	F6489	3/8" return hose, 104"
19	F6490	3/8" hydraulic hose, 102"
20	F5688066	Hydraulic pump assembly
21	F6690	Hydraulic pump mounting bracket, Ford
	BKT9638	Hydraulic pump mounting bracket, J.D.
	BKT9638	Hydraulic pump mounting bracket, AC433T
22	SCC0000302	3/8" x 1" N.C. cap screw
23	F6693	Sheave, hydraulic pump, A.C.
	F5613	Sheave, hydraulic pump, I.H.C., J.D., and Ford
24	WCT0000438	7/16" flat washer
25	NFJ0005000	1/2" N.F. jam nut
26	BLT42	Belt, hydraulic pump drive, AX42, J.D.
	F6694	Belt, hydraulic pump drive, AX56, A.C.
	BLT51	Belt 433T
27	SCC0000202	5/16" x 1" N.C. cap screw
28	F6688	Pump tightener bracket, A.C.
	BKT6493	Pump tightener bracket, J.D.
	BKT9656	AC 433T tightener brakcet
29	SCC0000704	5/8" x 1-1/2" N.C. cap screw
30	FT75	1/4" pipe plug
31	F6691	Pump bracket, A.C.
	BKT6492	Pump bracket, J.D.
32	F6519	Steering cylinder, 2" x 8"
	F6599	Repair kit for F6519
33	F6511	Hair pin for cylinder, 2 used
34	F6498	Cylinder pivot pin
35	PPE500250	1/2" x 1/4" reducer bushing
36	FT217	1/4" N.P.T. close nipple
37	FT74	1/4" pipe tee
38	FT219	3/8" J.I.C., male connector, C5205 x 6 WH
	PLY7628	Pump drive pulley, J.D. (not shown)

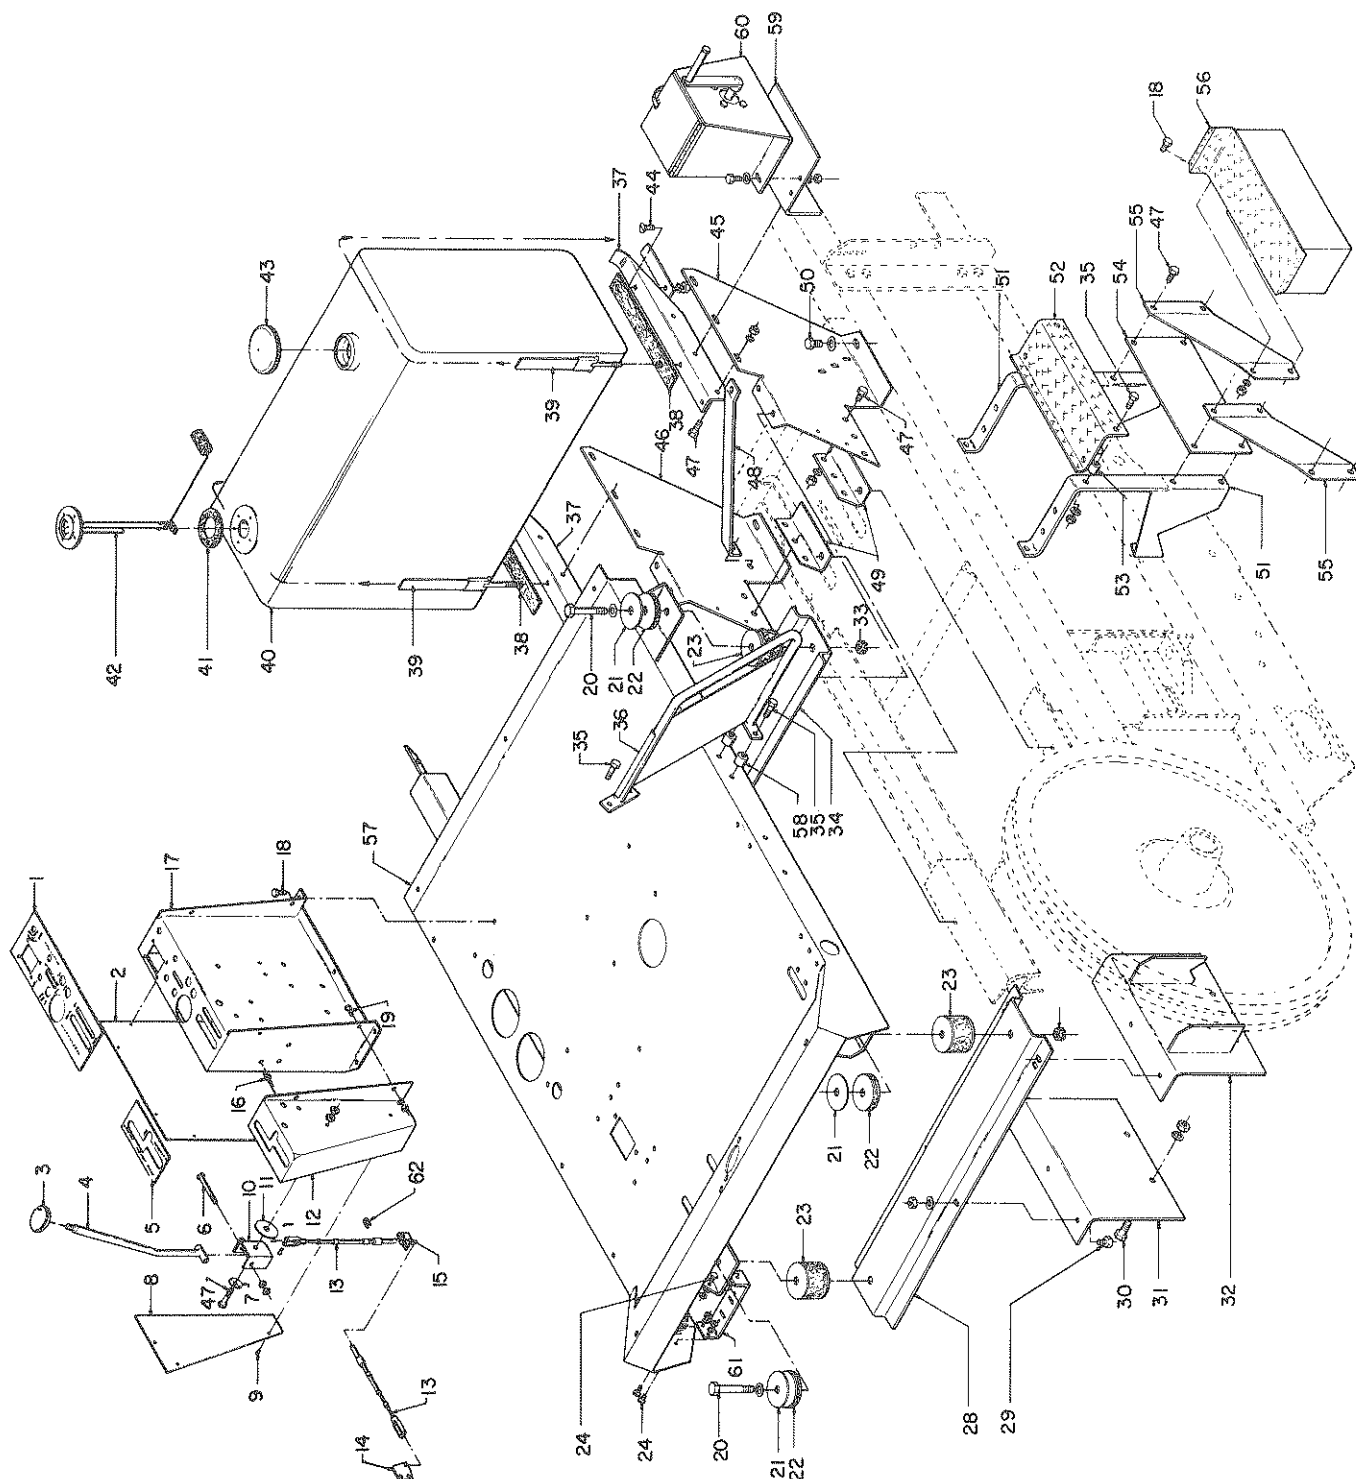


OPERATOR PLATFORM—1979

REF. NO.	PART NO.	DESCRIPTION
1	FD25	Decal, main console
2	F6032	Console cover
3	F6278	Speed control lever knob
4	F6279	Speed control lever
5	FD26	Decal, speed control console
6	SCC109	1/4" x 2-3/4" N.C. cap screw
7	F5551	Conical washer
8	F6281	Speed control console cover
9	SMS120	10-32 x 1/2" hex head sheet metal screw, 9 used
10	F6280	Speed control lever arm
11	F5546	Friction disc
12	F6282	Speed control console
13	F6283	Speed control cable
14	F6290	Speed control lever, lower
15	F6291	Speed control cable clamp angle
16	F6069	Rubber grommet
17	F6413	Console, main section
18	SCC0000201	5/16" x 3/4" N.C. cap screw, 12 used
19	SCC0000101	1/4" x 3/4" N.C. cap screw, 3 used
20	SFC0000514	1/2" x 4" N.F. cap screw, 4 used
21	F6184	3" x 5/8" washer, 16 used
22	F6182	Deck mount, Neoprene, 3" x 3/4" x 1/2" w/washer, 4 used
23	F6183	Deck mount, Neoprene, 3" x 3/4" x 1-3/4" w/washer, 4 used
24	SCC0000102	1/4" x 1" N.C. cap screw, 3 used
25	F6412	Cover plate, pump inspection hole w/lock washer & nut
26	F6482	Front deck shield, R.H.
27	F6481	Front deck shield, L.H.
28	F4511	Front deck mount channel
29	SCC0000303	3/8" x 1-1/4" N.C. cap screw, 10 used
30	SCC0000504	1/2" x 1-1/2" N.C. cap screw, 4 used
31	DCK8048	Front deck leg, R.H.
32	DCK8047	Front deck leg, L.H.
33	NFE0000500	1/2" N.F. elastic stop nut, 4 used
34	F6175	Rear deck mount channel
35	SCC0030005	5/16" x 1-3/4" N.C. cap screw, 4 used
36	F6562	Hand rail and shield
37	BKT7083	Fuel tank mounting bracket, 2 used
38	F893	Felt pads for fuel tank, set of four
39	CLP7085	Tank strap
40	TNK9231	Fuel tank less fuel gauge, 30 gal.
41	F5949	Gasket for fuel gauge
42	F5948	Fuel gauge
43	F1689	Fuel tank cap
44	SMF0002002	5/16" x 1", flat head screw, 2 used
45	F6865	Rear deck mounting bracket, L.H., 3 tie
	F6607	Rear deck mounting bracket, L.H., 2 tie
46	F6868	Rear deck mounting bracket, R.H., 3 tie
	F6654	Rear deck mounting bracket, R.H. 2 tie
47	SCC0020003	5/16" x 1-1/4" N.C. cap screw, 16 used
48	BRC7183	Brace for rear mounting bracket
49	F6866	Mounting angle deck leg
50	SCC0050001	1/2" x 3/4" N.C. cap screw
51	F6274	Step bracket, 2 used
52	F6273	Step plate
53	F6410	Cable pulley
54	F6272	Step and tool box bracket plate
55	F6271	Step and tool box bracket, 2 used
56	F6270	Tool box and step
57	DCK9228	Main operator deck
58	F993	Spacer (used with cab only)
59	BKT7873	Bullgear luber mounting bracket
60	LUB7600	Bullgear luber tank and pump assembly
61	BKT	Hose bracket
62	CIP0050426	Clip


GEAR SHIFT CONTROL AND OPERATORS SEAT

REF. NO.	PART NO.	DESCRIPTION
1	F6776	Gear shift bell crank, front
2	F6777	Gear shift bell crank, rear
3	F440	Ferrule, 2 used
4	SCC0000302	3/8" x 1" N.C. cap screw, 2 used
5	F6778	Bell crank
6	F6790	Clevis pin for 1/2" clevis, 6 used
7	F6835	1/2" clevis, narrow, 6 used
8	NFJ0005000	1/2" N.F. nut, 8 used
9	F6779	Transmission support
10	F6780	Transmission support brace
11	F6774	Shift rod, 29-3/4", 2 used
12	SCC0000306	3/8" x 2" N.C. cap screw
13	F6782	Bow washer, 270-S-12, 10 used
14	F6781	Wave washer, WW-284-S-20
15	SCC0000205	5/16" x 1-3/4" N.C. cap screw, 2 used
16	F6772	Shift rod bell crank, top
17	F246	Spacer washer, 2 used
18	F6773	Shift rod bell crank, bottom
19	RD0007045	Shift rail rod, 2 used
20	F1002	Conical washer
21	F6767	Shift rail guide, 2 used
22	SCC0000202	5/16" x 1" N.C. cap screw, 12 used
23	F6771	Shift rail separator, rear
24	F5055	Gear shift lever knob
25	F6769	Shift rail, 2 used
26	F6768	Shift rail separator, front
27	F6766	Gear shift lever bracket
28	SCC0000204	5/16" x 1-1/2" N.C. cap screw
29	F6770	Gear shift lever swivel
30	SCC0000208	5/16" x 2-1/2" N.C. cap screw
31	F6765	Gear shift lever
32	DCK9228	Operators deck
33	F5918	Seat assembly
	SEA0042408	Seat assembly, deluxe
	F5920	Bottom seat cushion
	F5921	Back seat cushion
34	F6858	Seat adjusting rail complete
35	SCC0000505	1/2" x 1-3/4" N.C. cap screw, 2 used
36	F5867	Seat bracket
37	F5703	Seat spring and hydraulic assembly complete
38	F5501	Spring and cylinder adjusting bracket
39	F5502	Cup washer
40	F5705	Spring
41	F5866	Shock absorber
42	F5505	Plate, bottom pivot
43	F6783	Bow washer, 400-S-8, 2 used
44		1-1/4" x 1-1/2" roll pin

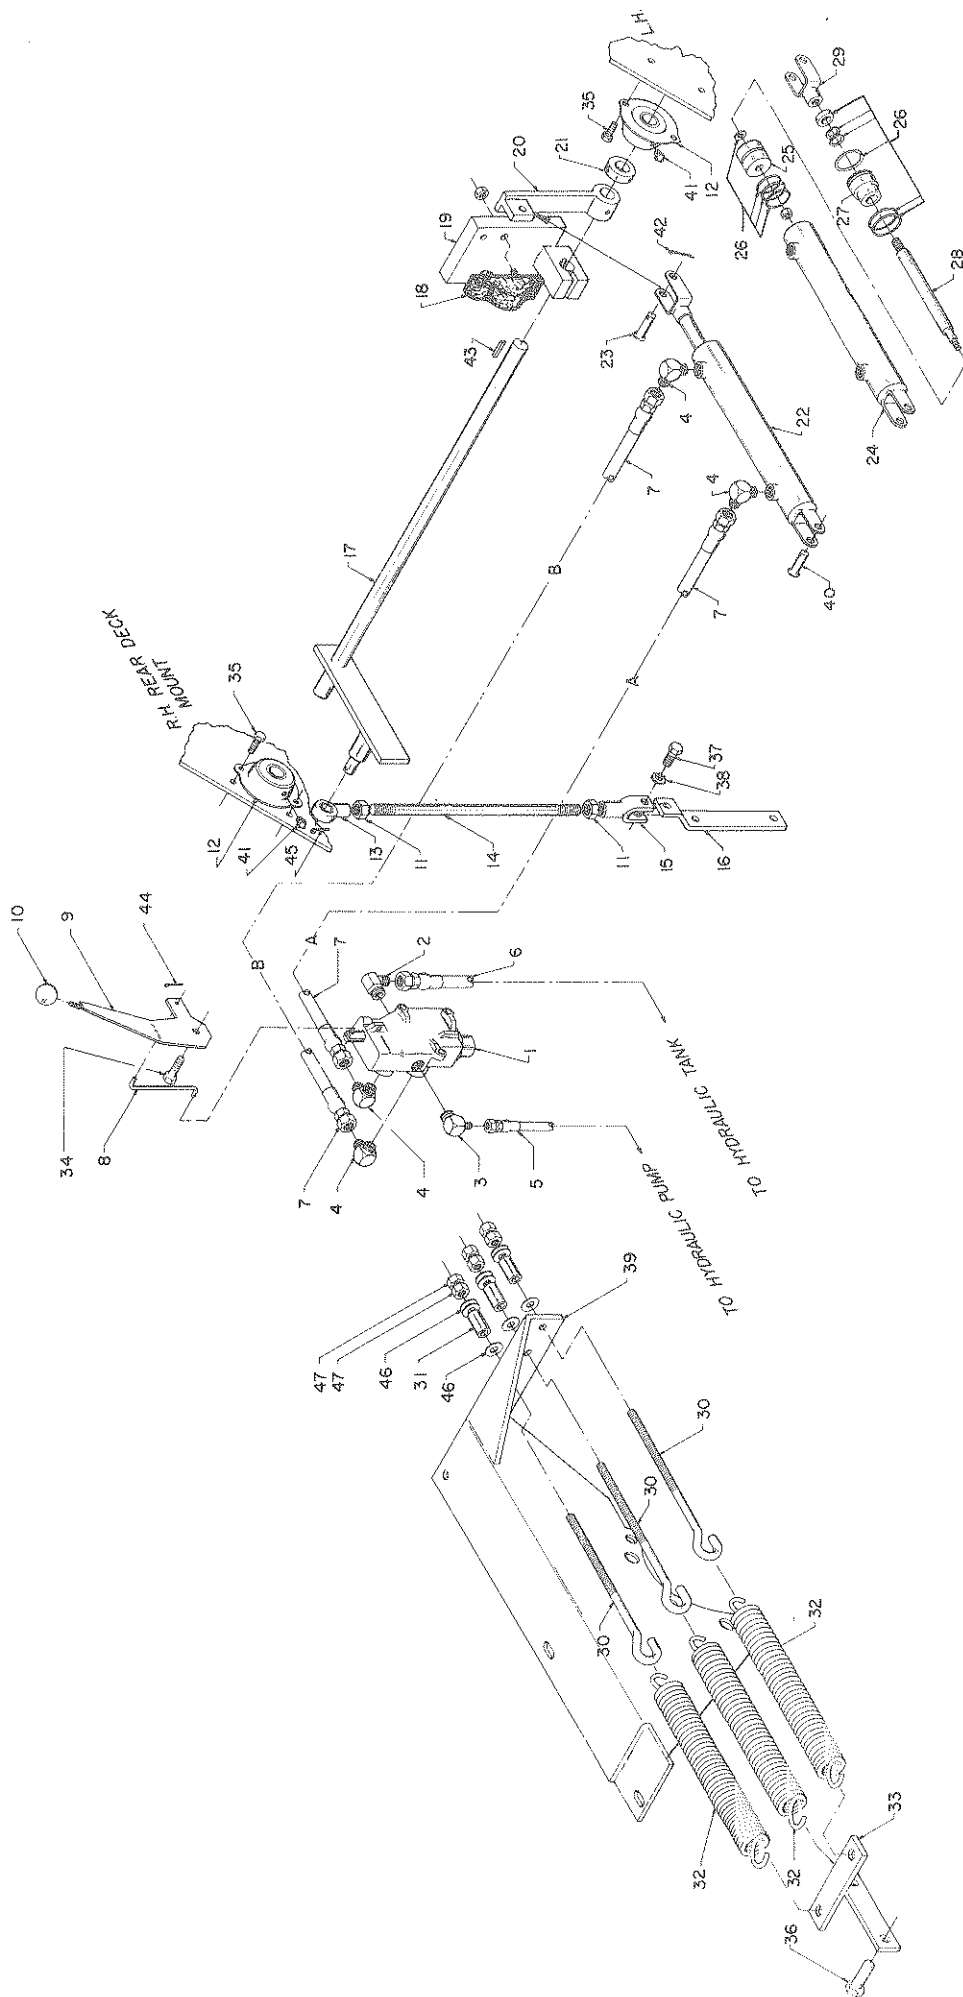


PICK UP LIFT

REF. NO.	PART NO.	DESCRIPTION
1	F6838	Hydraulic control valve, DV-024
2	F6635	3/8" J.I.C. 90° male elbow
3	F6719	1/4" J.I.C. 90° male elbow
4	F6638	3/8" J.I.C. 90° male elbow
5	F6687	1/4" hydraulic hose, w/J.I.C. female fittings, 105"
6	F6659	1/4" hydraulic hose, w/J.I.C. female fittings, 100"
7	F6720	1/4" hydraulic hose, w/J.I.C. female fittings, 41"
8	F6451	Link rod
9	F6018	Hydraulic pickup control lever
10	F5554	Knob for control lever
11	NFJ0005000	1/2" N.F. nut
12	F6723	Flange bearing, FAH16G triangle, 2 used
13	F6212	Ball rod end, 1/2"
14	F6706	Pickup lift rod
15	F6707	Clevis, pickup lift
16	F7194	Pickup lift bracket
17	F6708	Pickup lift shaft
18	F8264	Rubber bumper
19	F6710	Pickup lift shaft lever
20	F6711	Pickup lift cylinder lever
21	F5121	1" set collar
22	F6724	Hydraulic cylinder for pickup, WFC1500-6
23	F5049	1/2" x 1-1/4" clevis pin
24	F6725	Tube assembly only
25	F6726	Piston
26	F6727	Ring kit for F6724 cylinder
27	F6728	Cylinder head
28	F6729	Piston rod
29	F6730	Clevis
30	F96	Eye bolt for pickup balance spring, 3 used
31	F6410	Spacer bushing, 3 used
32	F7154	Spring for pickup balance, 3 used
33	F6712	Anchor plate pickup spring
34	SCC0020003	5/16" x 1-1/4" N.C. cap screw
35	SCC0000101	1/4" x 3/4" N.C. cap screw, 4 used
36	FT0000109	7/16" x 1-1/2" N.F. cap screw
37	SCC0000301	3/8" x 3/4" N.C. cap screw
38	WES0003750	3/8" star lock washer, external
39	F6832	Feeder house support, R.H.
40	PIN5001250	1/2" x 1-1/4" clevis pin
41	ZZ0000100	1/4" zerk
42	COT0000502	1/8" x 1" cotter key
43	ZZ0000406	1/4" x 1/4" x 1" key square key
44	COT0000301	3/32" x 3/4" cotter key
45	COT0000802	3/16" x 1-1/4" cotter key
46	WCT0000375	3/8" flat washer, 9 used
47	NCH0000375	3/8" NC nut, 9 used

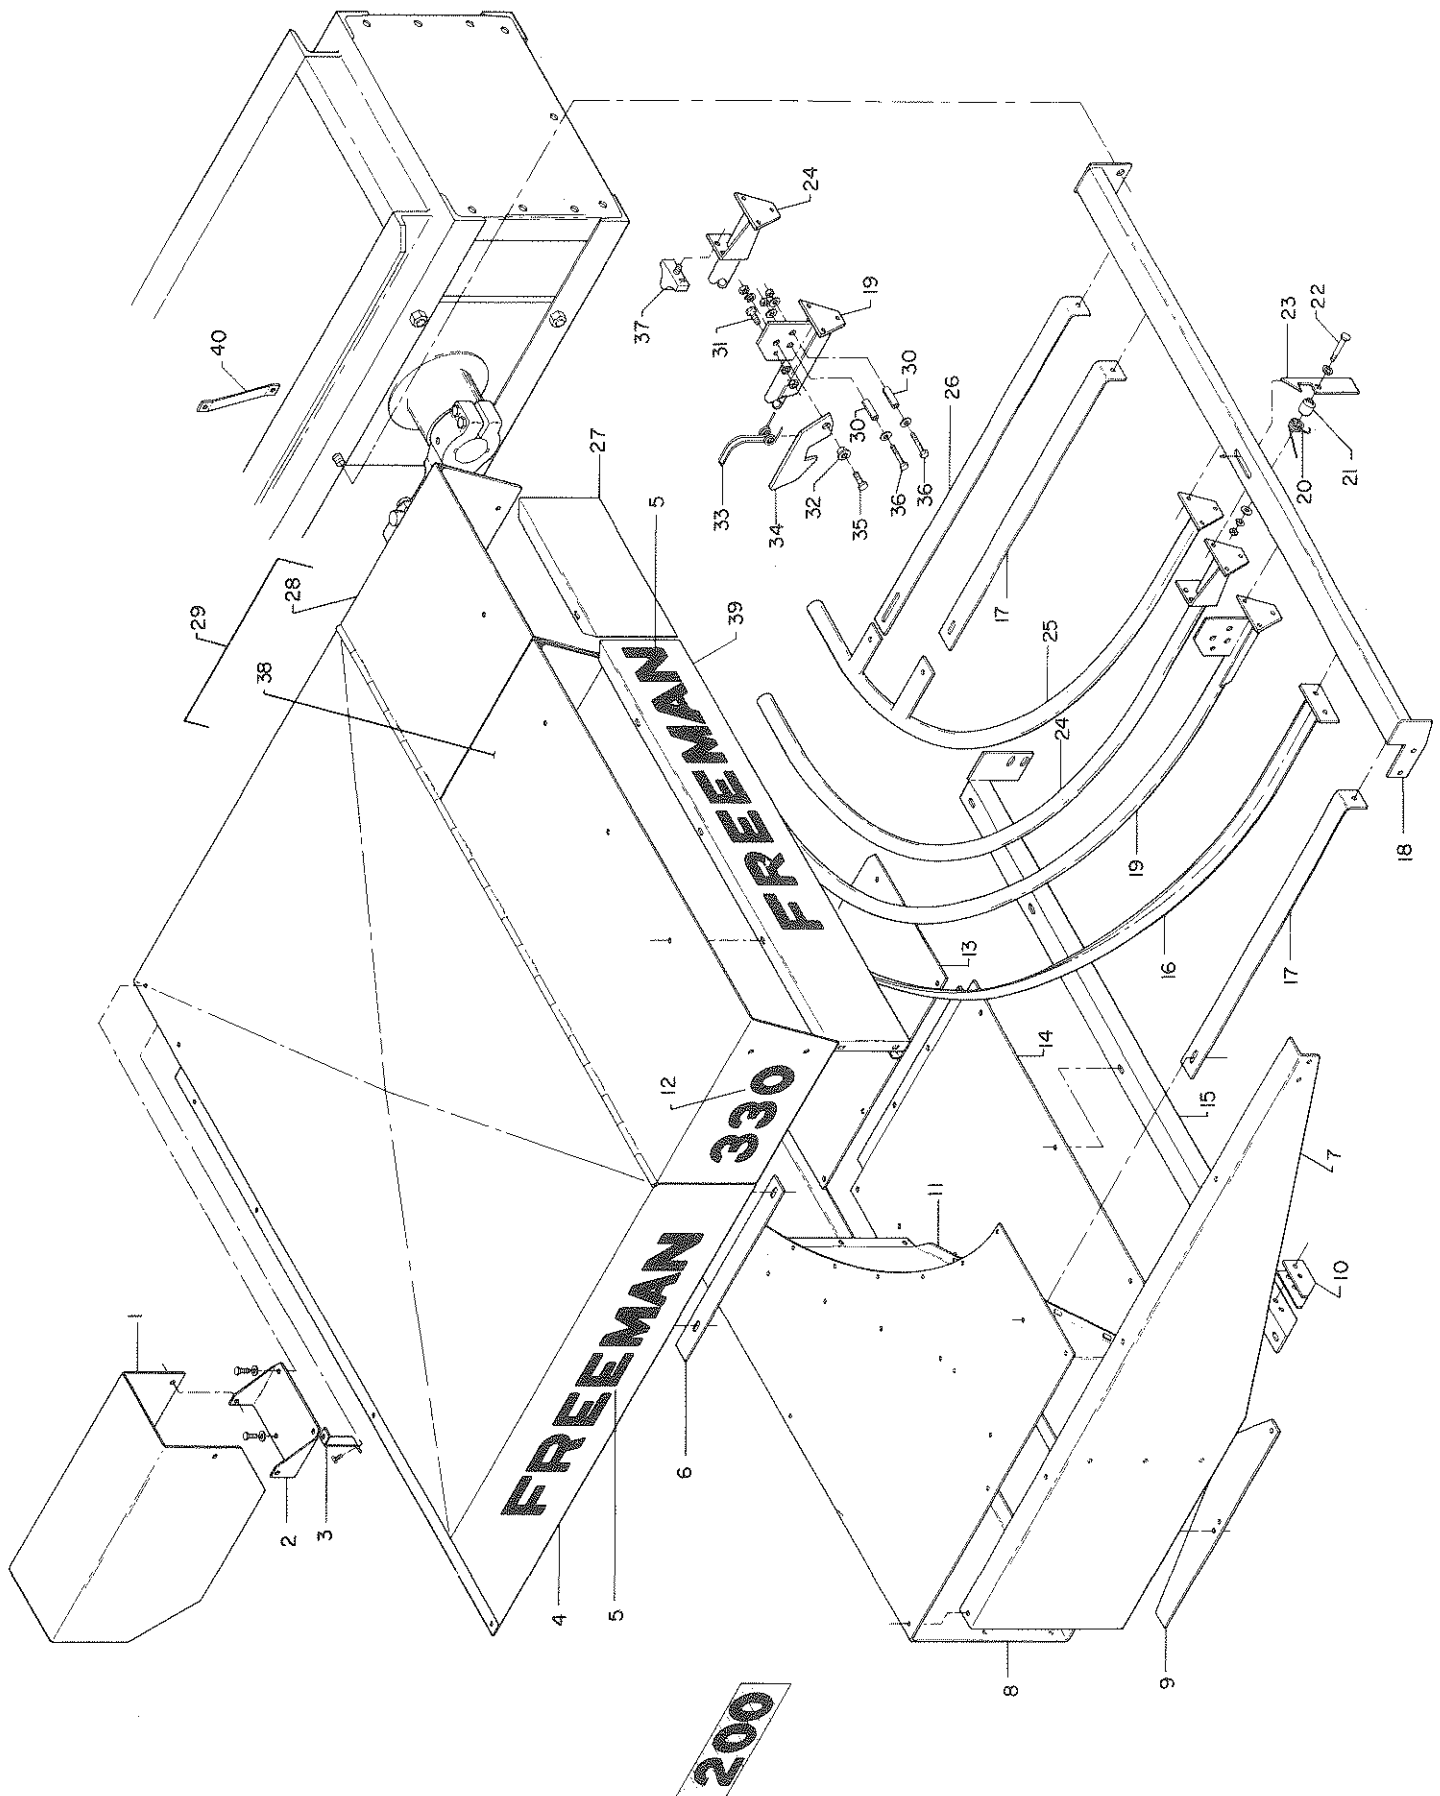


PICKUP FEED HOUSE

REF. NO.	PART NO.	DESCRIPTION
1	F8375	Shield, right side knottter drive arm
2	F7579	Bracket, drive arm shield
3	F7654	Brace
4	SHD7154	Shield over pickup, rear
5	FD7114	Freeman decal, red, 2 used
6	SHM7089	Shim
7	FH4907	Feed house end plate
8	FH7088	Feed house rear
9	F7714	Feed house bottom shim
10	F7394	Pickup stop
11	F7152	Feed house back shield
12	FD7116	Freeman decal
13	F7145	Feed house bottom wear plate
14	F7713	Feed house bottom
15	F7157	Angle brace for feed house bottom sheet
16	F7299	Guard angle
17	F7159	Hay hold down, 2 used
18	FH7118	Guard pipe support
19	F7472	Guard pipe, outside w/latch mounting plate
20	SRG7095	Latch spring
21	05-130	Ferrule
22	SCC0020008	5/16" x 2-1/2" N.C. cap screw
23	SHD7096	Hood latch
24	F8261	Guard pipe, center
25	F7164	Guard pipe, inside
26	F7160	Hay hold down, inside
27	SHD7153	Face plate shield over pickup
28	SHD7152	Shield over pickup front
29	SHD7512	Shield over pickup complete
30	F7275	Roll pin, 1/2" x 2", 2 used
31	F7239	Roll pin, 3/8" x 1-1/2"
32	F7276	Ferrule for F1563
33	F281	Spring latch
34	F1563	Catch for torque shaft
35	SCC0000404	7/16" x 1-1/2" N.C.H.T. cap screw
36	SCC0020008	5/16" x 2-1/2" N.C. cap screw
37	F8264	Rubber bumper
38	SHD7151	Shield over pickup
39	SHD7154	Face shield over pickup
40	STR9762	Tie strap 200
	STR9761	Tie strap 330

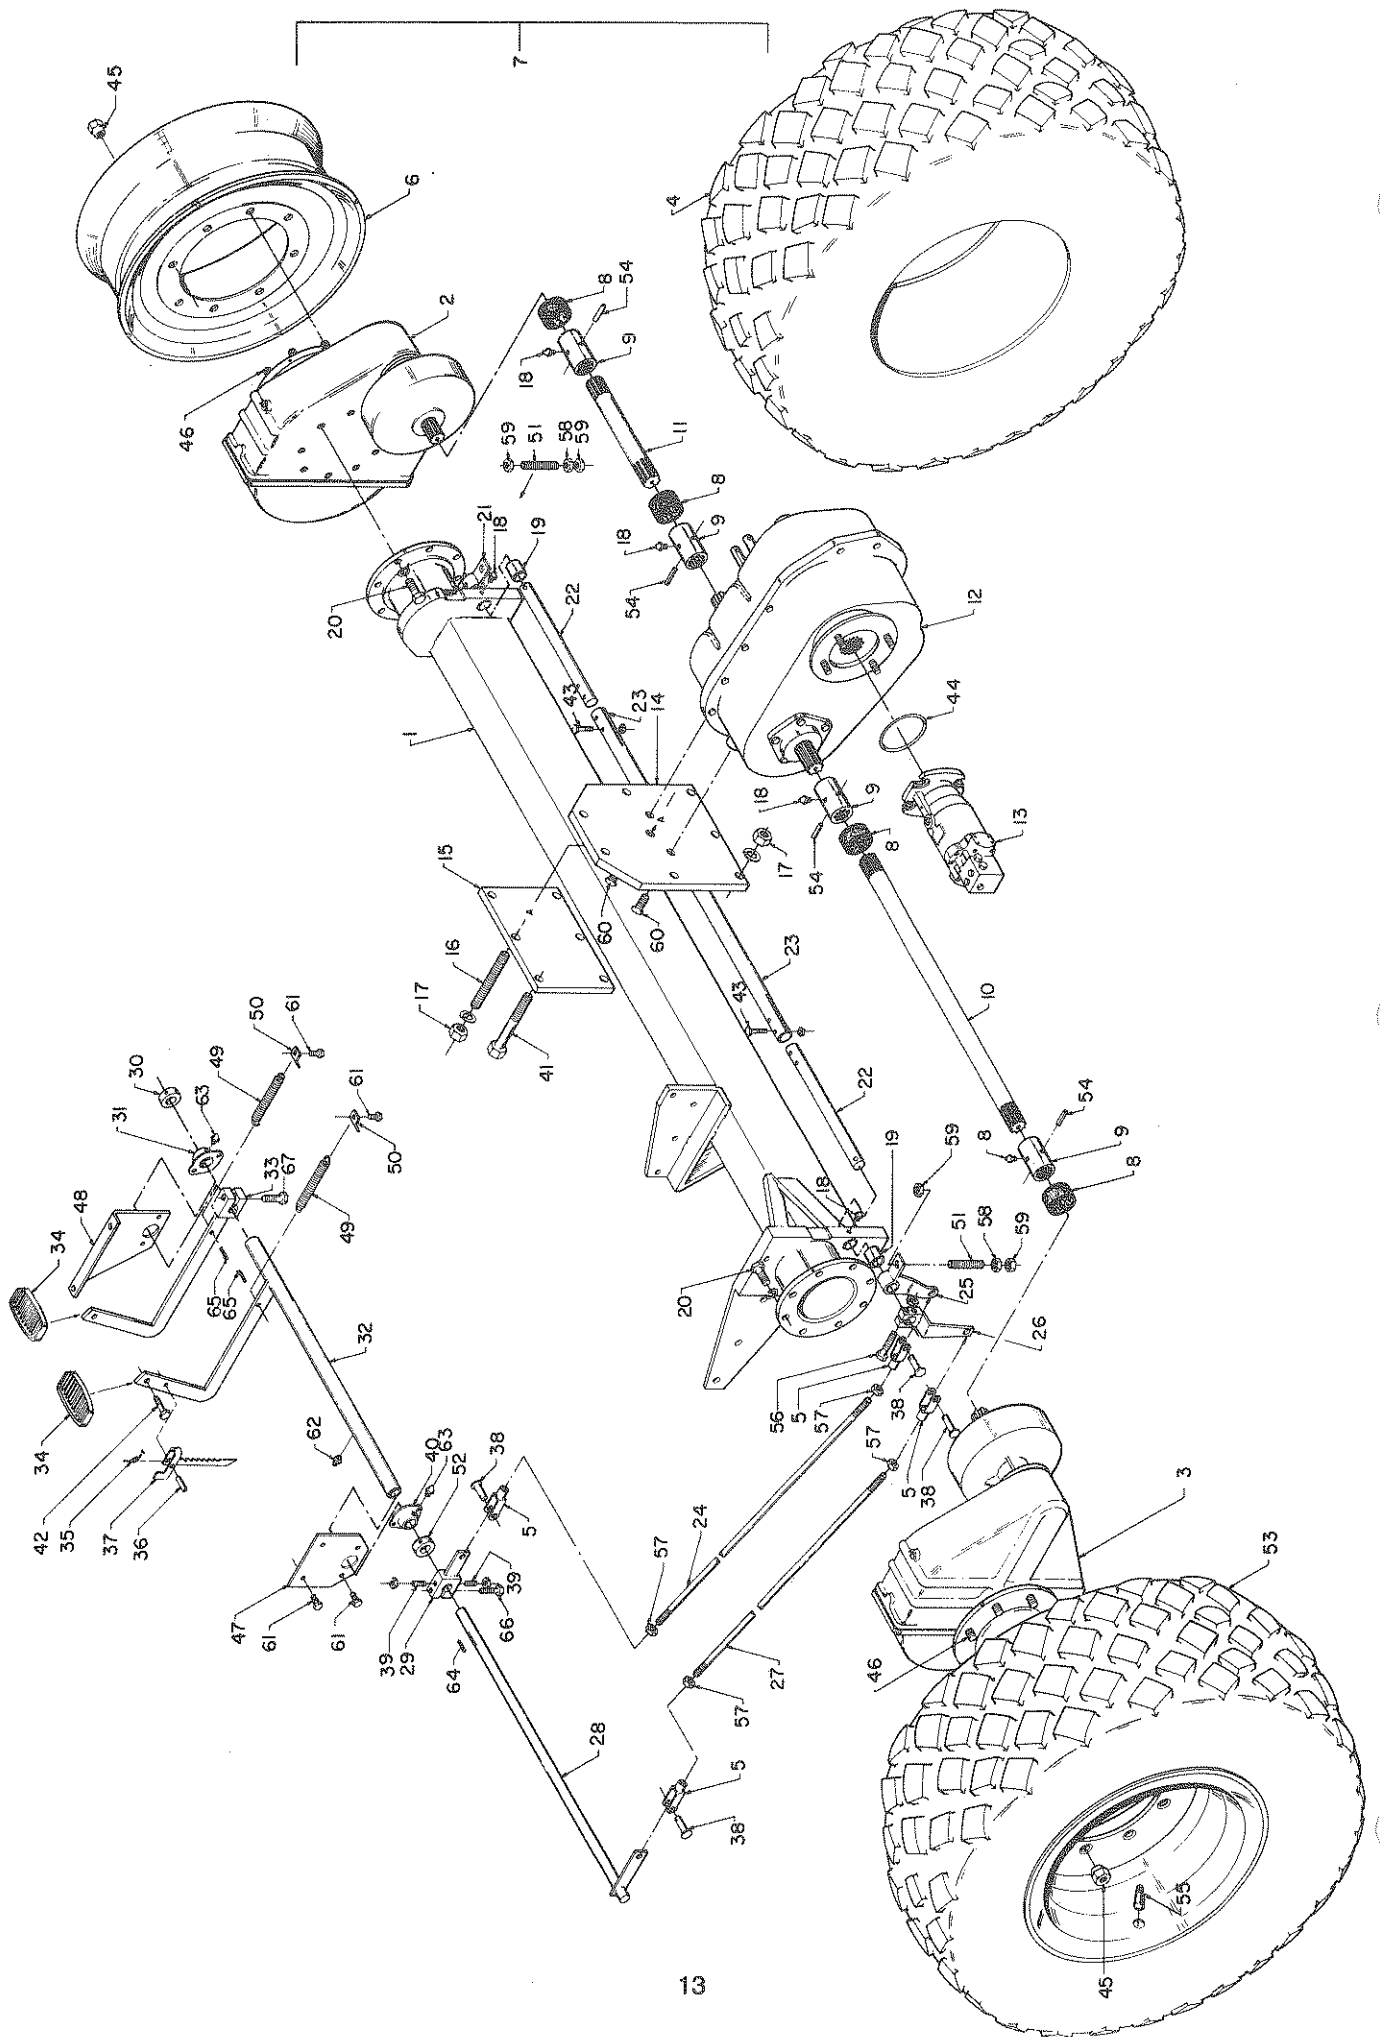


REAR AXLE AND FINAL DRIVE AND BRAKE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F6735	Axle tube	51	F6849	Adjusting bolt with conical nut
2	DRV0011085	Final drive, R.H.	52	F4512	1-1/4" set collar
3	DRV0011085	Final drive, L.H.	53		Tire and wheel assembly, L.H.
4	F5648	Flotation tire, 8-ply, L.H., 18.4 x 16.1	54	ZZ0000713	13/64" x 2" roll pin, 4 used
5	F5075	Clevis, 5/16" R.H. thread	55	19-109	Valve stem
6	F6738	Rear wheel	56	SCC0000206	5/6 x 2 screw
7	WHL0503758	Rear wheel 1980	57	NCE3125	5/16 NF
8	F6740	Grease fitting protector, 4 used	58		7/16 conical nut
9	F6741	Sleeve, 4 used, 1199-V-2856	59	NCH0004375	7/16 NC
10	F6742	Axle shaft, L.H.	60		5/8 NC flat head
11	F6743	Axle shaft, R.H.	61	SCC0000201	5/16 x 3/4, 7 used
12	F6744	Transmission, T-1250-A14	62	ZZ0000102	1/4 x 45° zerk
13	F6235	Hydrostatic motor	63	ZZ0000101	1/4 x 90° zerk
14	F6745	Transmission plate, rear	64	ZZ406	1/4 x 1 key
15	F6746	Transmission plate, front	65	COT 0001001	1/4 x 1-1/4 cotter key
16	F6747	3/4" x 6-1/2" N.C. stud bolt	66	SCC0000308	3/8 x 2-1/2 UNC cap screw
17	NCE0000750	3/4" N.C. nut	67	SCC0000208	5/16 x 2-1/2 UNC cap screw
18	F6170	Grease fitting			
19	F6718	Bushing, 1" x 1-1/8" x 1-1/4"			
20	SCC0000704	5/8" x 1-1/2" N.C. cap screw			
21	F6748	Brake lever			
22	F6749	Brake shaft end, 2 used			
23	F6750	Brake shaft			
24	F6752	Brake control rod for R.H. brake			
25	F6753	Brake bell crank			
26	F6754	Brake shaft lever			
27	F6755	Brake control rod for R.H. brake			
28	F6756	Brake pedal shaft			
29	F6757	Brake pedal shaft lever			
30	ZZ0002013	7/8" set collar			
31	F6758	Bearing, brake pedal shaft, 7/8", FBE14G			
32	F6759	Brake pedal, L.H.			
33	F6760	Brake pedal, R.H.			
34	F5979	Brake pedal pad			
35	F4210	Spring for brake release			
36	ZZ0000722	1/4" x 1-1/2" roll pin			
37	F5984	Brake pedal lock			
38	F5076	5/16" clevis pin			
39	STS3750750	3/8" x 3/4" N.C. socket set screw, half dog point			
40	F6761	Bearing, brake pedal shaft, 1-1/4" FBE20G			
41	SCC0000819	3/4" x 6-1/2" N.C. cap screw, 5 used			
42	SCC0000202	5/16" x 1" N.C. cap screw			
43	SCC0000206	5/16" x 2" N.C. cap screw			
44	F6762	"O" ring, 01-048			
45	F6763	Lug nut, 16 used, x 1148			
46	F6764	Lug bolt, 16 used, 20 x 273			
47	F6784	Bearing bracket, L.H.			
48	F6785	Bearing bracket, R.H.			
49	FT213	Spring, brake pedal release			
50	F6786	Anchor, pedal spring			

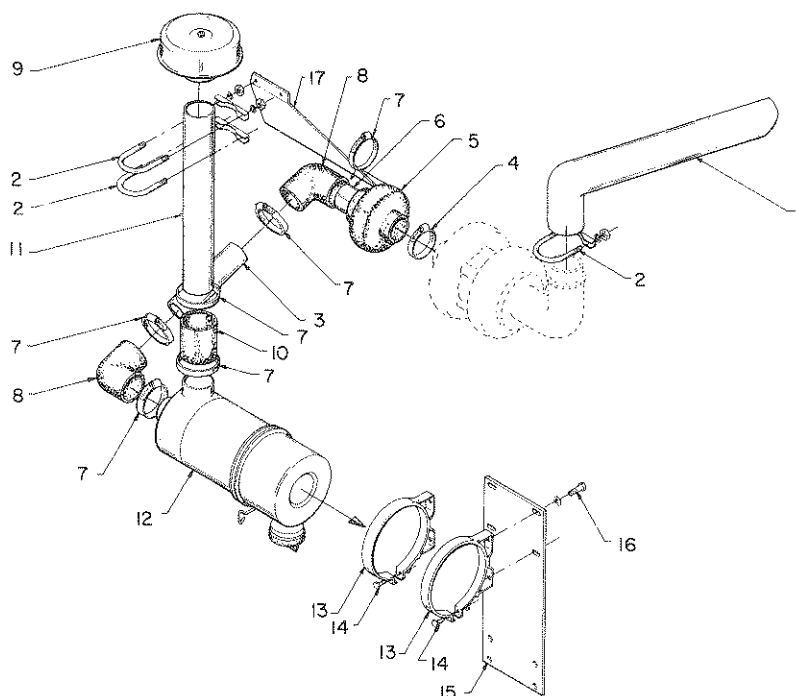


AIR CLEANER

REF. NO.	PART NO.	DESCRIPTION
1	EXH0041003	Exhaust pipe, Temp no.
2	CLP35751	Clamp
3	ACL4901012	Coupling
4	F6560	Worm ring
5	ACL0000253	Adapter
6	ACL4901003	Coupling
7	F6793	Worm ring, 4 used
8		3" rubber elbow
9	CAP2014	Cap breather 1979
	20-132	Pre cleaner 1980
		1979 model, breather cap
		Cover ACL0016548
		Bowl ACL0016630
		Sleeve
10	HOS0064306	Pipe cover
11	ACL4901036	Breather pipe 3 x 36
12	20-127	Air cleaner
13	20-129	Support strap
14		1/8"
15	BKT9626	Air cleaner bracket
16	SCC0000304	3/8 x 1-1/2" UNC cap screw (4 used) w/lock washer nut
17	BRC9758	Air cleaner extension brace

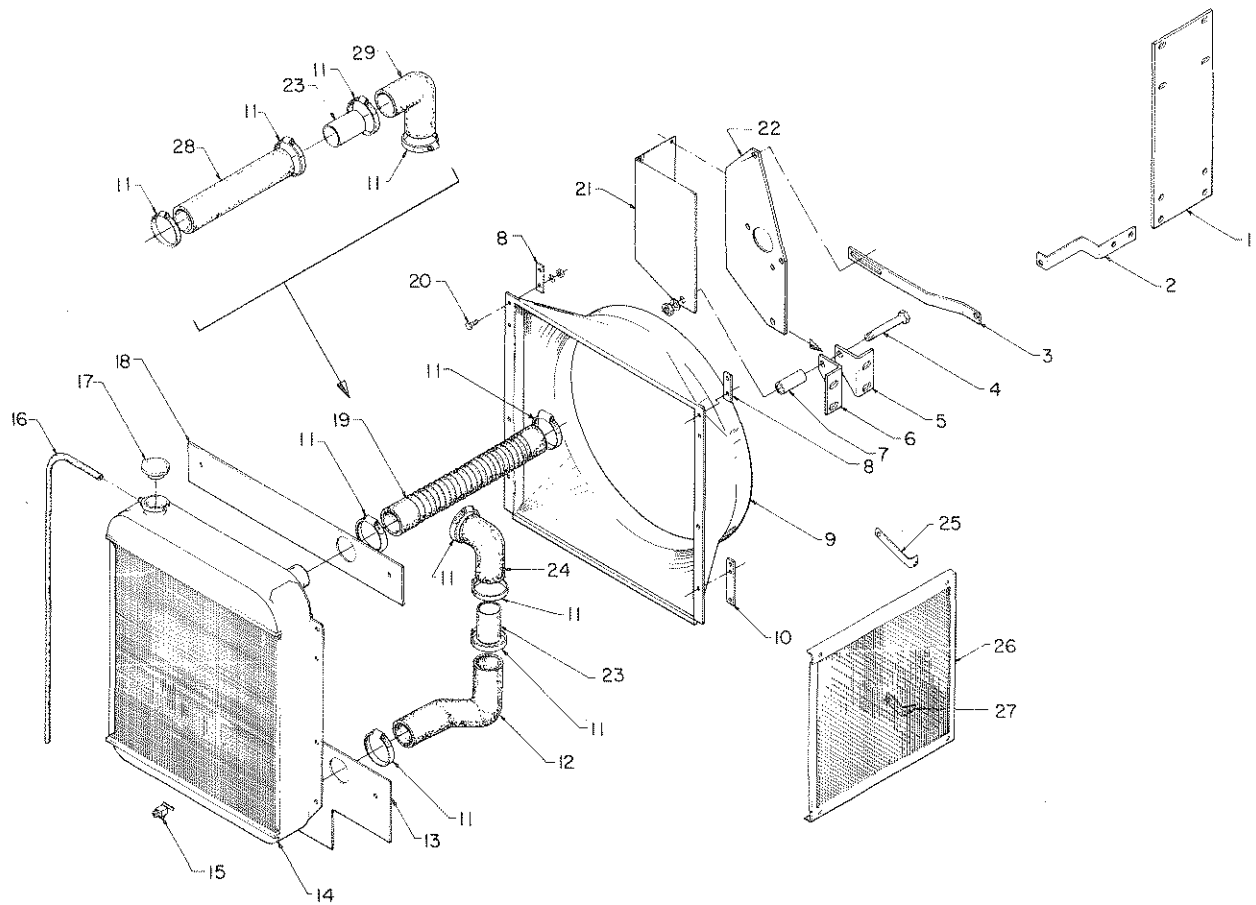


RADIATOR & SHROUD

REF. NO.	PART NO.	DESCRIPTION
1	BKT9626	Air cleaner bracket
2	BKT9661	Throttle cable bracket
3	BKT9656	Belt tightener
4	SCC0000715	5/8 x 4-1/2 UNC cap screw w/lock wash & nut
5	BKT6492	Anchor bracket
6	BKT9646	Front anchor bracket
7	SPC9657	Spacer
8	F6812	Radiator baffle, bracket top
9	SHR9660	Radiator shroud
10	F6811	Bottom bracket, radiator baffle
11	F6830	Hose clamp no. 36 (6 used)
12	HOS7247	Bottom radiator hose
13		Bottom wind baffle A.C. 433T
14	RAD9620	Radiator
15	F6828	1/4" angle bib. drain
16	HSE2519	1/4" overflow hose, 36" long
17	F6821	Radiator cap
18		Top wind baffle A.C. 433T
19	HOS64122	Top radiator hose, 22" long
20	SCC0000302	3/8" x 1" UNC cap screw w/lock washer & nut
21	SHD9651	Steering pump shield
22	BKT9638	Steering pump bracket
23	CPL4900603	2 x 3 coupling
24	HOS7609	Lower top hose
25	BKT9864	Fan guard top bracket
26	SHD0009850	Fan guard 9812, 13, 14
27	BKT9863	Fan guard bottom bracket
28	HOS7609	Top radiator hose
29	HOS400	90° radiator hose

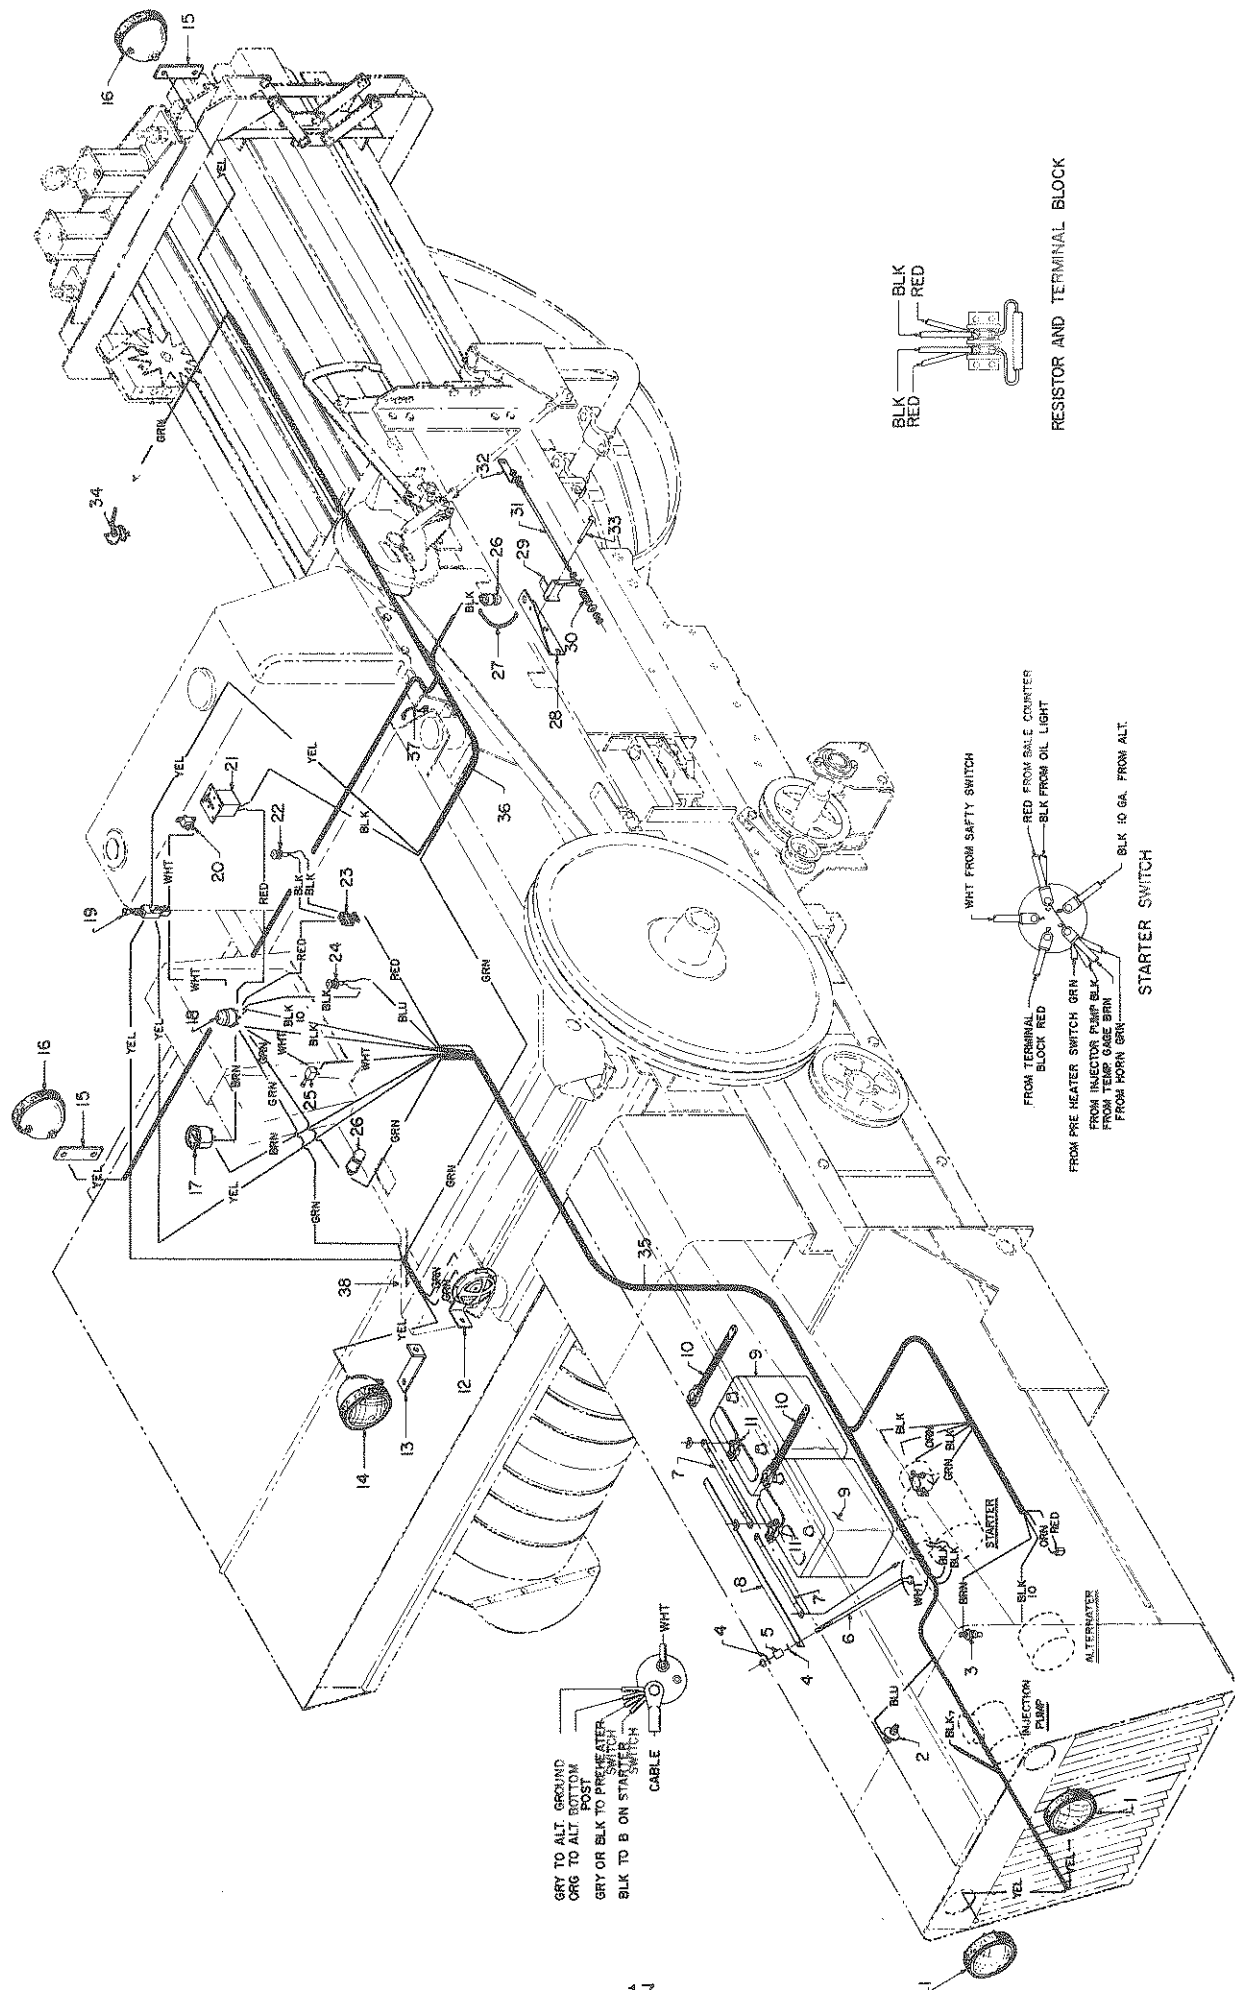


ELECTRICAL SYSTEM, AC

REF. NO.	PART NO.	DESCRIPTION
1	F6558	Headlight with housing, shock mounted
2	F6460	Oil sending unit
3	F6431	Temperature sending unit
4	WCT0000313	5/16" washer
5	F6328	Battery hold down grommet
6	F6551	Battery hold down bolt, 2 used
7	F6625	Battery cable, insulated
8	F6627	Battery hold down
9	F6639	Battery, 12 volt
10	F6548	Ground strap, 70822
11	BAT7244	Battery cable clamp, 7244 Beldon
12	F1497	Horn, wire alarm, 12 volt
13		Light bracket
14	F8059	Light, front, 12 volt
	F5842	Seal beam unit, 12 volt
15	F8062	Rear light bracket, 2 used
16	F8060	Light, rear combination, 12 volt, sealed beam
	F5941	Sealed beam unit, 12 volt, Comb. red and clear
17	F6421	Temperature gauge
18	F6422	Starter switch
19	F862	Light switch
20	F6843	Circuit breaker, 3005-30CH
21	F5954	Bale counter, electronic
22	F6424	Amp indicator light
23	F6578	Resistor and terminal block, 10W-15 Ohm
24	F6424	Oil indicator light
25	F6371	Safety switch
26	F5237	Sending unit
	F5236	Rubber cap
27	BAT212	Ground cable
28	F6554	Bracket for sending unit
29	F6555	Sending unit lever
30	F169	Spring
31	F6553	Bale counter switch rod
32	F6552	Bale counter switch, rod link
33	SCC0000110	1/4" x 3" N.C. cap screw
34	F946	Limit switch (for wire alarm only)
35	HRN11565	Front wiring harness
36	HRN11590	Rear wiring harness
37	CBL 70899	Ground strap
38	F6420	Horn wiring harness

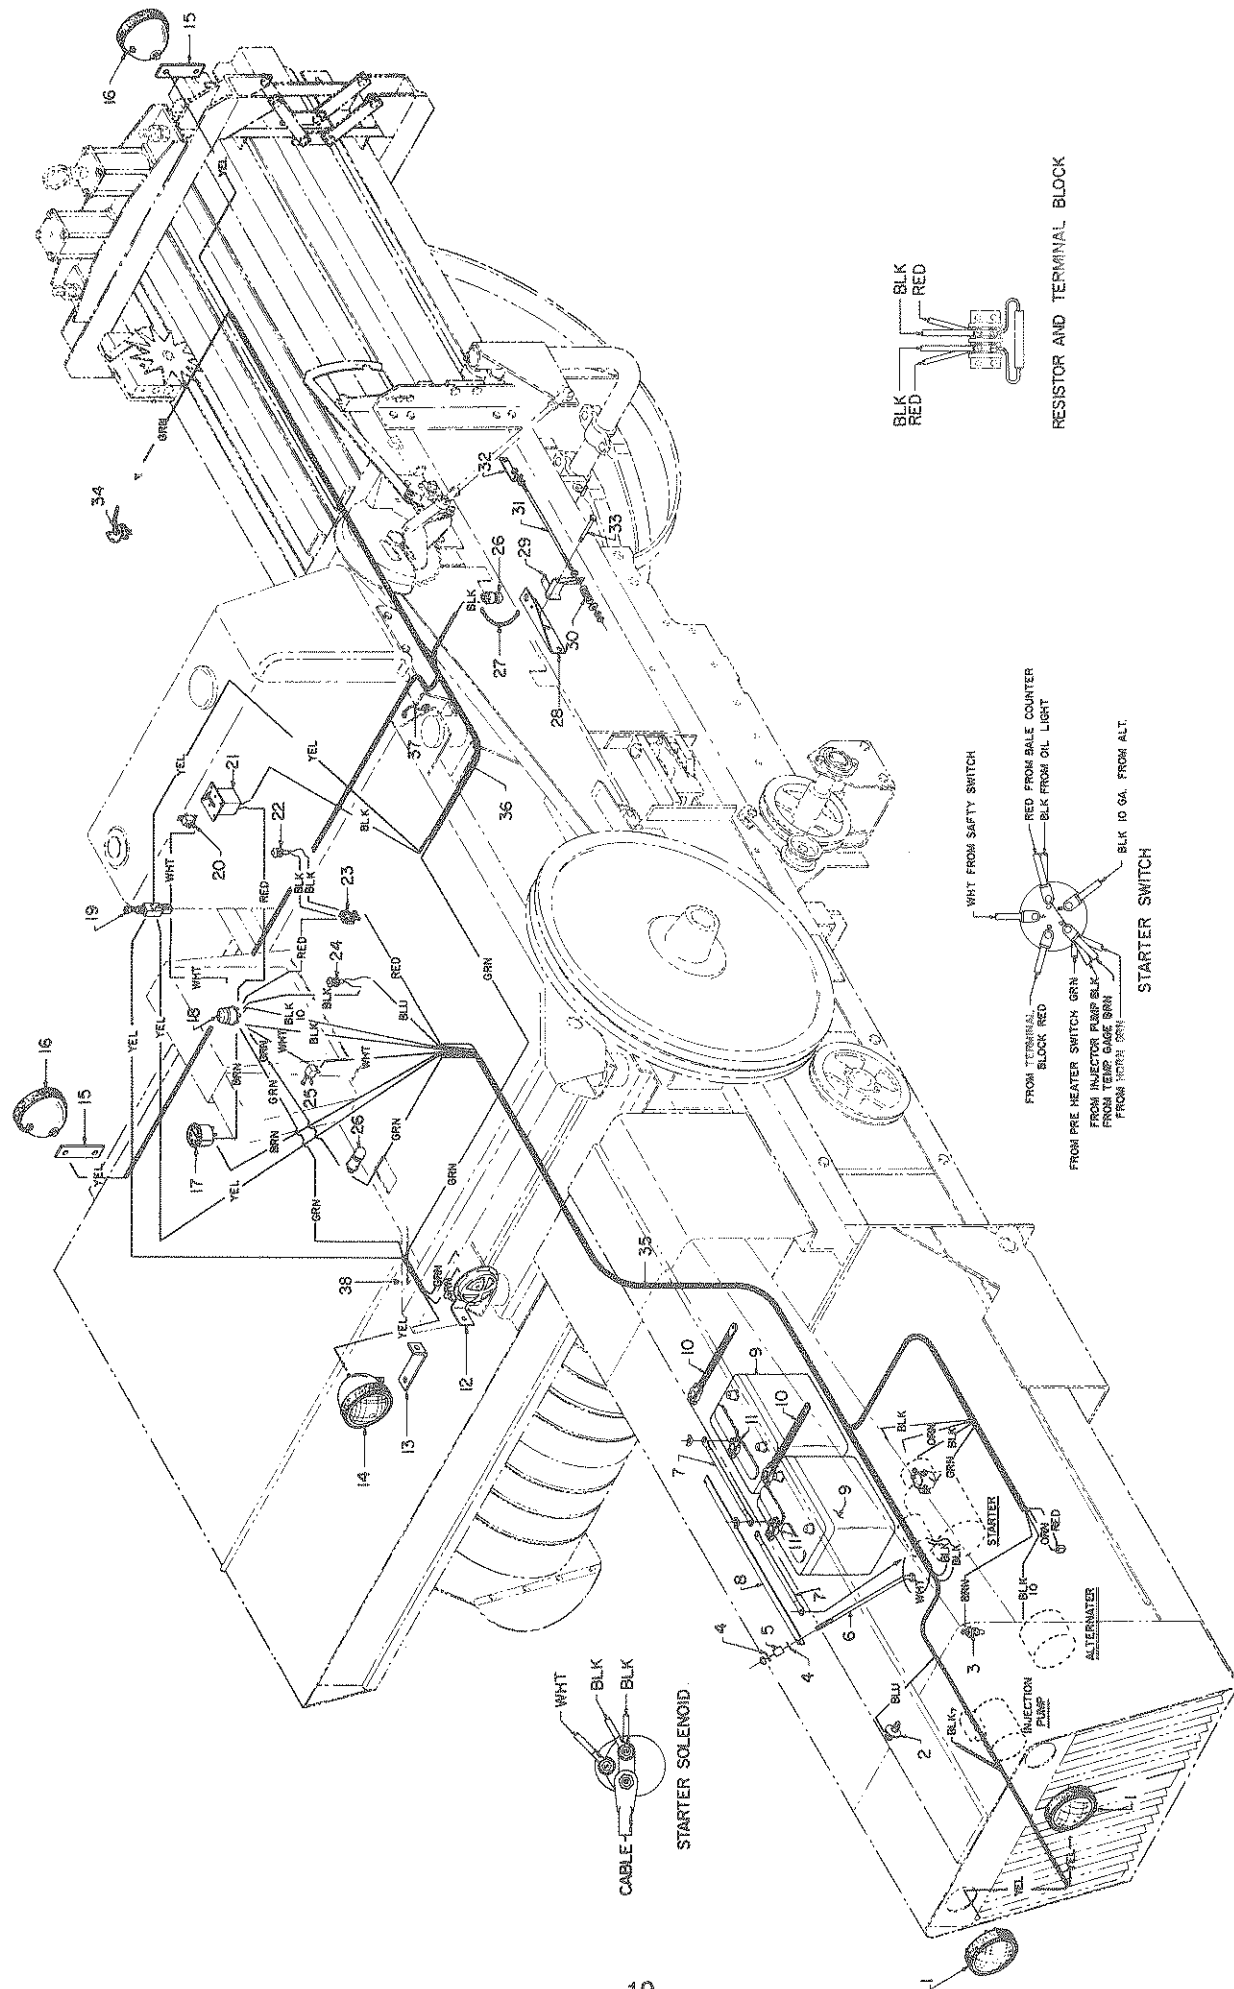

ELECTRICAL SYSTEM JD

REF. NO.	PART NO.	DESCRIPTION
1	F6558	Headlight with housing, shock mounted
2	F6460	Oil sending unit
3	F6431	Temperature sending unit
4	WCT0000313	5/16" washer
5	F6328	Battery hold down grommet
6	F6551	Battery hold down bolt, 2 used
7	F6625	Battery cable, insulated
8	F6627	Battery hold down
9	F6639	Battery, 12 volt
10	F6548	Ground strap, 70622
11	BAT7244	Battery cable clamp, 7244 Beldon
12	F1497	Horn, wire alarm, 12 volt
13		Light bracket
14	F8059	Light, front, 12 volt & center
	F5842	Seal beam unit, 12 volt
15	F8062	Rear light bracket, 2 used
16	F8060	Light, rear combination, 12 volt sealed beam
	F5941	Sealed beam unit, 12 volt comb. red and clear
17	F6421	Temperature gauge
18	F6422	Starter switch
19	F862	Light switch
20	F6843	Circuit breaker, 3005-30 CH
21	F5954	Bale counter, electronic
22	F6424	Amp indicator light
23	F6578	Resistor and terminal block, 10W-15 Ohm
24	F6424	Oil indicator light
25	F6371	Safety switch
26	F5237	Sending unit
	F5236	Rubber cap
27	BAT212	Ground cable
28	F6554	Bracket for sending unit
29	F6555	Sending unit lever
30	F169	Spring
31	F6553	Bale counter switch rod
32	F6552	Bale counter switch rod link
33	SCC0000110	1/4" x 3" N.C. cap screw
34	F946	Limit switch (for wire alarm only)
35	HRN211	Front wiring harness
36	F6850	Rear wiring harness
37	CBL70899	Ground strap
38	F6420	Horn wiring harness

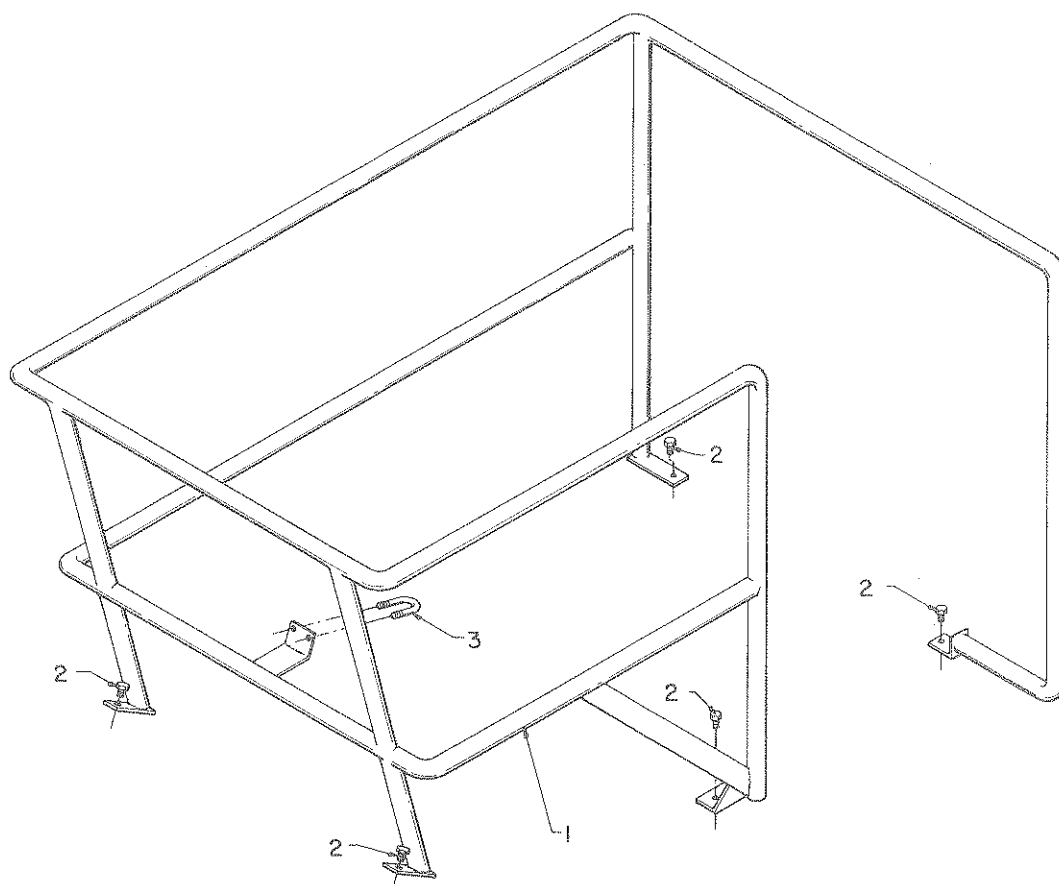

DECK RAIL

REF. NO.	PART NO.	DESCRIPTION
1	DCK9583	Deck rail
2	SCC0000302	3/8" x 1" UNC cap screw (5 used) w/lock washer and nut
3	F6324	"U" bolt with lock washer and nut

1979-80 UPDATE SP BALER

Index

Part No.	Page No.
F246	74
F480	36
F1261	36
F6680	8
F6681	8
BKT5690	46
BKT7730	72
NFX0001250	36
PCV11744	29
PIN8670	22
TBE9094	52

Page 8

Hydraulic Drive System

Ref. No. 6	F6680	1/2" hydraulic hose, 91"
Ref. No. 7	F6681	1/2" hydraulic hose, 85"
	F6681	1/2" hydraulic hose, 2 used on 433T A.C.

Page 22

Bull Gear and Plunger Connecting Rod Assembly

Ref. No. 24	PIN8670	Pivot pin
-------------	---------	-----------

Page 29

Pickup Cylinder Assembly

Ref. No. 22	PCY11744	
	PCY7766 Complete	

Page 36

Feed Arm Drive, Feed Arm and Feed Fork Assembly

Ref. No. 26	NFX0011250	Fiber lock
Ref. No. 17	F1261	Hardened washer
Ref. No. 20	F480	Bearing

Page 46

Twine Box and Twine Guides

Ref. No. 26	BKT5690	Twine box mounting bracket, R.H.
-------------	---------	----------------------------------

Page 52

Tension Control Pump Assembly

Ref. No. 9	TBE9094	Tube
------------	---------	------

Page 72

Air Conditioner

Ref. No. 12	BKT7730	Front support bracket
-------------	---------	-----------------------


Page 74

Tension Release Kit

Ref. No. 9	F246	Washer
------------	------	--------


The parts listed in the first section of this Supplement are parts which have been added, corrected, or replaced since the 1976, 77, 78 Parts List was published.

Reference numbers on this page refer to the corresponding reference number on the 1976, 77, 78 Parts Book illustrated page.

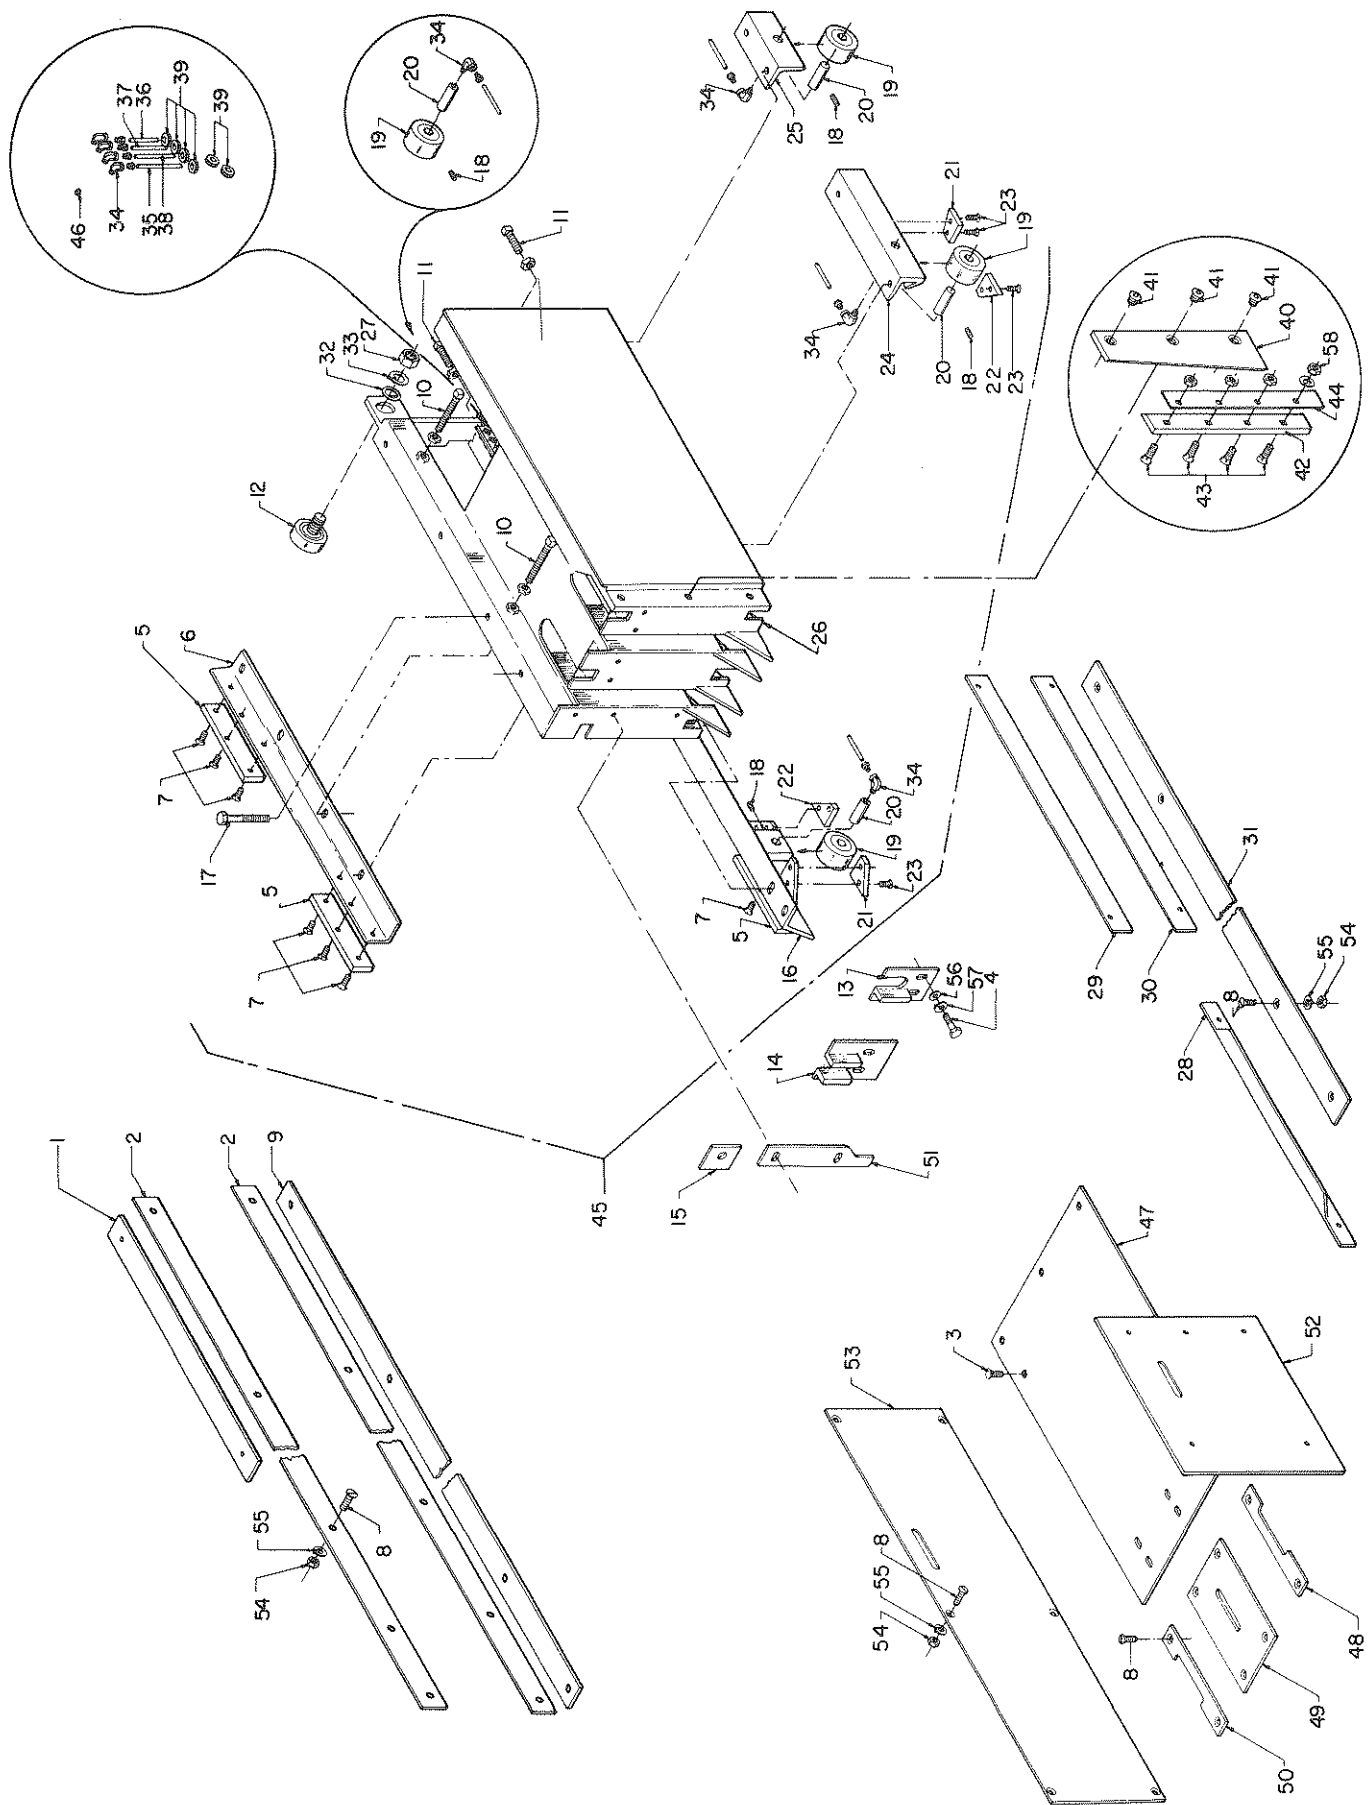



PLUNGER ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F7837	Plunger roller rail, top L.H.
2	F7763	Plunger guide rail, top and bottom
3	CRB3750013	3/8 x 1-1/4" no. 3 plow bolt
4	SCC0000302	3/8 x 1" NC cap screw
5	F1537	Hard slide for roller plunger, 4 used
6	F7766	Hard slide mounting rail, L.H. top
7	SCO0000201	5/16" x 3/4" flat head socket cap screw, 12 used
8	SMR0000202	5/16" x 1" F.H. machine screw for plunger rail
	SMF0002004	5/16" x 1-1/2" F.H. machine screw for plunger rail
9	F7839	Plunger roller rail, L.H. bottom
10	F0000073	1/2" x 4" square head set screw, top rail, 2 used
	SQS5002500	1/2" x 2-1/2" square head set screw, bottom rail, 2 used
11	SQS7501750	3/4" x 1-3/4" square head set screw, 2 used, plunger pin lock
12	F1636	Roller for top of plunger, 3/4" shank
13	F8116	Adjusting pad for R.H. plunger face
14	F8117	Adjusting pad for center plunger face
15	F7769	Adjusting pad for top left plunger face
16	PLG7837	Roller and slide mounting angle, L.H., bottom
17	SCC0000313	3/8" x 3-3/4" N.C. cap screw, 12 used
18	SCO0000199	5/16" x 5/16" Allen head set screw, 4 used
19	F775	Roller for plunger, 4 used
20	PIN7831	Pin, plunger roller, 4 used
21	F986	Wiper, rear, 2 used
22	F774	Wiper, front, 2 used
23	SMR0000101	1/4" x 3/4" F.H. machine screw, 8 used
24	PLG7839	Roller mounting angle, R.H., rear
25	PLG7840	Roller mounting angle, R.H., front
26	F8359	Plunger frame only, 16" x 18", 1979
	PLG13057	Plunger frame only, 16" x 18", 1980
27	NCE0000750	3/4" N.C. nut
28	F7439	Knife guide under feed opening
29	F299	Plunger slide, flat, upper R.H. side
30	F298	Plunger slide, flat, lower R.H. side
31	F7840	Plunger roller rail, R.H. bottom
32	WCT0007500	3/4" flat washer
33	WLK0000750	3/4" lock washer
34	F1441	Elbow, grease tube, 4 used
	F8312	Sleeve for F1441
35	F780	Grease tube, right rear, 36"
36	F781	Grease tube, left front, 14"
37	F779	Grease tube, left rear, 30"
38	F779	Grease tube, right front, 30"
39	F7735	Grommet, grease tube protector, 6 used
40	KNF11157	Plunger knife
41	F227	Bolt for plunger knife, 3 used
42	F1609	Knife, stationary with square holes
43	F1629	Bolt for F1609 knife, 4 used
44	F751	Shim for F1609 knife, 14 ga.
	F1512	Shim for 1609 knife, 20 ga.
45	F8115	Plunger complete, less knife, 1979
	PLG130570	Plunger complete, less knife, 1980
46	ZZ0000103	1/8" P.T. grease fitting
47	F8266	Bale chamber bottom
48	F7809	Liner extension for bale chamber bottom, R.H.
49	F7810	Liner extension for bale chamber bottom, center
50	F7811	Liner extension for bale chamber bottom, L.H.
51	F7777	Adjusting pad for plunger face, L.H.
52	F7220	Bale chamber liner, R.H.
53	F7759	Bale chamber liner, L.H.
54	NCE0000313	5/16" N.C. nut
55	WLK0000313	5/16" lock washer
56	WCT0003750	3/8" washer
57	WLK0000375	3/8" lock washer
58	NCE0005000	1/2" N.C. nut

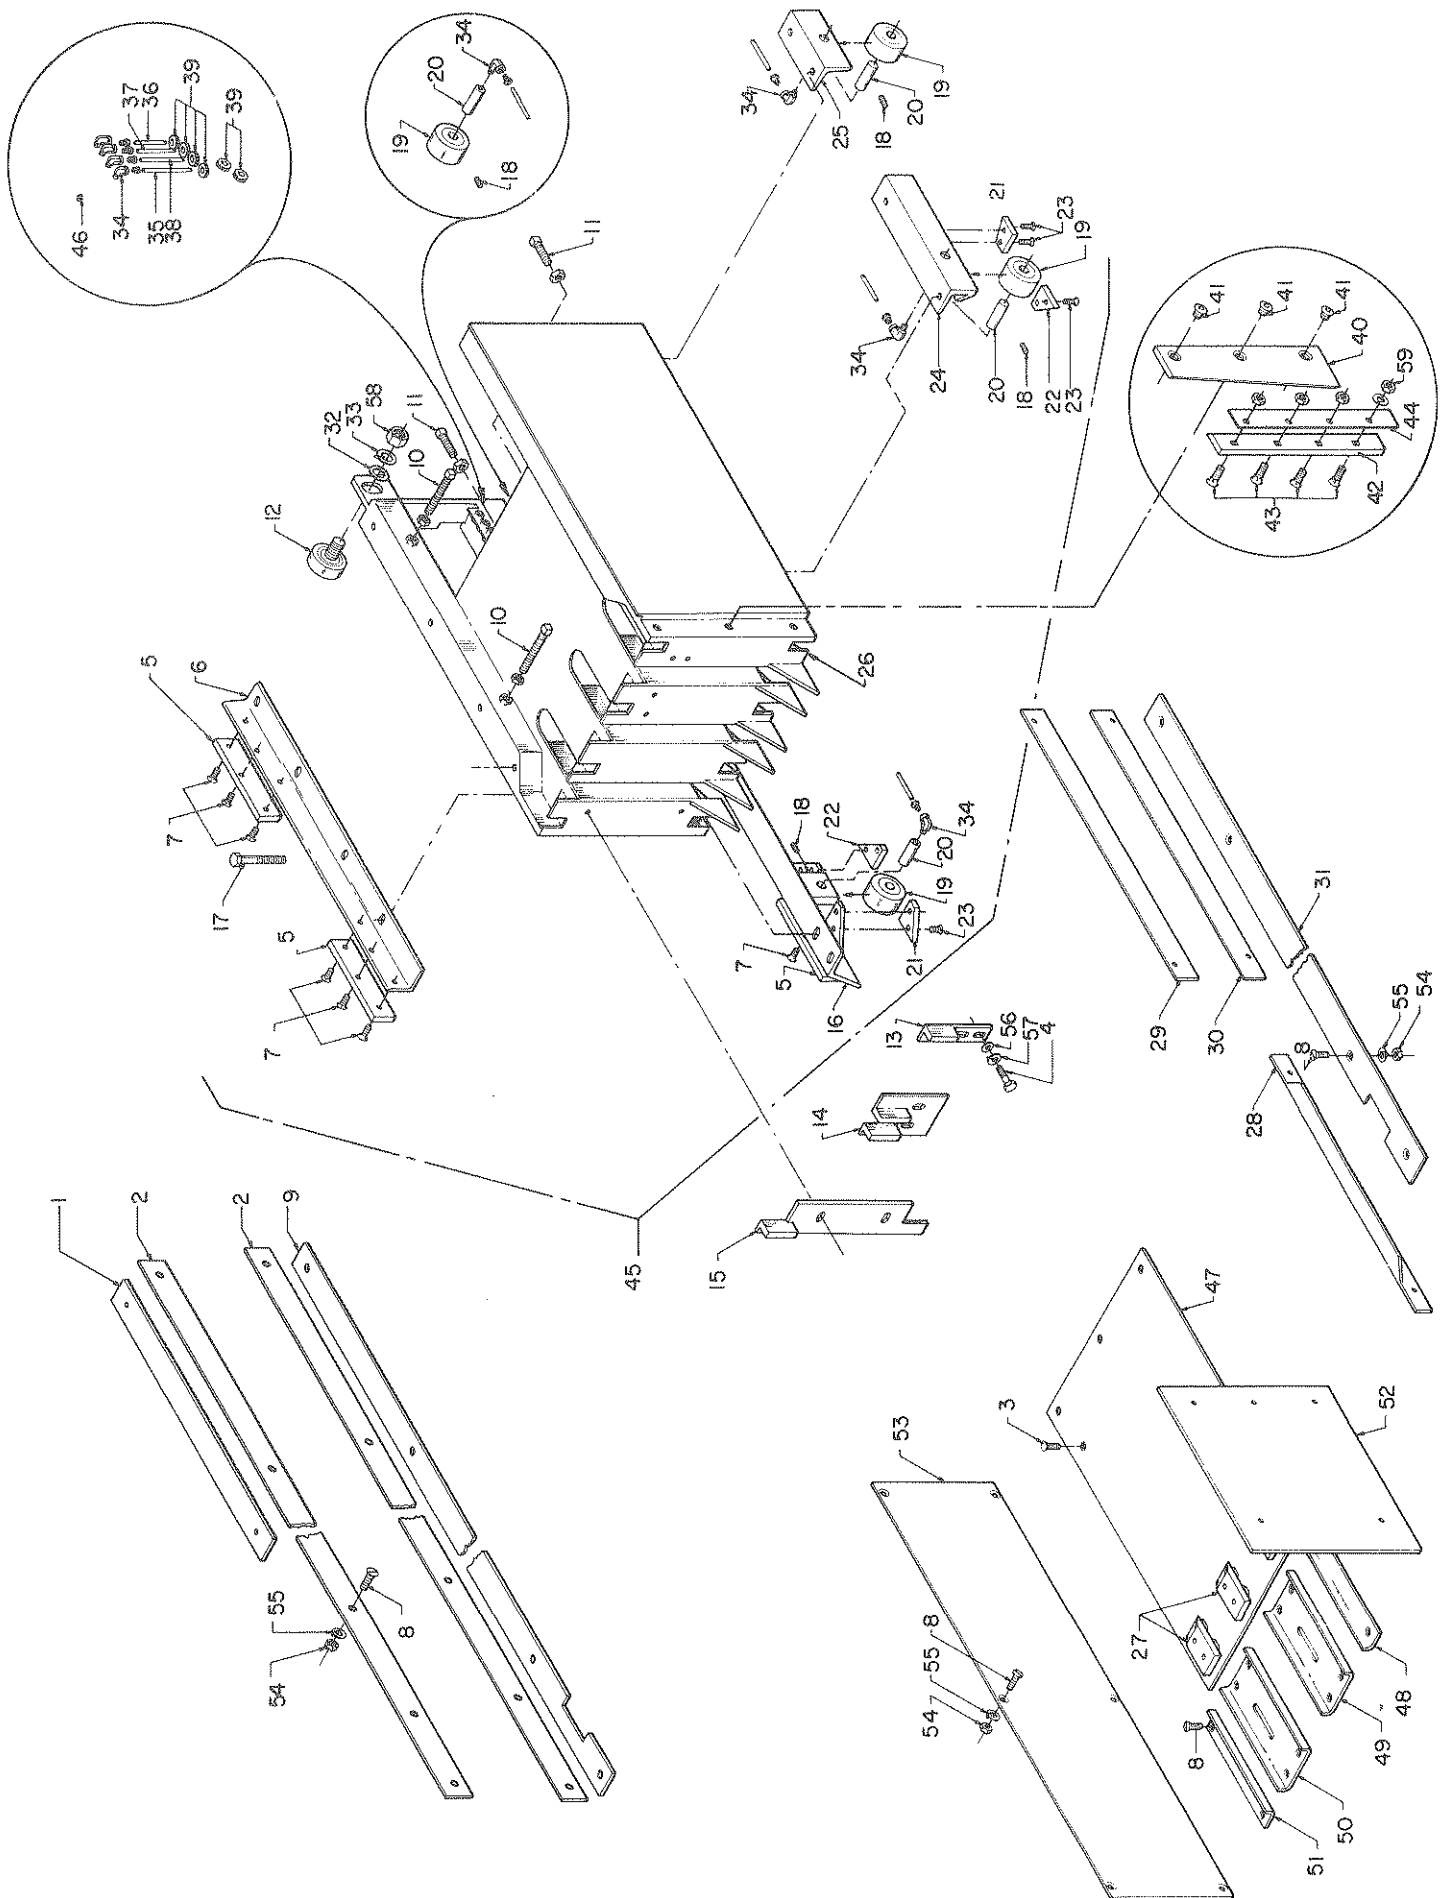

PLUNGER ASSEMBLY MODEL 330, 1980

REF. NO.	PART NO.	DESCRIPTION
1	F7765	Plunger roller rail, top L.H.
2	F7763	Plunger guide rail, top and bottom
3	CRB3750150	3/8" x 1-1/2" No. 3 plow bolt
4	SCC0000302	3/8" x 1" N.C. cap screw
5	F1537	Hard slide for roller plunger, 4 used
6	F7766	Hard slide mounting rail, L.H. top
7	SCB0000201	5/16" x 3/4" N.C. cap screw, flat head
8	SCB0000202	5/16" x 1" F.H. machine screw for plunger rail, 40 used
	SCC0000204	5/16" x 1-1/2" F.H. machine screw for plunger rail, 12 used
9	F7762	Plunger roller rail, L.H. bottom
10	F0000073	1/2" x 4" square head set screw, top rail, 2 used
	SQS5002500	1/2" x 2-1/2" square head set screw, bottom rail, 2 used
11	SQS7502500	3/4" x 2-1/2" square head set screw, plunger pin lock, 2 used
12	F1636	Roller for top of plunger
13	F8056	Adjusting pad for plunger face, right side, used on twine only
14	F8057	Adjusting pad for plunger face, center, 2 used, used on twine only
15	F8058	Adjusting pad for plunger face, left side, 16" x 22" chamber
	F8172	Adjusting pad for plunger face, left side, 17" x 22" chamber
16	PLG7837	Roller and slide mounting angle, L.H. bottom
17	SCC0000313	3/8" x 3-3/4" N.C. cap screw, 12 used
18	STS3125313	5/16" x 5/16" allen head set screw, 4 used
19	F775	Roller for plunger, 4 used
20	PIN7831	Pin, plunger roller, 4 used
21	F986	Wiper, rear, 2 used
22	F774	Wiper, front, 2 used
23	SMR0000101	1/4" x 3/4" F.H. machine screw, 8 used
24	PLG7839	Roller mounting angle, R.H. rear
25	PLG7840	Roller mounting angle, R.H. front
26	F8357	Plunger frame only, 16" x 22", 1979
	F8358	Plunger frame only, 17" x 22", 1979
	PLG13058	Plunger frame only, 16" x 22", 1980
	PLG13059	Plunger frame only, 17" x 22", 1980
27	F7822	Wire and twine track block, bottom, 1977-up
28	F7439	Knife guide under feed opening
29	F299	Plunger slide, flat, upper R.H. side
30	F298	Plunger slide, flat, lower R.H. side
31	F7767	Plunger roller rail, R.H. bottom
32	WCT0007500	3/4" flat washer
33	WLK0000750	3/4" lock washer
34	F1441	Elbow, grease tube, 4 used
	F8312	Sleeve for F1441
35	F780	Grease tube, right rear, 36"
36	F781	Grease tube, left front, 14"
37	F779	Grease tube, left rear, 30"
38	F779	Grease tube, right front, 30"
39	F7735	Grommet, grease tube protector, 6 used
40	F7764	Plunger knife for 1979
	KNF11157	Plunger knife for 1980
41	F227	Bolt for plunger knife, 3 used
42	F1609	Knife, stationary with square holes
43	F1629	Bolt for F1609 knife, 4 used
44	F751	Shim for F1609 knife, 14 ga.
	F1512	Shim for F1609 knife, 20 ga.
45	F8165	Plunger complete, less knife, 16" x 22" chamber (1979); PLG0130580 (for 1980 models)
	F8166	Plunger complete, less knife, 17" x 22" chamber (1979); PLG0130590 (for 1980 models)
46	ZZ0000103	1/8" P.T. grease fitting
47	F8167	Bale chamber bottom
48	F7813	Liner ext. for bale chamber bottom, R.H., 1977-up
49	F7816	Liner ext. for bale chamber bottom, R.H. center, 1977-up
50	F7818	Liner ext. for bale chamber bottom, L.H. center, 1977-up
51	F7819	Liner ext. for bale chamber bottom, L.H., 1977-up
52	F7812	Liner for bale chamber side, R.H.
53	F7825	Liner for bale chamber side, L.H., 16" chamber
	F7826	Liner for bale chamber side, L.H., 17" chamber
54	NCE0003125	5/16" N.C. nut
55	WLK0000313	5/16" lock washer
56	WCT0003750	3/8" flat washer
57	WLK0000375	3/8" lock washer
58	NCE0007500	3/4" N.C. nut
59	NCE0005000	1/2" N.C. nut

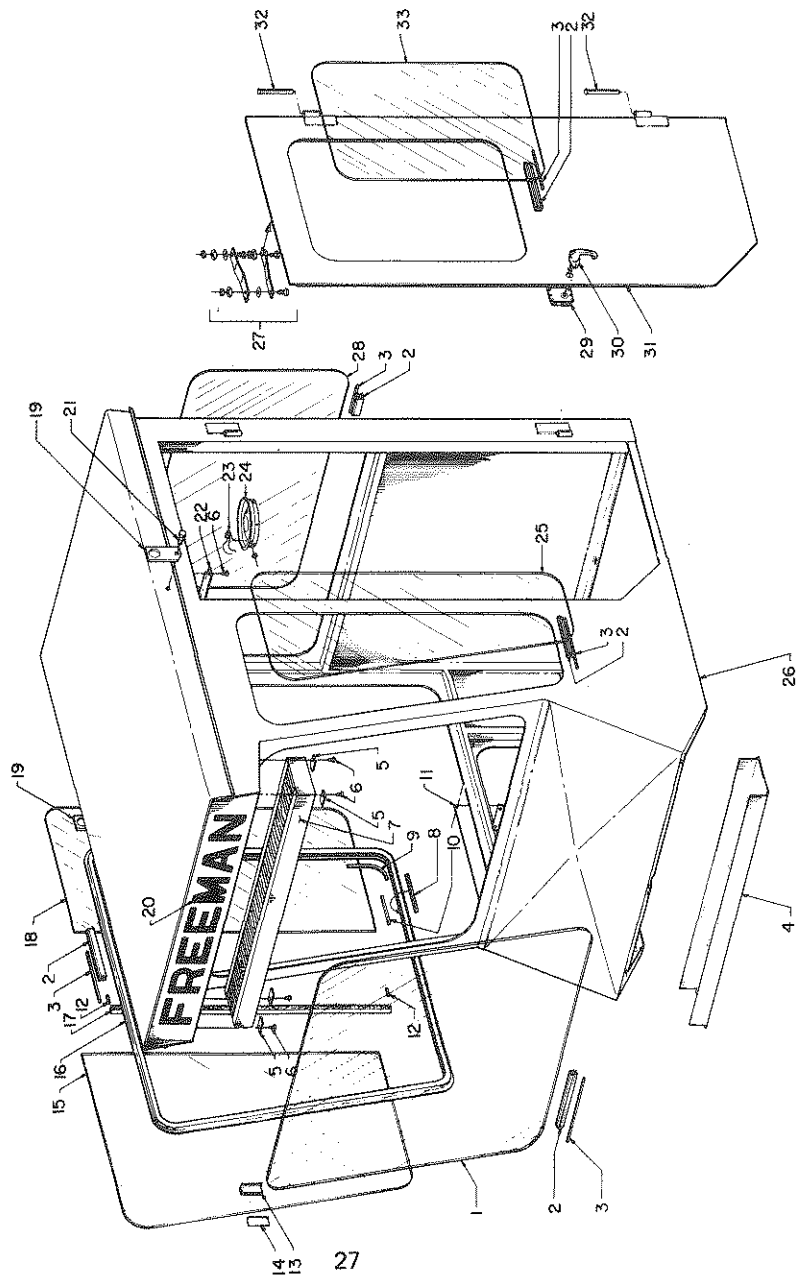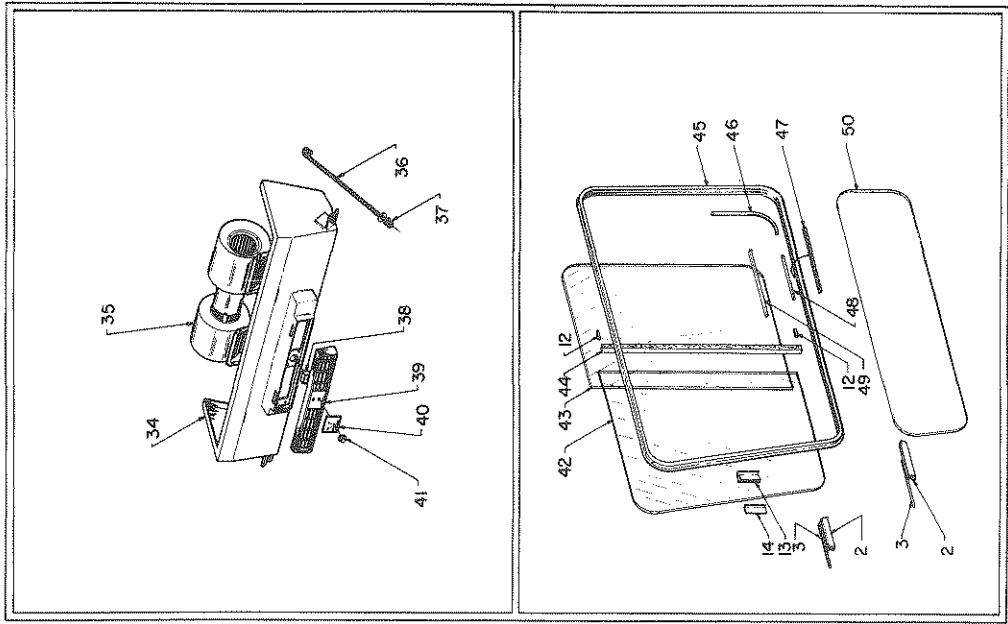

REF. NO.	PART NO.	DESCRIPTION	SP. CAB
1	GLS6983	Windshield glass	
2	WEA1179	Weather stripping	
3	WEA937	Weather stripping stay	
4	CVR9457	Cover	
5	BKT6234	Filter stay	
6	SMS0000184	5/16 x 3/4 whiz bolt	
7	FIL115154	Filter element	
8	CAB0000101	Felt-cab	
9	CAB0000105	Large weather stripping	
10	CAB0000104	Weather stripping	
11	DRW9324	Inspection cover	
12	CAB0001002	Stop	
13	CAB0000107	Handle	
14	CAB0000109	Latch	
15	CAB0001006	Front sliding glass large window	
16	WND9382	Sliding window frame (Lg.)	
17	CAB0001005	Center bar large window	
18	CAB0001007	Rear window	
19	CAB6273	CAB hanger	
20	FD7114	Freeman decal	
21	SCC0030004	3/8 x 1-1/2 unc. cap screw w/lock washer and nut (2 used)	
22	SUP9461	Top liner support	
23	ELC5020	Light switch	
24	F1505	Light	
25	GLS9398	Cab left side window glass	
26	CAB9453	Cab assy	
27	F4525	Door check complete	
28	GLS6982	Rear window	
29	LOC55	Door latch	
30	F4527	Door handle	
31	DOR9376	Cab door	
32	PIN37540	Pin (2 used)	
33	GLS6954	Window. Door glass.	
34	BLO9377	Blower housing assy.	
35	BLO700	Blower	
36	SMS9401	Retainer bolt	
37	NCH0003125	5/16 nut washer & lock washer & WLK 3125 - 5/16 washers	
38	BLO1065	Blower switch	
39	BLO3316	Blower vent	
40	BLO62318	Decal	
41	KOB100	Switch. Knob.	
42	GLS0006956	Side window glass. Front slider.	
43	GLS0006955	Rear window glass	
44	CAB0000103	Center bar	
45	CAB0000106	Sliding window frame	
46	CAB0000105	Large weather stripping	
47	CAB0000101	Felt	
48	CAB0000104	Weather stripping	
49	GLS9408	Side glass. RH bottom.	

Listed, but not shown:

DRW9326	Cab light plate
RUG9451	Carpet
DRW9455	AFT lower right side line
DRW9456	Lower rear liner
DRW9458	Door liner
DRW9459	Upper left side head liner
DRW9460	Upper right side liner
DRW9461	AFT roof liner
DRW9462	Upper rear liner
DRW9463	Front top liner
DRW9464	Front lower liner
DRW9466	Forward roof liner
DRW9468	Lower front panel liner RH
DRW946801	Lower front panel liner LH

