


Freeman Automatic

Self-Propelled Bale Wagon

Parts Book

7778

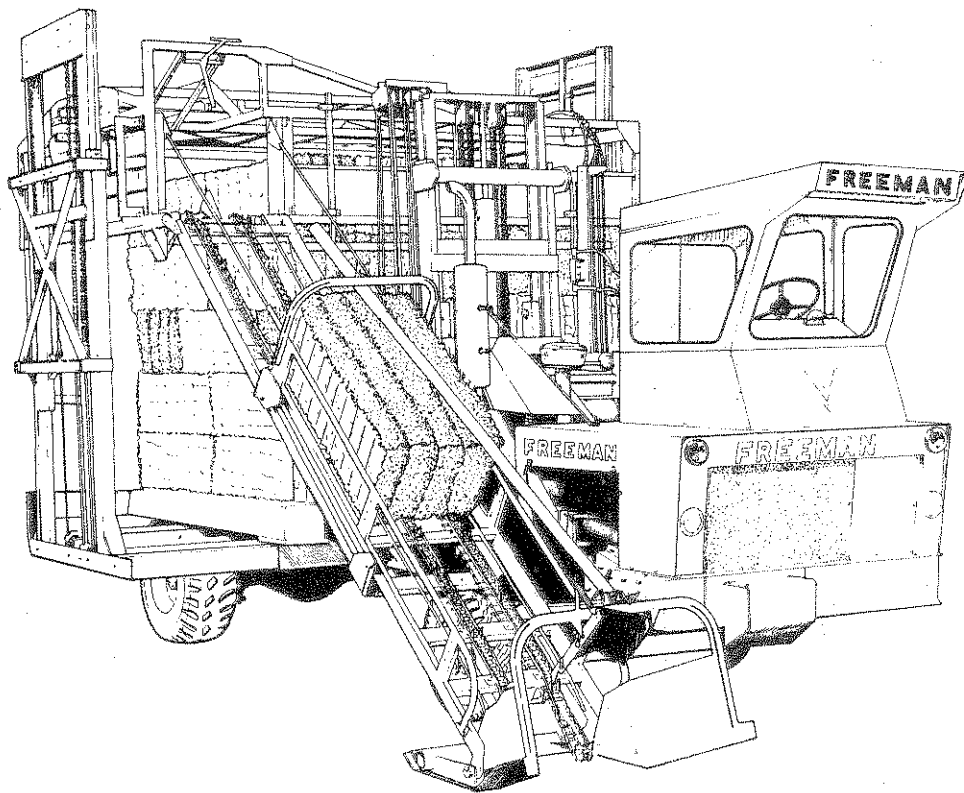

PB00000167

manufactured and distributed by


J. A. FREEMAN & SON, INC.

INTENTIONALLY BLANK

Freeman Automatic

Self-Propelled Bale Wagon

Parts Book

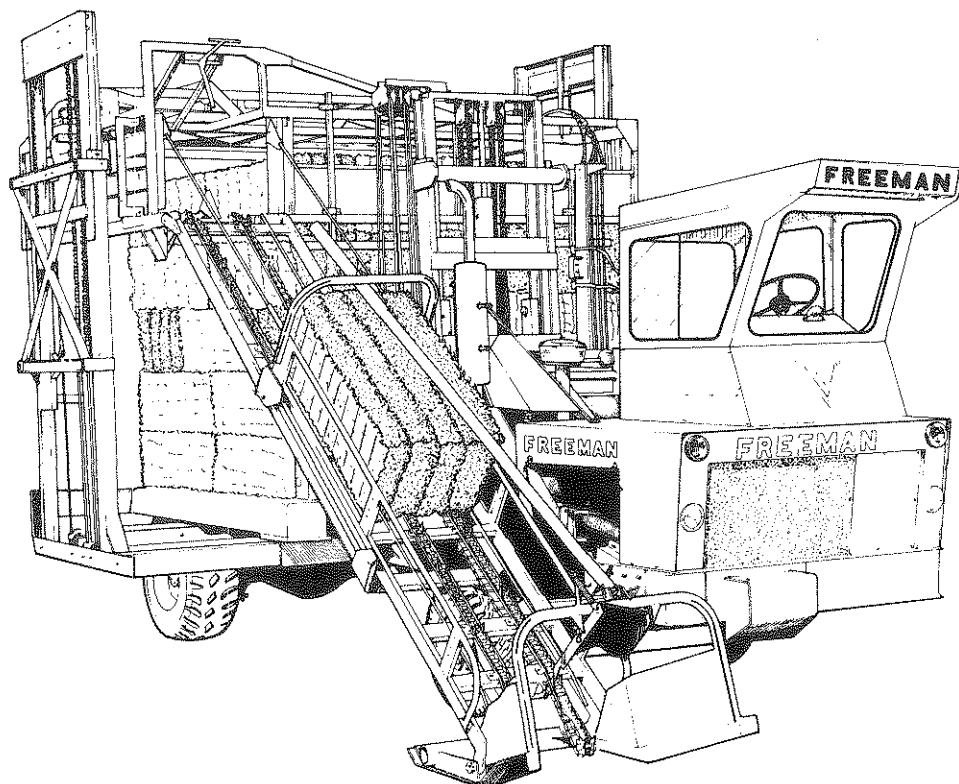

POLICY

1. It is the policy of J.A. Freeman & Son, Inc. to constantly improve its products whenever it is practical to do so.
2. J.A. Freeman & Son, Inc. reserve the right to redesign or change its equipment or component parts thereof without incurring any obligation to install or furnish such changes on equipment previously delivered.
3. Unauthorized changes or additions to equipment manufactured by J.A. Freeman & Son, Inc. relieves the company of further responsibility for warranted operation and breakage replacement.

INSTRUCTIONS FOR ORDERING PARTS

1. Order by part number and description of part.
 - (a) Parts should NOT be ordered from illustration only.
 - (b) Parts should NOT be ordered from numbers on castings.
2. Order by bale wagon serial number and model.
3. Much delay and confusion can be avoided if parts numbers are arranged in sequence on all orders.
4. State how to ship: whether by truck, stage, parcel post, air parcel post, UPS, or air freight.
5. Claims for shortage or error in handling of an order for parts must be made upon receipt of goods.
6. Address all orders for parts as follows:

J.A. Freeman & Son, Inc.
Parts Department,
2034 N.W. 27th Avenue,
Portland, Oregon 97210

Place serial number of machine here for your convenience:

Bale wagon Serial No. _____

Motor Serial No. _____

Left and right of machine are understood to mean from a position facing in the direction of travel.

Permission must be secured before any parts are returned for credit. When parts are returned, the freight must be prepaid or arrangements made so that they can be brought in by our trucks.

"NOTE"

Parts are identified by reference numbers. See parts list for correct part numbers. DO NOT USE REFERENCE NUMBERS AS PART NUMBERS.

TABLE OF CONTENTS

Pickup	1
Pickup Lift	2
Front Elevator	3, 4
Rear Elevator	5, 6
Right Hand Side Mast	7, 8
Left Hand Side Mast	9, 10
Cage	11
Cage Conveyor	12
Cage Index & Bale Support	13
Cage Pusher	14
Electric Cage Controls	15, 16
Cage Hydraulics	17, 18
Hydraulic Controls	19, 20
Main Frame Hydraulics	21, 22
Front Control Panel Hydraulics	23, 24
Rear Control Panel Hydraulics	25
Hydraulic Pumps	26
Steering Hydraulics	27
Steering Assembly	28
Manual Control Levers	29
Transmission Shift Mechanism	30
Deck & Engine Hood	31, 32
Brake & Clutch	33, 34
Vacuum Booster & Pump	35, 36
Main Frame	37, 38
Carriage	39, 40
Main Mast	41, 42
Squeeze	43
Drive Line	44
Front Axle	45, 46
Rear Axle	47, 48
Rear Axle Differential Breakdown	49, 50
Transmission	51, 52
Electrical	53, 54
Exhaust & Air Cleaner	55, 56
Radiator & Engine Mounts, M.D.	57
Radiator & Engine Mounts, A.C.	58
Radiator & Engine Mounts, IHC	59
Seat Assembly	60
Cab	61, 62
Air Conditioner	63
Fuel Lines	64
Steering Gear Assembly Breakdown	65, 66
Brake Cylinder	67
Hydraulic Motor Breakdown	68
Hydraulic Control Valve Breakdown	69, 70
Prince Cylinder	70
Hypower Cylinders	71, 72, 73, 75
Victor Cylinders	74
Relay Box Wiring Diagram	77

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
01-145	18	01-807	34, 36	03-177	16
01-146	18	01-810	36	03-178	16
01-152	40	01-812	34	03-179	16
01-153	42	01-856	34	03-180	16-24
01-167	40	01-857	34	03-181	16
01-205	43	01-858	34	03-182	16
01-206	40	01-859	34	03-183	16
01-209	18	01-860	34	03-184	16
01-211	22, 40	01-861	34	03-185	16
01-212	40	01-862	34	03-186	16
01-213	42, 43	01-863	34	03-187	16
01-216	43	01-864	34	03-188	16
01-217	43	01-865	64	03-189	16
01-236	18	01-866	64	03-190	16
01-237	18	01-867	64	03-191	16
01-238	18	01-868	64	03-192	16
01-239	42, 43	01-869	64	03-193	16-54
01-240	42, 43	01-870	64	03-195	54
01-241	42, 43	01-871	64	03-196	54
01-242	40-42	01-872	64	03-198	54
01-243	40-42	01-873	64	03-199	54
01-244	42	02-104	4, 6, 12	03-200	54
01-257	40	02-106	14	03-201	54
01-315	22	02-108	8, 10	03-202	54
01-407	22	02-112	40	03-203	54
01-418	18	02-113	42	03-204	54
01-419	18	02-114	42	03-208	40, 54
01-420	18	02-115	42	03-209	54
01-432	18	02-116	43	03-210	54
01-433	18	02-120	30	03-214	54
01-507	20-22-76	02-145	40	03-215	54
01-510	40	02-153	14	03-900	16
01-513	22, 42	02-154	40	03-901	16, 54
01-514	24-27	02-157	28, 34	04-105	13
01-519	40	02-158	28	04-109	29
01-520	20-22, 69	03-110	54	04-122	32
01-521	22	03-112	54	04-123	2
01-526	34	03-113	54	05-105	40
01-527	34	03-114	54	05-106	42
01-552	14-18	03-116	54	05-107	12, 40
01-555	40-73	03-130	36, 54	05-108	4, 6
01-556	42-75	03-131	40	05-110	29, 32
01-557	42-43-73	03-132	36-54	05-111	4-6
01-560	40-42-73	03-134	54	05-112	4-6
01-565	75	03-142	24-54	05-113	6-12
01-566	8-10-71	03-150	54	05-118	40
01-569	2-22-74	03-153	54	05-121	12
01-570	2-22-74	03-154	54	05-122	10, 20, 40
01-602	42	03-155	54	05-137	8
01-604	18	03-156	54	05-138	8
01-607	40	03-157	54	05-139	10
01-608	22	03-158	16	05-140	40
01-609	22	03-159	16	05-145	8-10
01-627	26	03-160	16	05-146	40, 42
01-628	26	03-161	16	05-216	36
01-632	22	03-162	16	05-236	26
01-635	26	03-163	16	05-237	26
01-636	26	03-164	16	05-238	26
01-637	40	03-165	16	05-239	26
01-718	36	03-166	16	05-240	26
01-719	36, 43	03-167	16	05-241	26
01-720	18-22-24-27-36-40-42-43	03-168	16	05-243	36
01-722	18-22-40	03-170	16	05-244	36
01-723	22, 40	03-171	16	05-255	6
01-727	40	03-172	16	05-259	40
01-802	34	03-173	16	05-260	40
01-803	34	03-174	16	05-261	40
01-804	34	03-175	16	05-262	40
01-806	34	03-176	16	05-901	4-6

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
05-907	26	11-180	14	12-126	8-10
06-102	2	11-183	14	12-128	8
06-106	18	11-184	20	12-132	8
06-113	8-10	11-192	13	12-133	8
06-114	40	11-203	14	12-134	10
06-115	40, 42, 43	11-204	14	12-135	10
06-118	40	11-205	14	12-136	10
06-119	42	11-206	14	12-137	10
06-120	43	11-207	14	12-138	10
06-121	25-26	11-208	14	12-139	10
06-122	14	11-209	11	12-140	10
06-124	28	11-211	11	12-141	10
06-125	22, 34	11-218	13	12-144	10
06-126	22, 34	11-220	13	12-145	10
06-131	34	11-225	11	12-146	10
06-136	36	11-230	14	12-147	10
06-145	14	11-235	16	12-148	10
06-147	28, 46	11-237	11	12-149	8-10
07-114	34	11-238	11	12-150	8
07-120	20	11-244	14	12-151	8
07-124	18	11-245	14	12-152	8-10
07-125	22	11-246	13	12-153	8-10
07-126	16	11-247	12	12-154	8
10-106	4	11-248	12	12-182	10
10-109	4	11-251	12	12-183	10
10-110	4-6	11-253	16	13-106	40
10-111	4-6	11-254	16	13-109	40
10-112	4	11-255	16	13-110	40
10-114	4	11-256	16	13-115	40
10-115	4	11-257	16	13-119	40
10-116	4	11-258	16	13-120	40
10-118	6	11-259	16	13-121	40
10-119	6	11-260	16	14-103	42
10-123	2	11-261	16	14-104	42
10-124	2	11-262	16	14-105	42
10-131	6	11-263	16	14-106	42
10-132	6	11-264	16	14-107	42
10-134	2	11-265	16	14-108	42
10-135	6	11-266	16	14-110	42
10-136	2	11-267	16	14-111	42
10-138	2	11-268	16	14-112	42
10-139	1	11-269	16	14-113	42-43
10-141	1	11-270	13	14-114	42
10-142	1	11-274	11	14-115	42
10-143	1	11-275	13	14-116	42
10-144	1	11-276	13	15-101	43
10-145	1	11-903	12	15-102	43
10-146	1-4	12-101	8	15-103	43
10-149	4	12-102	8	15-104	43
10-150	2	12-103	8	15-105	43
10-152	4	12-104	8	15-106	43
10-153	4	12-105	8	15-108	43
10-154	4	12-106	8	15-109	43
10-155	2	12-107	8	15-110	43
10-157	6	12-108	8	16-103	38
10-904	4	12-109	8-10	16-104	38
10-905	6	12-110	8-10	16-105	38
10-906	1	12-112	8	16-106	38
11-102	11	12-114	8-10	16-107	38
11-103	11	12-116	8-10	16-108	38
11-109	14	12-117	8-10	16-109	38
11-122	13	12-118	8-10	16-110	38
11-124	13	12-119	8-10	16-111	38
11-126	13	12-120	8	16-112	38
11-128	13	12-121	8	16-113	38
11-168	14	12-122	8-10	16-114	38
11-169	14	12-123	8-10	16-125	38
11-171	14	12-124	8-10	16-126	38
11-175	14	12-125	8-10	16-127	38

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
16-140	38	18-169	30	19-346	46
16-141	38	18-173	29	19-347	46
16-142	38	18-174	29	19-348	46
16-147	38	18-189	29	19-349	46
17-115	32	18-192	29	19-351	46
17-118	32	18-194	29	19-352	46
17-123	32	18-195	29	19-354	28, 46
17-128	32	18-196	29	19-355	28, 46
17-129	32	19-102	46	19-367	46
17-131	32	19-104	46	19-368	46
17-132	32	19-105	46	19-369	46
17-133	32	19-106	46	19-372	46
17-134	32	19-107	46	19-376	46
17-135	32	19-109	46, 48	19-377	46
17-136	32	19-110	46	19-378	46
17-139	32	19-115	48-54	19-379	46
17-140	32	19-119	44	19-385	46
17-141	32	19-120	44	19-392	46
17-142	32	19-121	44	19-393	46
17-144	32	19-122	44	19-394	46
17-153	32	19-123	44	19-395	46
17-175	32	19-124	44	19-396	46
17-176	32	19-125	44	19-397	46
17-178	32	19-128	44	19-398	46
17-179	32	19-129	44	19-399	46
17-180	32	19-130	44	19-400	46
17-181	32	19-131	44	19-401	46
17-182	32	19-132	44	19-402	46
17-186	32	19-133	44	19-403	46
17-189	32	19-139	34	19-404	46
17-190	32	19-140	34	19-410	46
17-191	32	19-141	34	19-411	46
17-192	32	19-142	34	19-412	46
17-199	28	19-143	36	19-424	46
17-202	28	19-148	34	19-903	44
17-204	28	19-151	34	19-905	44
17-206	28	19-155	34	19-907	44
17-211	28	19-157	34, 67	19-922	52
17-213	28	19-159	34, 48	20-104	57
17-214	28	19-162	36	20-109	57, 58, 59
17-215	28	19-164	36	20-110	59
17-218	28	19-191	34	20-111	59
17-226	28	19-193	48-54	20-112	57, 58, 59
17-229	28	19-195	46	20-113	59
17-230	28	19-201	44	20-115	57, 58, 59
17-231	28	19-202	34, 52	20-116	57, 58
17-232	28	19-203	46	20-127	56
17-233	28	19-209	44	20-128	56
17-235	16, 32	19-220	36	20-129	56
17-236	32	19-222	36	20-130	56
17-238	27, 28, 66	19-223	36	20-131	56
17-239	32	19-231	46	20-132	56
17-240	28	19-247	46	20-133	56
17-904	27, 28-66	19-279	36	20-140	56
18-122	29	19-280	36	20-143	56
18-124	29	19-316	36	20-149	57, 58
18-126	29	19-317	36	20-151	56
18-128	36	19-322	36	20-153	56
18-140	30	19-331	46	20-155	56
18-141	30	19-332	46	20-161	57, 58, 59
18-142	30	19-333	46	20-162	58
18-143	30	19-334	46	20-164	58
18-146	30	19-335	46	20-165	58
18-147	29	19-336	46	20-166	58
18-149	30	19-337	46	20-167	58
18-152	30	19-339	46	20-168	57, 58
18-153	30	19-341	46	20-169	57, 58
18-154	30	19-343	46	20-170	58
18-157	30	19-344	46	20-171	58

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
20-172	58	B 0092106	52	BKT0006911	32
20-174	57, 59	B 0092345	52	BKT0007018	63
20-175	58	B 0092348	52	BKT0007070	57-59
20-176	57, 58	B 0092421	52	BKT0007143	8
20-177	57, 59	B 0092429	52	BKT0007416	34
20-178	57	B 0092496	52	BKT0007783	56
20-180	57	B 0092497	52	BKT0007842	38
20-181	57, 59	B 0092533	52	BKT0007992	24
20-184	57, 59	B 0092534	52	BKT0007997	20, 22
20-185	57, 59	B 0092695	52	BKT0008427	36
20-186	57, 59	B 0092712	52	BKT0008510	36
20-189	57	B 0092716	52	BKT0009258	29
20-192	57	B 0092717	52	BKT0752100	63
20-195	56	B 0092718	52	BKT0752101	63
20-196	57	B 0092719	52	BL 0000100	62
20-197	57	B 0092732	52	BL 0000700	62
20-198	57	B 0092737	52	BL 0001065	62
20-199	57, 59	B 0092743	52	BL 0003316	62
20-201	57, 59	B 0092779	52	BL 0006305	62
20-206	56	B 0092794	52	BL 0062318	62
20-208	56	B 0092796	52	BLC0007786	20
20-210	56	B 0092822	52	BLC0007787	20
20-213	64	B 0092917	52	BLC0007998	20
20-214	64	B 0093079	52	BLC0008386	20
20-215	56	B 0093081	52	BLJ0000109	20, 30
20-216	56	B 0093161	52	BLJ0001090	20, 30
20-217	64	B 0093257	52	BLK0008049	20
AC 0923817	26	B 0093628	52	BLT0004710	63
AC 4023052	26	B 0093644	52	BLT2509905	63
AC 4023925	26	B 0093769	52	BMP6021044	62
AC 4024630	26	B 0093787	52	BON0008271	22, 76
AC 4026549	26	B 0093798	52	BRC0007813	56
AC 4027293	26	B 0093966	52	BRC0007888	20
AC 4357289	26	B 0094227	52	BRC0008512	36
ACN0048280	63	B 0094228	52	BRC0008564	36
ACN0529945	63	B 0094229	52	BRG0000182	46
ACN0960800	63	B 0094458	52	BRG0000493	48
ACN1120009	63	B 0094809	52	BRG000M18N	8-10
ACT1779362	46	B 0094816	52	BRG0010846	16
ARM3133103	46	B 0095249	52	BRG0063052	52
ARM3133998	46	B 0095276	52	BRG0181491	30
AXL0000931	46	B 0095849	52	BRG3286348	46
AXL0007607	48	B 0096711	52	BRK0007484	34
AXL0008503	48	B 0097342	52	BRK1540213	46
AXL0687990	48	B 0097422	52	BRK1540214	46
AXL3100551	46	B 0097844	52	BRK2747114	46
B 0011353	52	B 0097847	52	BRK2797288	46
B 0011564	52	B 0097848	52	BRK3120531	48
B 0011650	52	B 0097974	52	BRK3222108	46
B 0035662	52	B 0097978	52	BRK3219392	46
B 0035666	52	B 0097979	52	BRK3299454	46
B 0038809	52	B 0097982	52	BRK9722874	46
B 0038869	52	B 0097986	52	BSH0000103	20
B 0061527	52	B 0097991	52	BSH1225836	46
B 0090128	52	B 0097998	52	BWF 0006343	38
B 0090235	52	B 0097999	52	C 0006554	26
B 0091204	52	B 0099003	52	CAB 0000101	62
B 0091217	52	B 0099009	52	CAB 0000102	62
B 0091221	52	B 0099705	52	CAB 0000103	62
B 0091224	52	B 0099976	52	CAB 0000104	62
B 0091233	52	B 0147491	52	CAB 0000105	62
B 0091239	52	B 0223736	52	CAB 0000106	62
B 0091484	52	B 0423351	52	CAB 0000107	62
B 0091486	52	B 0444592	52	CAB 0000109	62
B 0091491	52	BKT0005335	40	CAB 0006864	62
B 0091504	52	BKT0005688	26	CAM0007863	20
B 0091677	52	BKT0005769	64	CAM0008394	20
B 0091739	52	BKT0005931	26	CGF0008592	11
B 0091924	52	BKT0006805	62	CHN0020003	6

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
CHN0020005	4	ETN0009803	50	ETN0076930	50
CHR0000616	68	ETN0009820	50	ETN0078400	50
CHR0005389	68	ETN0012495	50	ETN0078401	50
CHR0005776	68	ETN0012904	50	ETN0079470	50
CHR0005777	68	ETN0013377	50	ETN0090536	50
CHR0006049	68	ETN0014354	50	ETN0090873	50
CHR0006901	68	ETN0014571	48	ETN0095204	50
CHR0007357	68	ETN0014935	50	ETN0096800	50
CHR0007358	68	ETN0014949	50	ETN0099596	48
CHR0007359	68	ETN0014950	50	ETN0102739	50
CHR0007360	68	ETN0014970	50	EXH0000101	56
CHR0007461	68	ETN0015050	50	EXH0007809	56
CHR0007462	68	ETN0015092	50	EXH0007834	56
CHR0007464	68	ETN0015094	50	EXH0007836	56
CHR0007537	68	ETN0015828	50	EXH0008977	56
CHR0009055	68	ETN0018346	50	F 0000025	6
CHR0009057	68	ETN0019186	48	F 0000123	6
CHR0014193	68	ETN0023130	50	F 0000172	4, 6, 30
CHR0015048	68	ETN0025967	50	F 0000246	42
CHR0060023	4, 6, 22, 68	ETN0027859	50	F 0000268	40
CLH0007485	34	ETN0027860	50	F 0000278	16
CLH0011967	52	ETN0027875	50	F 0000440	4, 20, 30
CLH01219BW	52	ETN0027876	50	F 0000570	20
CLH0260280	52	ETN0027880	50	F 0000747	1, 11, 18
CLP0038100	18	ETN0029571	50	F 0000760	8
CLP121	18	ETN0030689	48	F 0000766	8, 10
CNK0000550	12	ETN0030714	48	F 0000822	14
CNK0005500	4, 6	ETN0030800	50	F 0000840	11
COT0000504	20	ETN0032425	50	F 0000853	32
CRB5003000	11	ETN0033699	50	F 0000857	6
CSL0006502	32	ETN0035278	48	F 0000862	54
CVR0006779	62	ETN0035585	50	F 0000883	6, 40
CWL0083230	32	ETN0036480	48	F 0000946	54
CWL0083231	32	ETN0036997	48	F 0000994	29
CYL0181106	74	ETN0037888	48	F 0000995	29, 40
CYL0181107	74	ETN0037889	48	F 0001002	29
CYL0410112	74	ETN0039520	48	F 0001003	29
CYL0411088	74	ETN0041568	50	F 0001007	38
CYL0412057	74	ETN0041583	50	F 0001019	1
CYL0414207	74	ETN0042002	48	F 0001280	4, 6
CYL0414208	74	ETN0042055	50	F 0001386	4, 6, 8, 10
CYL0419146	74	ETN0043269	50	F 0001505	62
CYL1000014	70	ETN0044356	50	F 0001517	34
CYL1040008	70	ETN0045461	50	F 0001568	20
CYL1411003	70	ETN0047399	50	F 0001589	32
CYL1713122	70	ETN0050432	48	F 0001643	13
CYL1904001	70	ETN0050436	48	F 0001689	32
CYL1904002	70	ETN0050437	48	F 0001720	48
CYL2200208	70	ETN0050443	48	F 0004027	38
CYL2400018	70	ETN0054463	50	F 0004067	29, 40
CYL2400214	70	ETN0054562	50	F 0004068	29, 40
CYL2400326	70	ETN0059191	48	F 0004135	43
CYL2401326	70	ETN0059192	48	F 0004159	42
CYL2405214	70	ETN0059502	48	F 0004160	42
CYL2405326	70	ETN0060598	50	F 0004161	42
CYL2501214	70	ETN0062829	50	F 0004527	62
CYL5110008	70	ETN0062830	50	F 0005031	28
CYL7110004	70	ETN0063028	50	F 0005032	28
CYL8110006	70	ETN0064085	50	F 0005055	20
DCK0007903	32	ETN0064551	50	F 0005121	13
DCK0008333	32	ETN0065515	50	F 0005207	29
DOR0006868	62	ETN0067814	50	F 0005235	54
ELC0003101	40, 54	ETN0067817	50	F 0005237	16, 54
ELC0005020	62	ETN0067815	50	F 0005362	52
ELC0005540	54	ETN0071806	50	F 0005389	52
ELC0015019	24	ETN0074021	50	F 0005501	60
ELV0007962	4	ETN0074022	50	F 0005502	60
ELV0586500	6, 12, 16	ETN0074023	50	F 0005505	60
ETN0009797	50	ETN0075184	48	F 0005554	29

INDEX


Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
F 0005703	60	GRS0000073	76	HOS0008643	40
F 0005705	60	GRS0000509	76	HRN0007533	54
F 0005842	54	GRS0000510	69, 76	HRN0008504	54
F 0005861	29, 40, 42	GRS0000555	76	HRN0009041	54
F 0005866	60	GRS0000557	76	HRN0009055	54
F 0005867	60	GRS0000559	76	HRN0009056	54
F 0005918	60	GRS0000560	76	HSG3761461	46
F 0005920	60	GRS0000564	76	HUB0933325	46
F 0005921	60	GRS0000577	76	HUB1033325	46
F 0005948	32	GRS0000911A	69	HUB8333257	46
F 0005949	32	GRS0000912	69	HUB9333257	46
F 0005950	32	GRS0000913	69	HYD0000811	22
F 0005979	34	GRS0000914	69	HYD0006616	26
F 0005992	14, 20, 30	GRS0000932	69	HYD0048022	22
F 0006009	40	GRS0000954	69	HYD0056020	36
F 0006108	32, 62	GRS0000967	69	HYD1501500	26
F 0006122	40	GRS0000983	69	HYD3069040	22
F 0006188	40	GRS0001141	69	HYD3069060	22
F 0006212	30, 34	GRS0001202	69	HYD3109042	22, 24, 27, 42, 43
F 0006268	32	GRS0002502	76	HYD3109043	18, 22, 36
F 0006278	30	GRS0002503	76	HYD3109064	22, 24
F 0006292	28	GRS0002504	76	HYD3109076	22, 25
F 0006328	54	GRS0002529	69	HYD3159020	22, 24, 27, 42, 43
F 0006421	54	GRS0002706	69	HYD3159040	18
F 0006424	54	GRS0002781	69	HYD3220043	36
F 0006428	54	GRS0002783	69	HYD3269044	22, 24, 25, 27, 40
F 0006431	54	GRS0002787	69	HYD3269088	26
F 0006519	14, 18, 70	GRS0003096	69	HYD3309040	22, 24
F 0006551	54	GRS0003147	69	HYD3359030	36
F 0006578	54	GRS00K2021	69	HYD3359040	18
F 0006599	14, 18, 70	GRS0575576	76	HYD3409030	18, 36
F 0006626	54	GRS2701903	69	HYD3409040	18, 22, 24, 36
F 0006627	54	GSK0008270	22, 76	HYD3509030	36
F 0006628	24	GUD0007139	8	HYD3509040	18, 22, 40
F 0006629	18, 42	GUD0008416	1-4	HYD3709030	43
F 0006639	54	GUD0071440	8	HYD3709040	18, 22, 24, 27, 40, 42, 43
F 0006657	24	GUD0071441	8	HYD3709060	22
F 0006793	56	HOD0008222	32	HYD3959040	24
F 0006795	56	HOS0008272	22	HYD3959060	22, 24
F 0006821	57, 58, 59	HOS0008457	22	HYD4404070	25
F 0006823	58	HOS0008458	18, 22	HYD5105050	40
F 0006824	58	HOS0008463	22, 25	HYD5165050	40
F 0006825	58, 59	HOS0008464	22, 26	HYD5205024	20, 22, 24
F 0006827	58	HOS0008469	22, 24	HYD5205050	18, 22, 24, 27, 40, 42
F 0006828	36	HOS0008470	22, 24	HYD5205060	18, 22, 24, 25
F 0006830	57, 58, 59	HOS0008471	22, 25	HYD5205064	22, 40
F 0006857	32	HOS0008472	22	HYD5205069	22
F 0006858	60	HOS0008476	18, 22	HYD5205070	25
F 0007166	32	HOS0008477	18, 22	HYD5275040	18
F 0007247	34	HOS0009478	22	HYD5275050	18
F 0007598	14	HOS0008479	22	HYD5275060	25
F 0008264	32, 38, 62	HOS0008480	22	HYD5315040	40
F 0008301	57, 59	HOS0008481	26, 27	HYD5315054	24, 26
FD 0000049	1	HOS0008482	22, 26	HYD5325050	18, 22, 24
FD 0007114	62	HOS0008483	22, 27	HYD5325060	18, 22
FIL0007933	56	HOS0008484	26, 27	HYD5355040	43
FIL0010008	32	HOS0008487	25	HYD5355050	18
FIL0115154	62	HOS0008488	22	HYD5355064	22
FT 0000055	2	HOS0008489	22, 25	HYD5375040	42, 43
FT 0000141	29	HOS0008490	22	HYD5405022	24
FT 0000193	36	HOS0008534	18	HYD5405023	22
FT 0000530	36	HOS0008535	18	HYD5405032	18
GLS0006951	62	HOS0008536	26	HYD5405034	18
GLS0006952	62	HOS0008537	26	HYD5405042	22
GLS0006953	62	HOS0008538	26	HYD5405050	18, 22, 24, 27
GLS0006954	62	HOS0008539	26	HYD5405056	24
GLS0006955	62	HOS0008580	22	HYD5405060	22
GLS0006956	62	HOS0008641	40		
GRL0008318	58	HOS0008642	40		

INDEX

Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
HYD5405064	18, 22, 25, 40	KEY0007112	46	PLG2797146	46
HYD5405070	22	KOB0000100	62	PLG3299420	46
HYD5515054	24	LAT290	62	PLT0006684	32
HYD5515064	22, 24, 25, 26	LEV0007017	34	PLT0007548	32
HYD5705050	22	LEV0007413	34	PLT0007989	24, 38
HYD5755054	24	LEV0007889	20	PLT0007995	25
HYD5924040	18, 42, 43	LEV0007999	20	PLT0008387	20
HYD5924050	18, 22, 24	LEV0008000	20	PLT3236196	46
HYD5924060	18, 22, 25	LIN0008269	62	PPE0000750	22, 25
HYD7230040	24, 25	LIN0008278	62	PPE0001000	25
HYD8105050	42	LIN0008279	62	PPE0001500	26
HYD9165050	42	LIN0008280	62	PPE0020125	34
HYD8205050	42	LIN0008281	62	PPE0020250	36
HYD9205034	43	LIN0008283	62	PPE0041000	25
HYD9205044	40	LIN0008283	63	PPE0050450	36
HYD9315054	40	LNK0007784	20	PPE0100900	25
HYD9355044	18	LOK0000055	62	PPE0150900	26
HYD9405033	22	MIR4072308	62	PPE0502500	40
HYD9405034	40, 43	MNT0003037	59	PPE1000600	25
HYD9405044	40, 42, 43	MNT0004524	57, 59	PPE1250900	26
HYD9515043	40	MNT0006594	59	PPE1251001	25
HYD9515044	26, 40	MNT0006595	59	PPE5001100	24
HYD9515046	26	MNT0006683	32	PPE7500200	24
HYP HP2V	72	MNT0006799	63	PPE7503750	36
HYP HP2W	72	MNT0007531	63	PUL0000400	8, 10
HYP LC2A	72	MNT0007137	10	RAD0000102	59
HYP LC2E	72	MNT0008045	18	ROD0000006	20
HYP LC2N	72	MNT0008046	22, 38	ROD0000060	20
HYP LC2O	72	MTR1001007	4, 6, 18, 22	ROD0007417	34
HYP LC4A	73, 75	MTR1002007	68	ROD0008050	20
HYP LC4E	73, 75	NCE0002500	20, 29	ROD0008180	20
HYP LC4N	73, 75	NCE0003125	1, 20	ROD0008298	20
HYP LC4O	73, 75	NCE0003750	29, 30	ROD1779377	46
HYP LC4P	73	NCE0005000	20, 30	RUG0006968	62
HYP LC4V	73, 75	NCE0005625	57, 58, 59	SBH0000201	12
HYP LC4W	73, 75	NCE0006250	2	SBH0000301	6, 38
HYP OU65	72	NCH0002500	36	SBH0000302	4, 38
HYP OU84	72	NCH0003125	1, 4, 6, 13	SBH0000303	11
HYP LC25A	71		16, 18, 40	SBH0000506	8
HYP LC25E	71	NCH0003750	1, 2, 4, 6	SCC0000102	16, 40
HYP LC25N	71	NCH0004375	40	SCC0000103	29
HYP LC25P	71	NCH0006250	1, 2	SCC0000104	13
HYP LC2LR	72	NCH0007500	8, 70	SCC0000105	20
HYP LC2SC	72	NCH0010000	2	SCC0000106	40
HYP LC4PO	73, 75	NCJ0002500	20	SCC0000202	4, 6, 11, 16
HYP LC2SO	72, 73, 75	NCJ0003750	43	SCC0000203	1, 4, 18, 29, 34, 40
HYP LC4LR	73, 75	NCJ0005000	20	SCC0000205	24, 32
HYP LC4RW	73, 75	NCJ0007500	8, 14	SCC0000206	22, 34
HYP LC4US	73, 75	NCX0003125	12	SCC0000207	13, 62
HYP OU25U	71	NFC0001000	4, 42	SCC0000210	20
HYP OU25W	71	NFC0005000	36	SCC0000217	40, 56
HYP OU297	71	NFE0011250	43, 46	SCC0000301	6, 13, 14, 16
HYP HP25RW	71, 72	NFH0002500	29	SCC0000302	12, 16, 30, 38, 42
HYP LC25HO	71	NFH0003750	30, 34, 74	SCC0000303	10, 13, 14, 16
HYP LC25LR	71	NFH0004375	34		20, 34, 36, 62
HYP LC25RC	71	NFH0007500	42, 46, 48	SCC0000304	1, 8, 12
HYP LC25SO	71	NFH0008750	74		29, 30, 38
HYP LC25US	71	NFH0010000	28	SCC0000306	16
HYP LC418C	73	NFJ0006250	34	SCC0000307	2, 30
HYP LC418S	73	NFJ0007500	42, 48	SCC0000309	11, 20
HYPLC2563C	71	NFJ0011250	40	SCC0000310	16
HYPLC2563S	71	NFL0003750	30	SCC0000311	16
HYPLC265SP	72	NFL0005000	30	SCC0000313	20
HYPLC2X65C	72	NHF0007500	46	SCC0000402	57
HYPLC2X65S	72	NMS0000117	59	SCC0000404	58
HYPLC4X60S	75	PIN0000104	48	SCC0000502	8, 10
HYPLC4X60C	75	PIN3101179	46	SCC0000503	8, 38, 59
HYP SAC0KL2	14, 18, 72	PIN37540	62	SCC0000504	59
HYP SACKL25	8, 10, 71	PLG2797134	46	SCC0000505	14, 34, 60
JD 0008041	36	PLG2797144	46	SCC0000506	8, 10, 14, 30, 58, 59
				SCC0000508	6

INDEX


Part No.	Page No.	Part No.	Page No.	Part No.	Page No.
SCC0000509	14, 20	STR0644420	56	TRW0401341	66
SCC0000510	42	STS3750500	4	TRW0402226	66
SCC0000512	42	STS5000500	42	TRW0415438	66
SCC0000513	40	SUP0006786	13	TRW402285A	66
SCC0000514	14, 20	SUP0007767	38	TRW4023461	66
SCC0000610	59	SUP0007994	38	TRWG114493	66
SCC0000614	57, 58, 59	SUP0007995	38	TRWG127708	66
SCC0000705	52	TBE0006401	18	TRWG179885	66
SCC0000706	1, 2	TBE0006737	22	TRWG186282	66
SCC0000707	2	TBE0008493	24	TRWG272121	66
SCC0000708	1, 2, 8, 10, 38	TBE0008494	24	TRWG942162	66
SCC0000808	6, 40, 42	TBE0008495	24	TRWHF64201	66
SCC0000810	4	TBE0008496	24	TRWHF64320	66
SCC0001018	2	TBE0008497	24	TRWHF64323	66
SCO0000302	1	TBE0008498	24	TRWHF6432A	66
SCO0000305	38	TBE0008499	24	TRWHF64401	66
SCO0000508	8, 10	TBE0008500	24	TRWHF64403	66
SCO0000510	8, 10	TBE0008501	24	TRWGF64503	66
SEL0000103	57	TBE0008502	24	TRWHF64600	66
SEL1205133	46	TBE0008573	34	TRWHF64701	66
SEL1205142	46	TBE0008574	34	TRWV220009	66
SEL1205143	46	TBE0008586	18	VLV0000002	24
SFC0000509	13	TBE0008587	18	VLV0000008	20, 22
SFC0000704	8, 10	TBE0008588	18	VLV0000030	42
SFC0000828	48	TBE0008589	18	VLV0004813	24
SHD0006597	59	TBE0008614	25	VLV00F30BK	40
SHD0006598	59	TBE0008615	25	VLV0RD1075	18, 24
SHD0006599	59	TBE0008628	27	VLV4951184	24
SHD0006600	59	TBE0008759	22	VLV495T819	24
SHD0007022	54	TBE0008760	22	WAG0002162	67
SHD0007838	56	TBE0008761	22	WAG0002167	67
SHD0008225	38	TBE0008762	22-24	WAG0019148	48
SHD0008256	8	TBE0008763	22-24	WAG0019149	48
SHD0008257	8, 10	TBE0008764	22	WAG0019432	67
SHD0008266	10	TBE0008765	22-24	WAG0024489	48
SHD0008290	11	TBE0008766	22-25	WAG0075334	48
SHD0008291	11	TBE0008779	22	WAG0075335	48
SHD0008305	8, 10	TBE0008780	22	WAG0068927	48
SHF0008591	34	TIR4019195	48	WAS0000110	4, 6
SHM0088630	40	TNK0007422	32	WAS0000118	4
SHM0088631	40	TRK0004277	6	WAS0000125	20
SHT0006204	30	TRK0007159	4	WCT0003125	6, 18
SHT0007068	30	TRW0017010	66	WCT0003750	1, 20
SHT0039569	30	TRW0021200	66	WCT0005000	6, 11
SHT0007045	30	TRW0021277	66	WCT0006250	1, 2, 10
SLT0007030	12	TRW0021282	66	WCT0007500	6, 40
SMR1031500	16	TRW0021289	66	WCT0100000	43
SMS0000177	59	TRW0021293	66	WEA0000937	62
SMS0000815	28	TRW0025127	66	WEA0001179	62
SPC0007465	8	TRW0028258	66	WES0002500	29
SPC0007466	8	TRW0028288	66	WES0011250	25
SPC0008428	20	TRW0028333	66	WHL0030872	48
SPC0009069	24	TRW0028335	66	WHL0040195	48
SPC0726211	48	TRW0028347	66	WLK0002500	28
SPG0001263	18	TRW0028348	66	WLK0003125	4, 6, 18
SPG0001264	18	TRW0028349	66	WLK0003750	1, 2, 4, 6
SPG0005697	32	TRW0028355	66	WLK0006250	1, 2
SPG2258566	46	TRW0028356	66	WLK0007500	6
SPG2858091	46	TRW0029097	66	WLK1000000	2
SPK0003092	4, 6	TRW0029099	66	ZZ 0000100	2, 8, 10, 14, 43
SPK0008039	4, 6, 40	TRW0032344	66	ZZ 0000101	46
SQS3751000	43	TRW0032356	66	ZZ 0000102	8
SQS5003000	20	TRW0032391	66	ZZ 0000103	43
SQS7501750	14	TRW0040116	66	ZZ 0000401	40
STD0000109	48	TRW0062005	66	ZZ 0000404	30
STD0200589	46	TRW0063029	66	ZZ 0000406	4, 6, 12
STD0201380	46	TRW0067026	66		26, 30, 34
STE3111204	46	TRW0071015	66	ZZ 0000407	4, 6, 12, 34
STE3111207	46	TRW0325901	66	ZZ 0000408	4, 6, 34
STE3112045	46	TRW0401309	66	ZZ 0000413	14
STE3112070	46	TRW0401313	66	ZZ 0000439	36
STP0007069	32	TRW0401314	66	ZZ 0000705	30
STP0008216	32	TRW0401315	66	ZZ 0002016	16

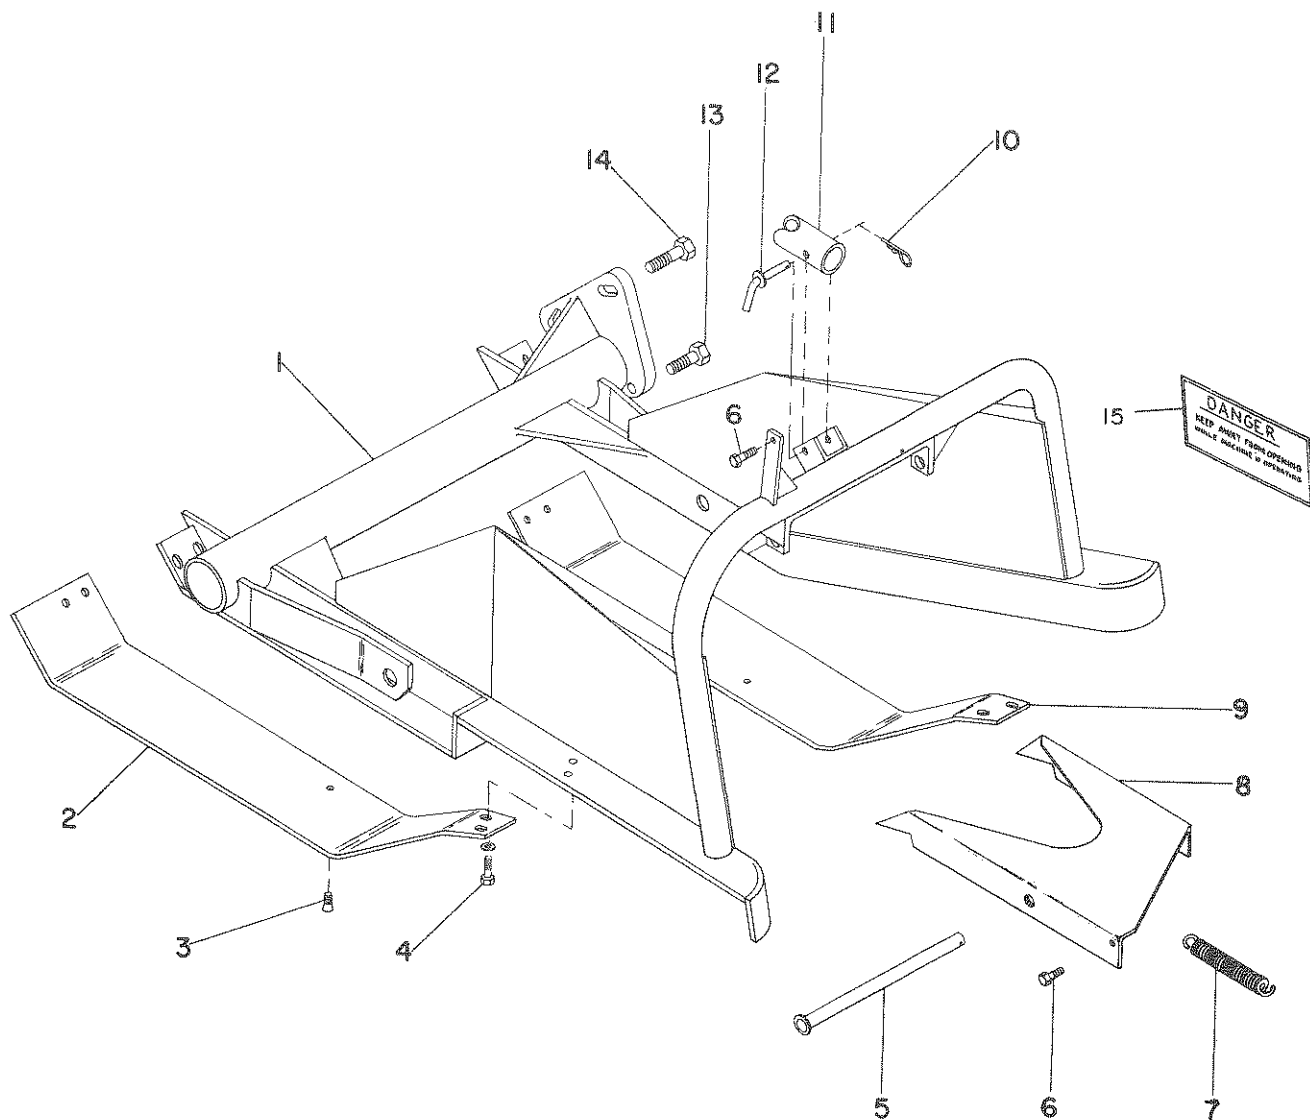

PICK UP


REF. NO.	PART NO.	DESCRIPTION
	10-906	Pick up Assembly complete
1	10-141	Pick up Frame
2	10-142	R.H. Runner
3	SCO0000302	3/8" x 1" NC Flat Head Socket Cap Screw, 2 used
	WLK0003750	3/8" Lock Washer, 2 used
	NCH0003750	3/8" NC Hex Nut, 2 used
4	SCC0000304	3/8" x 1 1/2" NCHT Cap Screw, 8 used
	WCT0003750	3/8" Cut Washer, 8 used
	WLK0003750	3/8" Lock Washer, 8 used
	NCH0003750	3/8" NC Hex Nut, 8 used
5	10-145	Pin
6	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw, 2 used
	NCH0003125	5/16" NC Hex Nut, 2 used
	NCE0003125	5/16" NC Fiber Lock Nut, 2 used

REF.	PART	DESCRIPTION
7	F 0000747	Spring
8	10-144	Bale Check
9	10-143	L.H. Runner
10	F 0001019	Hair Pin
11	10-139	Center Bale Guides, To. Ser. No. 00130
	GUD0008416	Center Bale Guide, From Ser. No. 00131
12	10-146	Pin, Bale Guides
13	SCC0000706	5/8" x 2" NCHT Cap Screw, 2 used
	WCT0006250	5/8" Cut Washer, 4 used
	WLK0006250	5/8" Lock Washer, 2 used
	NCH0006250	5/8" Hex Nut, 2 used
14	SCC0000708	5/8" x 2 1/2" NCHT Cap Screw
	WCT0006250	5/8" Cut Washer, 2 used
	WLK0006250	5/8" Lock Washer
	NCH0006250	5/8" NC Hex Nut
15	FD 0000049	Danger Decal

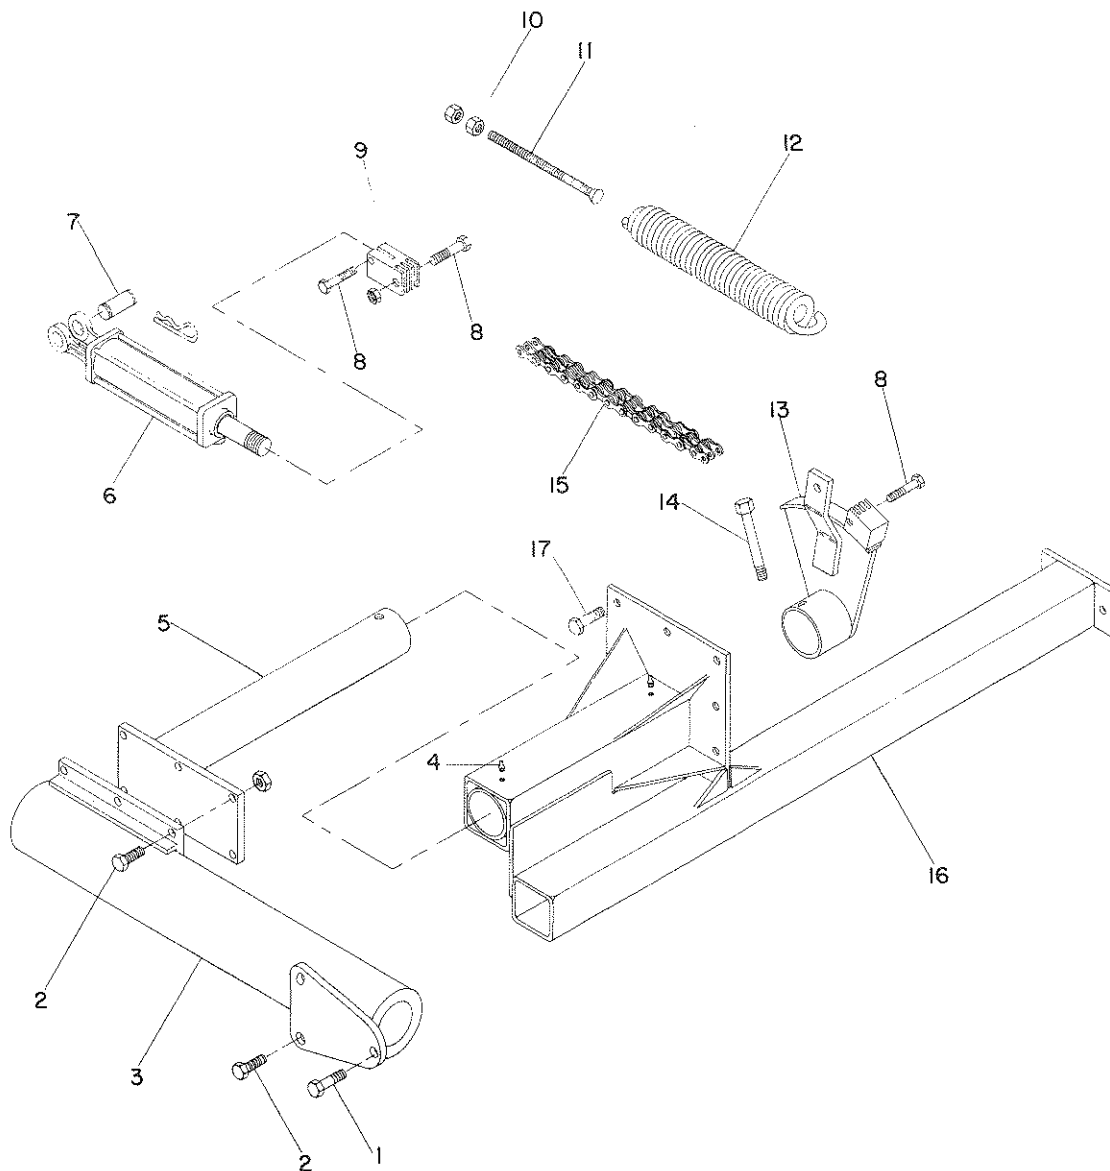


PICK UP LIFT

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	SCC0000706	5/8" x 2" NCHT Cap Screw	9	10-134	End Block
2	SCC0000708	5/8" x 2 1/2" NCHT Cap Screw, 8 used	10	FT 0000055	5/8" NC Jam Nut
	NCE0006250	5/8" NC Fiber Lock Nut, 8 used	11	10-155	Spring Bolt, Conical Head
3	10-123	Arm, Pick up Support	12	04-123	Spring, Hook One End
4	ZZ 0000100	1/4" -28 Zerk, 2 used	13	10-136	Lever, Pick up Lift
5	10-124	Pivot Tube, Pick up Support Arm	14	SCC0001018	1" x 6" NCHT Cap Screw
6	01-569	Hydraulic Cylinder, 2 1/2" x 8" Victor		WLK1000000	1" Heavy Lockwasher
	01-570	Seal Kit for 01-569 Cylinder		NCH0010000	1" NC Hex Nut
7	06-102	Pin with Keeper	15	10-150	Chain, 17 Links BL834
8	SCC0000307	3/8" x 2 1/4" NCHT Cap Screw, 3 used	16	10-138	Bearing, Pickup Support Arm
	WLK0003750	3/8" Lock Washer, 3 used	17	SCC0000707	5/8" x 2 1/4" NCHT Cap Screw, 7 used
	NCH0003750	3/8" NC Hex Nut, 3 used		WCT0006250	5/8" Cut Washer, 7 used
				WLK0006250	5/8" Lock Washer, 7 used
				NCH0006250	5/8" NC Hex Nut, 7 used

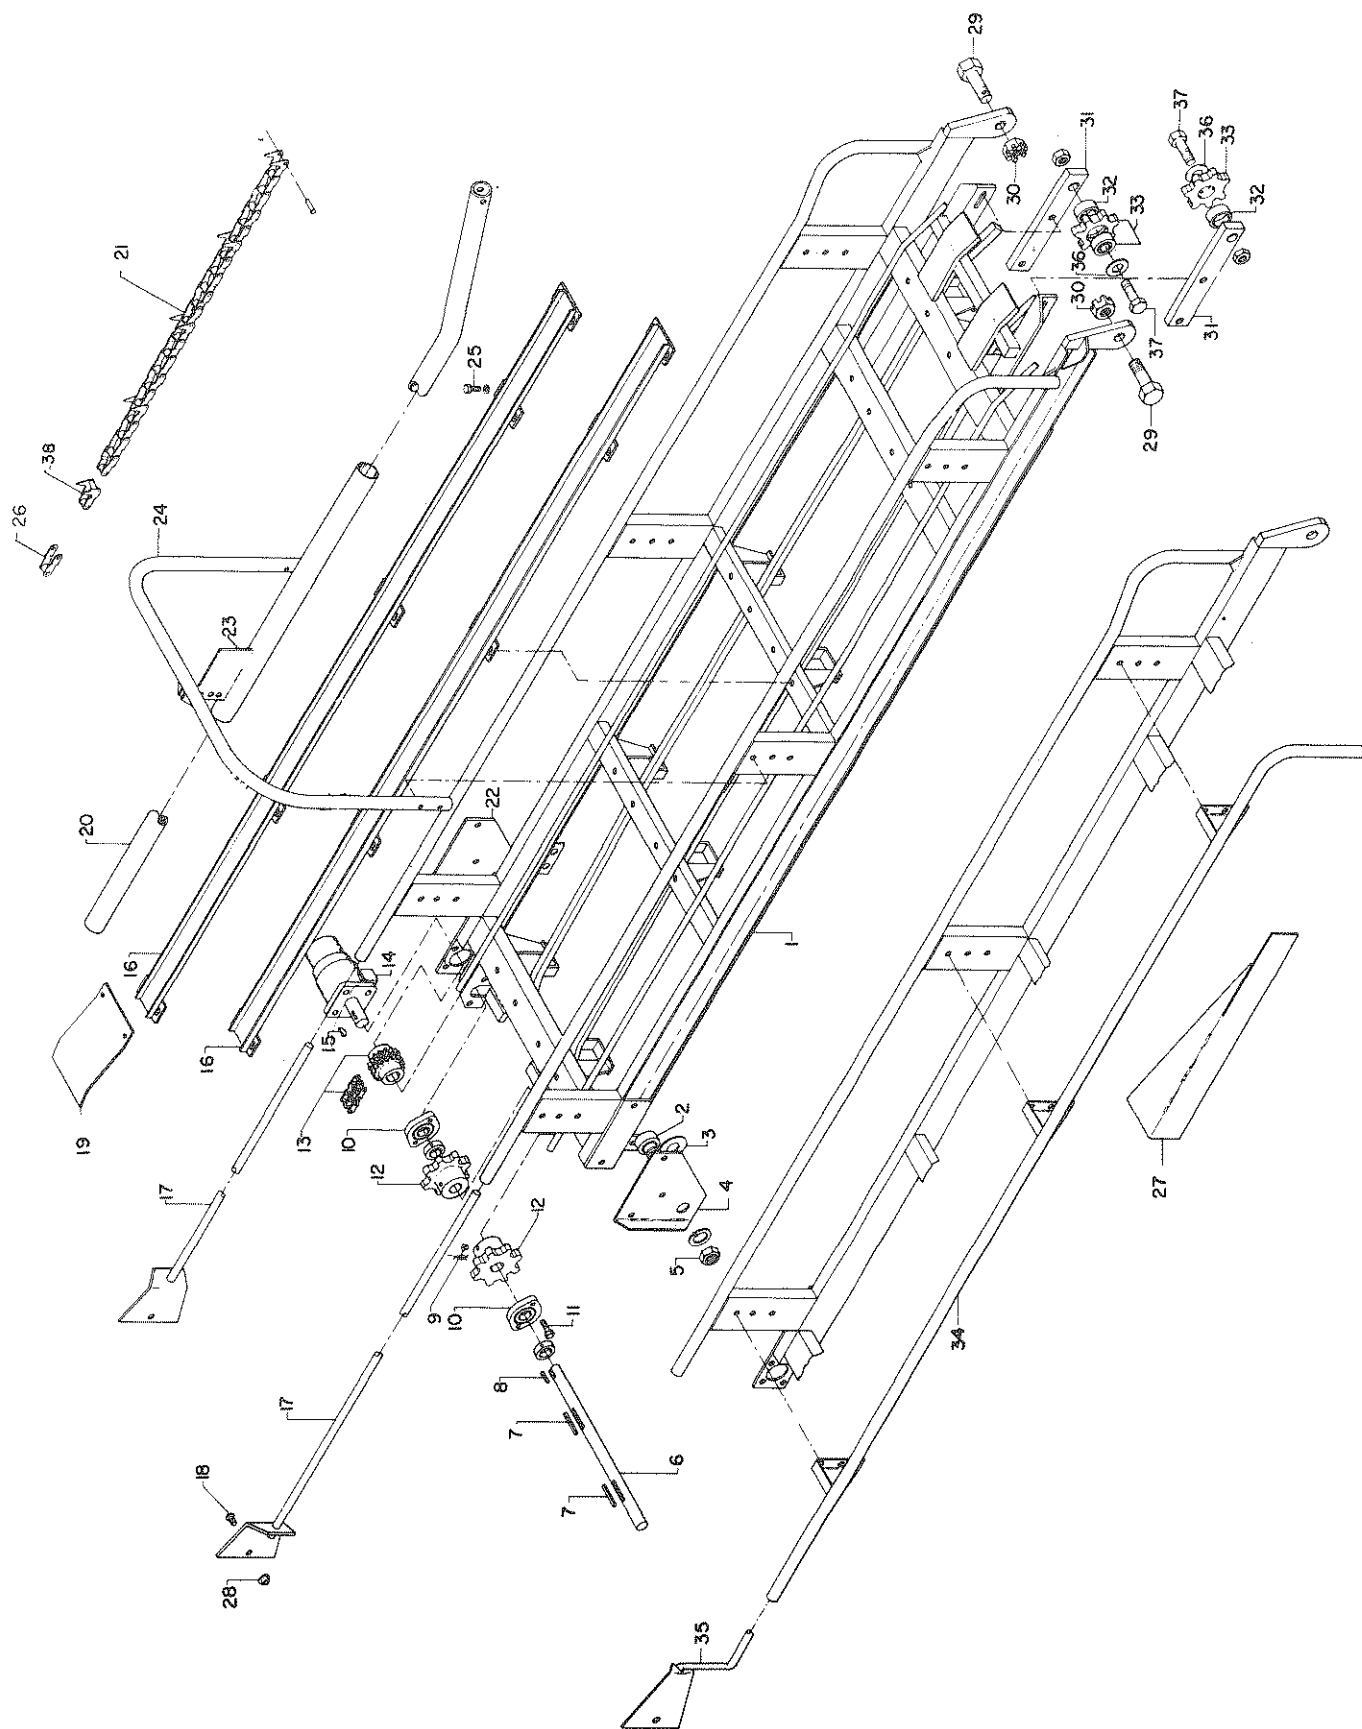


FRONT ELEVATOR

REF. NO.	PART NO.	DESCRIPTION
	10-904	Front Elevator Complete
1	10-109	Frame
2	F 0001280	Roller, BCA 6206, 2 used
3	WAS0000110	1" Flat Washer, 8 used
4	10-110	Plate, Roller Mount, RH
5	F 0001386	1" NF Fiber Lock Jam Nut, 2 used
6	10-112	Drive Shaft, 1"
7	ZZ 0000407	Key, 1/4" x 1/4" x 1 1/4", 2 used
8	ZZ 0000406	Key, 1/4" x 1/4" x 1"
9	STS3750500	3/8" x 1/2" NC Socket Set Screw, 2 used
10	02-104	Bearing, FLCT 1" Fafnir
11	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw, 4 used
	WLK0003125	5/16" Lock Washer, 4 used
	NCH0003125	5/16" NC Hex Nut, 4 used
12	SPK0003092	Sprocket, 8 Tooth, 550, 2 used
13	05-901	Chain Coupler, D4016 x 1" x 1"
	05-111	Chain Coupler Half, 1" Bore
	05-112	Coupler Chain
14	MTR1001007	Hydraulic Motor, Char-Lyn A5K
	CHR0060023	Seal Kit
15	ZZ 0000408	Woodruff Key, No. 808
16	TRK0007159	Chain Track, 2 used
17	10-106	Bale Guide, 2 used
18	SBH0000302	3/8" x 1" NC Socket Button Head Cap Screw, 2 used
	WLK0003750	3/8" Lock Washer, 2 used
	NCH0003750	3/8" NC Hex Nut, 2 used
19	10-115	Bale Lifter
20	GUD0008416	Center Bale Guide, From Ser. No. 00131
	10-139	Center Bale Guide, To Ser. No. 00130
21	CHN0020005	Chain, Front Elevator, 136P No. 550, 2 used
22	10-111	Plate, Roller Mount, LH
23	ELV0007962	Bale Guide Support
24	10-149	Bale Guide Support Bracket
25	SCC0000202	5/16" x 1" NCHT Cap Screw, 20 used
26	05-108	Offset Link, No. 550
27	10-154	Bale Deflector, 2 Tie
28	F 0000440	Ferrule, 2 used
29	10-116	Pin, 1" dia., 2 used
30	NFC0001000	Nut, 1" NC Castelated, 2 used
31	10-114	Tightener Bracket, Elevator Chain, 2 used
32	F 0000172	3/4" Set Collar, 2 used
33	SPK0008039	Sprocket with Bearing, 7 Tooth Idler, 550
34	10-152	Bale Guide Adapter, 2 Tie
35	10-153	Bale Guide, 2 Tie
36	WAS0000118	Machinery Bushing, 3/4" x 12 ga., 2 used
37	SCC0000810	3/4" x 3" NCHT Cap Screw, 2 used
38	CNK0005500	Attachment Link Only, 550-M1

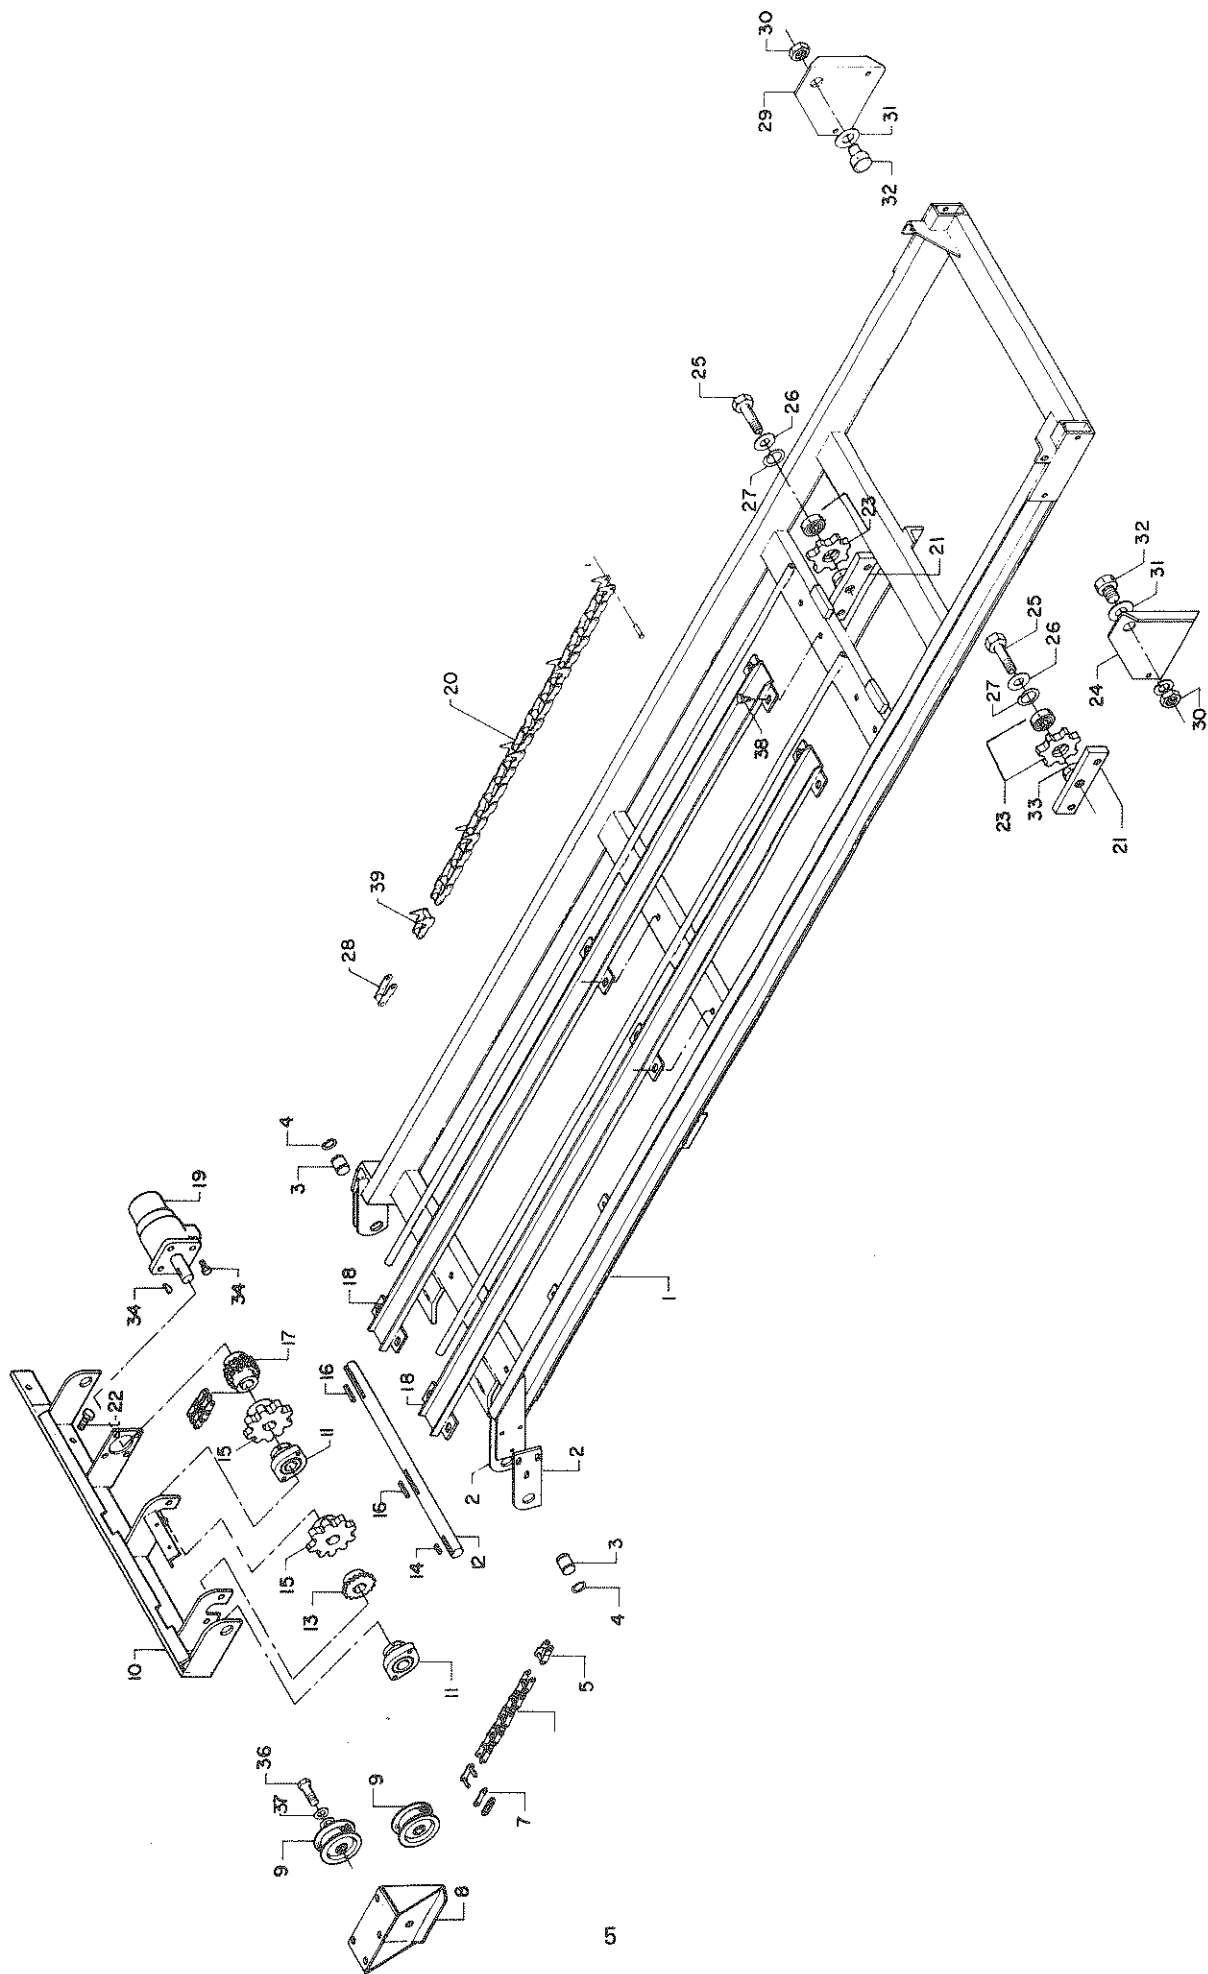


REAR ELEVATOR

REF. NO.	PART NO.	DESCRIPTION
	10-905	Rear Elevator Complete
1	10-131	Frame
2	10-135	Pickup Mount, 2 used
3	10-119	Pin, Pickup Pivot, 2 used
4	F 0000857	Snap Ring, 5133-98 Turac, 4 used
5	F 0000123	Offset Link, RC 50
6	05-255	Chain, Cage Conveyor, 78P, RC50
7	F 0000025	Connecting Link, RC 50
8	10-157	Mounting Bracket, Chain Tightener
9	F 0000883	Idler Pulley, 2 used
10	ELV0586500	Mounting Hinge, Rear Elevator
11	02-104	Bearing with Set Collar, FLCT 1" Fafnir, 2 used
12	10-132	Drive Shaft
13	05-113	Sprocket, 50B14 x 1"
14	ZZ 0000406	Key, 1/4" x 1"
15	SPK0003092	Sprocket, 8 Tooth, 2 used
16	ZZ 0000407	Key, 1/4" x 1 1/4", 2 used
17	05-901	Chain Coupler, D4016 x 1" x 1"
	05-111	Chain Coupler Half, 1" Bore
	05-112	Coupler Chain
18	TRK0004277	Chain Track, 2 used
19	MTR1001007	Hydraulic Motor
	CHR0060023	Seal Kit
20	CHN0020003	Chain, Rear Elevator, 119P, No. 550
21	10-118	Tightener Bracket, 2 used
22	SCC0000301	3/8" x 3/4" NCHT Cap Screw, 7 used
	WLK0003750	3/8" Lock Washer, 7 used
	NCH0003750	3/8" NC Hex Nut, 7 used
23	SPK0008039	Sprocket with Bearing, 7 Tooth Idler, 550
24	10-110	Roller Mount Plate, RH
25	SCC0000808	1/2" x 2 1/2" NCHT Cap Screw, 2 used
26	WCT0007500	1/4" Cut Washer, 4 used
27	WLK0007500	1/4" Lock Washer, 2 used
28	05-108	Offset Link, No. 550
29	10-111	Roller Mount Plate, LH
30	F 0001386	1" NF Fiber Lock Jam Nut, 2 used
31	WAS0000110	1" Spacer Washer
32	F 0001280	Roller, 6206 BCA, 2 used
33	F 0000172	1/4" Set Collar, 2 used
34	ZZ 0000408	Woodruff Key, 808
35	SBH0000301	3/8" x 3/4" Button Head Socket Cap Screw, 4 used
	WLK0003750	3/8" Lock Washer, 4 used
36	SCC0000508	1/2" x 2 1/2" NCHT Cap Screw, 2 used
37	WCT0005000	1/2" Cut Washer, 2 used
38	SCC0000202	5/16" x 1" NCHT Cap Screw, 12 used
	WCT0003125	5/16" Flat Washer, 12 used
	WLK0003125	5/16" Lock Washer, 12 used
	NCH003125	5/16" NC Hex Nut
39	CNK0005500	Attachment Link Only, 550-M1

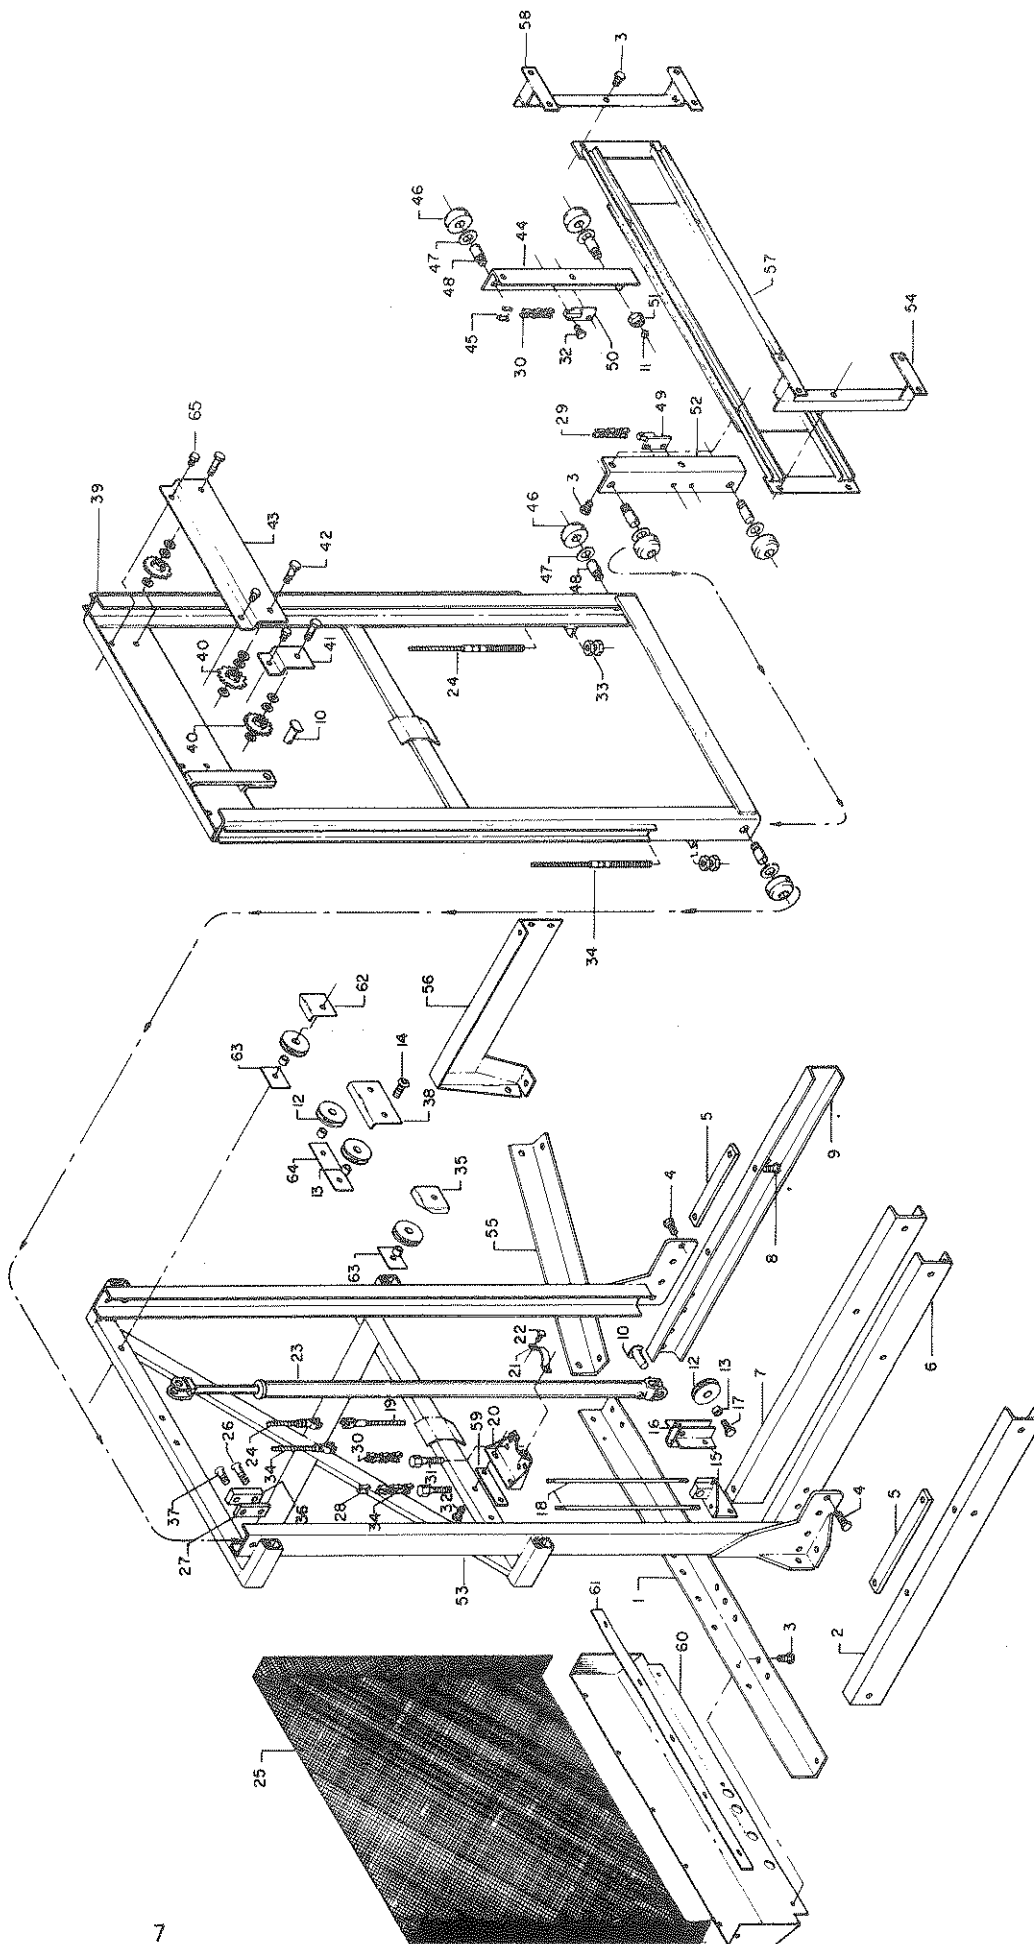


RIGHT HAND SIDE MAST

REF. NO.	PART NO.	DESCRIPTION
1	12-107	Side Guard, Right Front
2	12-101	Outtrigger Channel, RH, No. 1
3	SCC0000503	½" x 1½" NCHT Cap Screw, 21 used
4	SFC0000704	5/8" x 1½" NFHT Cap Screw
5	12-108	Wear Plate, Squeeze, 18", 2 used
6	12-102	Outtrigger Channel, RH, No. 2
7	12-103	Outtrigger Channel, RH, No. 3
8	SCC0000502	½" x 1" NCHT Cap Screw, 4 used
9	12-104	Outtrigger Channel, RH, No. 4
10	06-113	Pin with Keeper
11	ZZ 0000102	Zerk, ¼" -28 x 45°, 3 used
	ZZ 0000100	Zerk, ¼" -28, 3 used
12	PUL0000400	Cable Roller, 6 used
13	BRG000M18N	Bushing, M1-8N Torrington, 6 used
14	SBH0000506	½" x 2" NC Socket Button Head Cap Screw, 4 used
15	12-110	Ram Bracket
16	BKT0007143	Bracket, Cable Roller, RH
17	SCC0000506	½" x 2" NCHT Cap Screw
18	12-109	Tie Rod, Side Mast Cylinder Mount
19	12-149	Cable, Side Mast Equalizer
20	12-152	Support, Side Mast Cylinder
21	12-153	Clamp, Side Mast Cylinder
22	SCC0000302	3/8" x 1" NCHT Cap Screw, 4 used
23	01-566	Hydraulic Cylinder, LC25 x 63 SP Hypower
	HYPACKL25	Repair Kit
24	12-151	Lift Cable, Rear
25	SHD0008257	Screen Shield, Side Mast
26	SCO0000510	½" x 3" NC Socket Flat Head Cap Screw, 2 used
27	12-118	Spacer Block, 2 used
28	F 0000760	Connecting Link, RC60
29	05-138	Lift Chain, Front, 76 Pitch, 2060RC
30	05-137	Lift Chain, Rear, 92 Pitch, 2060RC
31	12-114	Chain Anchor, 2 used
32	SCC0000304	3/8" x 1½" NCHT Cap Screw, 4 used
33	NCJ0007500	¾" NC Jam Nut, 2 used
	NCH0007500	¾" NC Hex Nut, 2 used
34	12-150	Lift Cable, Right Front
35	GUD0071440	Guide, Single Roller, Front
36	12-119	Top Guide, Side Mast, 2 used
37	SCO0000508	½" x 2½" NC Socket Flat Head Cap Screw, 2 used
38	GUD0007139	Guide, Double Roller
39	12-106	Side Mast Frame, RH Inner
40	02-108	Idler Sprocket, 01011536 Fafnir, 3 used
41	12-120	Chain Guide, Front
42	SCC0000708	5/8" x 2½" NCHT Cap Screw, 3 used
43	12-121	Chain Guide, Rear
44	12-123	Apron Roller Angle, Rear
45	05-145	Connecting Link, RC2060
46	12-117	Roller, Guide, 6 used
47	F 0000766	Washer, 1-1/8" x 14 ga., Hardened, 6 used
48	12-116	Stud, Guide Roller, 6 used
49	12-126	Front Chain Anchor
50	12-125	Rear Chain Anchor
51	F 0001386	1" NF Fiber Lock Jam Nut, 6 used
52	12-122	Apron Roller Angle, Front
53	12-105	Side Mast Frame, RH, Outer
54	12-128	Cage Support, Front
55	12-132	Side Guard, Right Center
56	12-133	Side Guard, Right Rear
57	12-124	Apron, Side Mast
58	12-154	Rear Cage Support
59	12-112	Spacer, Side Mast Cylinder Bracket
60	SHD0008256	Side Mast Shield Bracket
61	SHD0008305	Back Strip
62	GUD0071440	Guide, Single Roller, Rear
63	SPC0007465	Spacer, Single Roller
64	SPC0007466	Spacer, Double Roller
65	SCC0000502	½" x 1" NCHT Cap Screw, 3 used

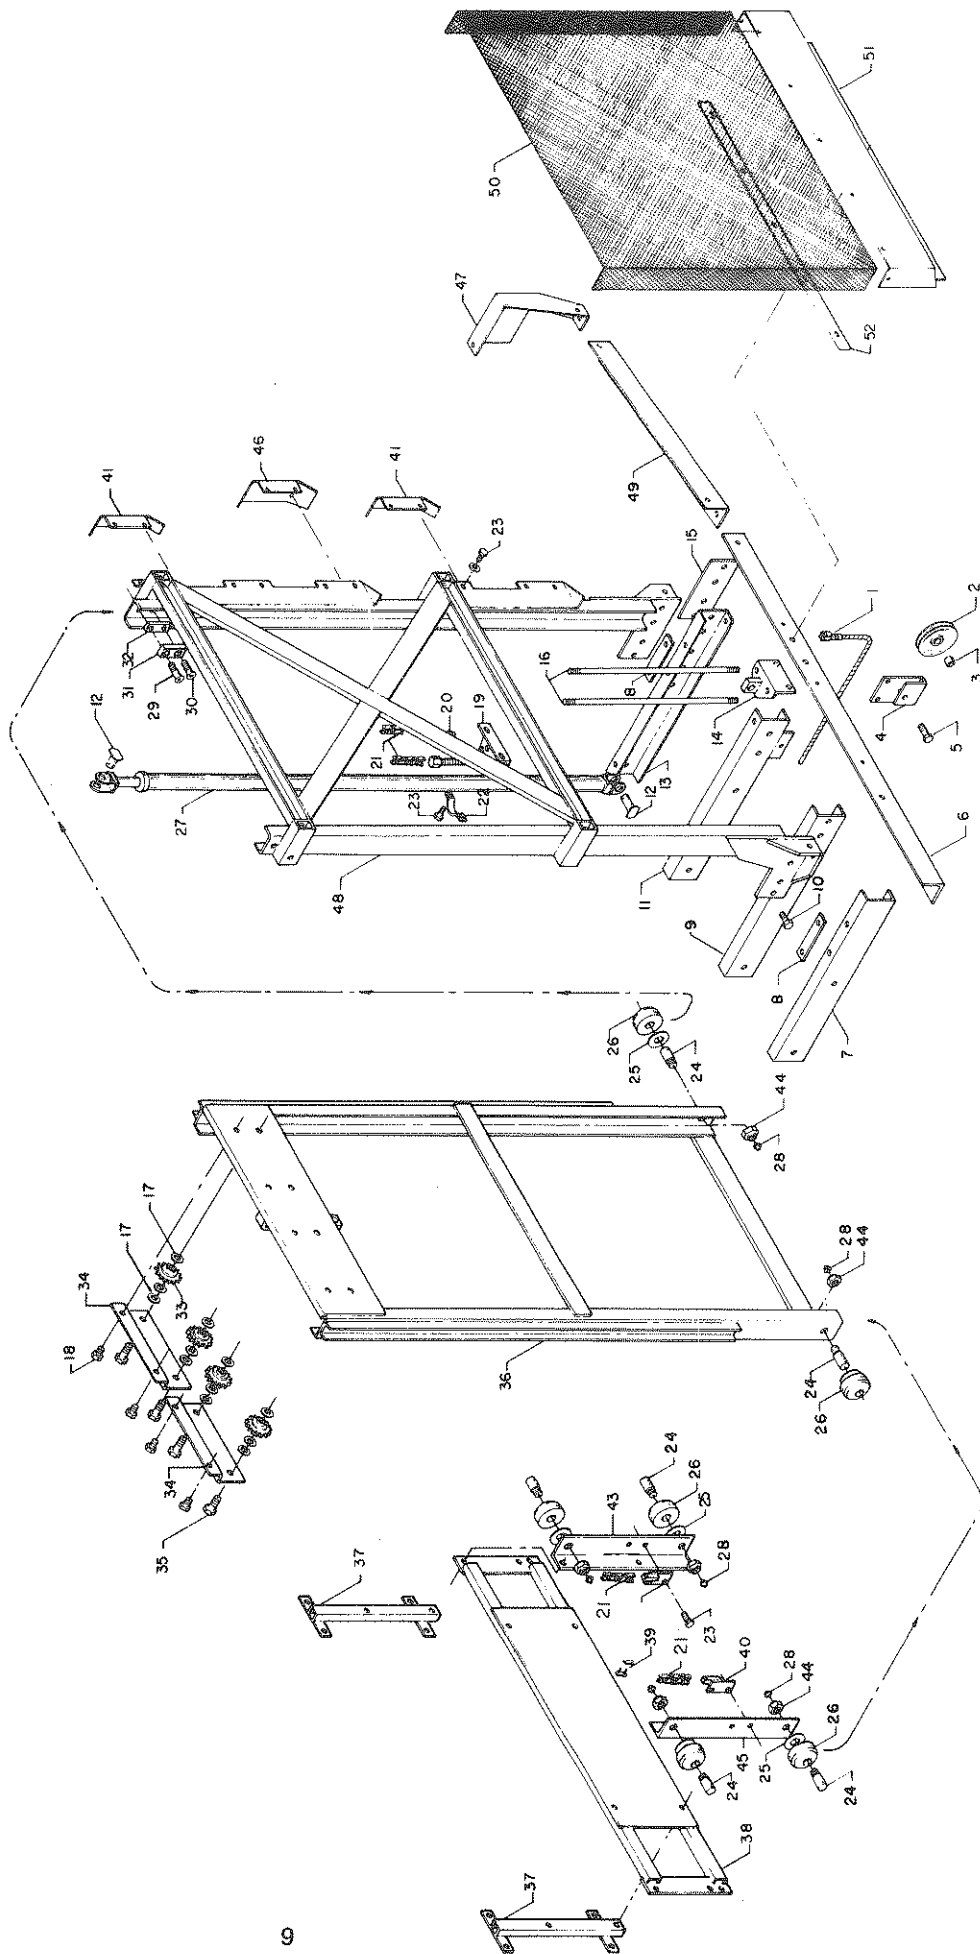


LEFT HAND SIDE MAST

REF. NO.	PART NO.	DESCRIPTION
1	12-149	Cable, Side Mast Equalizer
2	PUL0000400	Cable Roller
3	BRG000MI8N	Bushing, Cable Roller, MI-8N Torrington
4	MNT0007137	Bracket, Cable Roller, LH
5	SCC0000506	½" x 2" NCHT Cap Screw
6	12-147	Side Guard, LH Front
7	12-134	Outrigger Channel, LH, No. 1
8	12-141	Wear Plate for Squeeze, 8", 2 used
9	12-135	Outrigger Channel, LH, No. 2
10	SFC0000704	5/8" x 1½" NFHT Cap Screw
11	12-136	Outrigger Channel, LH, No. 3
12	06-113	Pin with Keeper, 2 used
13	12-137	Outrigger Channel, LH, No. 4
14	12-110	Ram Bracket, Side Mast Cylinder
15	12-145	Shim, Side Mast (As Required)
16	12-109	Tie Rod, Side Mast Cylinder Mount, 2 used
17	WCT0006250	5/8" Washer, 12 used
18	SCC0000502	½" x 1" NCHT Cap Screw, 4 used
19	12-152	Support, Side Mast Cylinder
20	12-114	Chain Anchor, Threaded, 2 used
21	05-139	Lift Chain, LH, 84 Pitch, No. 2060RC, 2 used
22	12-153	Clamp, Side Mast Cylinder Support
23	SCC0000303	3/8" x 1½" NCHT Cap Screw, 4 used
24	12-116	Stud, Guide Roller, 6 used
25	F 0000766	Washer, 1-1/8" x 14 Gauge, Hardened, 6 used
26	12-117	Guide Roller, Side Mast, 6 used
27	01-566	Hydraulic Cylinder, Side Mast, LC25 x 63 SP
	HYPACKL25	Repair Kit
28	ZZ 0000100	Zerk, ¼" -28, 6 used
29	SCO0000508	½" x 2½" NCHT Socket Flat Head Cap Screw, 2 used
30	SCO0000510	½" x 3" NCHT Socket Flat Head Cap Screw, 2 used
31	12-119	Fiber Slide, 2 used
32	12-118	Spacer Block, Fiber Slide, 2 used
33	02-108	Idler Sprocket, 01011536 Fafnir, 4 used
34	12-144	Chain Guide, Side Mast, 2 used
35	SCC0000708	5/8" x 2½" NCHT Cap Screw
36	12-139	Side Mast Frame, Inner LH
37	12-146	Cage Support, 2 used
38	12-124	Apron, Side Mast
39	05-145	Connecting Link, 2060RC
	05-122	Connecting Link, 60RC
40	12-125	Chain Anchor, Left Front and Right Rear
41	12-182	Tie Cam, 2 used
42	12-126	Chain Anchor, Left Rear and Right Front
43	12-122	Angle, Apron Roller, Right Front and Left Rear
44	F 0001386	1" NF Fiber Lock Jam Nut, 6 used
45	12-123	Angle, Apron Roller, Left Front and Right Rear
46	12-183	Interlocking Tie Cam
47	12-148	Side Guard, LH Rear
48	12-138	Side Mast Frame, Outer LH
49	12-140	Side Guard, Center LH
50	SHD0008257	Screen Shield, Side Mast
51	SHD0008266	Shield Support, LH
52	SHD0008305	Back Strip

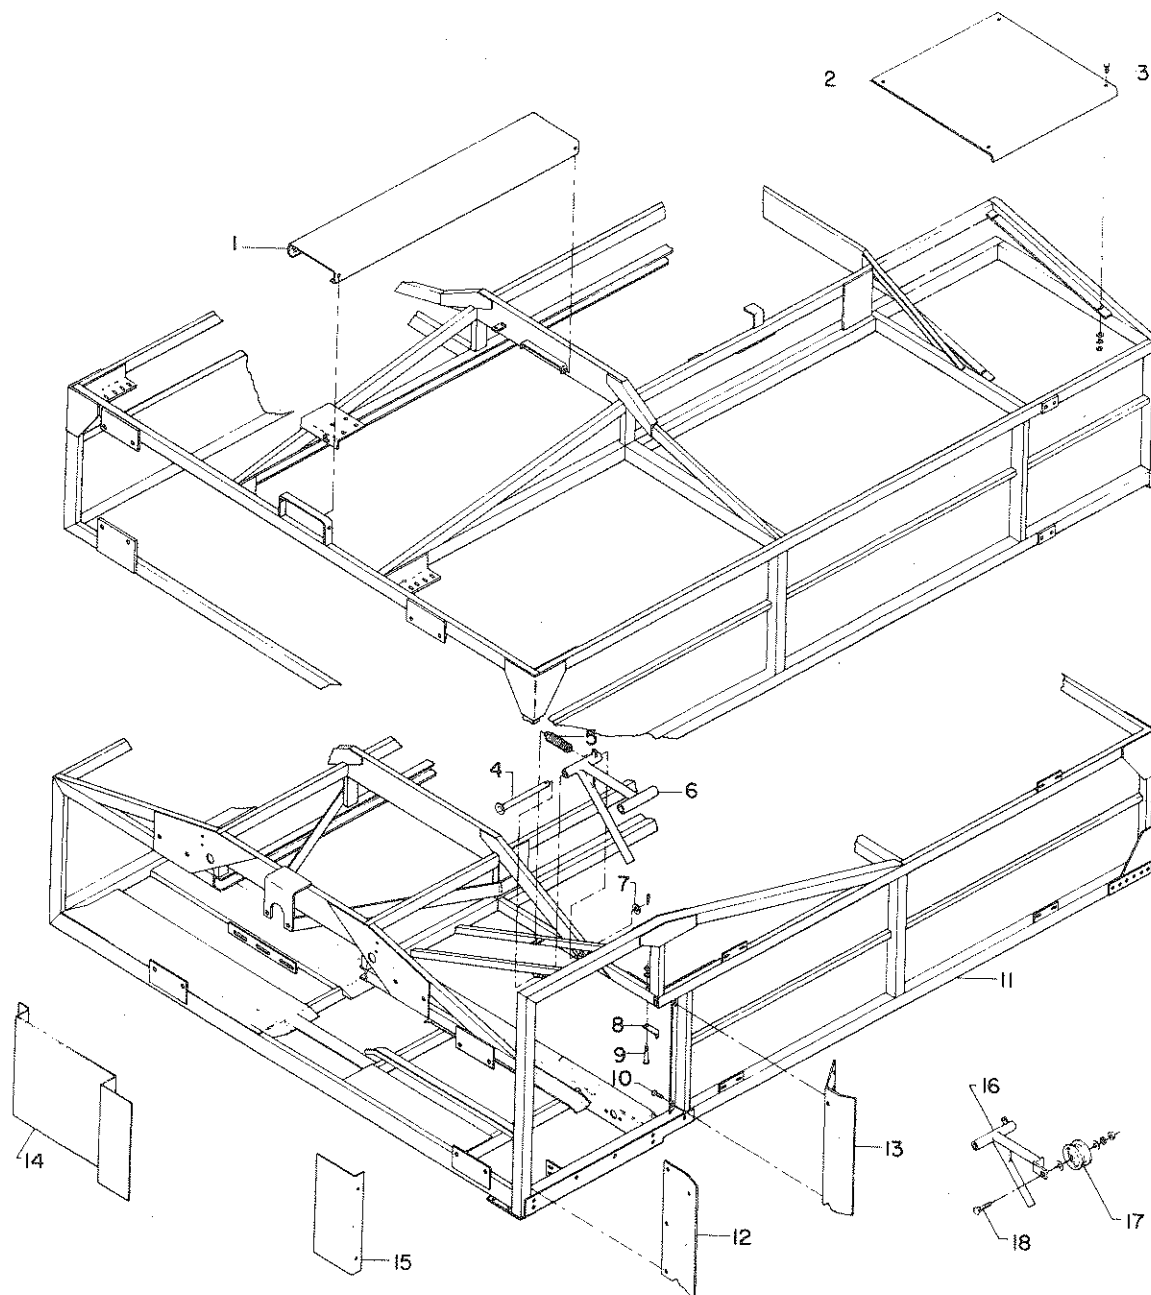


CAGE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	11-237	Shield, Pusher Cylinder	11	11-274	Cage Frame
2	11-238	Shield, Pusher	12	11-211	Bale Guide, Cage Extension, RH
3	SCC0000202	5/16" x 1" NCHT Cap Screw, 8 used	13	11-209	Bale Guide, Cage Extension, LH
4	11-102	Pin, Bale Kicker	FOLLOWING USED AFTER SERIAL NUMBER 00131		
5	F 0000747	Spring	14	SHD0008290	Rear Shield
6	11-103	Bale Kicker	15	SHD0008291	Front Shield
7	WCT0005000	1/2" Cut Washer, 6 used	16	CGF0008592	Bale Kicker
8	11-225	Shield Bracket	17	F 0000840	Idler Pulley
9	SCC0000309	3/8" x 2 3/4" NCHT Cap Screw	18	CRB5003000	1/2" x 3" Carriage Bolt
10	SBH0000303	3/8" x 1 1/4" Button Head Cap Screw, 6 used			

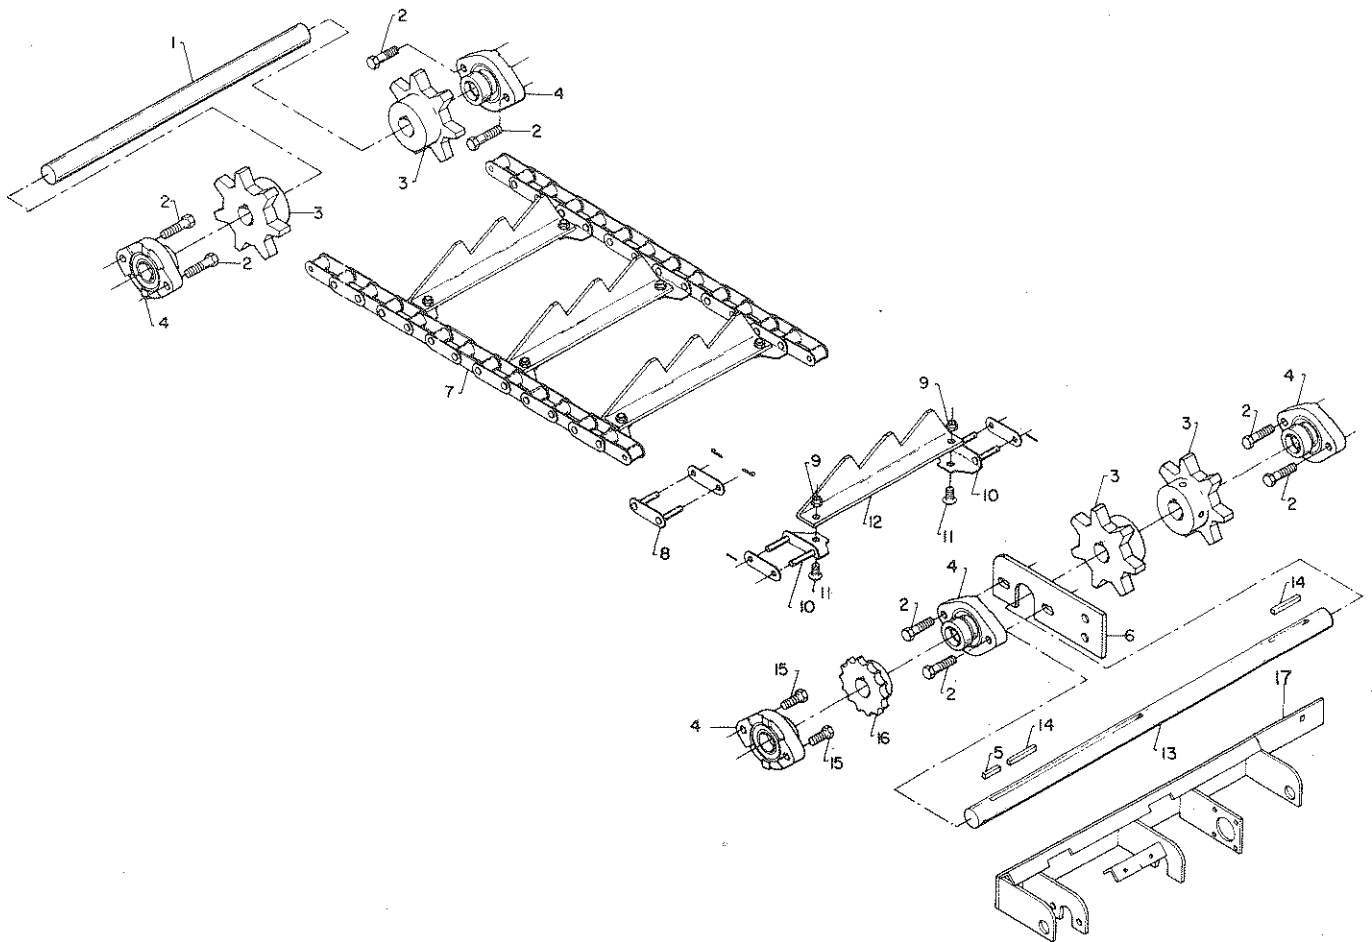


CAGE CONVEYOR


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	11-247	Idler Shaft	8	05-107	Connecting Link, No. 550
2	SCC0000304	3/8" x 1 1/2" NCHT Cap Screw, 10 used	9	NCX0003125	5/16" Flex Lock Nut, 24 used
3	05-121	Sprocket, 7 Tooth, 1" Bore, No. 550, 4 used	10	CNK0000550	Attachment Link, AH
4	02-104	Bearing, 1" Flange, FLCT 1", 4 used	11	SBH0000201	5/16" x 3/4" Button Head Sock Cap Screw, 24 used
5	ZZ 0000406	Key, 1/4" x 1"	12	SLT0007030	Slat Only
6	11-248	Center Bearing Mount	13	11-251	Drive Shaft
7	11-903	Chain, 60 Pitch Each Side	14	ZZ 0000407	Key, 1/4" x 1 1/2"
			15	SCC0000302	3/8" x 1" NCHT Cap Screw
			16	05-113	Sprocket, 50B14 x 1
			17	ELV0586500	Mounting Hinge, Rear Elevator

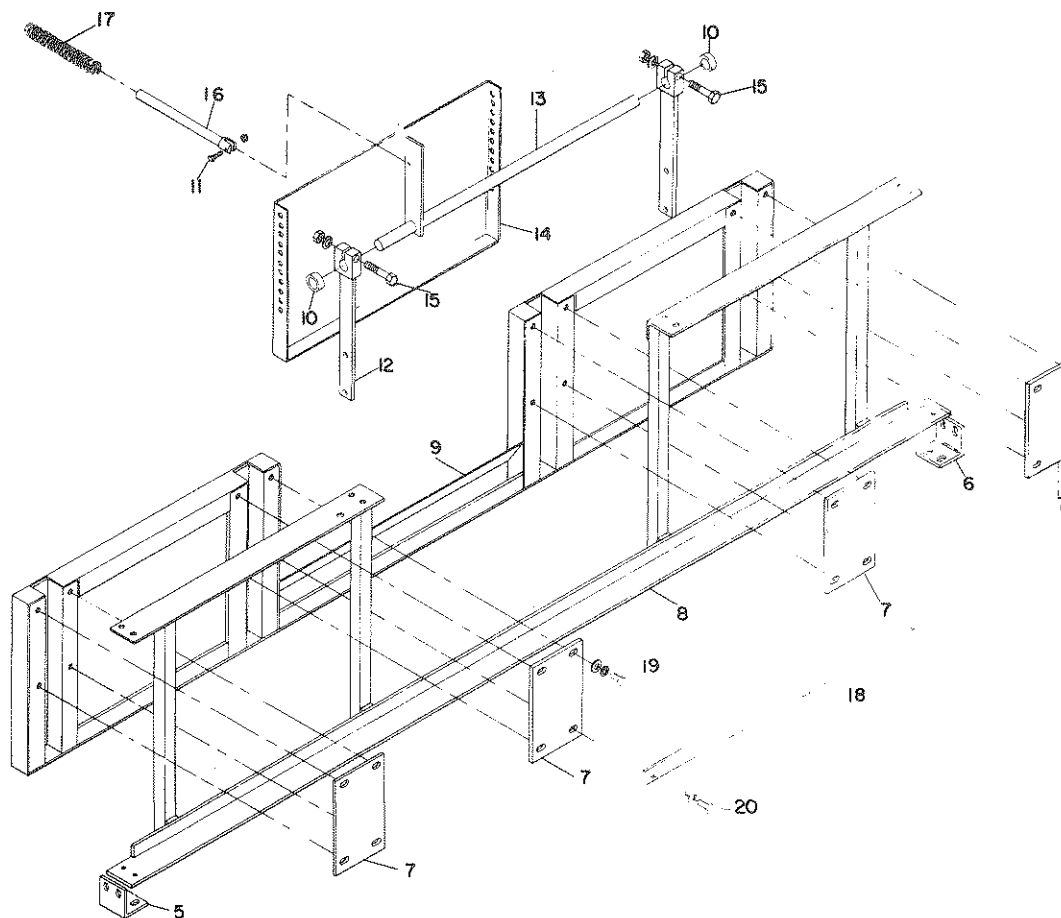

CAGE INDEX AND BALE SUPPORT

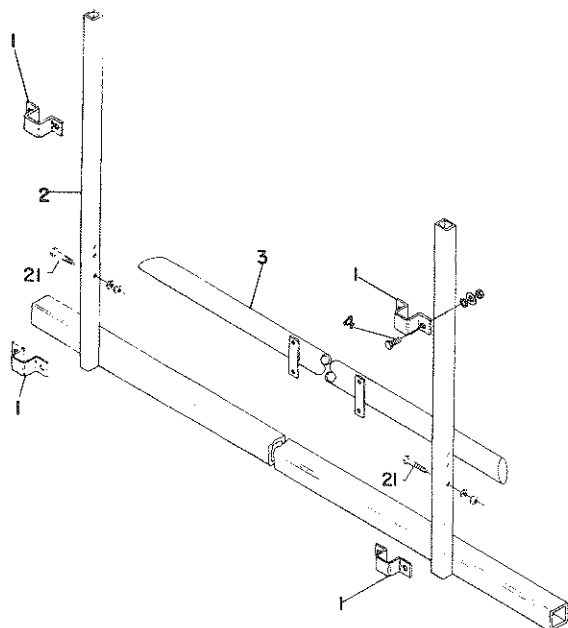


REF. NO.	PART NO.	DESCRIPTION
1	11-220	Bracket, Front Bale Support, 8 sued
2	SUP0006786	Front Bale Support, 2 used
3	11-128	Bale Guide Tube
4	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 16 used
5	11-276	Mount Angle, Bale Support, Front
6	11-275	Mount Angle, Bale Support, Rear
7	11-126	Guide Plate, Bale Support, 4 used
8	11-192	Mounting Bracket, Bale Support
9	11-124	Bale Support
10	F 0005121	1" Set Collar, 2 used
11	SCC0000104	1/4" x 1 1/2" NCHT Cap Screw, 2 used
12	11-218	Arm, Index Shaft, 2 used
13	11-246	Index Shaft
14	11-122	Skid, Index
15	SFC0000509	1/2" x 2 3/4" NFHT Cap Screw, 2 used
16	F 0001643	Rod, Index Valve Return
17	04-105	Spring, 461 Winks
18	11-270	Index Stop
19	SCC0000301	3/8" x 3/4" NCHT Cap Screw, 22 used
20	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 2 used
21	SCC0000207	5/16" x 2 1/4" NCHT Cap Screw, 4 used
	NCH0003125	5/16" NC Hex Nut, 4 used
	NCH0003725	3/8" Hex Nut (2 Used as Spacer)

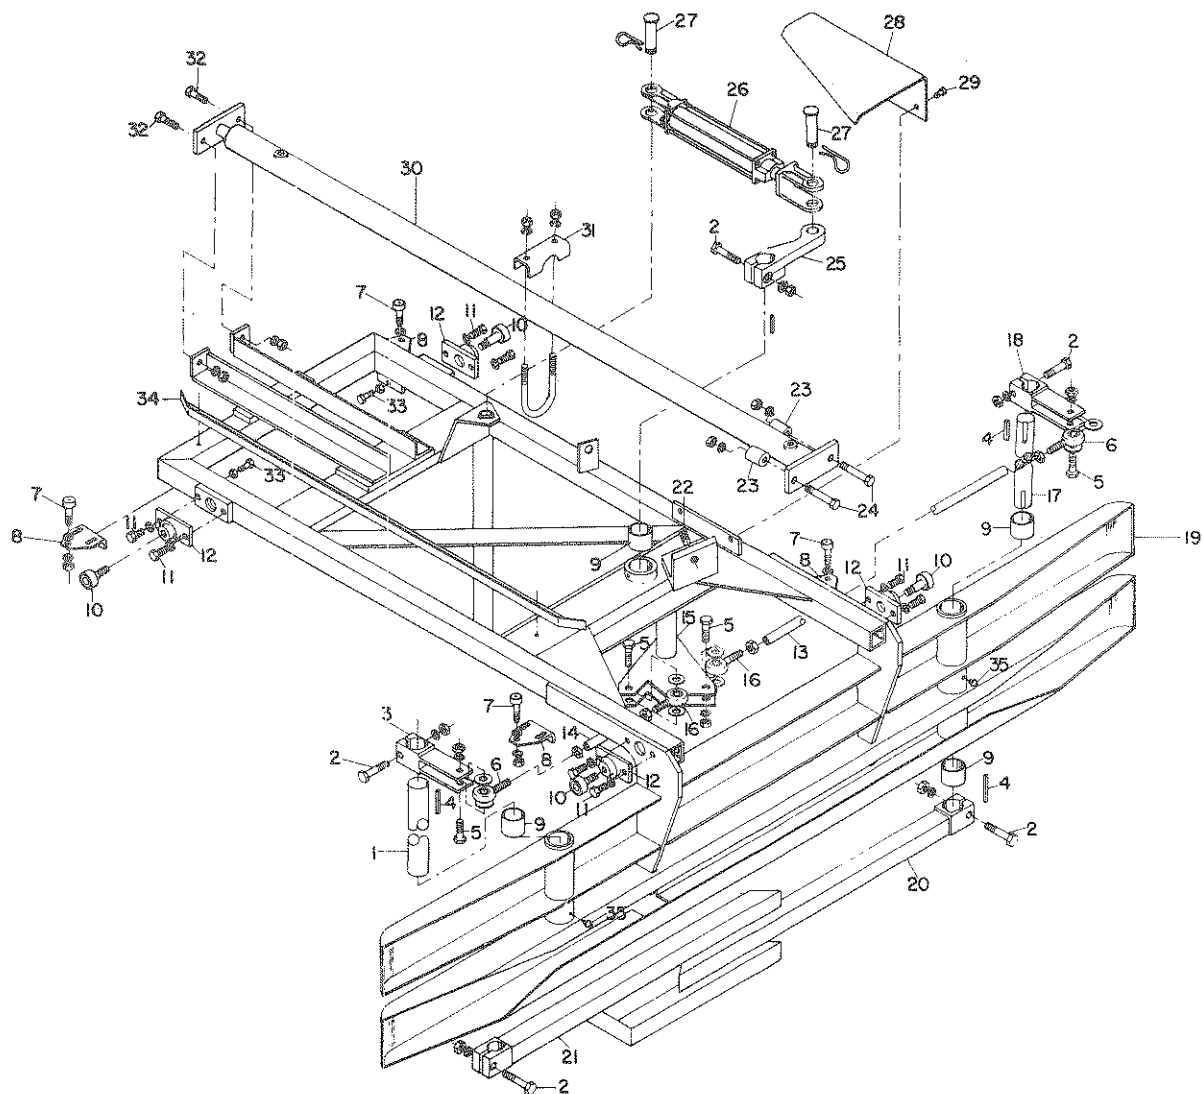


CAGE PUSHER

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	11-171	Shaft, Tie Arm, Rear	19	11-244	Pusher Frame
2	SCC0000509	½" x 2¾" NCHT Cap Screw, 5 used	20	11-169	Front Tie Arm
3	11-203	Tie Arm Lever, Rear	21	11-168	Rear Tie Arm
4	ZZ 0000413	3/8" x 1-7/8" Key, 5 used	22	SQS7501750	¾" x 1¼" Square Head Set Screw
5	SCC0000506	½" x 2" NCHT Cap Screw, 4 used	23	NFJ0007500	¾" NC Jam Nut
6	F 0005992	Rod End, ½" RH Male, TM-8N, 2 used	24	11-109	Spacer, 2 used
	NFJ0005000	½" NF Jam Nut	25	SCC0000514	½" x 4" NCHT Cap Screw, 2 used
7	F 0000822	Cam Follower, CF-1-S McGill, 4 used	26	11-183	Lever, Tie Cylinder
8	11-230	Mounting Plate, Guide Roller, 4 used	27	F 0006519	Cylinder, PMC 8408 Prince
9	02-106	Oilite Bushing, 1-3/8" x 1½" x 1½", AA1507 Kingwell	28	F 0006599	Seal Kit for 01-553
10	F 0007598	Cam Roller, 4 used	29	06-122	Pin with Keeper, 2 used
11	SCC0000302	3/8" x 1" NCHT Cap Screw, 16 used	30	11-180	Shield, Tie Cylinder
12	11-208	Roller Mount Plate, Pusher, 4 used		SCC0000301	3/8" x ¾" NCHT Cap Screw, 2 used
13	11-206	Connecting Rod, Front Tie Arm		01-552	Hydraulic Cylinder, LC2 x 65 SP Hypower
14	11-204	Connecting Rod, Rear Tie Arm		HYPAC0KL2	Repair Kit
15	11-205	Bell Crank			
16	02-153	Rod End, ½" LH Male, TML-8N, 2 used	31	06-145	Clamp, 2½" "U" Bolt, 3-4885 BK
	MFJ0050000	½" NF, LH Jam Nut	32	SCC0000505	½" x 1¼" NCHT Cap Screw, 2 used
17	11-175	Shaft, Front Tie Arm	33	SCC0000303	3/8" x 1¼" NCHT Cap Screw, 4 used
18	11-207	Lever, Front Tie Arm	34	11-245	Cam Pusher, Limit Switch
			35	ZZ 0000100	½" -28 Zerk Fitting, 3 used

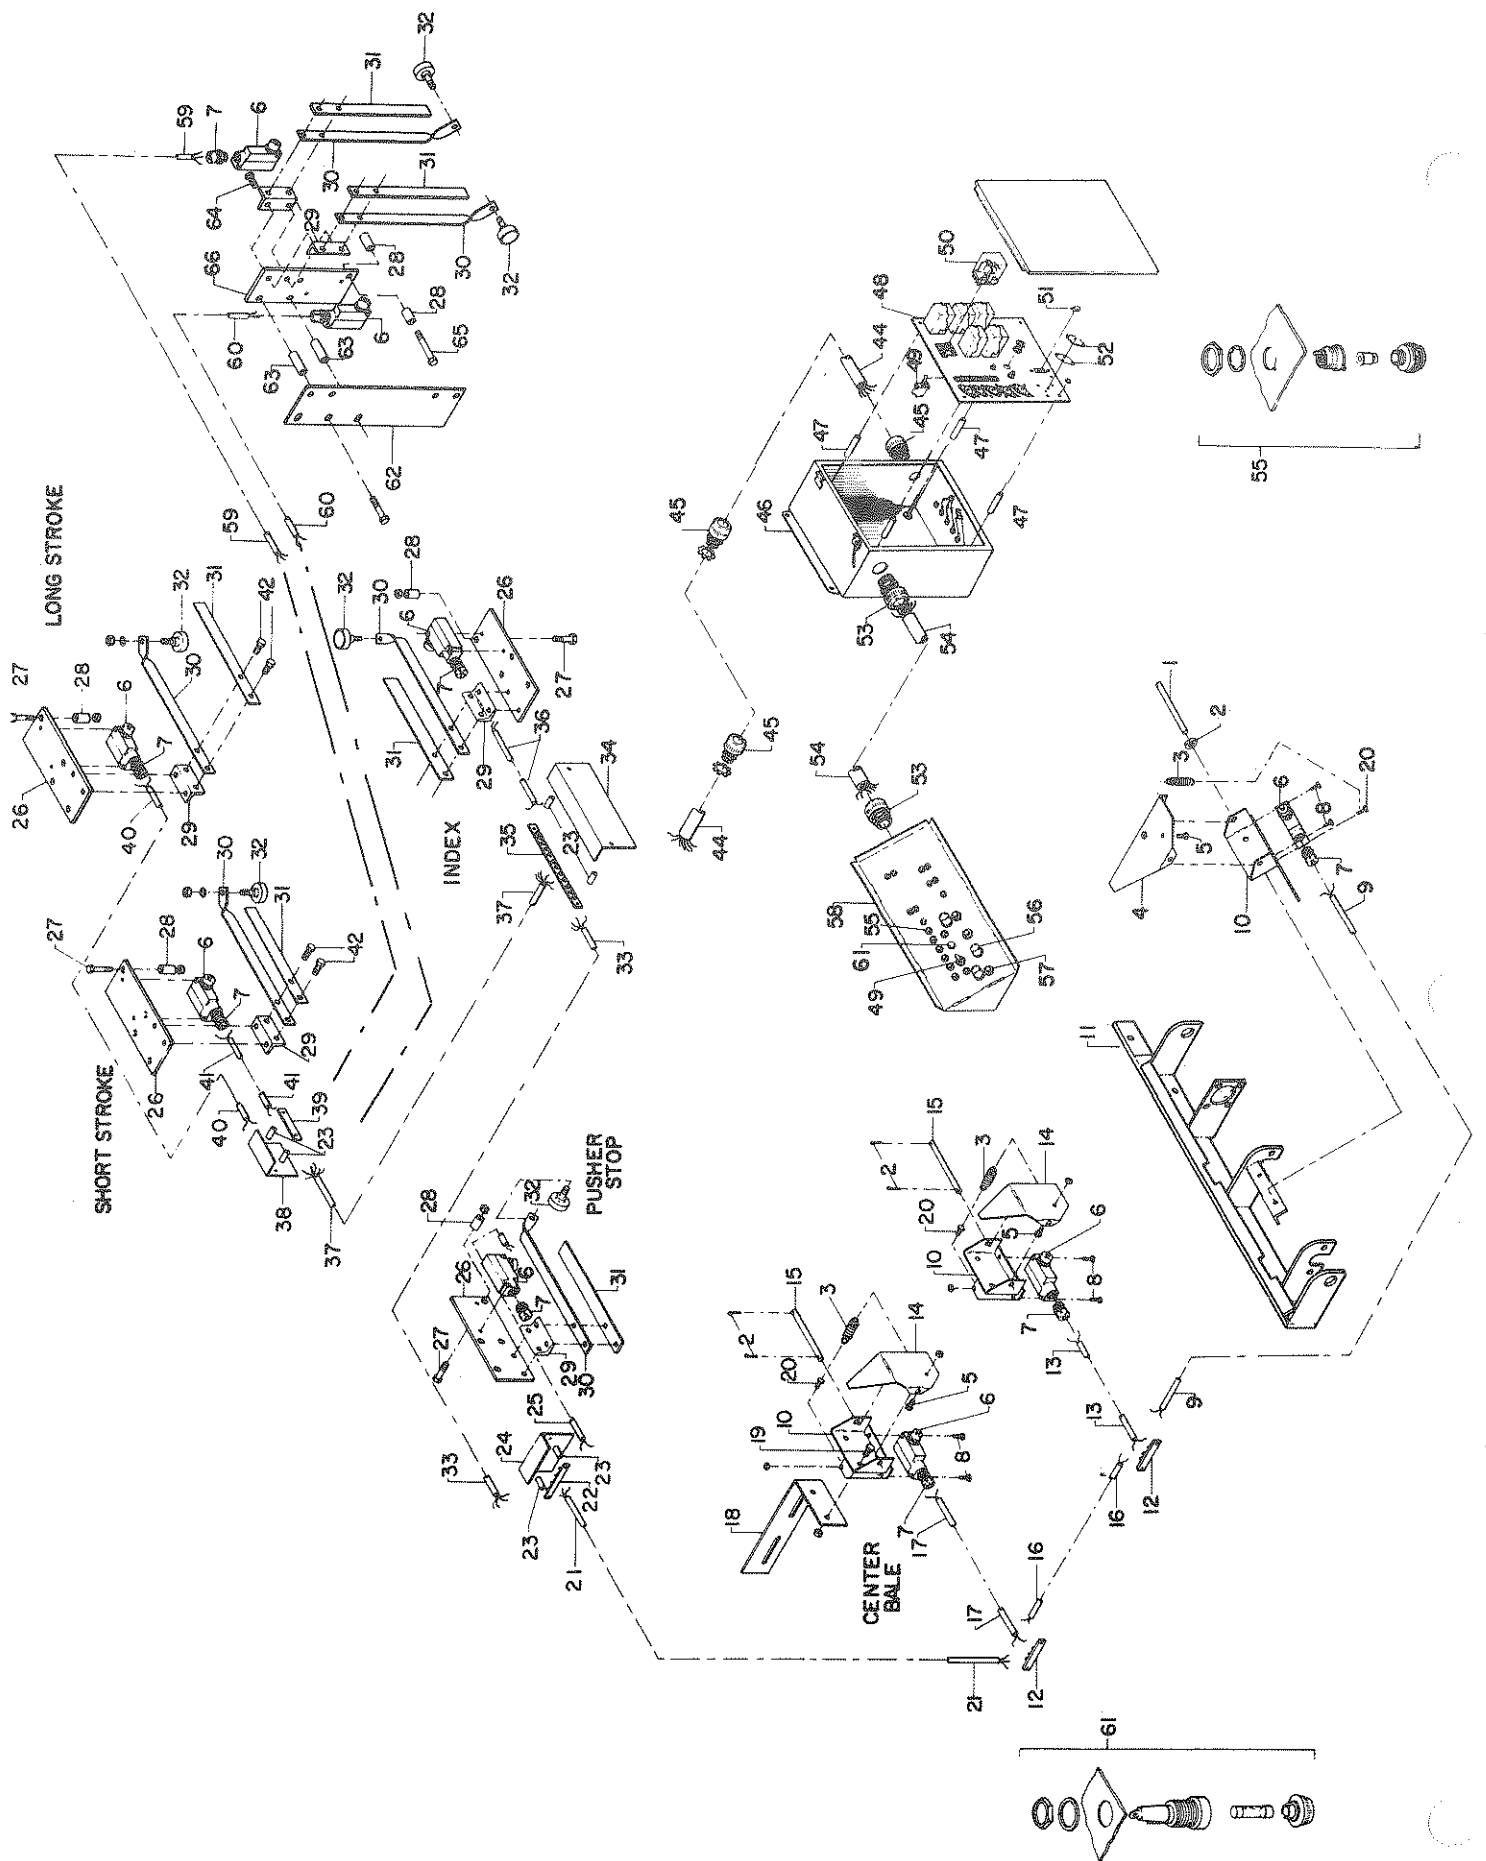


ELECTRIC CAGE CONTROLS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	11-256	Actuator Pivot Pin	36	03-172	2 Conductor Electric Cord, 36"
2	ZZ 0002016	3/8" Set Collar	37	03-170	6 Conductor Electric Cord, 60"
3	F 0000278	Spring, 3 used	38	11-269	Shield for 6 Post Terminal
4	11-257	Actuator, Limit Switch	39	03-161	Terminal Block, 6 Post, 4721-P6
5	SCC0000202	5/16" x 1" NCHT Cap Screw	40	03-173	2 Conductor Electric Cord, 40"
	NCH0003125	5/16" NC Hex Nut, 2 used	41	03-174	2 Conductor Electric Cord, 30"
6	03-158	Limit Switch, BZG1-2RN Micro, 9 used	42	SCC0000301	3/8" x 3/4" NCHT Cap Screw
	03-178	Repair Kit for 03-158 Limit Switch	43	SCC0000310	3/8" x 3" NCHT Cap Screw
7	03-177	Connector, 1/2", CGB196 C-H, 9 used	44	03-171	12 Conductor Electric Cord, 232"
8	SMR1031500	10-32 x 1 1/2" Machine Screw	45	03-179	Connector, 3/4" CGB296 C-H
9	03-163	2 Conductor Electric Cord, 44"	46	03-180	Box, with Cover, A-1210LP
10	11-258	Bracket, Limit Switch, 3 used	47	07-126	Spacer, 3/8" OD x 1 1/2" Tubing
11	ELV0586500	Mounting Hinge, Rear Elevator	48	03-900	Relay Chassis Complete
12	03-159	Terminal Block, 3 Post, 4721-P3, 2 used	49	03-181	Switch, 1TL1-3 Micro
13	03-164	2 Conductor Electric Cord, 17"	50	03-182	Relay, W388CPX-10 Magnecraft
14	11-259	Actuator, Limit Switch, 2 used	51	03-183	Integrated Circuit, MC140174CP
15	11-260	Actuator Pivot Pin, 2 used	52	03-184	Motorola
16	03-166	2 Conductor Electric Cord, 57"		03-185	Transistor, 2N6055
17	03-165	2 Conductor Electric Cord, 20"	53	03-186	Transistor Base, MK-15
18	11-261	Bracket Mount, Center Bale Switch	54	03-187	Connector, 1", CGB397 C-H
19	SCC0000302	3/8" x 1" NCHT Cap Screw	55	03-188	20 Conductor Electric Cord, 80"
20	SCC0000102	1/4" x 1" NCHT Cap Screw		03-189	Indicator Lamp Base, 162-8130-09-502
21	03-167	3 Conductor Electric Cord, 126"		03-190	Indicator Lamp Lens, 178-0331-500
22	03-160	Terminal Block, 4 Post, 4721-P4	56	F 0005237	Indicator Lamp Bulb, 330GE
23	11-262	Spacer	57	03-191	Switch
24	11-263	Shield for 4 Post Terminal	58	17-235	Switch, 1PB4 Micro
25	03-163	2 Conductor Electric Cord, 44"		03-901	Control Panel Only
26	11-264	Bracket, Limit Switch	59	03-175	Control Panel Complete
27	SCC0000306	3/8" x 2" NCHT Cap Screw	60	03-176	3 Conductor Electric Cord, 84"
28	11-265	Stop, Actuator	61	03-192	2 Conductor Electric Cord, 84"
29	11-266	Mounting Bracket, Limit Switch		03-193	Fuse Holder, HKP Buss
		Actuator	62	11-254	Fuse, AGC15
30	11-267	Actuator, Limit Switch	63	11-235	Mount, Bracket
31	11-268	Backing Plate, Limit Switch Actuator	64	SCC0000303	Spacer
32	BRG0010846	Roller	65	SCC0000311	3/8" x 1 1/4" NCHT Cap Screw
33	03-168	4 Conductor Electric Cord, 114"	66	11-255	3/8" x 3/4" NCHT Cap Screw
34	11-253	Shield for 12 Post Terminal			Mount, Limit Switch
35	03-162	Terminal Block 12 Post, 4721-P12			

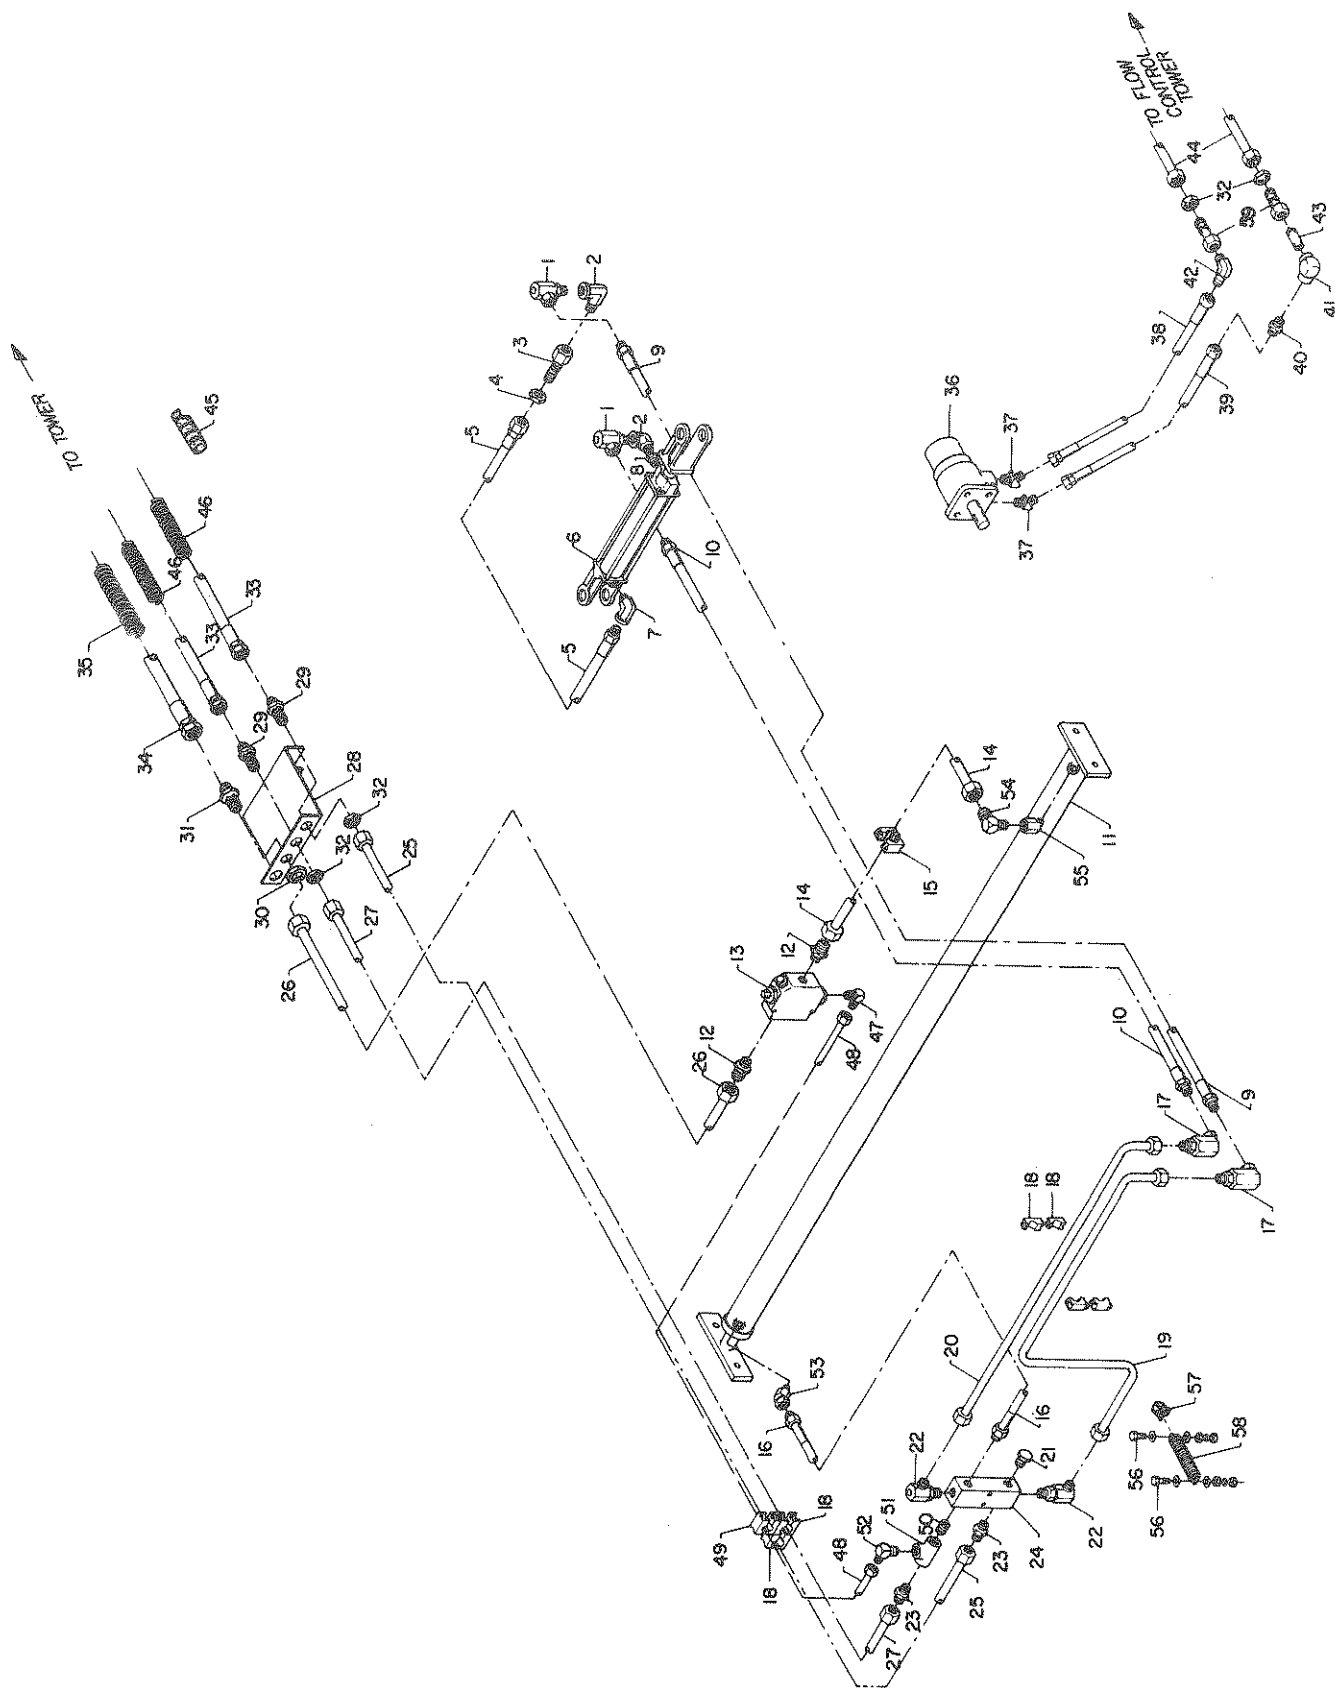


CAGE HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION
1	01-419	3/8" x 90° Rotating Swivel Fitting, 59UC x 06 x 06 x 06
	01-432	Seal Kit, 59SK06
2	HYD3409030	3/8" x 90° Steel Street Elbow
3	HYD5275040	1/2" Female Bulk Head Connector
4	HYD5924040	1/4" Bulk Head Nut
5	01-237	3/8" Hydraulic Hose, 28"
6	F 0006519	Hydraulic Cylinder, 2" x 8", RMC8408 Prince
	F 0006599	Seal Kit
7	HYD3409040	1/2" x 90° Steel Street Elbow
8	HYD3109043	1/2" x 3/8" Steel Bushing
9	01-209	3/8" Hydraulic Hose, 21"
10	01-238	3/8" Hydraulic Hose, 23"
11	01-552	Pusher Cylinder, LC2 x 65 SP Hypower
	HYPAC0KL2	Seal Kit for 01-552
12	HYD5205060	3/4" Straight Male Connector
13	VLVORD1075	Selector Valve, RD1075CBM Douglas
14	TBE0008586	3/4" Hydraulic Tube W/Sleeve & Nut
15	06-106	3/4" Tube Clamp
16	01-236	1/2" Hydraulic Hose, 26 1/2"
17	01-420	1/2" x 90° Rotating Swivel Fitting, 59UK-08-10-08 Imp.
	01-433	Seal Kit, 59SK-08 Imp.
18	F 0006629	5/8" Tube Clamp, 100-5/8 Gerard, 4 used
19	01-146	5/8" Hydraulic Tube, Swivel Arm, Lower, W/Nut & Sleeve
20	01-145	5/8" Hydraulic Tube, Swivel Arm, Upper
21	HYD3159040	1/2" Steel Hex Head Plug
22	01-418	1/2" x 90° Rotating Swivel Fitting, 59UA x 10 x 08 x 08
23	HYD5205050	5/8" Straight Male Connector
24	01-604	Hydraulic Swivel Block
25	TBE0006401	5/8" Hydraulic Tube W/Nut & Sleeve
26	TBE0008587	3/4" Hydraulic Tube W/Nut & Sleeve
27	TBE0008589	5/8" Hydraulic Tube W/Nut & Sleeve
28	MNT0008045	Hose Mount Plate
29	HYD5325050	5/8" Male Bulk Head Connector
30	HYD5924060	3/4" Bulk Head Nut
31	HYD5325060	3/4" Bulk Head Union, 11 used
32	HYD5924050	5/8" Bulk Head Nut
33	HOS0008476	1/2" Hydraulic Hose, 90", 2 used
34	HOS0008477	3/4" Hydraulic Hose, 90"
35	SPG0001264	Spring Guard, 12" Long for 3/4" Hose
36	MTR1001007	Hydraulic Motor, A5K Char-Lynn
37	HYD5355050	1/2" x 45° Steel Male Elbow, C5355 x 10 WH
38	HOS0008534	1/2" Hydraulic Hose, 33"
39	HOS0008535	1/2" Hydraulic Hose, 34"
40	HYD5205050	5/8" Straight Male Connector
41	HYD3509040	1/2" x 90° Steel Elbow
42	HYD5405050	5/8" x 90° Male Elbow
43	01-722	1/2" x 2" Extra Heavy Black Nipple
44	HOS0008458	1/2" Hydraulic Hose, 87"
45	07-124	Plastic Hose Wrap, 12 ft.
46	SPG0001263	Spring Guard, 12" Long for 1/2" Hose
47	HYD5405032	90° Male Elbow
48	TBE0008588	3/8" Hydraulic Tube W/Sleeve & Nut
49	CLP0038100	3/8" Tube Clamp, 3/8" -100 Girard
50	01-720	1/2" Close Extra Heavy Black Nipple
51	HYD3709040	1/2" Steel Tee
52	HYD5405034	3/8" x 90° Male Elbow
53	HYD9355044	1/2" x 45° Swivel Adaptor
54	HYD5405064	3/4" x 90° Male Elbow
55	HYD3359040	1/2" x 45° Steel Street Elbow
56	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw, 2 used
	WCT0003125	5/16" Flat Washer, 2 used
	NCH0003125	5/16" NC Hex Nut, 2 used
	WLK0003125	5/16" Lock Washer, 2 used
57	CLP121	Clamp
58	F 0000747	Spring
59	HYD5275050	5/8" Bulk Head Connector

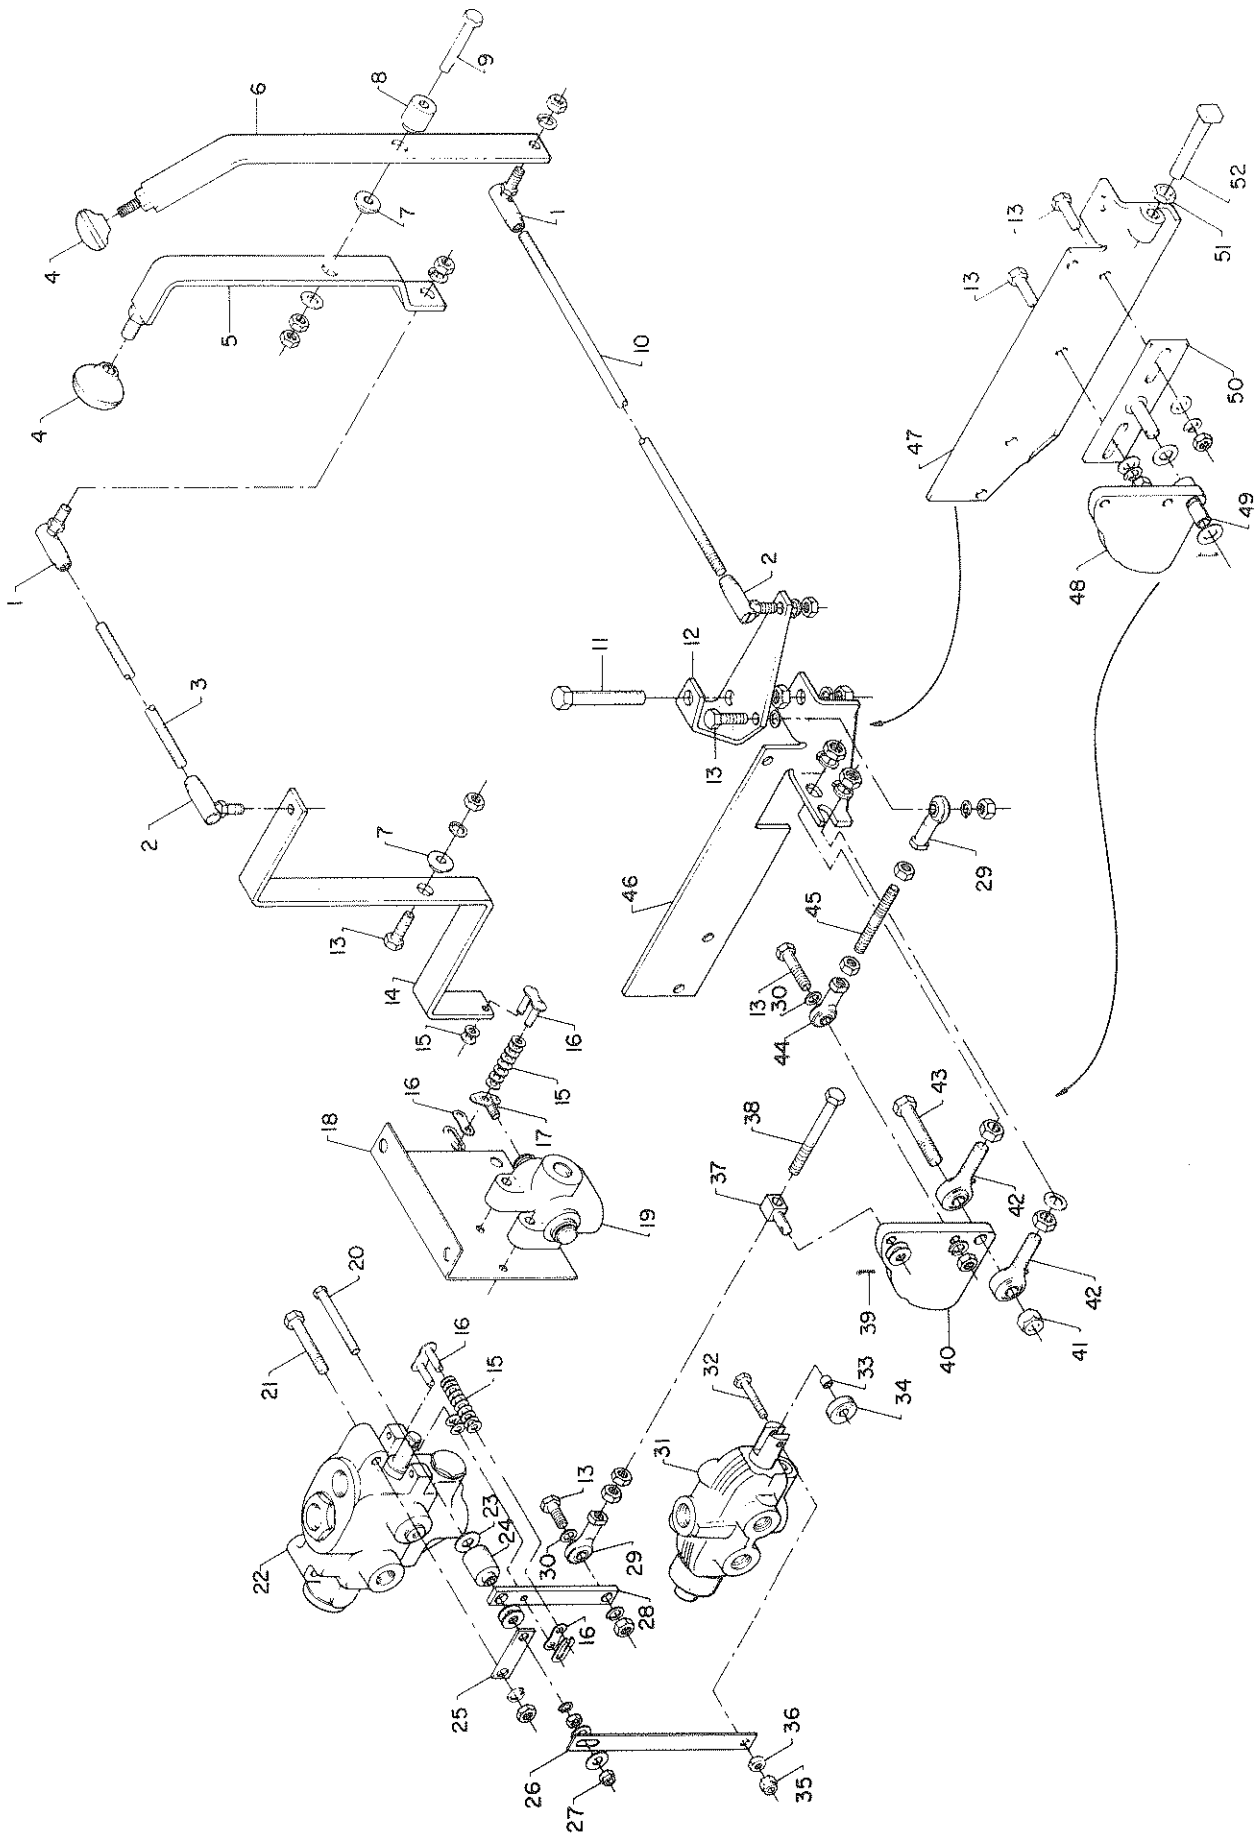


HYDRAULIC CONTROLS

REF. NO.	PART NO.	DESCRIPTION
1	BLJ0000109	Ball Joint, 3/8" NF, RH Thread
2	BLJ0001090	Ball Joint, 3/8" NF, LH Thread
3	ROD0008298	Control Rod, 3/8" x 14"
4	F 0005055	Knob, 2 used
5	LIEV0008000	Control Lever, Selector
6	LIEV0007999	Control Lever, Pickup
7	F 0000440	Ferrule, 2 used
8	07-120	Spacer
9	SCC0000309	3/8" x 2 3/4" NCHT Cap Screw
10	ROD0008050	Control Rod, Pickup Valve, 3/8" x 20"
11	SCC0000514	1/2" x 4" NCHT Cap Screw
12	BLC0007787	Bell Crank, Pickup Valves
13	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw
14	BLC0007998	Bell Crank, Selector Valve
15	WAS0000125	SAE Flat Washer, No. 12, 22 used
16	05-122	Connecting Link, RC60
17	11-184	Valve Spool Stud
18	BKT0007997	Bracket, Selector Valve
19	VLV0000008	Selector Valve, S-8 Gresen
20	SCC0000210	5/16" x 3" NCHT Cap Screw
21	SCC0000309	3/8" x 2 3/4" NCHT Cap Screw
22	01-520	Valve, SPYE-3 NRNH Gresen
23	WCT0003750	3/8" Flat Washer
24	SPC0008428	Ferrule
25	BRC0007888	Pivot Brace, Pickup Valve
26	LNK0007784	Alignment Link, Elevator Valve
27	NCE0003125	5/16" NC Elastic Stop Nut
28	LEV0007889	Operator Lever, Pickup Valve
29	ROD0000006	3/8" RH Female Rod End
30	WCT0003750	3/8" Flat Washer
31	01-507	Valve, 400 Gresen
32	SCC0000105	1/4" x 1 3/4" NCHT Cap Screw
33	BSH0000103	Bushing, 1/4" Tube, 1/4" Long
34	F 0000570	Bearing
35	NCE0002500	1/4" NC Elastic Stop Nut
36	NCJ0002500	1/4" NC Jam Nut
37	BLK0008049	Pickup Valve Slide Block
38	SCC0000313	3/8" x 3 3/4" NCHT Cap Screw
39	COT0000504	1/8" Cotter Key
40	CAM0007863	Cam, Pickup Valve, To Ser. No. 00124
41	NCE0005000	1/2" NC Elastic Stop Nut
42	F 0005992	1/2" Male Rod End, 2 used
43	SCC0000509	1/2" x 2 3/4" NCHT Cap Screw
44	ROD0000060	3/8" LH Rod End
45	ROD0008180	Rod, 3/8" x 3 3/4"
46	BLC0007786	Bell Crank Mount, To Ser. No. 00124
47	BLC0008386	Bell Crank Mount, From Ser. No. 00125
48	CAM0008394	Cam, Pickup Valve, From Ser. No. 00125
49	F 0001568	Bushing, From Ser. No. 00125
50	PLT0008387	Cam Mount Plate, From Serial No. 00125
51	NCJ0005000	1/2" NC Jam Nut, From Ser. No. 00125
52	SQS5003000	1/2" x 3" Square Head Set Screw, From Ser. No. 00125

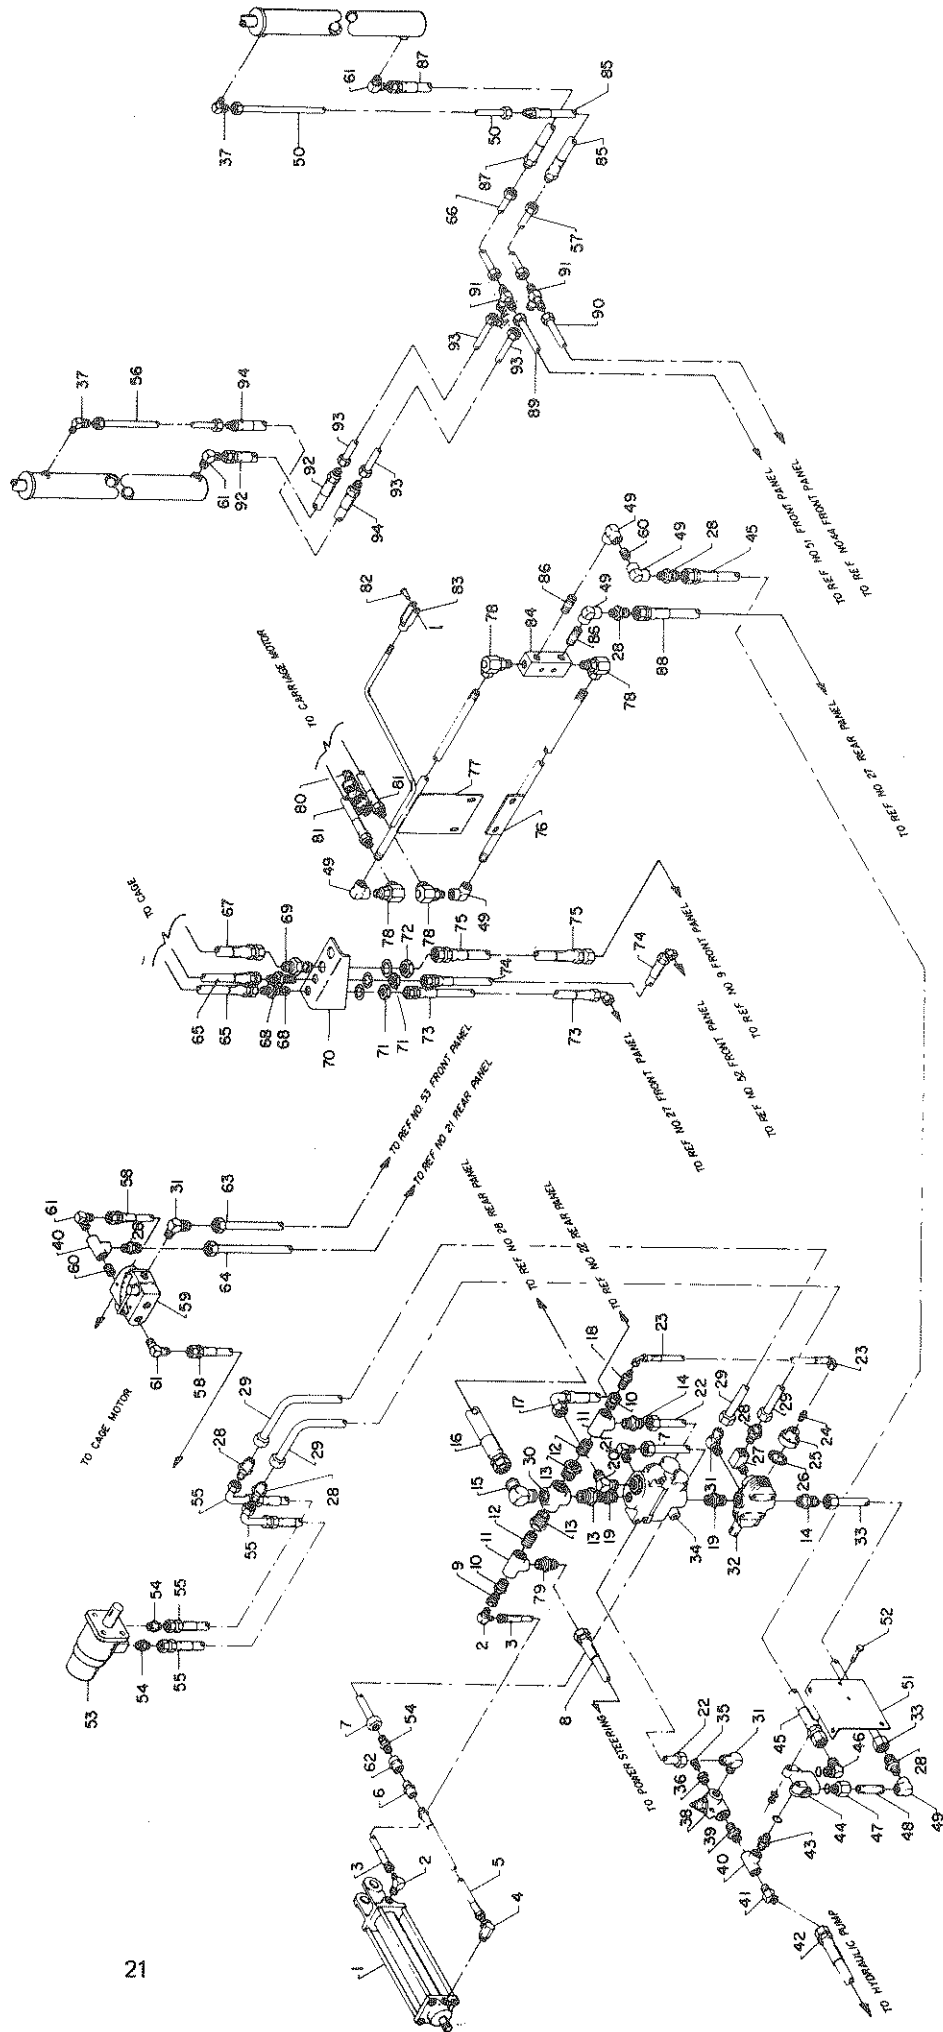


MAIN FRAME HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	01-569	Hydraulic Cylinder, 2½" x 8"	47	HYD3269044	½" Straight Thread "O" Ring Adapter
	01-570	Seal Kit	48	01-723	½" x 3" Extra Heavy Black Nipple
2	HYD5405023	¼" x 90° Male Elbow, 2 used	49	HYD3509040	½" x 90° Steel Elbow
3	HOS0008488	¼" Hydraulic Hose, 133"	50	TBE0006737	½" Hydraulic Tube
4	HYD9405033	3/8" x 90° Swivel Adapter	51	BKT0007997	Bracket, Selector Valve
5	01-211	3/8" Hydraulic Hose, 24"	52	SCC0000206	5/16" x 2" NCHT Cap Screw
6	01-315	½" Straight Swivel Restricted Adapter, 61SA08 x 08 Imp.	53	MTR1001007	Hydraulic Motor
7	TBE0008761	5/8" Hydraulic Tube		CHR0060023	Repair Kit
8	HOS0008483	½" Hydraulic Hose, 90"	54	HYD5205050	5/8" Straight Male Connector
9	HYD3109043	Steel Bushing, ½" x 3/8"	55	HOS0008457	½" Hydraulic Tube
10	HYD3109064	Steel Bushing, ¾" x ½"	56	TBE0006737	½" Hydraulic Tube
11	HYD3709060	¾" Steel Tee, 2 used	57	TBE0008760	5/8" Hydraulic Tube
12	PPE0000750	¾" Close Nipple, 2 used	58	HOS0008458	½" Hydraulic Hose, 87", 2 used
13	HYD3109076	Steel Bushing, 1" x ¾"	59	01-521	Flow Control Valve, FC51½ Brand
14	HYD5205060	¾" Straight Male Connector	60	01-720	½" Close Extra Heavy Black Nipple
15	HYD5405070	1" x 90° Steel Male Elbow	61	HYD5405050	5/8" x 90° Male Elbow
16	HOS0008471	1" Hydraulic Hose, 29½"	62	HYD3309040	½" Steel Coupling
17	HOS0008463	¾" Hydraulic Hose, 18"	63	TBE0008765	¾" Hydraulic Tube
18	HYD5205024	¼" Straight Male Connector	64	TBE0008764	¾" Hydraulic Tube
19	HYD3069060	Hex Head Nipple, ¾"	65	HOS0008476	½" Hydraulic Hose, 90", 2 used
20	HYD5405060	¾" x 90° Male Elbow	66	TBE0008760	5/8" Hydraulic Tube
21	HYD5405050	5/8" x 90° Male Elbow	67	HOS0008477	¾" Hydraulic Hose, 90"
22	TBE0008779	¾" Hydraulic Tube	68	HYD5325050	5/8" Bulk Head Union, 2 used
23	HOS0008272	¼" Hydraulic Hose, 12"	69	HYD5325060	¾" Bulk Head Union
24	HYD0048022	Brass Male Connector, ¼"	70	MNT0008046	Hose Mounting Plate
25	BON0008271	Valve Bonnet	71	HYD5924050	5/8" Bulk Head Nut, 2 used
26	GSK0008270	Gasket	72	HYD5924060	¾" Bulk Head Nut
27	HYD3409040	Steel Street Elbow, ½"	73	HOS0008469	½" Hydraulic Hose, 58"
28	HYD5205064	¾" Straight Male Connector	74	HOS0008470	½" Hydraulic Hose, 73"
29	TBE0008766	¾" Hydraulic Tube, 2 used	75	HOS0008472	¾" Hydraulic Hose, 44"
30	HYD3959060	¾" Steel Cross	76	01-609	Swivel Arm, Lower
31	HYD5405064	¾" Straight Male Connector	77	01-632	Swivel Arm, Upper
32	01-507	Index Valve, 400 Gresen	78	01-407	½" x 90° Swivel Fitting, 59UC-08 x 08 x 08 Imp.
33	TBE0008780	¾" Hydraulic Tube	79	HYD5205065	¾" Straight Male Connector
34	01-520	Valve, SPYE-3-NR-NH Gresen	80	07-125	Plastic Hose Wrap, 10 ft.
35	HYD3159020	Steel Hex Head Plug, ¼"	81	HOS0008483	½" Hydraulic Hose, 90", 2 used
36	HYD3109042	Steel Bushing, ½" x ¼"	82	06-126	Clevis Pin, 3/8"
37	HYD5405042	½" x 90° Male Elbow	83	06-125	3/8" Clevis
38	01-513	Relief Valve, RD11D	84	01-608	Swivel Block
39	HYD3069040	Hex Nipple, ½"	85	HOS0008580	½" Hydraulic Hose, 21"
40	HYD3709040	Steel Tee, ½"	86	01-722	½" x 2" Extra Heavy Black Nipple, 2 used
41	HYD5355064	¾" x 45° Male Elbow	87	HOS0008480	½" Hydraulic Hose, 21"
42	HOS0008482	¾" Hydraulic Hose, JD, 83"	88	HOS0008489	¾" Hydraulic Hose, 14¾"
	HOS0008464	¾" Hydraulic Hose, AC, 43"	89	TBE0008762	5/8" Hydraulic Tube
43	HYD0000811	½" "O" Ring Adapter Fitting, 6401-8-8	90	TBE0008763	5/8" Hydraulic Tube
44	VLV0000008	Selector Valve, S-8 Gresen	91	HYD5705050	5/8" Tee Union
45	HOS0008490	¾" Hydraulic Hose, 81"	92	HOS0008479	½" Hydraulic Hose, 43"
46	HYD5515064	¾" x 90° "O" Ring Elbow	93	TBE0008759	5/8" Hydraulic Tube
			94	HOS0008478	½" Hydraulic Hose, 43"

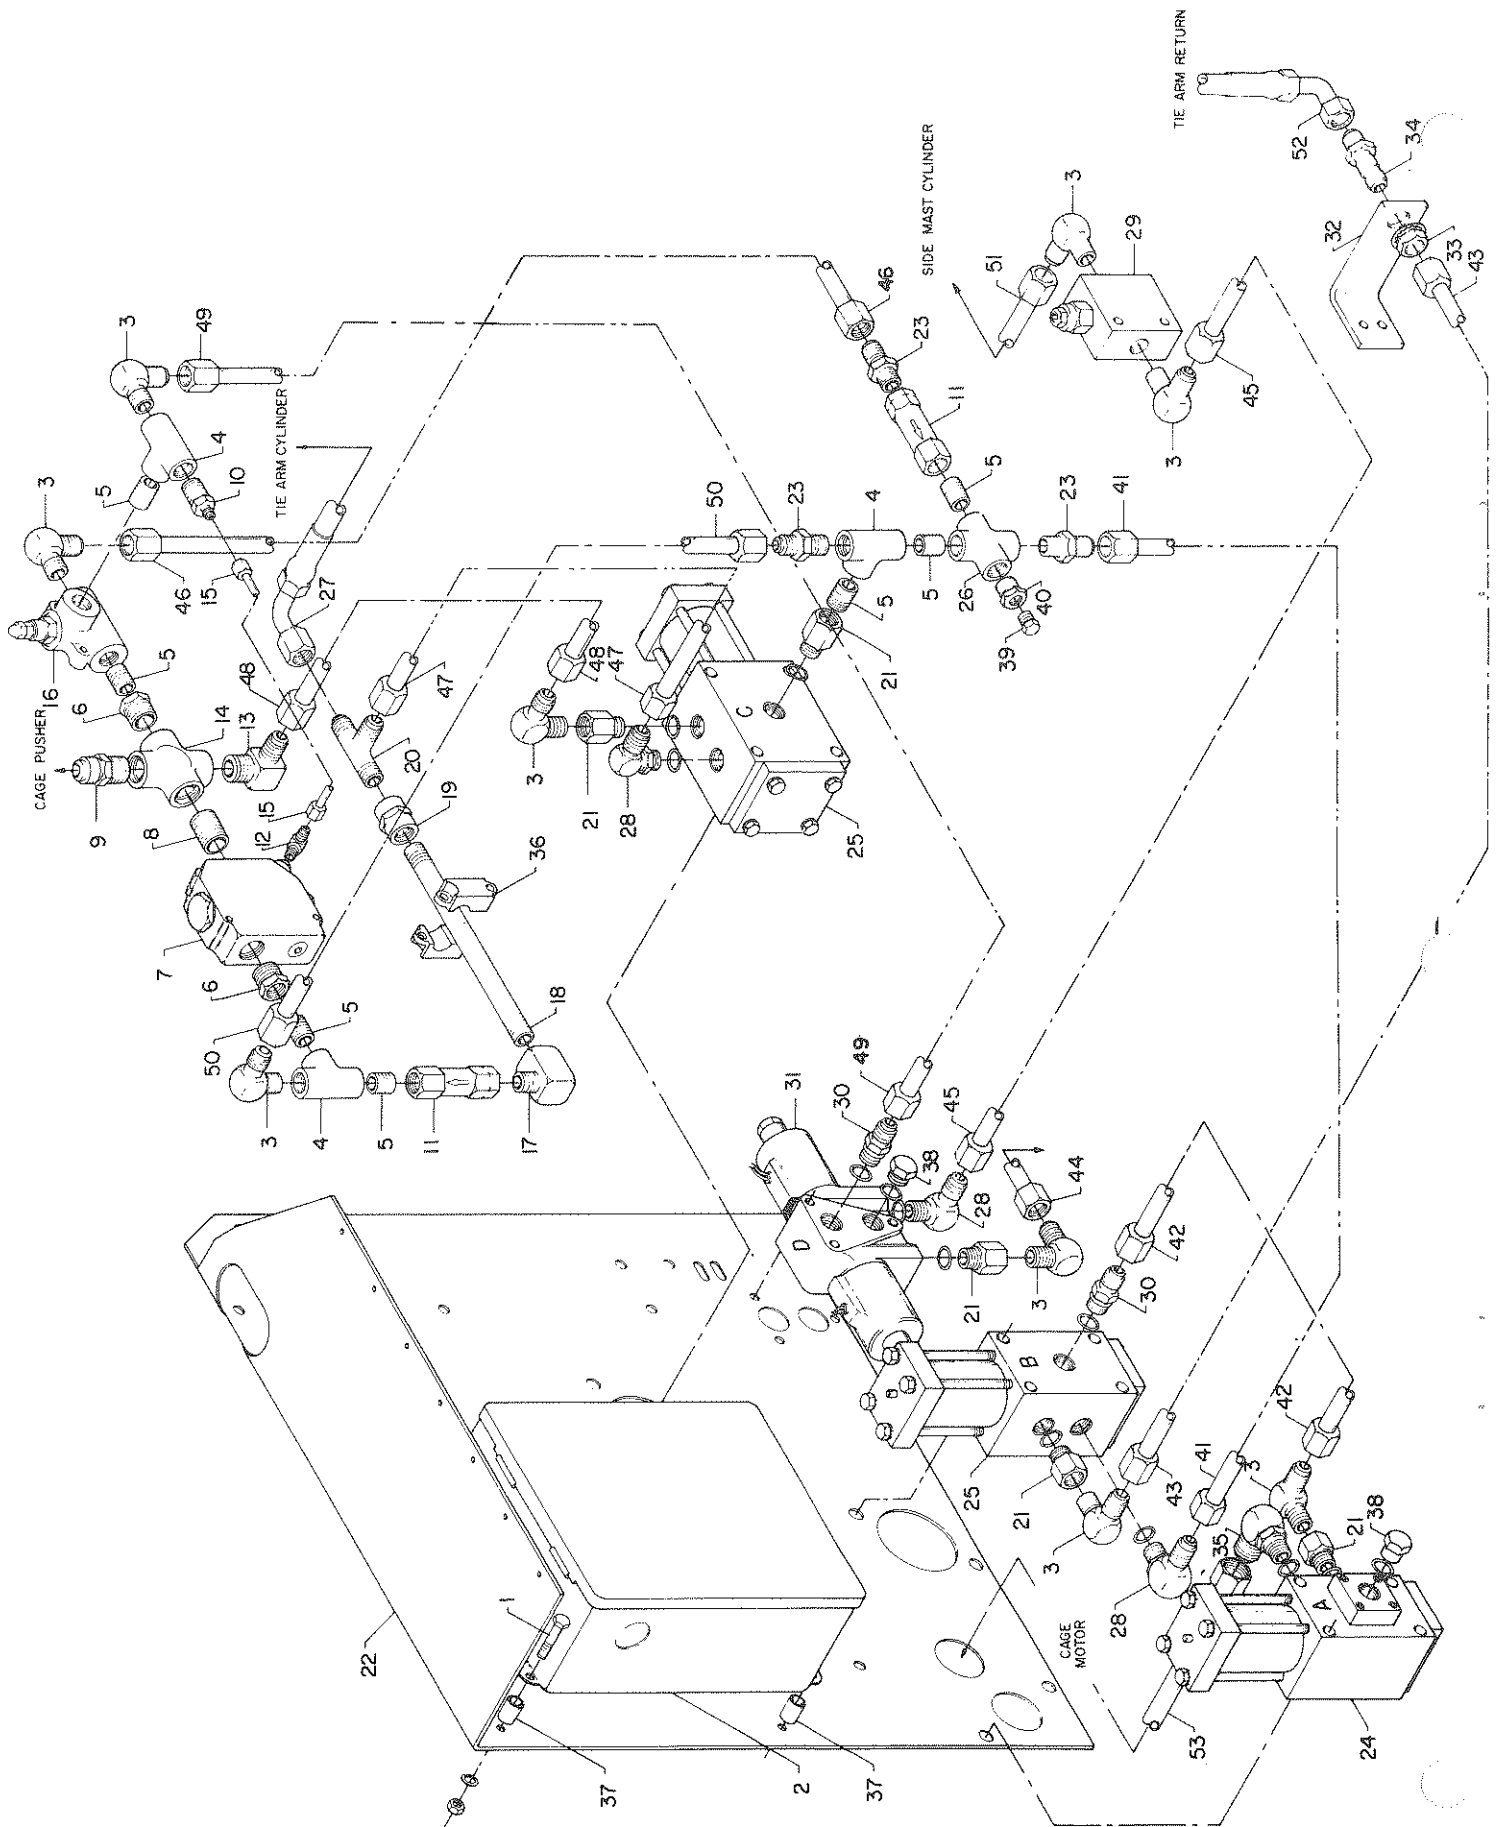


FRONT CONTROL PANEL HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION
1	SCC0000205	5/16" x 1 1/4" NCHT Cap Screw, 4 used
2	03-180	Box with Cover
3	HYD5405050	5/8" x 90° Male Elbow, 9 used
4	HYD3709040	1/2" Steel Tee, 3 used
5	01-720	1/2" Close Extra Heavy Black Nipple, 7 used
6	HYD3109064	Steel Bushing, 3/4" x 1/2", 2 used
7	VLVORD1075	Sequence Valve, RD1075 Douglas
8	PPE7500200	3/4" x 2" Extra Heavy Black Nipple
9	HYD5205060	1/4" Straight Male Connector
10	HYD5205024	1/4" Straight Male Connector
11	F 0006657	1/2" Check Valve, 2 used
12	HYD5405022	1/4" x 90° Male Elbow
13	HYD5405056	5/8" x 90° Male Elbow
14	HYD3959060	3/4" Steel Cross
15	TBE0008502	1/4" Hydraulic Tube, Sequence Valve
16	01-514	Relief Valve, 1500 PSI
17	HYD3409040	1/2" x 90° Steel Street Elbow
18	PPE5001100	1/2" x 11" Extra Heavy Black Pipe
19	HYD3309040	1/2" Steel Coupling
20	HYD5755054	5/8" x 1/2" Male Run Tee
21	HYD3269044	1/2" Straight Thread "O" Ring Adapter
22	PLT0007989	Valve Mounting Plate
23	HYD5205050	5/8" Straight Male Connector, 2 used
24	VLV4951184	Solenoid Valve
	ELC0015019	Solenoid Coil Only
25	VLV495T819	Solenoid Valve
	ELC0015019	Solenoid Coil Only
26	HYD3959040	1/2" Steel Cross
27	HOS0008469	1/2" Hydraulic Hose, 58"
28	HYD5515054	5/8" x 90° Straight "O" Ring Elbow
29	VLV0000002	Counter Balance Valve
30	HYD5315054	5/8" Straight Thread "O" Ring Connector
31	VLV0004813	Double Solenoid Valve, 4813-12VDC
	03-142	Solenoid Coil Only
32	BKT0007992	Tube Support
33	HYD5924050	5/8" Bulk Head Nut
34	HYD5325050	5/8" Bulk Head Union
35	HYD5515064	3/4" x 90° Straight Thread "O" Ring Elbow
36	F 0006628	1" Tube Clamp, 2 Piece
37	SPC0009069	Spacer, 4 used
38	HYD7230040	1/2" Straight Thread "O" Ring Plug
39	HYD3159020	1/4" Hex Head Plug
40	HYD3109042	Steel Bushing, 1/2" x 1/4"
41	TBE0008497	5/8" Hydraulic Tube, Pusher Valve to Tie Arm Valve
42	TBE0008493	5/8" Hydraulic Tube, Pusher Valve
43	TBE0008499	5/8" Hydraulic Tube, Pusher Return
44	TBE0008763	5/8" Hydraulic Tube
45	TBE0008495	5/8" Hydraulic Tube, Side Mast Valve to Balance Valve
46	TBE0008498	5/8" Hydraulic Tube, Cross on Tie Arm Valve to Relief Valve
47	TBE0008494	5/8" Hydraulic Tube, Tie Arm
48	TBE0008496	5/8" Hydraulic Tube, Tie Arm
49	TBE0008501	5/8" Hydraulic Tube, Side Mast Valve
50	TBE0008500	5/8" Hydraulic Tube, Sequence Valve
51	TBE0008762	5/8" Hydraulic Tube
52	HOS0008470	1/2" Hydraulic Hose, 73"
53	TBE0008765	3/4" Hydraulic Tube

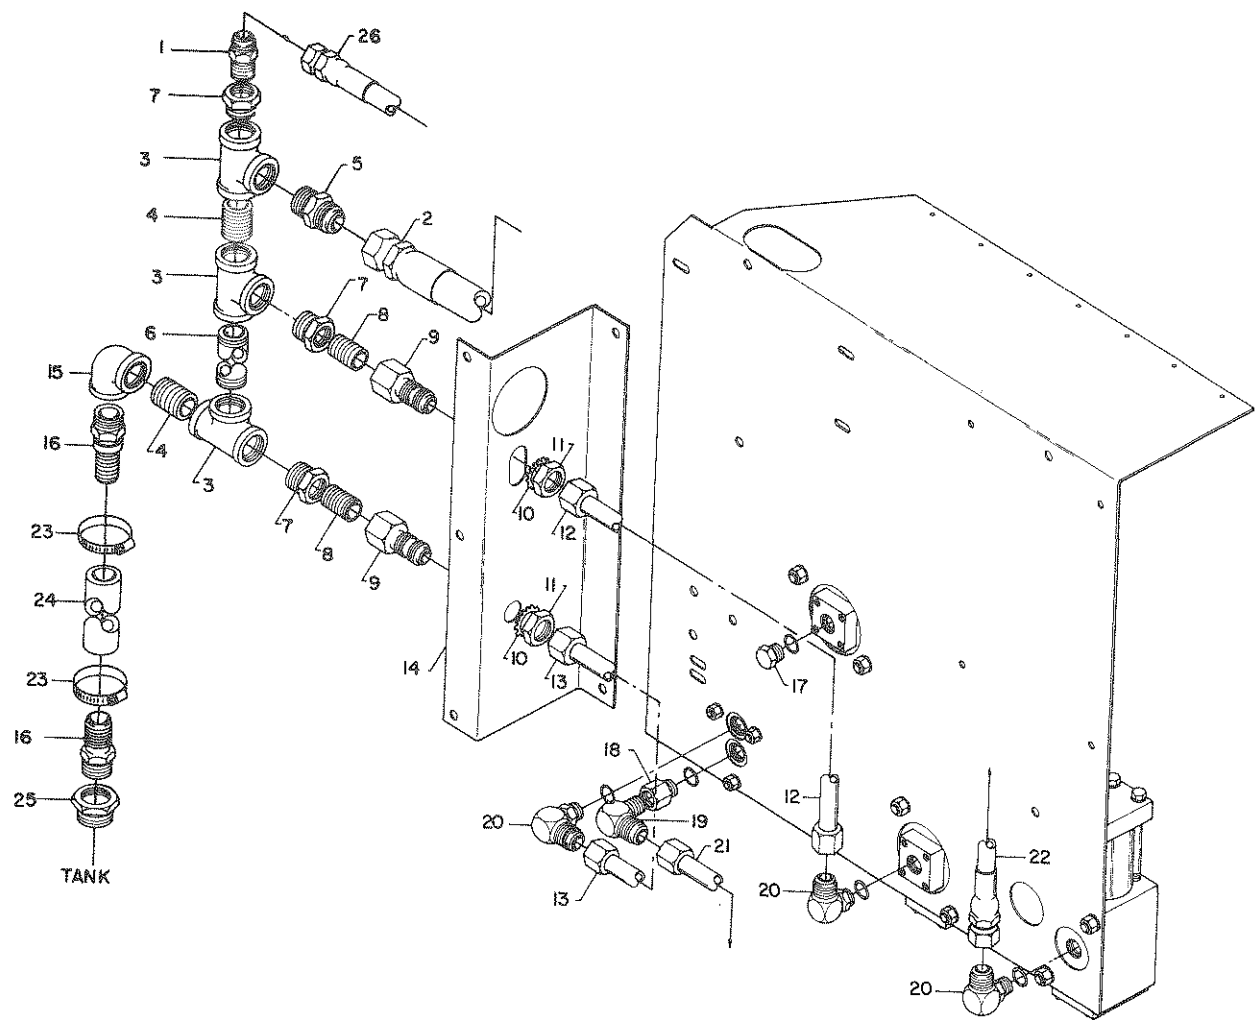


REAR CONTROL PANEL HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	HYD5205060	¾" Straight Male Connector	14	PLT0007995	Rear Valve Plate Support
2	HOS0008471	1" Hydraulic Hose, 29½"	15	PPE0100900	1" x 90° Standard Black Elbow
3	PPE0041000	1" Standard Black Tee	16	HYD4404070	1" Hose Nipple
4	PPE0001000	1" Close Standard Black Nipple	17	HYD7230040	½" Straight Thread "O" Ring Plug
5	HYD5205070	1" Straight Male Connector	18	HYD3269044	½" Straight Thread "O" Ring Adapter
6	PPE1000600	1" x 6" Standard Black Nipple	19	HYD5405064	90° Male Elbow
7	HYD3109076	Steel Bushing, 1" x ¾"	20	HYD5515064	¾" x 90° Straight Thread "O" Ring Elbow
8	PPE0000750	¾" Close Standard Black Nipple	21	TBE0008766	¾" Hydraulic Tube
9	HYD5275060	¾" Female Bulkhead Connector	22	HOS0008463	¾" Hydraulic Hose, 18"
10	WES0011250	1-1/8" External Star Lock Washer	23	06-121	Hose Clamp
11	HYD5924060	¾" Bulkhead Nut	24	HOS0008487	1" Return Hose, 19"
12	TBE0008614	¾" Hydraulic Tube, Return Line	25	PPE1251001	Bushing, 1¼" x 1"
13	TBE0008615	¾" Hydraulic Tube, Return Line	26	HOS0008489	¾" Hydraulic Hose, 14¾"

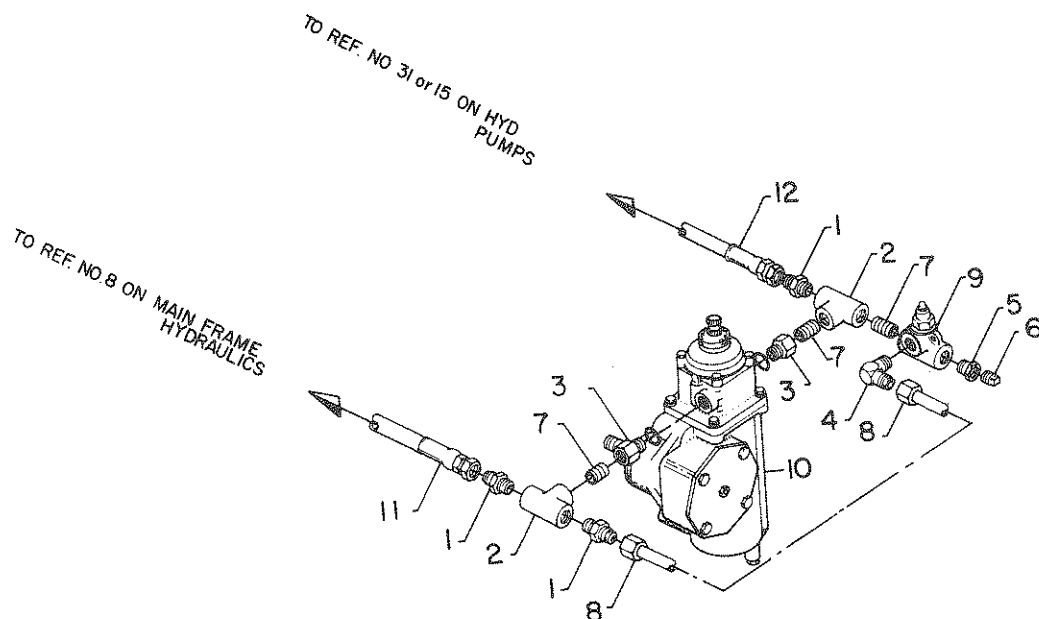


STEERING HYDRAULICS

REF. NO.	PART NO.	DESCRIPTION
1	HYD5205050	5/8" Straight Male Connector
2	HYD3709040	1/2" Steel Tee
3	HYD3269044	1/2" Straight Thread "O" Ring Adapter
4	HYD5405050	5/8" x 90° Male Elbow
5	HYD3109042	Steel Bushing, 1/2" x 1/4"
6	HYD3159020	Square Head Plug, 1/4"
7	01-720	1/2" Close Extra Heavy Black Nipple
8	TBE0008628	5/8" Hydraulic Tube
9	01-514	Relief Valve
10	17-904	Steering Gear Assembly
	17-238	Seal Kit for 17-904
11	HOS0008483	1/2" Hydraulic Hose, 90"
12	HOS0008484	1/2" Hydraulic Hose, AC, 27"
	HOS0008481	1/2" Hydraulic Hose, JD, 49"

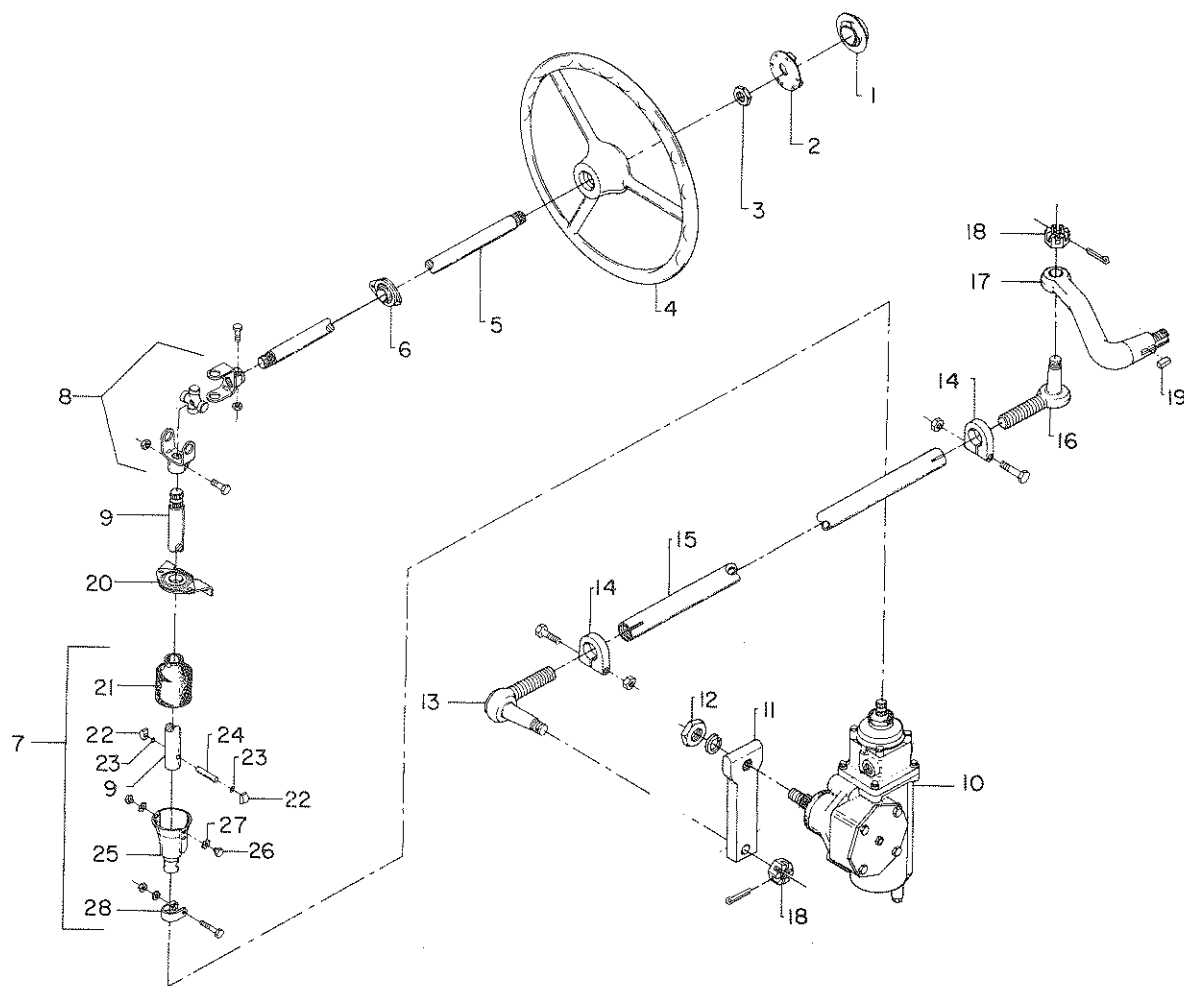


STEERING ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 0005031	Steering Column Cap	12	NFH0010000	1" NF Hex Nut
2	F 0005032	Steering Column Cap Holder	13	17-231	Rod End, RH, 5346R
3	06-124	Nut, Steering Column, 13/16" - 20	14	06-147	Clamp
4	F 0006292	Steering Wheel	15	17-226	Drag Link
5	17-199	Steering Shaft, Upper, 08 9138 2500 TRW	16	17-232	Rod End, LH, 5346L
6	02-157	Bearing, 7/8" Flange, FLCT Fafnir	17	19-354	Steering Arm, 3133P1030
7	17-240	Flexible Coupling and Shaft Assembly, 403723-A32-1712	18	17-218	Castillated Nut, 7/8" - 14
8	17-204	Universal Assembly, 403708-A1 TRW	19	19-355	Key, 16 x 204
	17-211	Universal Cross Kit	20	02-158	Pillow Block Bearing, 7/8" PBS Fafnir
9	17-202	Steering Shaft, Lower	21	17-213	Seal, 032313 TRW
10	17-904	Steering Gear Assembly, HF 64070 TRW	22	17-214	Button, 055028 TRW
	17-238	Seal Kit for 17-904 Gear	23	17-215	Washer, 9/64" x 3/8", 02 8308 TRW
11	17-233	Steering Arm, 442112-02 TRW	24	17-206	Pin, 040071 TRW
			25	17-229	Shell Assembly, 403726-A1 TRW
			26	SMS0000815	Screw - 1/4" -28 x 3/8" Hex Head
			27	WLK0002500	1/4" Lock Washer
			28	17-230	Clamp Assembly, 475183-A1 TRW

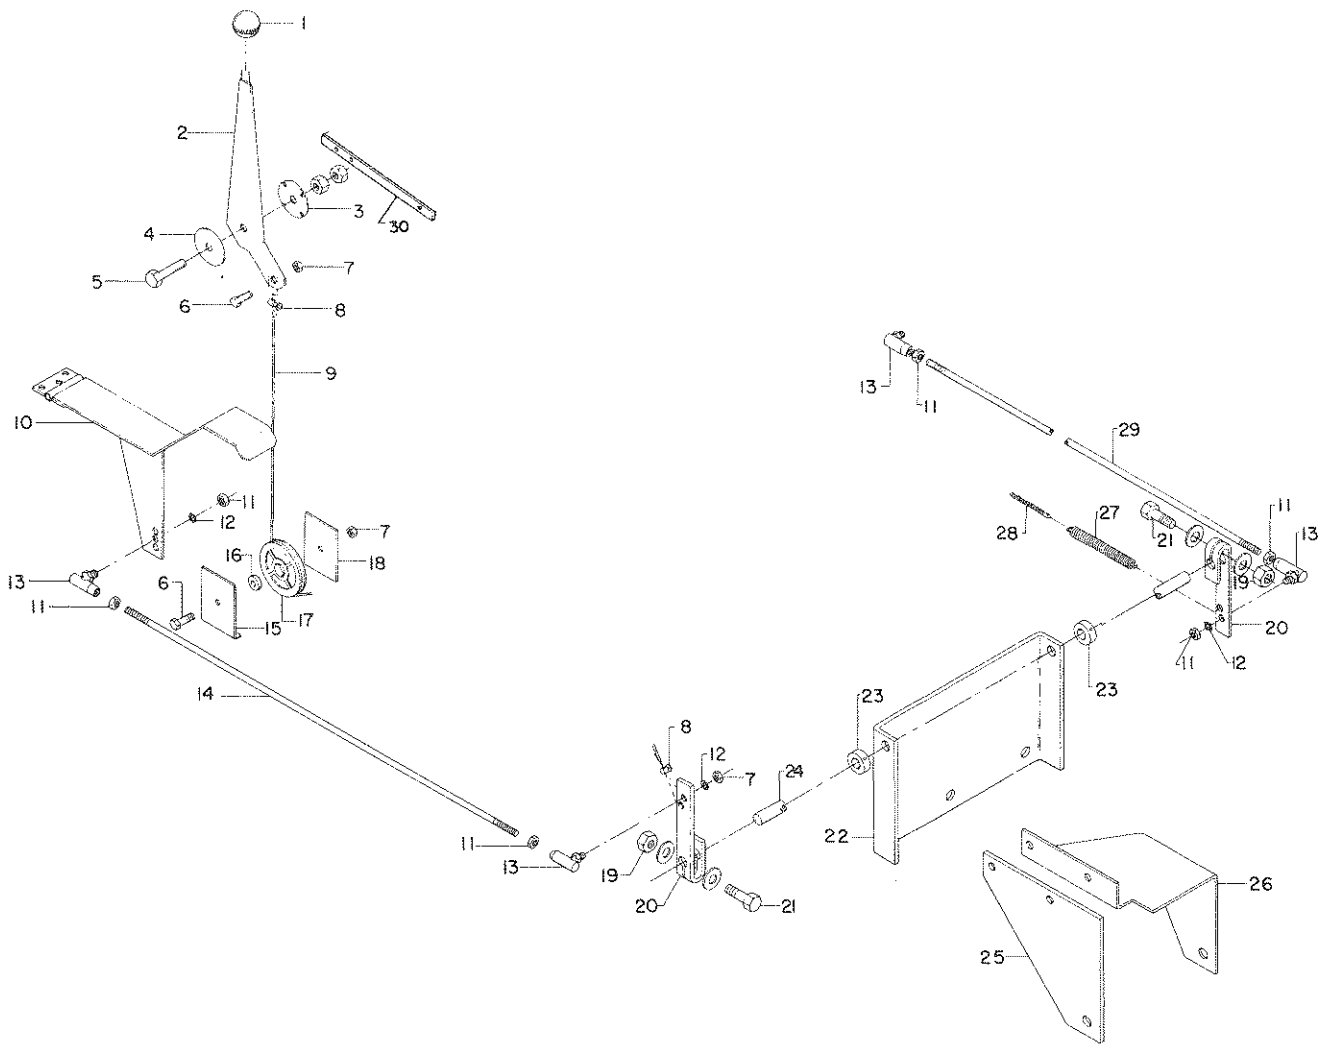


MANUAL CONTROL LEVERS

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 0005554	Knob, Throttle Lever	15	F 000994	Shield, 2 used
2	18-122	Lever, Throttle	16	F 0004068	Bushing, 2 used
3	F 0001002	Conical Washer	17	F 0004067	Roller, 2 used
4	F 0001003	Friction Disc	18	F 000995	Plate, 2 used
5	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw	19	NCE0003750	3/8" NC Lock Nut, 3 used
6	SCC0000103	1/4" x 1 1/4" NCHT Cap Screw, 3 used	20	18-126	Lever, Throttle Cross Shaft, 2 used
7	NCE0002500	1/4" NC Lock Nut, 3 used	21	SCC0000304	3/8" x 1 1/2" NCHT Cap Screw, 3 used
8	F 0005861	Cable Clamp	22	18-194	Throttle Rod Bracket, AC
9	18-189	Cable, Throttle, 56"	23	FT 0000141	1/2" Set Collar, 2 used
10	18-124	Foot Throttle	24	18-147	Throttle Cross Shaft, AC & IHC
11	NFH0002500	1/4" NF Nut, 8 used	25	18-195	Throttle Rod Bracket, JD
12	WES0002500	1/4" Star Washer, 2 used	26	18-196	Throttle Rod Bracket, JD
13	F 0005207	Ball Joint, 1/4" NF RH, 4 used	27	04-109	Spring, 525 Winks
14	18-173	Throttle Rod	28	05-110	Chain
			29	18-174	Accelerator Rod, AC & John Deere
			30	BKT0009258	Throttle Lever Bracket

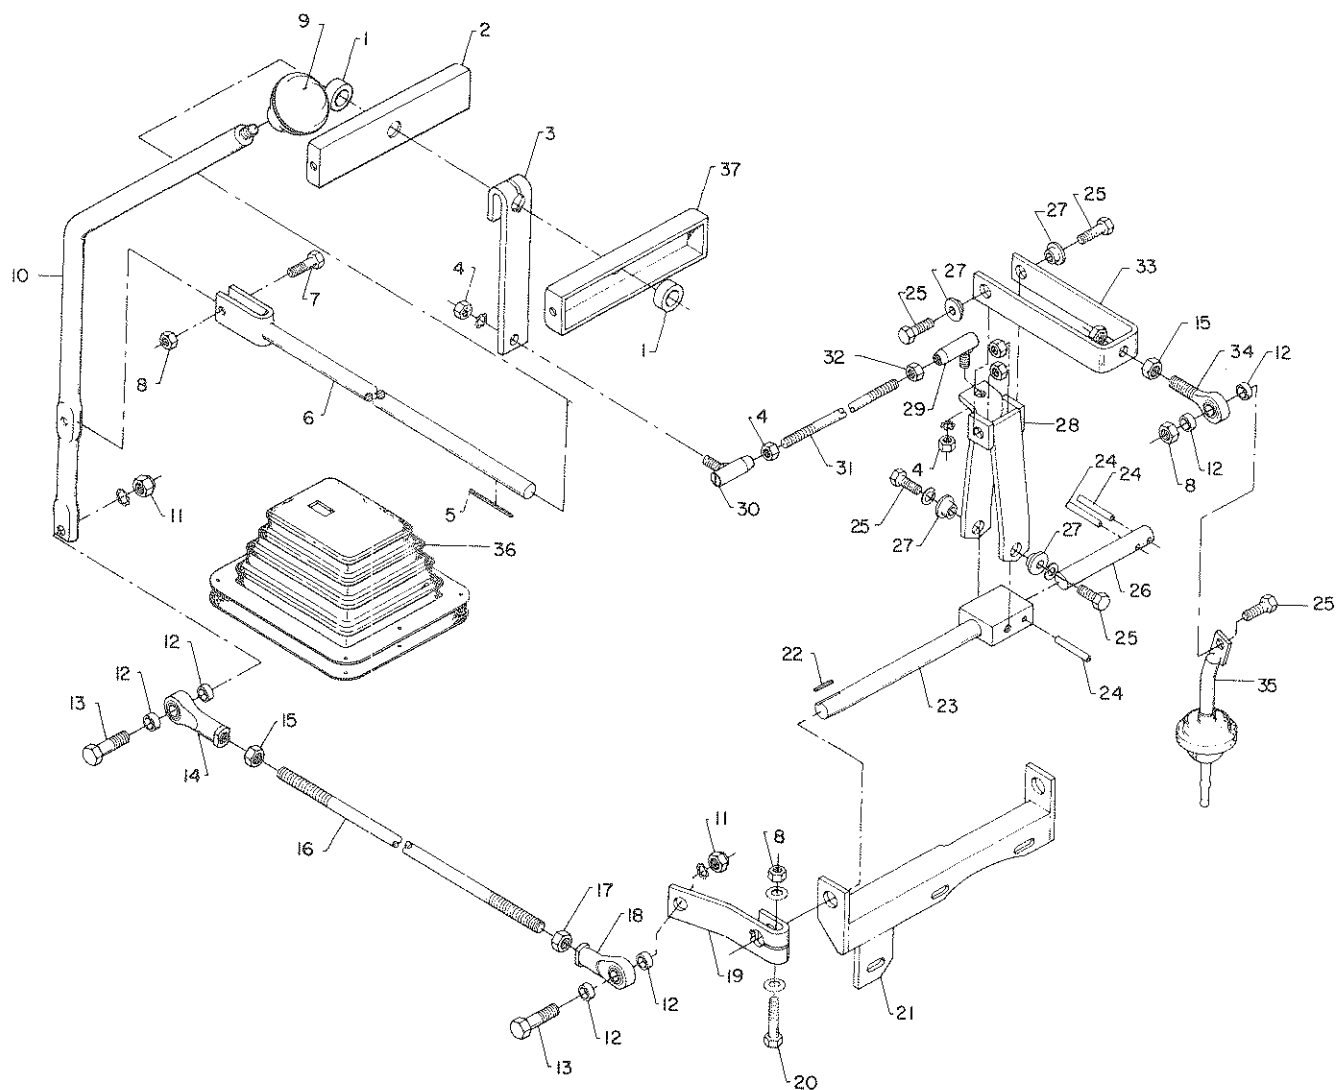


TRANSMISSION SHIFT MECHANISM

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	F 0000172	¾" Set Collar	18	02-120	Rod End, ½" NF, LH, Female, TML-8N Sperico
2	BRG0181491	Bearing, Shift Rod, 2 used	19	18-153	Lever, Shift Shaft
3	SHT0006204	Lever, Shift Rod	20	SCC0000307	3/8" x 2¼" NCHT Cap Screw, 3 used
4	NFH0003750	3/8" NF Hex Nut, 3 used	21	18-152	Mounting Bracket, Shift Shaft
5	ZZ 0000404	Key, 3/16" x 3/16" x 1½"	22	ZZ 0000406	Key, ¼" x ¼" x 1"
6	SHT0007045	Shift Rod	23	18-140	Shift Shaft
7	SCC0000304	3/8" x 1½" NCHT Cap Screw	24	ZZ 0000705	Roll Pin, ¼" x 2", 3 used
8	NCE0003750	3/8" NC Fiber Lock Nut, 5 used	25	SCC0000302	3/8" x 1" NCHT Cap Screw, 4 used
9	F 0006278	Knob, Shift Lever	26	18-141	Shift Shaft Extension
10	SHT0007068	Shift Lever, Top Unit	27	F 0000440	Ferrule, 4 used
11	NCE0005000	½" NC Fiber Lock Nut, 2 used	28	18-142	Pivot, Shift Lever
12	18-146	Spacer, 6 used	29	BLJ0000109	Ball Joint, 3/8" NF, RH
13	SCC0000506	½" x 2" NCHT Cap Screw, 2 used	30	BLJ0001090	Ball Joint, 3/8" NF, LH
14	F 0006212	Rod End, ½" NF, RH, Female, TM-8N Sperico	31	18-154	Linkage Rod, Side Movement
15	NFH0005000	½" NF Hex Nut, 3 used	32	NFL0003750	3/8" NF, LH Hex Nut
16	18-157	Linkage Rod, Transmission Forward Movement	33	18-143	Shift Link
17	NFL0005000	½" NF LF Hex Nut	34	F 0005992	Rod End, ½" RH Male, TRE8N
			35	18-169	Shift Lever
			36	SHT0039569	Boot, Shift Lever
			37	18-149	Bearing, Shift Rod

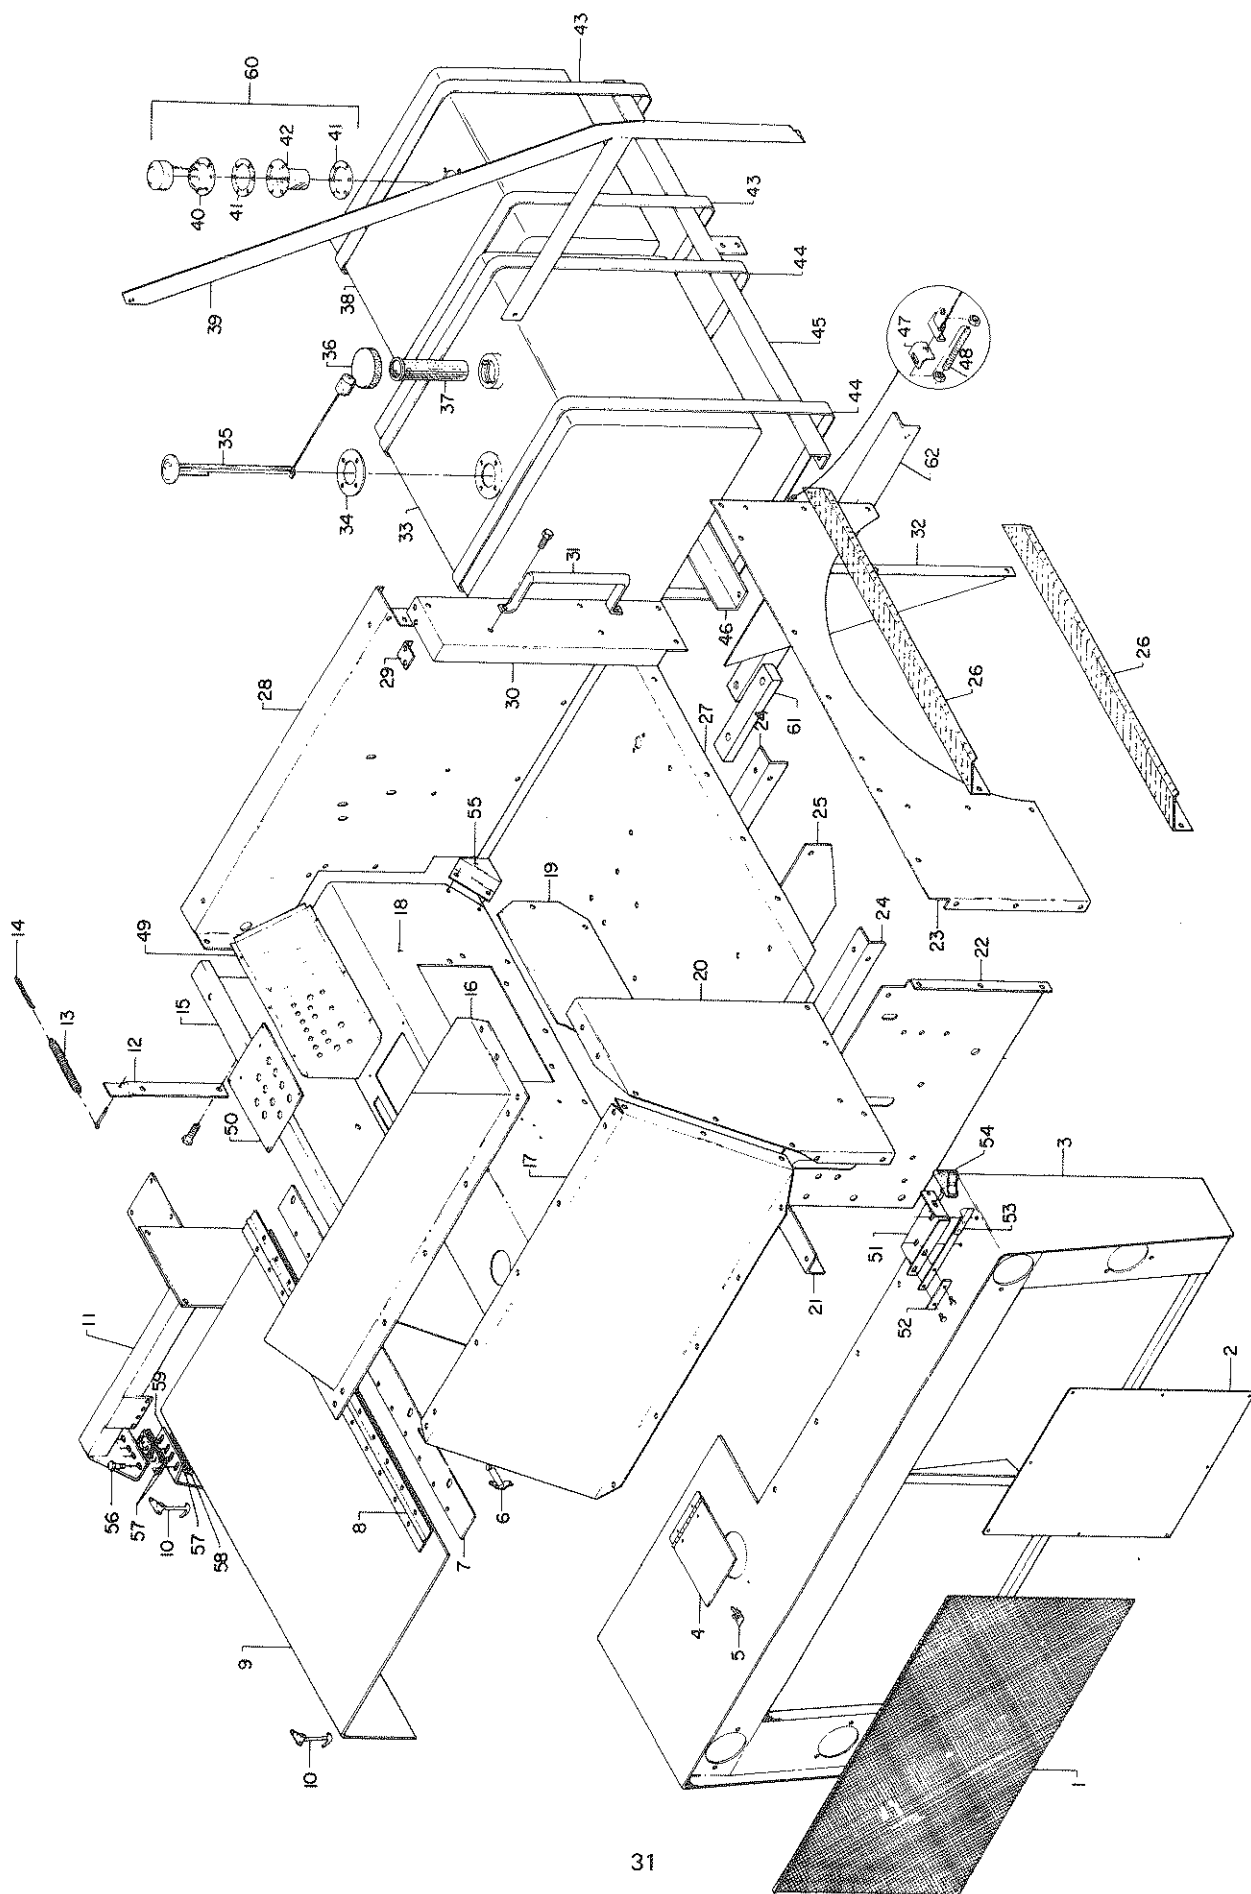


DECK AND ENGINE HOOD

REF. NO.	PART NO.	DESCRIPTION
1	17-175	Grill
2	17-176	Grill Extension
3	CWL0083230	Cowl, Front, AC
	CWL0083231	Cowl, Front, JD
4	17-153	Radiator Cap Cover
5	F 0006108	Latch, Radiator Cap Cover
6	F 0000853	Latch
7	17-179	Hinge Plate, Hood
8	17-139	Hinge, Hood
9	17-178	Hood
10	F 0007166	Hood Latch
11	HOD0008222	Hood Support, AC & JD
12	17-144	Swivel Arm Return Spring Bracket
13	04-122	Spring
14	05-110	Chain, 2 used
15	17-186	Console Right Side
16	17-182	Dash
17	17-180	Console Front
18	DCK0008338	Control Panel
19	17-115	Cover, Control Panel Side
20	17-189	Console Side, LH Side
21	17-135	Rib, Platform Center
22	17-181	Front Deck Support
23	17-192	Shield
24	17-190	Deck Mount Ribs
25	17-191	Rear Deck Support
26	STP0007069	Step
27	DCK0007903	Operator's Deck
28	CSL0006502	Console, Rear Section
29	17-140	Connecting Angle
30	17-118	Console Side, LH Rear
31	17-123	Hand Rail
32	BKT0006911	Step Bracket
33	17-128	Fuel Tank
34	F 0005949	Gasket, Fuel Gauge
35	F 0005948	Fuel Gauge
36	F 0001689	Cap, Fuel Tank
37	F 0005950	Filter Screen, Fuel Tank
38	TNK0007422	Hydraulic Tank
39	17-236	Tower Brace
40	F 0006268	Filler Cap, Hydraulic Tank
41	F 0006857	Gasket for Filler Cap
42	FIL0010008	Screen for Filler
43	17-134	Tank Straps, Hydraulic, 2 used
44	17-129	Tank Straps, Fuel, 2 used
45	17-132	Tank Rail, LH
46	17-133	Tank Rail, RH
47	17-141	Anchor, Tank Strap, 4 used
48	17-142	Bolt with Nut, Tank Strap, 4 used
49	17-235	Control Panel, Electric
50	17-239	Control Panel Plate
51	MNT0006683	Door Holder Mount
52	PLT0006684	Backing Plate
53	SPG0005697	Spring Fastener
54	F 0008264	Bumper
55	DCK0008333	Cover, Deck Cut Out
56	SCC0000205	5/16" x 1 1/4" NCHT Cap Screw
57	F 0001589	Rubber Pad, 6 used
58	PLT0007548	Compression Plate
59	STP0008216	Hood Support
60	FIL0010008	Filler Breather Assembly
61	17-136	Spacer, Tank Mounting Bracket
62	17-131	Bracket, Tank Rail Support

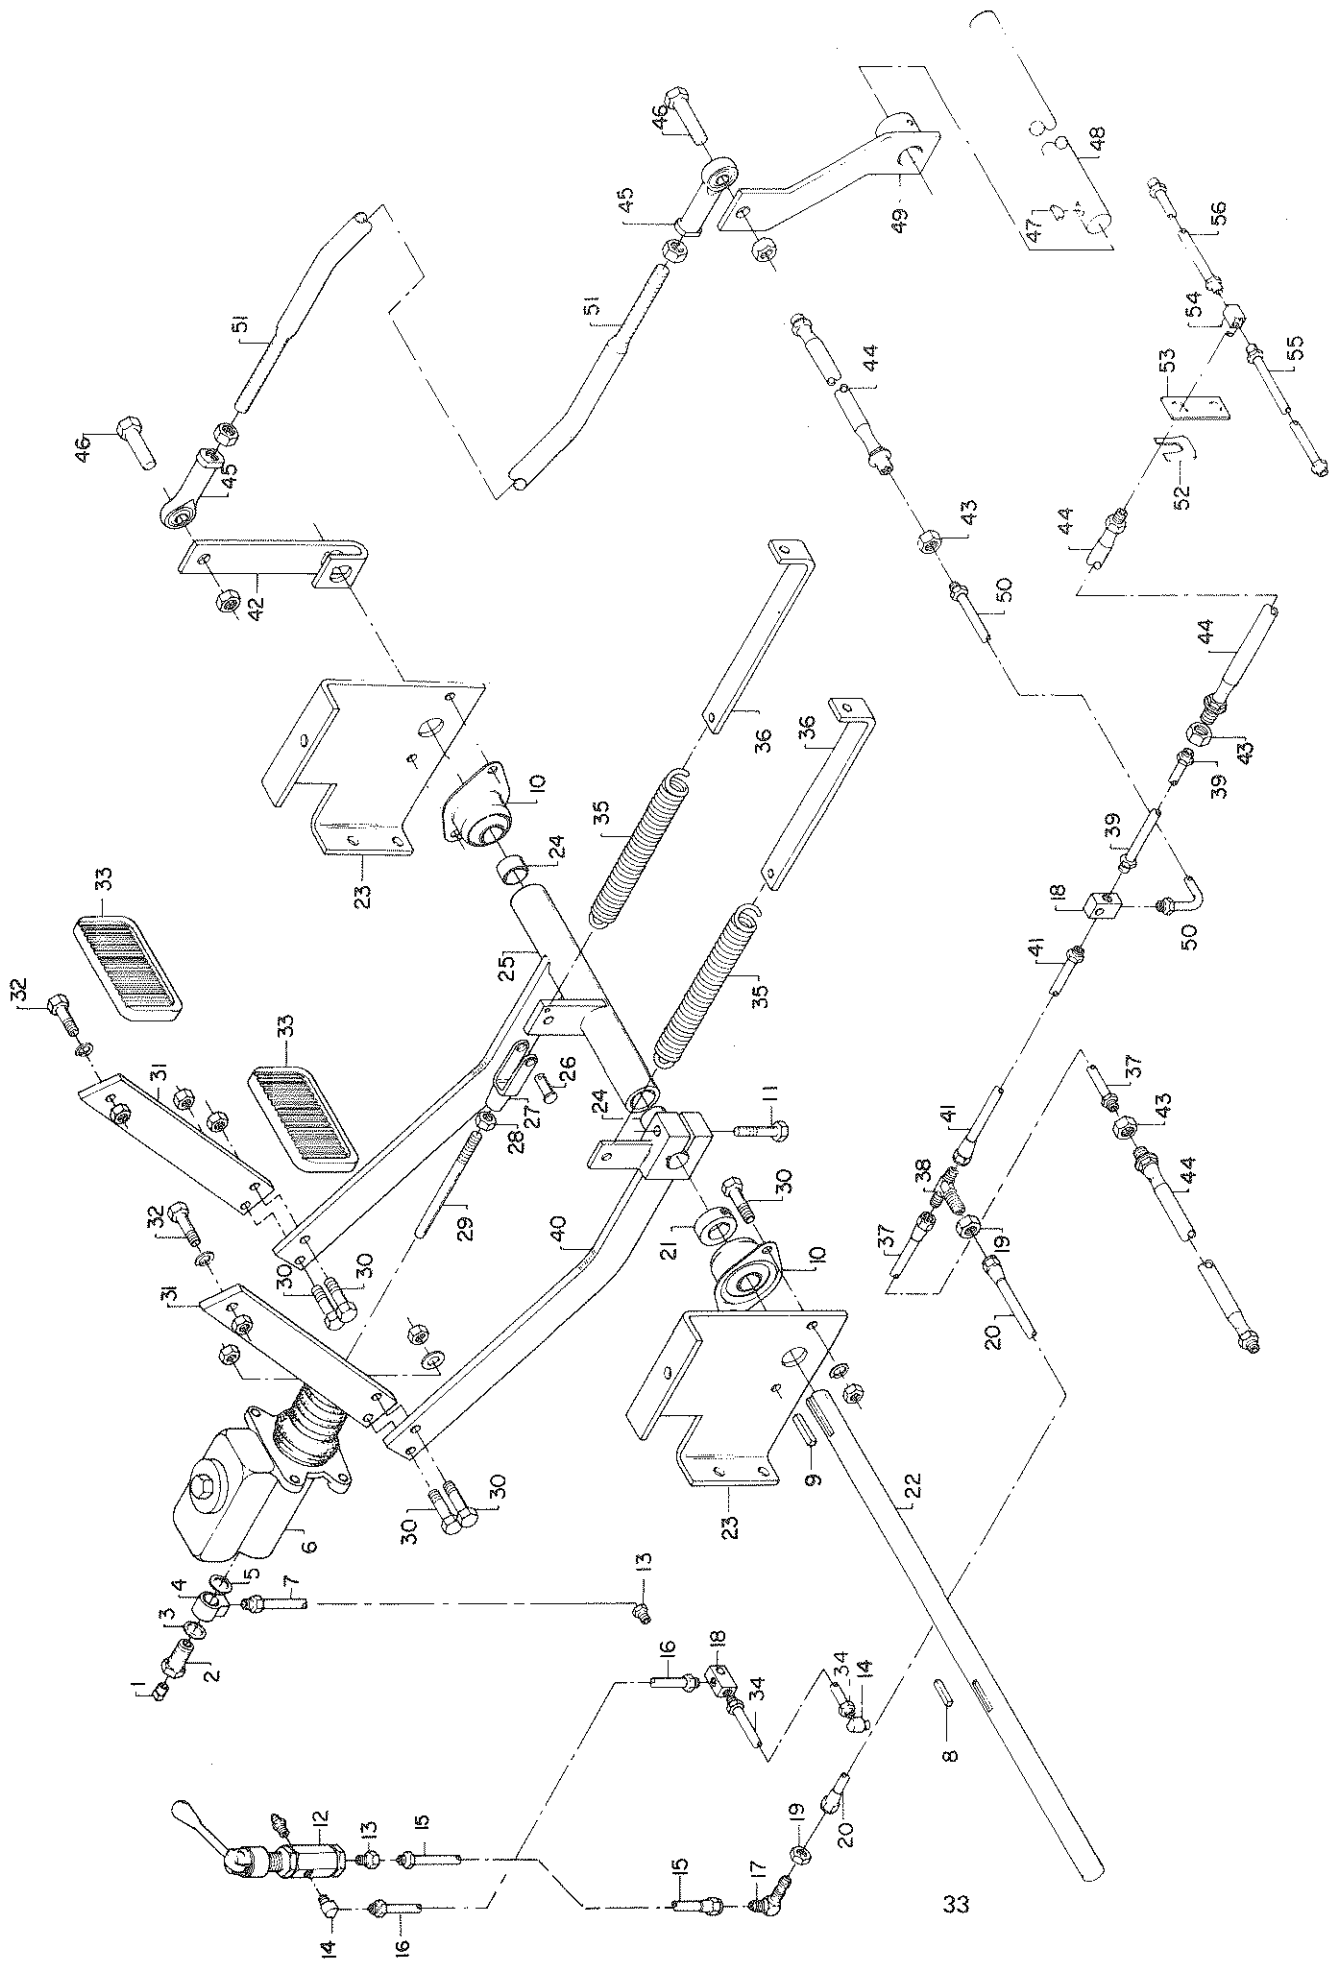


BRAKE AND CLUTCH

REF. NO.	PART NO.	DESCRIPTION
1	PPE0020125	1/8" Square Head Black Pipe Plug
2	19-142	Adapter, Stop Light, F3474 Wagner
3	19-141	Washer, Stop Light Adapter, F602 Wagner
4	19-140	Adapter, Stop Light, F2678 Wagner
5	19-139	Washer, Stop Light Adapter, F603 Wagner
6	19-157	Brake Master Cylinder, F27304, Wagner
7	TBE0008574	1/4" Brake Line, Cylinder to Vacuum Booster
8	ZZ 0000406	Key, 1/4" x 1/4" x 1"
9	ZZ 0000407	Key, 1/4" x 1/4" x 1 1/4"
10	F 0006758	Bearing
11	SCC0000206	5/16" x 2" NCHT Cap Screw
12	01-526	Brake Lever Lock, 8805 Mico
	01-527	Repair Kit for 01-526, 02-600-001 Mico
13	01-803	Brass Male Connector, 200 x 4 WH
14	01-807	1/4" x 90° Elbow, 400 x 4 WH
15	01-862	1/4" Brake Line, Lock to 90° Bulkhead
16	01-863	1/4" Brake Line, Lock to "T" Block
17	01-812	1/4" Bulkhead Union Elbow, C5525 x 4 WH
18	01-802	Brass Fitting, 7708 WH
19	NFH0004375	7/16" NF Hex Nut
20	01-864	1/4" Brake Line, Bulkhead 90° to Bulkhead Tee
21	ZZ 0002013	Set Collar, 7/8"
22	SHF0008591	Pivot Shaft
23	BKT0007416	Clutch Shaft Bracket
24	F 0007247	Bushing
25	BRK0007434	Brake Pedal
26	06-126	3/8" Clevis Pin
27	06-125	3/8" Clevis
28	NFH0003750	3/8" NF Hex Nut, 4 used
29	19-151	Push Rod
30	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 4 used
31	19-148	Pedal Extension
32	SCC0000203	5/16" x 1 1/4" NCHT Cap Screw, 4 used
33	F 0005979	Pedal Pad
34	TBE0008573	1/4" Tube, Block to Vacuum Booster
35	F 0001517	Spring
36	19-155	Spring Bracket
37	01-861	1/4" Brake Line, Bulkhead Tee to Left Front Brake
38	01-804	Bulkhead Branch Tee, C5725 x 4 WH
39	01-858	1/4" Brake Line, Rear "T" Block to Rear Axle
40	CLH0007485	Clutch Pedal
41	01-856	1/4" Brake Line, Bulkhead Tee to Rear "T" Block
42	LEV0007017	Clutch Lever
43	NFJ0006250	5/8" NF Jam Nut
44	19-191	Brake Hose, F4000 Wagner
45	F 0006212	Rod End, TM-8N Sperico
46	SCC0000505	1/2" x 1 1/4" NCHT Cap Screw
47	ZZ 000408	Woodruff Key, No. 808
48	19-202	Clutch Shaft
49	LEV0007413	Clutch Lever
50	01-857	1/4" Brake Line, Rear "T" Block to Right Front Brake
51	ROD0007417	Clutch Rod
52	06-131	Spring Lock, 5188 WH
53	19-159	Brake Line Support
54	01-806	Brass Fitting, 7734 WH
55	01-860	1/4" Brake Line, Left Rear Brake
56	01-859	1/4" Brake Line, Right Rear Brake

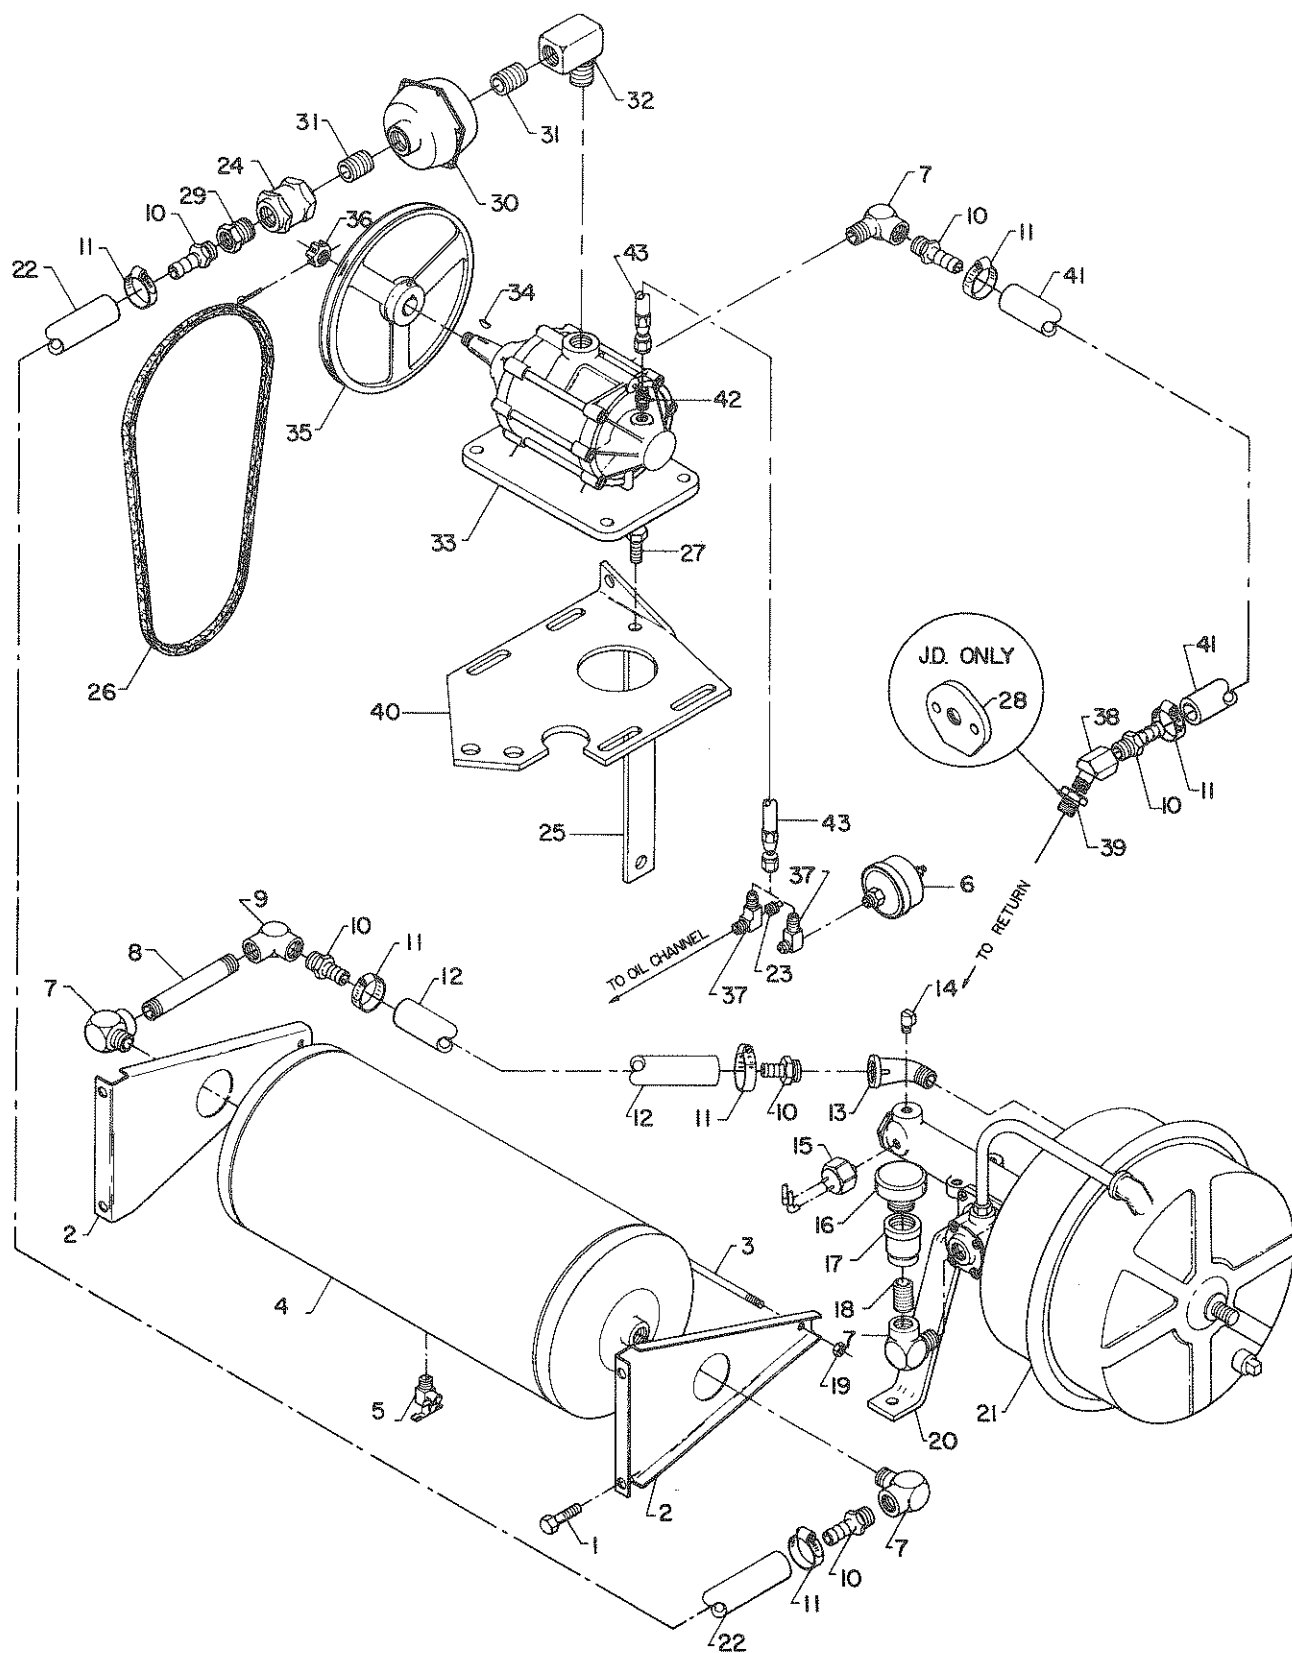


VACUUM BOOSTER AND PUMP

REF. NO.	PART NO.	DESCRIPTION
1	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw, 4 used
2	19-322	Mounting Bracket for Vacuum Tank
3	18-128	Linkage Rod, 1/4" x 18 1/4"
4	19-143	Vacuum Tank
5	F 0006828	Drain Plug
6	03-132	Oil Sending Unit, 3535 SW
7	HYD3409030	3/8" x 90° Steel Street Elbow
8	01-719	3/8" x 4" Extra Heavy Black Nipple
9	HYD3509030	3/8" x 90° Steel Elbow
10	FT 0000193	3/8" x 1/2" Hose Coupler
11	06-136	Hose Clamp
12	19-280	Vacuum Hose, 1/2" ID x 13"
13	PPE0050450	1/2" x 45° Street Elbow, 6 used
14	01-807	1/4" x 90° Brass Fitting
15	03-130	Stop Light Switch, SL134 Echlin
16	FT 0000530	Breather
17	PPE7503750	3/8" x 3/4" Pipe Bushing
18	01-718	3/8" Close Extra Heavy Black Nipple
19	NCH0002500	1/4" NC Hex Nut, 4 used
20	19-317	Vacuum Booster Brace
21	19-162	Vacuum Booster, C464 R Midland
22	19-279	Vacuum Hose, 1/2" x 78"
23	PPE0020250	1/4" Plug
24	19-164	Vacuum Check Valve, C11475 Midland
25	BRC0008512	Vacuum Pump Bracket Brace, AC
	BRC0008564	Vacuum Pump Bracket Brace, JD
26	05-243	Drive Belt, A62, AC
	05-244	Drive Belt, A71, JD
27	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw
28	JD 0008041	Fuel Pump Cover, JD
29	HYD3109043	1/2" x 3/8" Steel Bushing
30	19-220	Filter, BK18249 Bendix
31	01-720	1/2" Close Extra Heavy Black Nipple
32	HYD3409040	1/2" x 90° Steel Street Elbow
33	19-316	Vacuum Pump, 2500948 Bendix
34	ZZ 0000439	Woodruff Key, No. 60
35	05-216	Sheave, Vacuum Pump, JD & AC
36	NFC0005000	1/2" NF Castellated Nut
37	HYD0056020	1/4" Tee Adapter
38	HYD3359030	3/8" x 45° Steel Street Elbow
39	HYD3220043	Brass Bushing, 1/2" x 3/8"
40	BKT0008427	Vacuum Pump Mounting Bracket, JD
	BKT0008510	Vacuum Pump Mounting Bracket, AC
41	19-280	Return Hose, 1/2" x 13"
42	01-810	1/4" Hose Fitting, 48" x 4" x 4" WH
43	19-222	Oil Line, 44", JD
	19-223	Oil Line, 30", AC

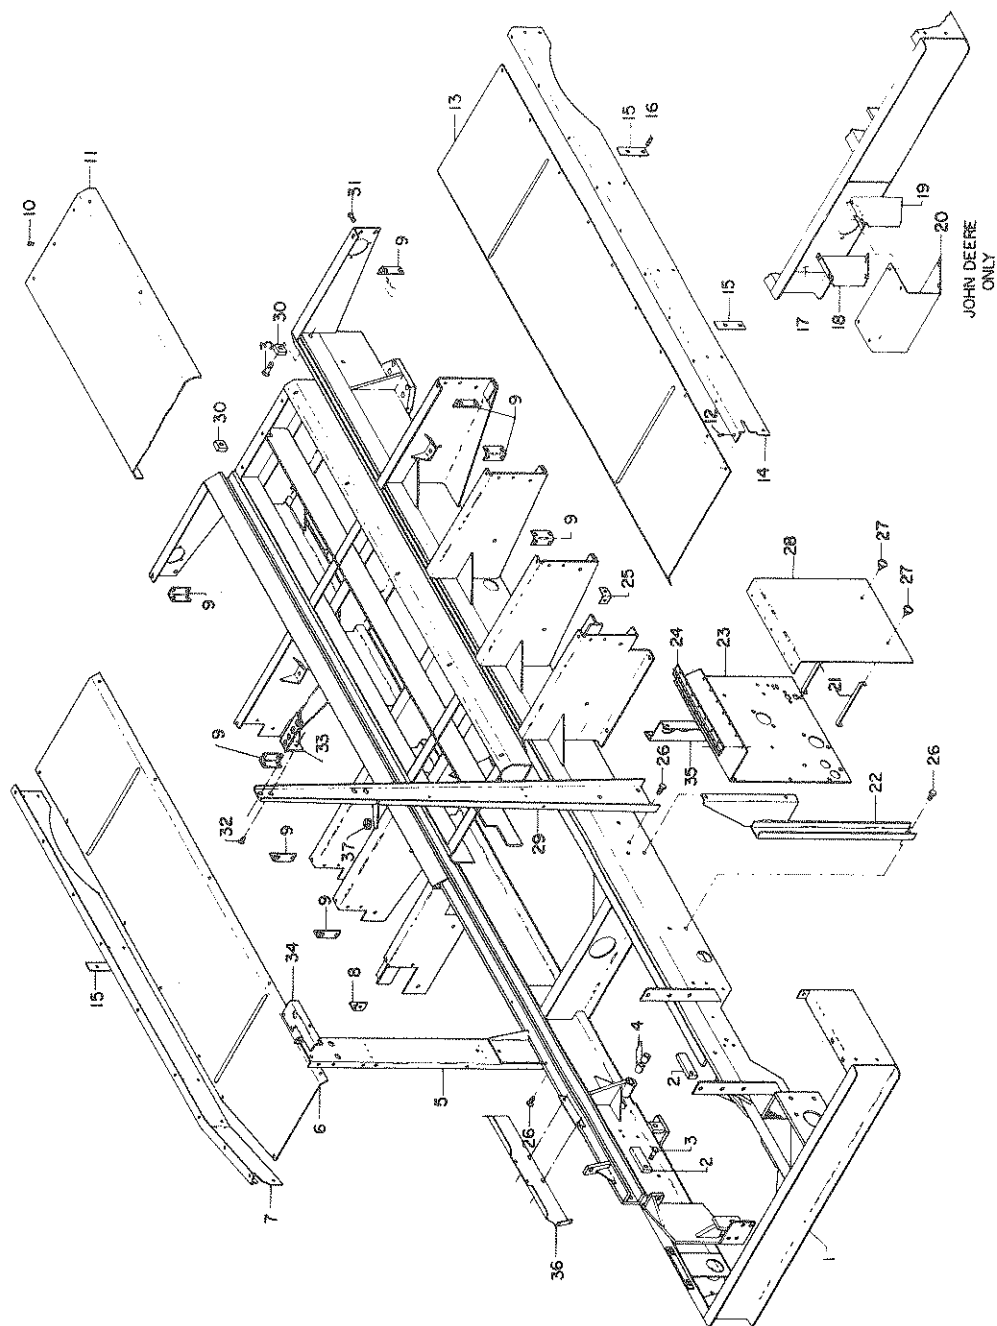


MAIN FRAME

REF. NO.	PART NO.	DESCRIPTION
1	BWF0006343	Main Frame
2	16-114	Stop, Carriage, Front, 2 used
3	SCC0000708	5/8" x 2 1/2" NCHT Cap Screw
4	F 0004027	Bushing, 1-1/8" x 1-3/8" x 1 1/2", 8 used
5	SUP0007767	Pickup Hose Support
6	16-108	Deck Plate, RH
7	16-107	Side Trim, RH
8	16-113	Bracket, Side Trim
9	16-106	Bracket, Side Trim, 8 used
10	SBH0000301	3/8" x 3/4" NC Button Head Socket Cap Screw
11	16-111	Deck Plate, Center
12	SBH0000302	3/8" x 1" NC Button Head Socket Cap Screw, 16 used
13	16-105	Deck Plate, LH
14	16-104	Side Trim, LH
15	16-109	Stop, Squeeze, 3 used
16	SCO000305	3/8" x 1 1/4" NC Flat Head Socket Cap Screw
17	16-147	Pump Mounting Plate (weld on)
18	16-126	Pump Guard Bracket, RH (weld on)
19	16-125	Pump Guard Bracket, LH (weld on)
20	16-127	Pump Guard
21	16-142	Valve Cover Holding Bracket
22	SUP0007994	Valve Mount Plate Support
23	PLT0007989	Valve Mounting Plate
24	16-140	Hinge, Valve Cover
25	16-112	Bracket, Side Trim
26	SCC0000503	1/2" x 1 1/4" NCHT Cap Screw
27	F 0001007	Knob
28	16-141	Valve Cover
29	16-103	Tower
30	16-110	Stop, Carriage, Rear, 2 used
31	SCC0000304	3/8" x 1 1/2" NCHT Cap Screw
32	SCC0000302	3/8" x 1" NCHT Cap Screw
33	MNT0008046	Hose Mount Plate
34	BKT0007842	Offset Valve Mounting Bracket
35	SUP0007995	Rear Valve Plate Support
36	SHD0008225	Carriage Shield
37	F 0008264	Rubber Bumper

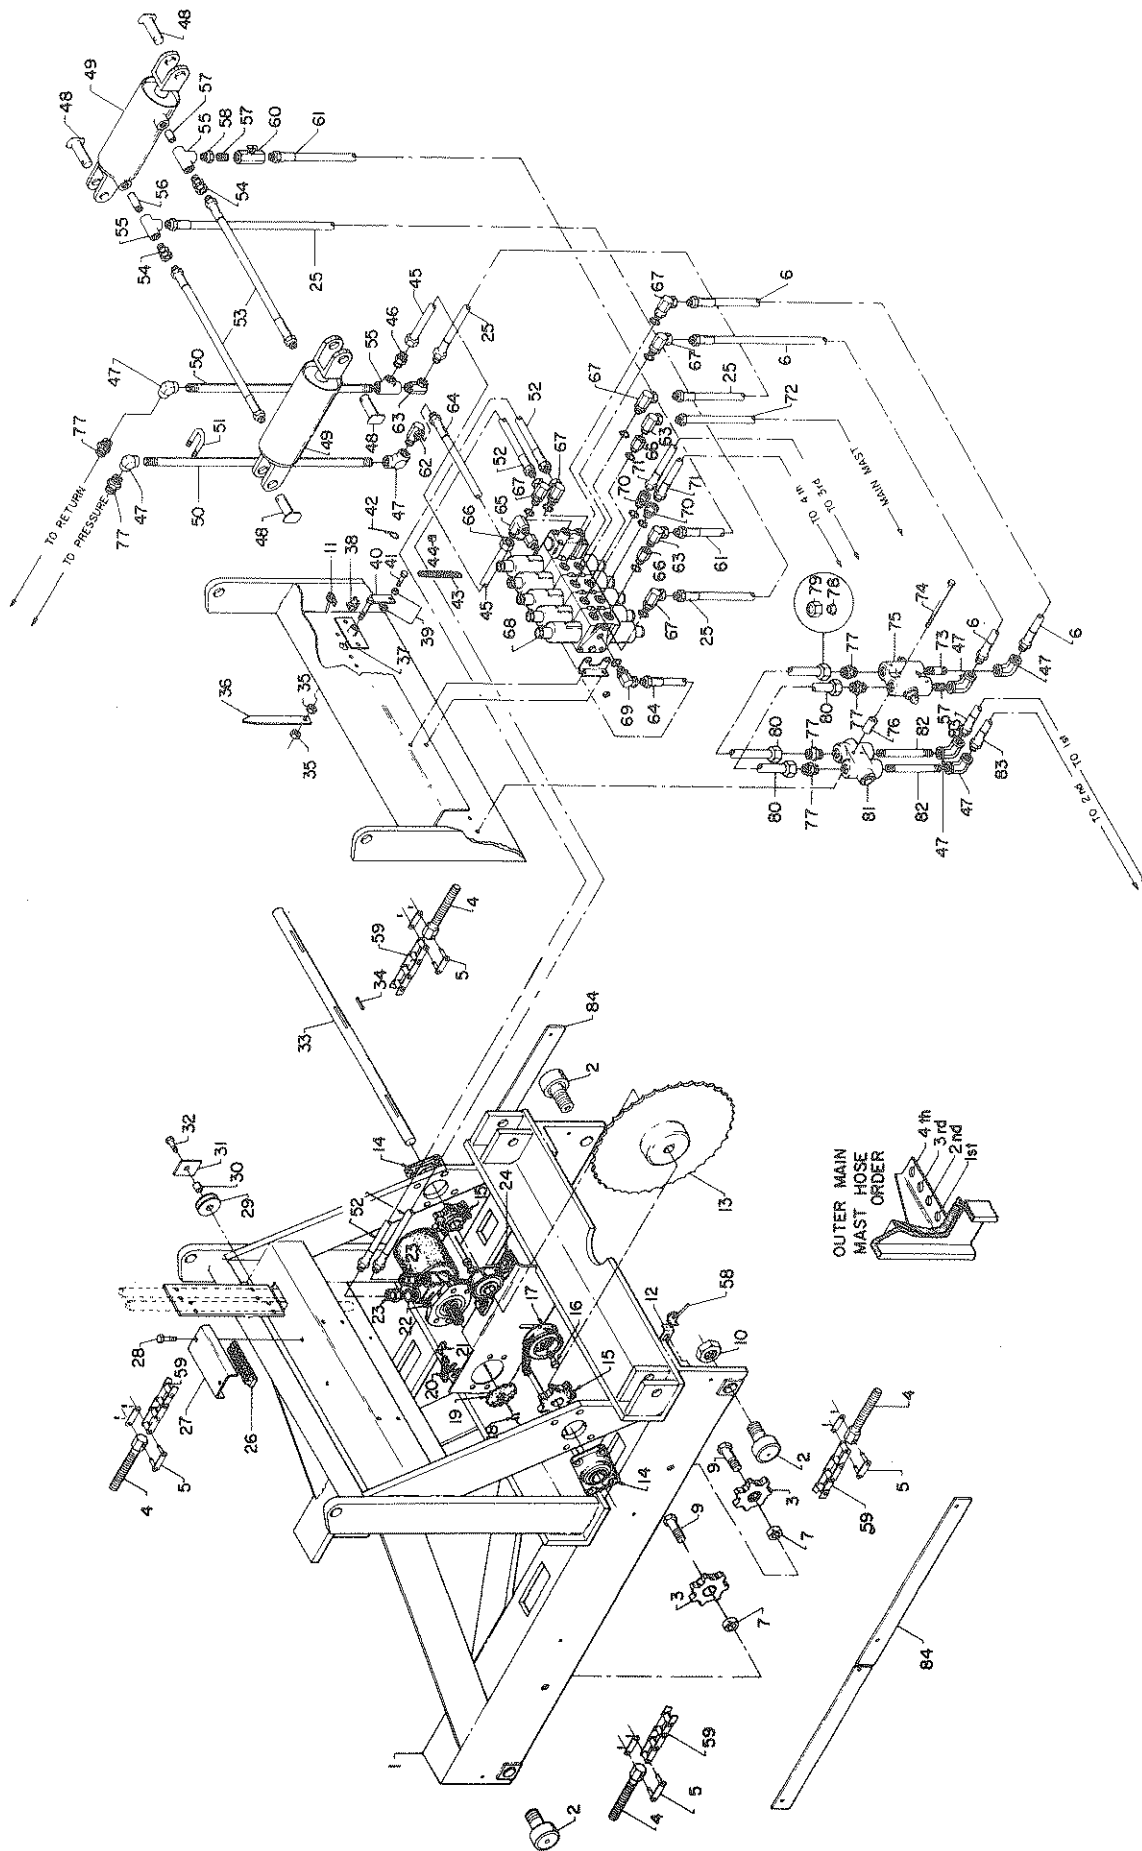


CARRIAGE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	13-115	Carriage Frame	44	F 0005861	Cable Clamp, 3-4711 BK
2	02-112	Roller, Carriage, CFH 2½ McGill, 2 used	45	01-167	¾" Hydraulic Tube
3	SPK0008039	Sprocket with Bearing, 7 Tooth Idler, No. 550	46	HYD5205064	Straight Male Connector
4	13-119	Chain Anchor, 4 used	47	HYD3509040	½" x 90° Steel Elbow
5	05-107	Connecting Link, No. 550, 4 used	48	06-115	Pin with Keeper, 2½" Hypower, 4 used
6	HOS0008642	3/8" Hydraulic Hose, 21", 2 used	49	01-555	Hydraulic Cylinder, Tilt, LC4 x 6SP Hypower
7	05-105	Set Collar, ¾", 4 used	01-560		Seal Kit for 01-555
8	WCT0007500	¾" Cut Washer, 16 used	01-727		½" x 20" Extra Heavy Black Pipe, 2 used
9	SCC0000808	¾" x 2½" NCHT Cap Screw, 4 used	51	06-114	"U" Bolt Clamp, 010 Chicago
10	NFJ0011250	1-1/8" NF Elastic Stop Nut, 4 used	52	HOS0008641	3/8" Hydraulic Hose, 26", 2 used
11	03-131	Limit Switch	53	01-212	3/8" Hydraulic Hose, 26½", 2 used
12	BKT0005335	Bracket, Limit Switch	54	HYD9205044	½" Straight Swivel Adapter
13	05-259	Sprocket, Carriage Drive, 60B32 X 1-3/8"	55	HYD3709040	½" Steel Tee, 2 used
14	02-154	Bearing, 1-3/8" Flange, RCJ Fafnir	56	01-722	½" x 2" Extra Heavy Black Nipple
15	05-260	Sprocket, 7 Tooth with 1-3/8" Bore, No. 550	57	01-720	½" Close Extra Heavy Black Nipple, 2 used
16	SCC0000513	½" x 3¾" NCHT Cap Screw, 4 used	58	ELC0003101	Limit Switch
17	F 0000883	Idler Roller, Chain Drive	59	05-262	Carriage Chain, 129 Pitch, No. 550, 2 used
18	06-118	Snap Ring, 5100-100	60	VLV00F30BK	Restrictor Valve, F30BK Pentrol
19	05-140	Sprocket, Carriage Drive, 60B13-6 Spline, 1"	61	01-206	3/8" Hydraulic Hose, 28½"
20	05-261	Drive Chain, 52P-60 RC	62	HYD9405044	½" x 90° Swivel Adapter
21	05-122	Connecting Link, RC 60	63	HYD9405034	½" x 90° Swivel Adapter
22	01-607	Hydraulic Motor, MAB 16-002 Ross	64	01-257	½" Hydraulic Hose, 28½"
	01-637	Seal Kit for 01-607, MAB 50000-3	65	HYD5405064	90° Male Elbow
23	HYD9315054	7/8" "O" Ring Straight Swivel Adapter, 2 used	66	HYD3269044	½" Straight Thread Adapter
24	02-145	Bearing, 1-3/8" Pillow Block, PAS Fafnir	67	HYD9515043	3/8" x 90° "O" Ring Swivel Adapter
25	01-211	3/8" Hydraulic Hose, 24", 5 used	68	01-519	Solenoid Stack Valve, 4813-13-13-13 F1500-12VDC
26	03-208	Terminal Block, 21.331.6053 Electrovert	69	HYD9515044	½" x 90° "O" Ring Swivel Adapter
27	13-121	Cover, Terminal Block	70	HYD5315040	½" Straight "O" Ring Fitting
28	SCC0000106	¼" x 2" NCHT Cap Screw, 2 used	71	01-243	3/8" Hydraulic Hose, 38"
29	F 0004067	Roller	72	HOS0008643	3/8" Hydraulic Hose, Main Mast, 26"
30	F 0004068	Bushing	73	SCC0000217	5/16" x 5½" NCHT Cap Screw
31	F 0000995	Shield for Roller	74	PPE0502500	½" x 2½" Extra Heavy Black Nipple, 3 used
32	SCC0000102	¼" x 1" NCHT Cap Screw	75	01-510	Relief Valve, RC11CA
33	13-120	Shaft, Carriage Drive	76	13-110	Spacer, 1¾"
34	ZZ 0000401	Key, 3/8" x 2¾", 3 used	77	HYD5205050	5/8" Straight Male Connector, 6 used
35	NCH0004375	7/16" NC Hex Nut, 3 used	78	HYD5165050	5/8" Sleeve, 4 used
36	F 0006009	Arm, Tilt Indicator	79	HYD5105050	5/8" Nut, 4 used
37	F 0006122	Base Plate, Tilt Indicator	80	01-152	5/8" Hydraulic Tube
38	13-109	Bracket, Limit Switch	81	F 0006188	Lockout Valve, L050D Gresen
39	NCH0003125	5/16" Hex Nut	82	01-723	½" x 3" Extra Heavy Black Nipple
40	13-106	Lever, Tilt Indicator	83	01-242	3/8" Hydraulic Hose, 51"
41	SCC0000203	5/16" x 1¼" NCHT Cap Screw	84	SHM0088630	Shim, 3/16"
42	05-146	Cable, Tilt Indicator, 1/16" x 40"		SHM0088631	Shim, ¼"
43	F 0000268	Spring			

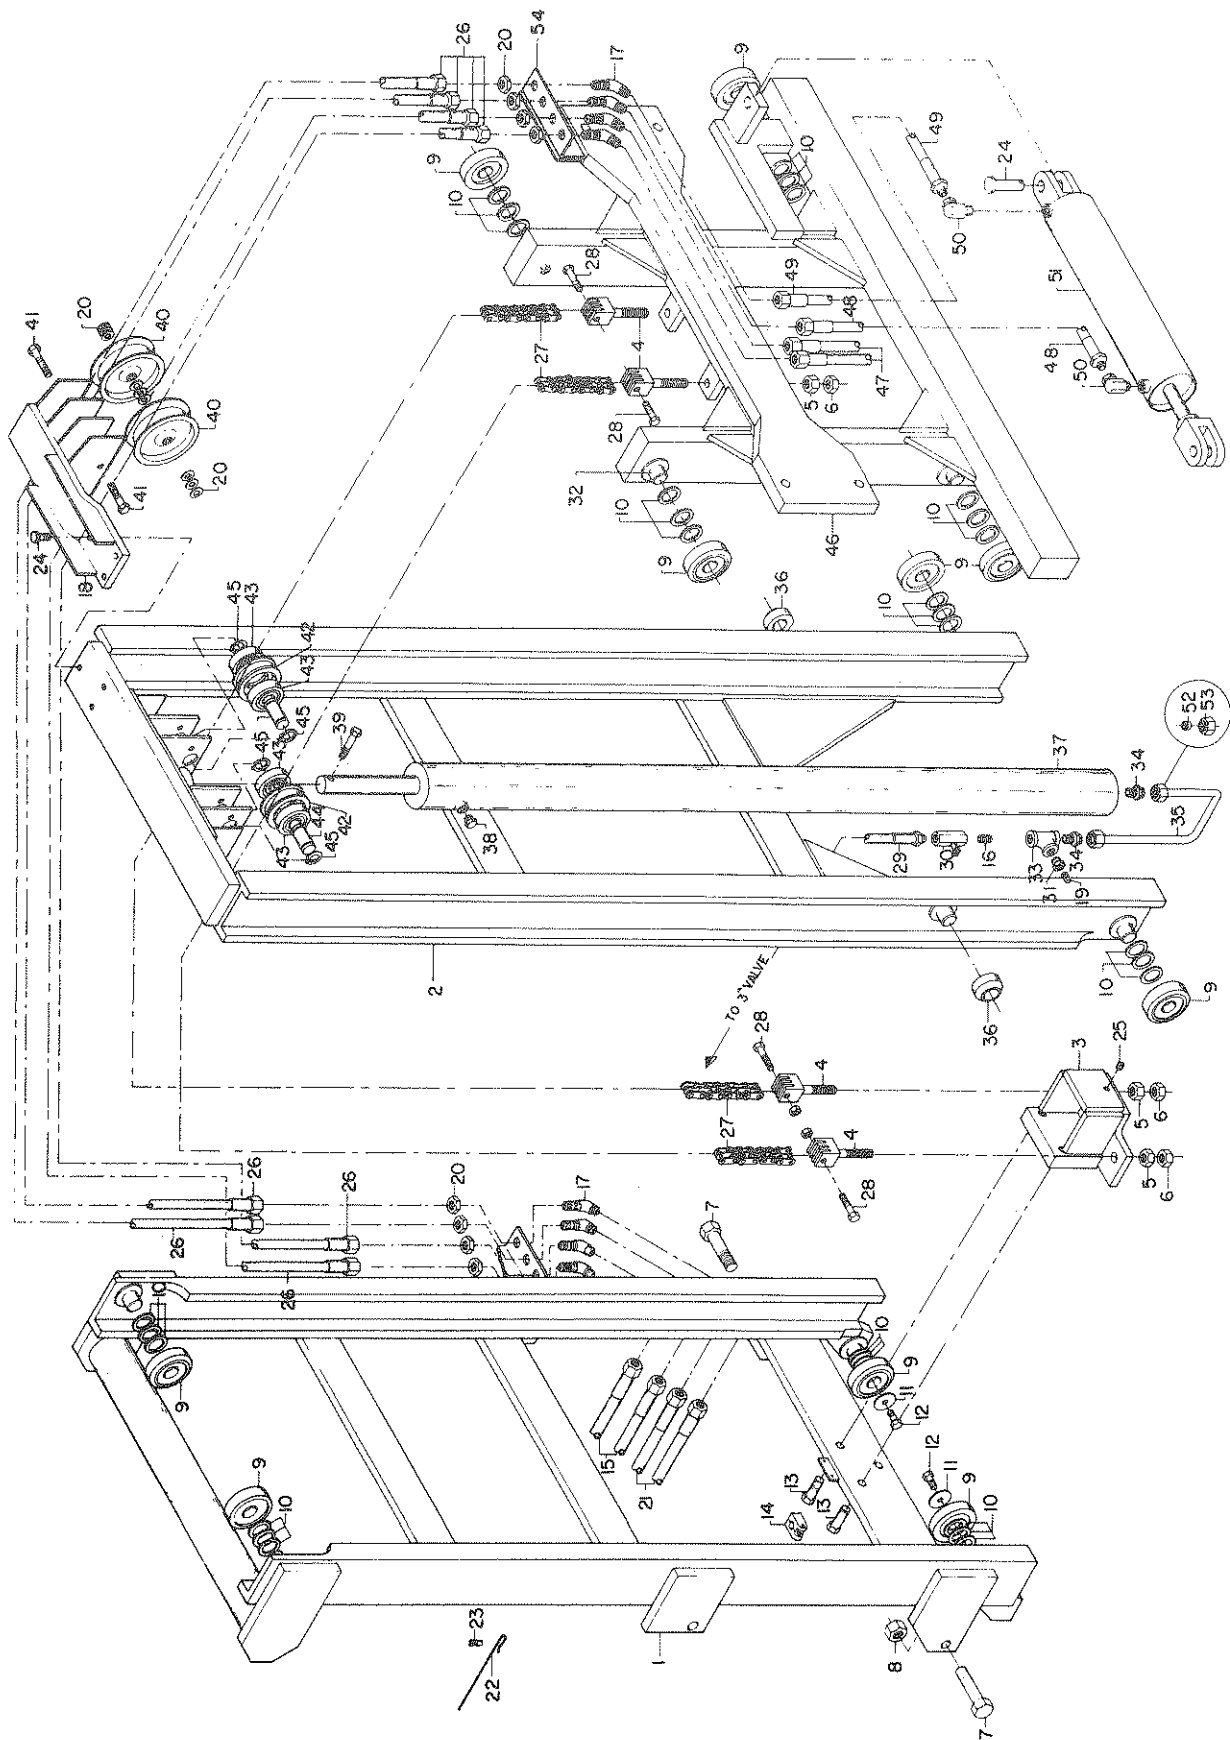


MAIN MAST

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	14-111	Main Mast Frame, Outer	26	01-244	3/8" Hydraulic Hose, 115", 4 used
2	14-112	Main Mast Frame, Inner	27	05-106	Lift Chain, 139", 2 used BL834
3	14-103	Cylinder Mount	28	14-110	Bolt, Chain Connector, 4 used
4	14-104	Anchor Bolt, Lift Chain, 4 used	29	01-213	3/8" Hydraulic Hose, 22"
5	NFH0007500	3/4" NF Hex Nut, 4 used	30	VLV0000030	Restrictor Valve, F30B Pneutrol
6	NFJ0007500	3/4" NF Jam Nut, 4 used	31	HYD3109042	1/2" x 1/4" Steel Bushing
7	14-105	Pivot Bolt, Main Mast, 2 used	32	14-116	Bearing Mount Stud
8	NFC0001000	1" NC Nut, Castellated, 2 used	33	HYD3709040	1/2" Steel Tee
9	02-113	Roller Bearing, Main Mast, MG 307FFA, 10 used	34	HYD8205050	5/8" Hydraulic Tube Fitting, 2 used
10	F 00004159	Shim Washer, 10 ga.	35	01-153	5/8" Hydraulic Tube
	F 00004160	Shim Washer, 14 ga.	36	14-106	Guide Roller, 2 used
	F 00004161	Shim Washer, 18 ga.	37	01-556	Hydraulic Cylinder, Main Mast Lift, LCA4 x 60FS SP Hypower
11	F 00000246	Washer, 2 used	38	01-602	Breather, 1/2", PM-BHF-3 Prince
12	SCC0000302	3/8" x 1" NCHT Cap Screw, 2 used	39	SCC0000512	1/2" x 3/4" NCHT Cap Screw
13	SCC0000808	3/4" x 2 1/2" NCHT Cap Screw, 3 used	40	02-114	Idler Roller, Hose, 2 used, 6435BCA
14	F 0006629	Tube Clamp, No. 100 - 5/8" Girard	41	SCC0000510	1/2" x 3" NCHT Cap Screw
15	01-243	3/8" Hydraulic Hose, 38", 2 used	42	14-107	Idler Roller, Lift Chain, 2 used
16	01-720	1/2" Close Extra Heavy Black Nipple	43	02-115	Roller Bearing, 306SZZ MRC, 4 used
17	HYD5375040	1/2" x 45° Bulkhead Union Elbow, 8 used	44	14-108	Pin, Chain Idler Pulley, 2 used
18	14-114	Hose Pulley Mounting Bracket	45	06-119	Snap Rings, 4 used, 5100-113 Truarc
19	HYD3159020	1/4" Steel Hex Head Plug, 3 used	46	14-113	Main Mast Apron Frame
20	HYD5924040	1/2" Bulkhead Nut, 8 used	47	01-239	3/8" Hydraulic Hose, 48 1/2", 2 used
21	01-242	3/8" Hydraulic Hose, 51", 2 used	48	01-241	3/8" Hydraulic Hose, 23"
22	05-146	Cable, Tilt Indicator, 1/16" x 40"	49	01-240	3/8" Hydraulic Hose, 43"
23	F 00005861	Cable Clamp, 3-4711 BK	50	HYD9405044	1/2" x 90° Swivel Adapter
24	06-115	Pin with Keeper, Hypower	51	01-557	Hydraulic Cylinder, Side Shift, LC 4 x 18 SP Hypower
25	STS5000500	1/2" x 1/2" Socket Head Set Screw	52	01-560	Seal Kit for 01-557 Cylinder
			53	HYD8165050	5/8" Sleeve
			54	HYD8105050	5/8" Nut
				14-115	Hose Mount Bracket

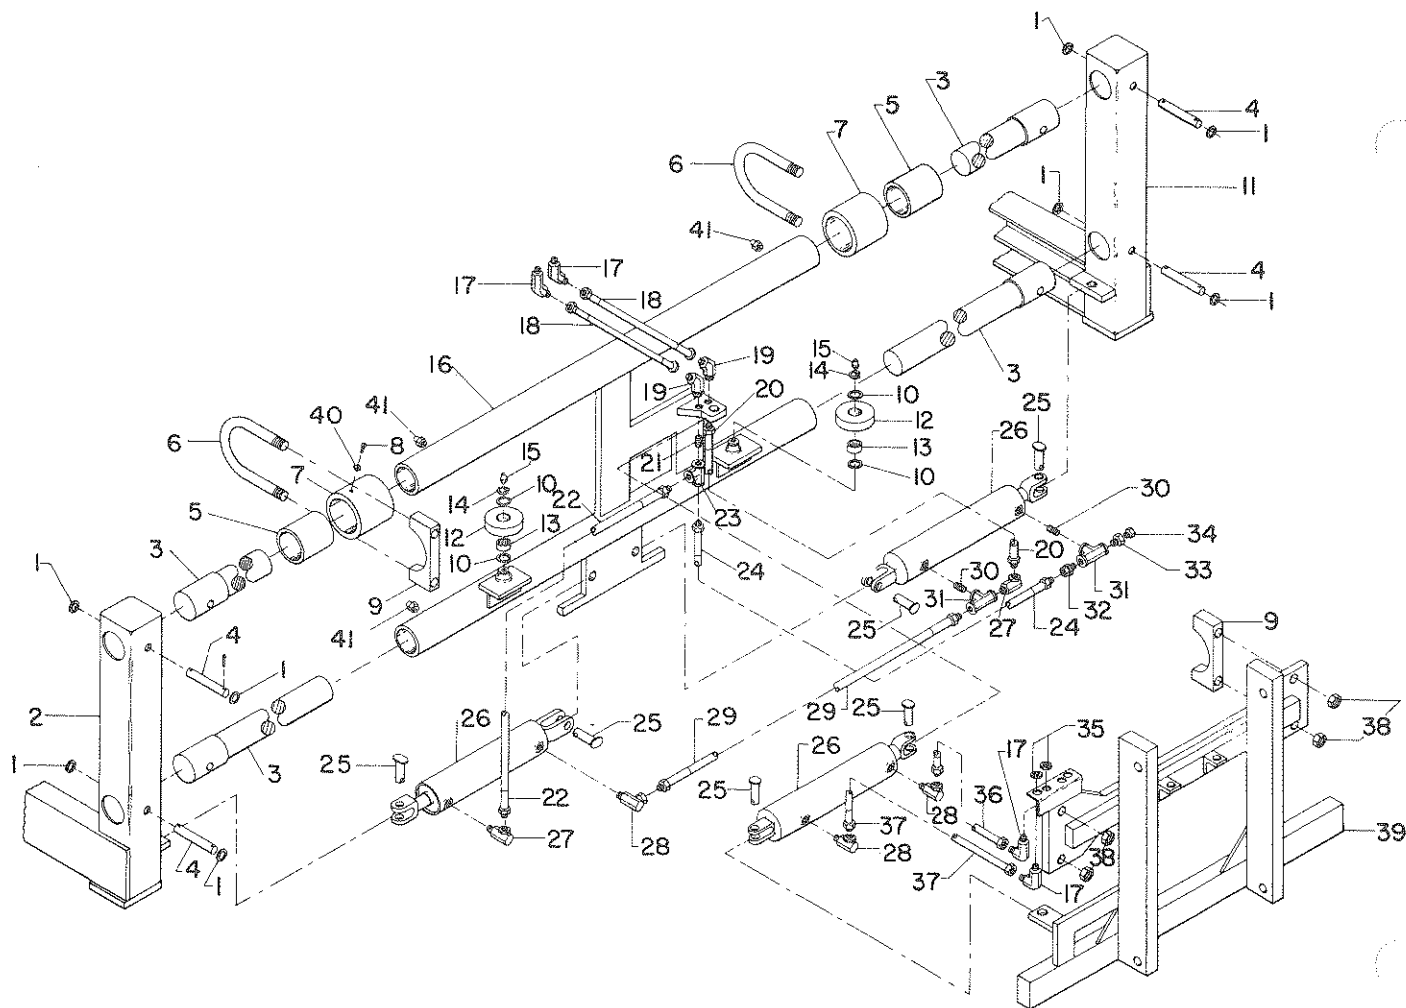


SQUEEZE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	WCT0100000	1" Flat Washer	20	01-217	3/8" Hydraulic Hose, 20"
2	15-110	Squeeze Arm, RH	21	01-719	3/8" x 4" Extra Heavy Black Nipple
3	15-103	Shaft, Squeeze Side Shaft, 4 used	22	01-216	3/8" Hydraulic Hose, 43"
4	15-102	Pin, Squeeze Side Shaft, 4 used	23	HYD3709030	3/8" Steel Tee
5	02-116	Brass Bushing, Side Shift Bearing, J9800 Bunting, 2 used	24	01-213	3/8" Hydraulic Hose, 22"
6	15-105	"U" Bolt, 2 used	25	06-115	Pin W/Keeper, 2 1/2", Hypower, 6 used
7	15-104	Bearing with Bushing, 2 used	26	01-557	Hydraulic Cylinder, LC 4 x 18 SP Hypower, 3 used
8	SQS3751000	3/8" x 1" Square Head Set Screw, 4 used	27	HYD9405034	1/2" x 90° Swivel Adapter
9	15-106	Saddle, 2 used	28	HYD9405044	1/2" x 90° Swivel Adapter
10	F4136	1-3/8" Washer, 4 used	29	01-205	1/2" Hydraulic Hose, 12"
11	15-101	Squeeze Arm, LH	30	01-720	1/2" Close Extra Heavy Black Nipple
12	15-109	Roller, 2 used	31	HYD3709040	1/2" Steel Tee
13	F 00004135	Bushing, M1-22 McGill, 2 used	32	HYD9205034	3/8" Straight Swivel Adapter
14	06-120	Snap Ring, 5100-137 Truarc, 2 used	33	HYD3109042	1/2" x 1/4" Steel Bushing
15	ZZ0000100	1/4" -28 Zerk, 2 used	34	HYD3159020	1/4" Steel Hex Head Plug
16	15-108	Squeeze Frame	35	HYD5924040	Bulkhead Nut
17	HYD5375040	1/2" x 45° Bulkhead Union Elbow	36	01-240	3/8" Hydraulic Hose, 43"
18	01-239	3/8" Hydraulic Hose, 48 1/2"	37	01-241	3/8" Hydraulic Hose, 23"
19	HYD5355040	1/2" x 45° JIC Male Elbow, 2 used	38	NFE0011250	1-1/8" NF Fiber Lock Nut
			39	14-113	Main Mast Apron Frame
			40	NCJ0003750	3/8" NC Jam Nut
			41	ZZ 0000103	1/8" NPT Zerk, 6 used

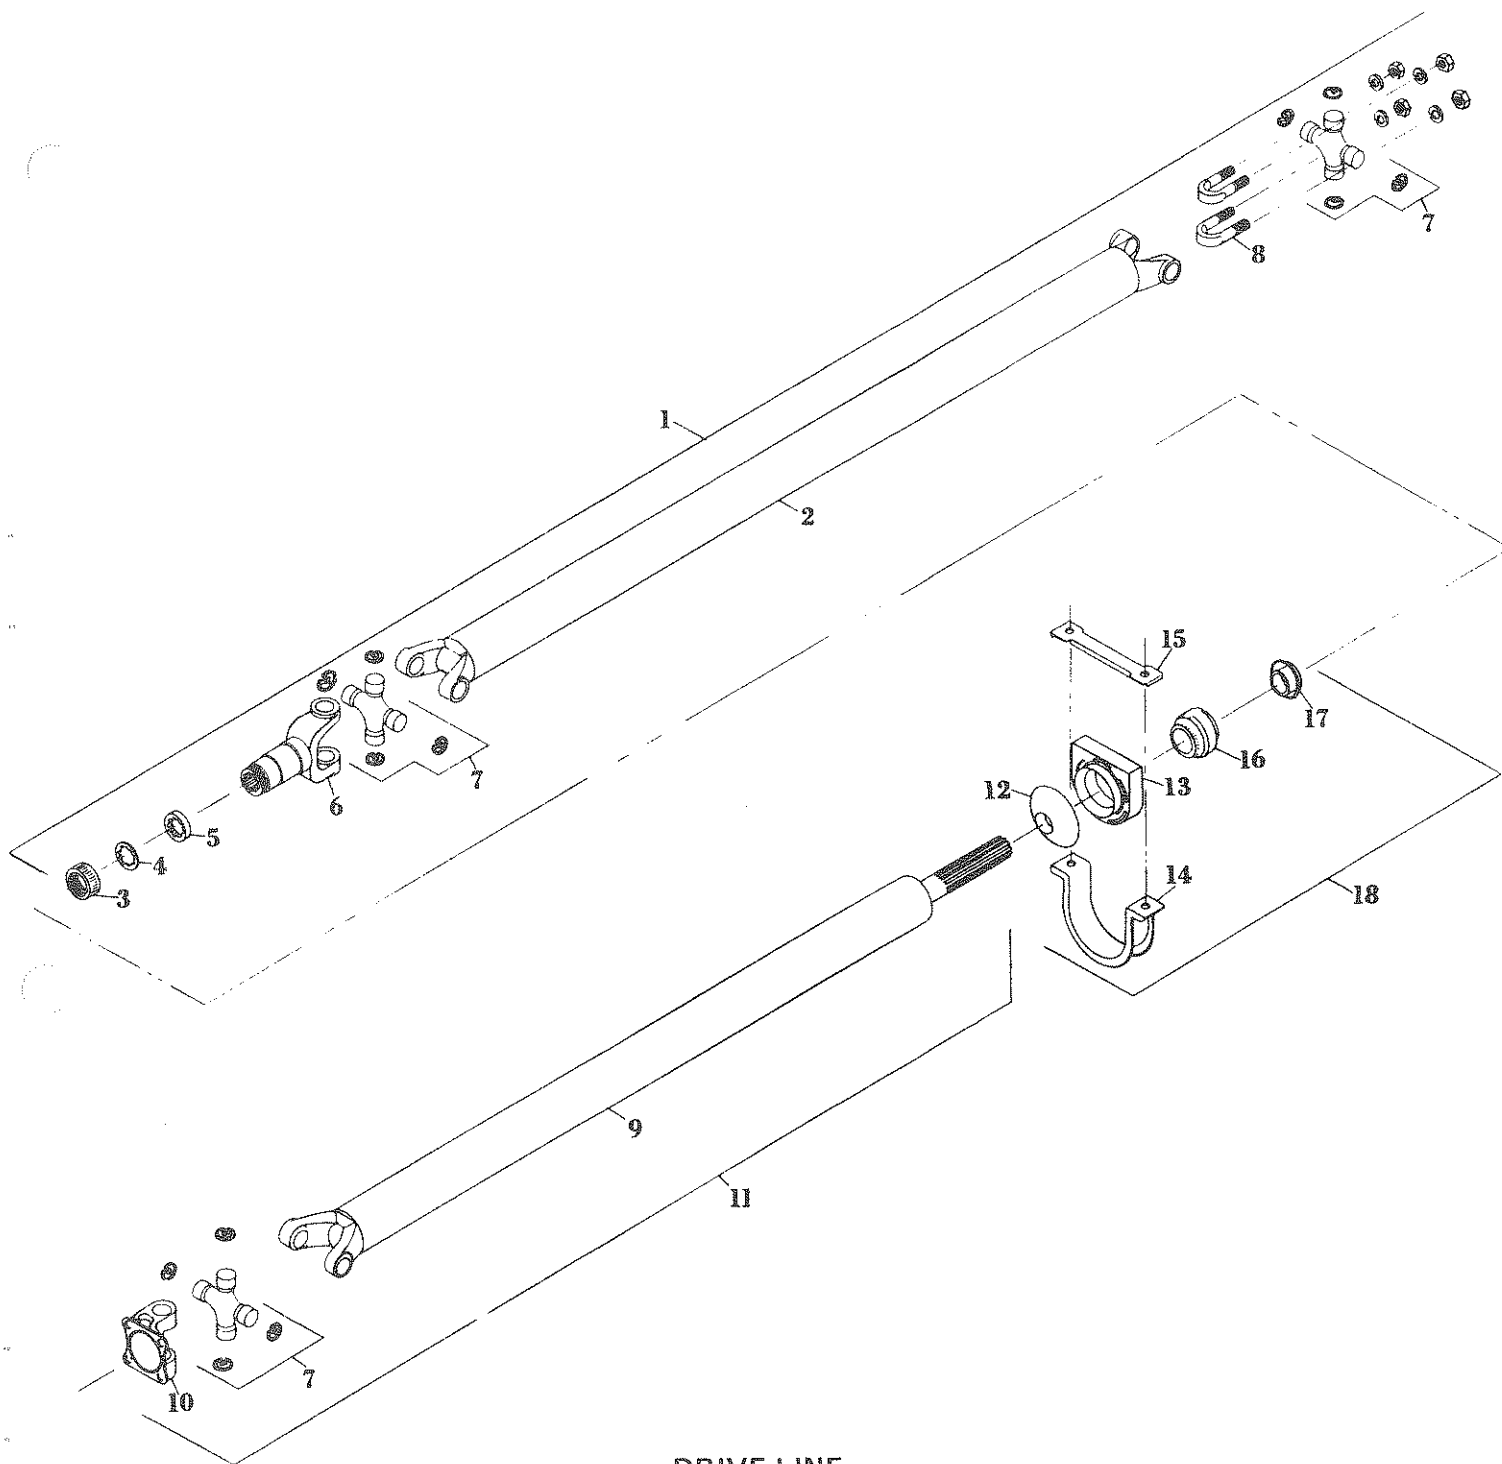


DRIVE LINE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	19-903	Drive Line Assembly, Rear	10	19-209	Flange Yoke, 3 - 2 - 429 Spicer
2	19-119	Tube with End Yokes, Rear Drive Line	11	19-907	Drive Line Assembly, Front
3	19-120	Dust Cap, 3 1/2" - 14 - 39 Spicer	12	19-128	Bearing Retainer & Shield
4	19-121	Steel Washer, 3 - 15 - 31 Spicer	13	19-129	Cushion, Center Bearing, Rubber
5	19-122	Cork Washer, 3 - 16 - 31 Spicer	14	19-130	Bracket, Center Bearing
6	19-123	Slip Sleeve Yoke, 3 - 3 - 1481X Spicer	15	19-131	Retainer, Top Cushion
7	19-124	Universal Cross Repair Kit, 3 used, 5-160X Spicer	16	19-132	Bearing, Retainer & Shield Assembly
8	19-125	"U" Bolt Assembly, 2 used	17	19-133	Slinger, End Yoke
9	19-201	Tube with Yoke & Shaft, Front Drive Line, IHC	18	19-905	Center Bearing Assembly, 210370 - 1X Spicer

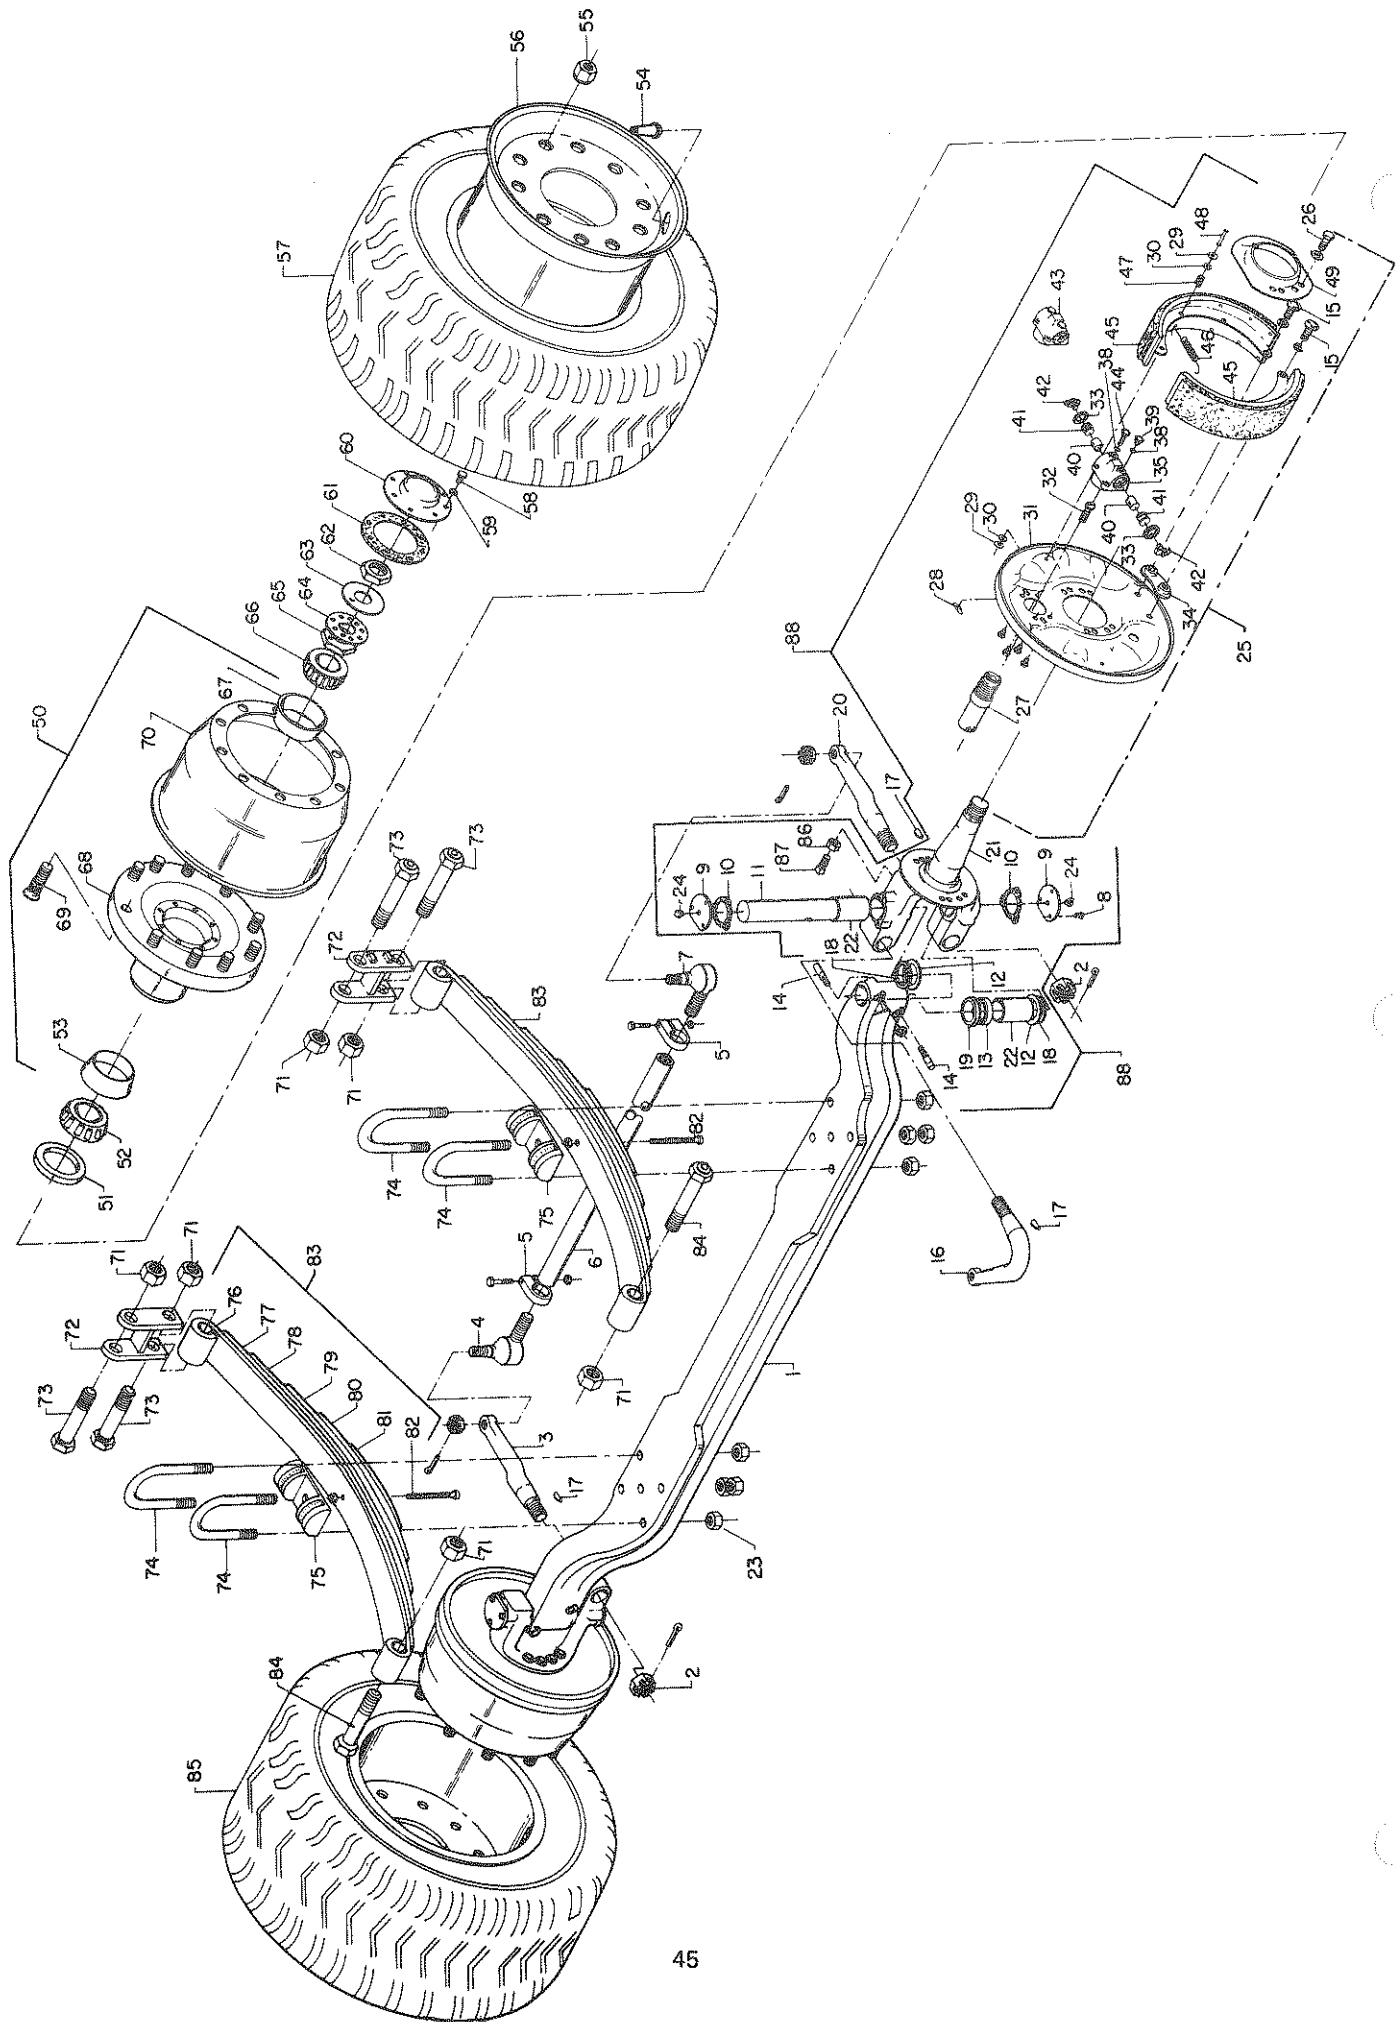


FRONT AXLE ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	AXL0000931	Axle Assembly W/Hub and Drum FF931RSHX2	43	BRK3299454	Actuating Housing Assembly, A3-3299S4543
2	AXL3100551	Axle Center Only 3100X5510	44	19-385	Plunger Guide, 1779T592
3	19-339	Nut, 14" x 27"	45	BRK3222108	Brake Shoe W/Lining, A1-3222V1088
4	ARM3133998	Cross Tube Arm 3133J998	46	SPG2258566	Spring, Shoe Return, 2258T566
5	19-341	Cross Tube Rod End, RH, 269-2244NAPA	47	SPG2858091	Spring, Shoe Anti Rattle, 2858M91
6	06-147	End Clamps	48	ROD1779377	Anti Rattle Rod, 1779M377
7	19-343	Cross Tube Only, 3102W3455	49	BRG3286348	Slinger, Oil, 3286J348
8	19-344	Cross Tube Rod End Assembly, A1-3102W5455	50	HUB1033325	Hub & Drum Assembly, RH, A1-0333A2575
9	19-346	Cross Tube Rod End W/Nut, LH, 269-224NAPA		HUB0933325	Hub & Drum Assembly, LH, A9333A2575
10	19-347	Screw, 5259-1	51	SEL1205142	Oil Seal, 1205X1428
11	19-348	Steering Knuckle Dust Cap, 2297-2681	52	19-392	Inner Wheel Bearing Cone, HM212047, 2 used
12	19-349	Gasket, Steering Knuckle Cap, 2208Q823	53	19-393	Inner Wheel Bearing Cup, HM212011, 2 used
13	PIN3101179	Knuckle Pin, 3101W179	54	19-109	Valve Stem
14	19-351	Shim, 0.010", 2203K3001	55	19-195	Lug Nut, RH, 1199M118
15	19-352	Shim, 0.005", 2203L3002		19-107	Lug Nut, LH, 1199M117
16	BRG0000182	Thrust Bearing, T182, 2 used	56	19-106	Front Wheel, 10 Hole, 2 used
17	KEY0007112	Key, 7" x 112"	57	19-394	Tire, 14-17.5, 10 Ply Transport Duplex
18	BRK9722874	Brake Anchor Bolt Assembly, A22-972-2874		19-424	Truck Tube, 14-17.5
19	19-354	Steering Arm, 3133P1030	58	19-395	Cap Screws, S255
20	19-355	Key, 16" x 204"	59	19-396	Lock Washer, WA15
21	SEL1205143	Upper Oil Seal, 1205B1432	60	19-397	Hub Cap, 3262A53, 2 used
22	SEL1205133	Tower Oil Seal, 1205L1338	61	19-398	Gasket, 2208Y363
23	ARM3133103	Cross Tube Arm, LH, 3133P1030	62	19-399	Nut, Wheel Bearing, 1227B106
24	STE3112070	Steering Knuckle W/Bushing, RH, A-3111P2070	63	19-400	Lock Washer, 1229G475
25	STE3112045	Steering Knuckle W/Bushing, LH, A-3111Q2045	64	19-401	Pierced Lock Washer, 1229F474
26	BSH1225836	Bronze Bushing, 1225O836, 4 used	65	19-402	Adjusting Nut, 1227U541
27	NHF0007500	3/4" NF Hex Nut	66	19-403	Outer Wheel Bearing Cone, 3782
28	ZZ 0000101	1/4" -28 x 90° Zerk	67	19-404	Outer Wheel Bearing Cup, 3720
29	BRK1540214	Complete Brake Assembly, RH, RSH1540-214	68	HUB8333257	Wheel Hub & Cup Assembly, RH, W/Studs, A8-333A2575
30	BRK1540213	Complete Brake Assembly, LH, RSH1540-213	69	HUB9333257	Wheel Hub & Cup Assembly, LH, W/Studs, A9-333A2575
31	19-247	Rivets, 16" x 173"	70	STD0201380	Wheel Studs, RH, 20X1380
32	HSG3761461	Cylinder Housing Assembly, A3-3761S461	71	STD0200589	Wheel Studs, LH, 20X589
33	19-367	Adjusting Slot Cover, 1707A1	72	BRK3219392	Brake Drum, 3219H3929
34	19-368	Spring Retainer, 1807-A-1		NFE0011250	1-1/8" -12 NF Fiber Lock Nut, 6 used
35	19-369	Washer, 1829P198	73	19-104	Spring Shackle, 4 used
36	PLT3236196	Backing Plate, A-3236P1966	74	19-105	Bolt, Rear Shackle, 4 used
37	BRK2747114	14° Wedge Assembly, A2747J114	75	19-231	"U" Bolts
38	19-372	Seal Assembly, A21705M221	76	19-203	Spacer, Spring "U" Bolts
39	PLG2797144	14° Anchor Plunger, Left Brake 2797D144	77	19-332	Main Leaf
40	PLG2797146	14° Anchor Plunger, Right Brake 2797P146	78	19-333	2nd Leaf
41	PLG3299420	Plunger Housing, 3299N-4200	79	19-334	3rd Leaf
42	19-376	Guide Pawl, A1-1199Z3432	80	19-335	4th Leaf
43	19-377	Spring Guide Pawl, 2258X531	81	19-336	5th Leaf
44	19-378	Gasket, 1729B262	82	19-337	6th Leaf
45	19-379	Cap Screw	83	19-331	Center Bolt
46	PLG2797134	14° Adjusting Plunger, Automatic, 2797D134	84	19-102	Front Spring Assembly
47	ACT1779362	Adjusting Actuator, 1779X362	85	19-110	Bolt, Front Shackle
48	BRK2797288	Adjusting Bolt, Brake, A2797B288	86	19-410	Tire & Wheel Assembly
			87	19-411	Nut, N410
			88	19-412	Stop Screw, 26X117
				STE3111207	Steering Knuckle Assembly, RH, A32-3111P2070
				STE3111204	Steering Knuckle Assembly, LH, A20-3111Q2045

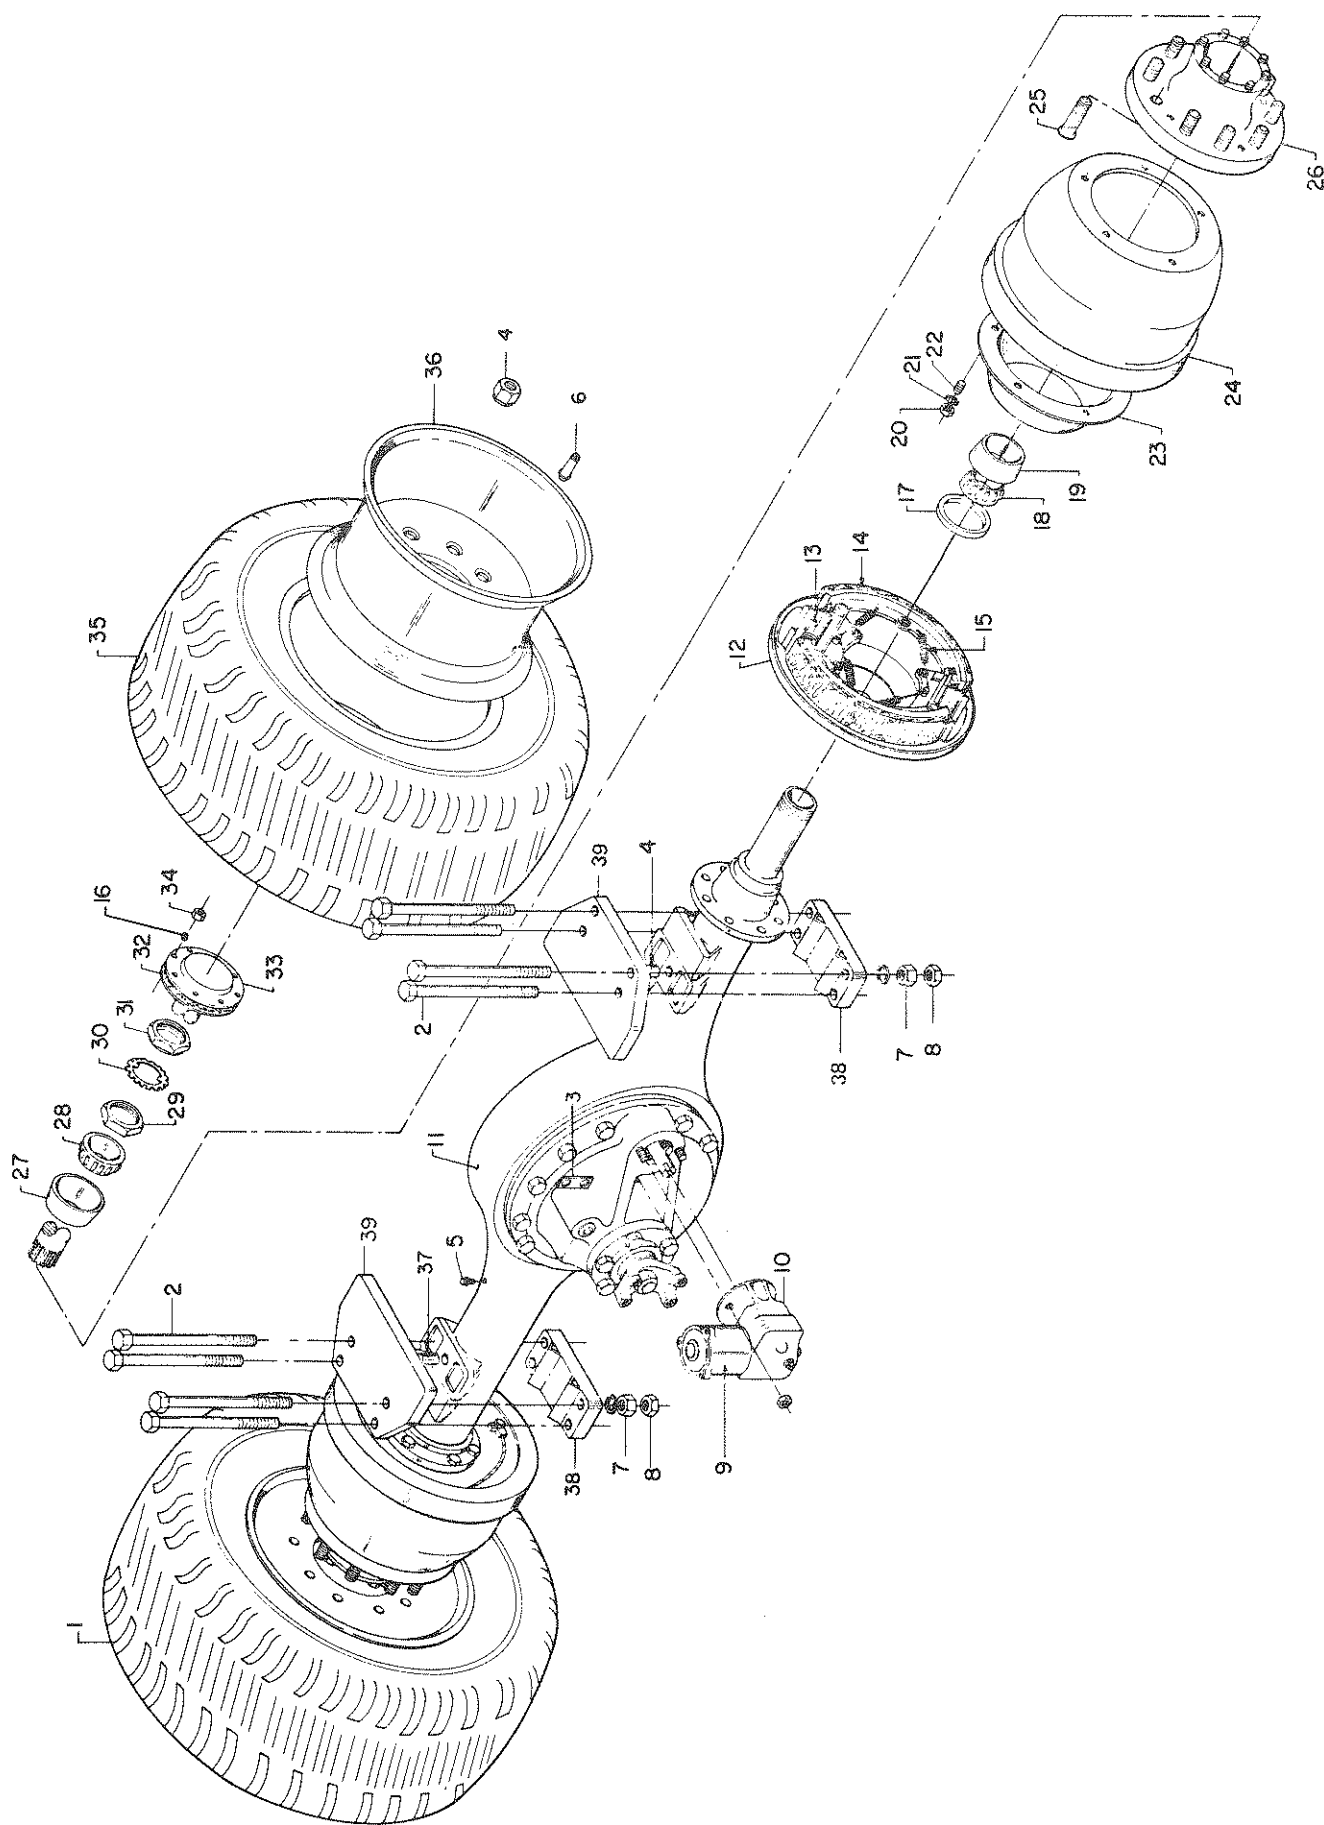

REAR AXLE ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	WHL0040195	Wheel and Tire Assembly
2	SFC0000828	3/4" x 11" NFHT Cap Screw, 8 used
3	19-159	Brake Line Support
4	ETN0037889	Wheel Nut, LH
	ETN0037888	Wheel Nut, RH
5	F 0001720	Vent
6	19-109	Valve Stem
7	NFH0007500	3/4" NF Hex Nut
8	NFJ0007500	3/4" NF Jam Nut
9	19-193	Motor Only, 2 Speed Shift
10	19-115	Two Speed Shift Unit with Motor
11	AXL0007607	Axle Complete with Pads
	AXL0687990	Axle Housing Only with Pads
12	WAG0075334	Brake Assembly, LH
	WAG0075335	Brake Assembly, RH
13	WAG0024489	Wheel Cylinder
14	WAG0068927	Brake Shoe, Set, 2 Used Per Wheel
15	WAG0019148	Brake Spring, 2 used
	WAG0019149	Brake Spring, 2 used
16	ETN0014571	Tapered Dowell, Axle Shaft, 16 used
17	ETN0042002	Oil Seal, Inner
18	ETN0035278	Bearing Cone, Inner, 495AX
19	BRG0000493	Bearing Cup, Inner, 493
20	ETN0099596	5/8" NF Lock Nut
21	ETN0050443	Washer
22	STD0000109	Stud, 2 1/2", NF and NC, W96 Leland
23	ETN0050432	Oil Slinger, 50432
24	BRK3120531	Brake Drum, 03-120531 Daton Walther
25	ETN0059192	Wheel Stud, LH
	ETN0059191	Wheel Stud, RH
26	ETN0050437	Wheel Hub W/Stud Bolts, RH, 50437
	ETN0050436	Wheel Hub W/Stud Bolts, LH, 50436
27	ETN0039520	Bearing Cup, Outer
28	ETN0030689	Bearing Cone, Outer
29	ETN0019186	Hub Nut, 2 used
30	ETN0030714	Hub Nut Lock
31	ETN0036997	Nut with Oil Seal, 2 used
32	ETN0036480	Gasket, Axle Shaft, 2 used
33	ETN0059502	Axle Shaft
34	ETN0075184	Nut, Axle Shaft Stud, 16 used
35	TIR4019195	Tire, 40X19X19.5 -12 ply, ND Duplex
36	WHL0030872	Rear Wheel, 10 Hole
37	PIN0000104	3/4" x 1-3/16" Location Pin, 2 used
38	AXL0008503	Bottom Axle Guide, 2 used
39	SPC0726211	Spacer, 2 used

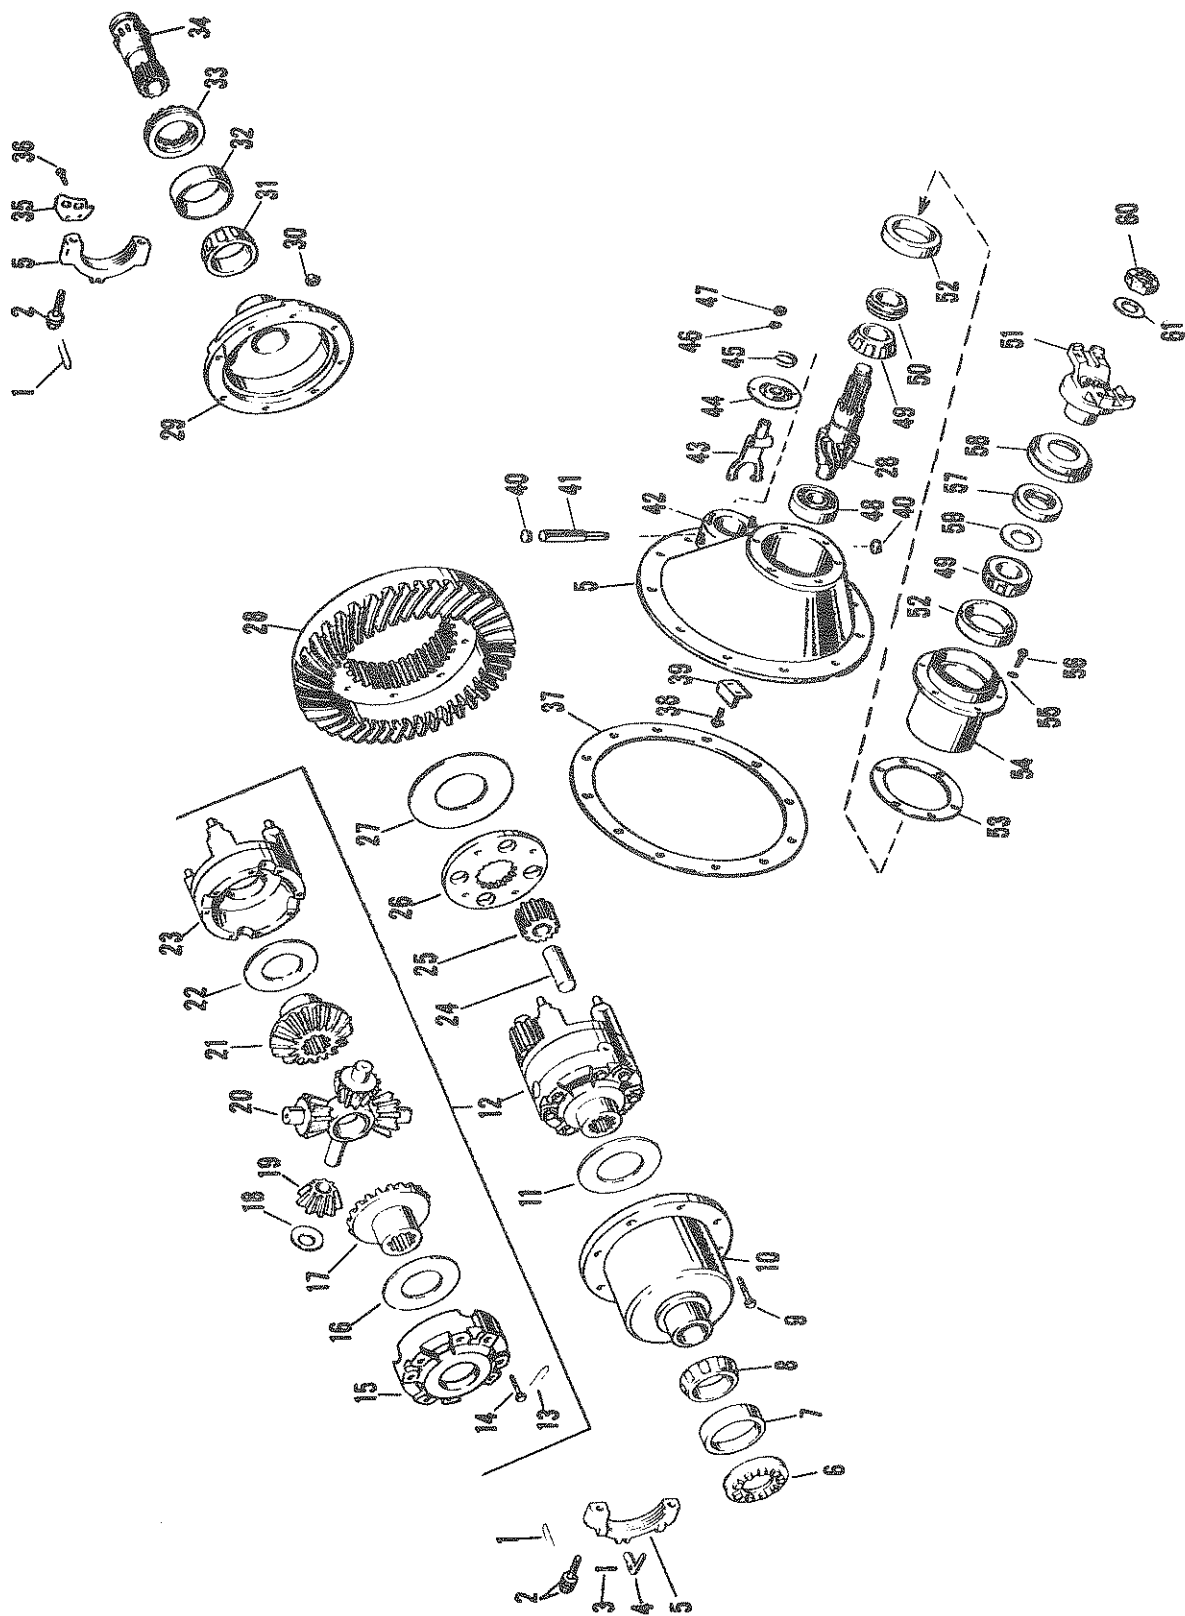


REAR AXLE DIFFERENTIAL BREAKDOWN

REF. NO.	PART NO.	DESCRIPTION
1	ETN0090536	Lock Wire
2	ETN0014970	Cap Screw
3	ETN0090873	Cotter Pin
4	ETN0013377	Adjuster Lock, RH
5	ETN0076930	Differential Carrier Housing Assembly with Bearing Caps
6	ETN0014950	Differential Bearing Adjuster, RH
7	ETN0009803	Differential Bearing Cap, RH
8	ETN0015094	Differential Bearing Cone, RH
9	ETN0044356	Bolt, Gear Support Cases to Gear
10	ETN0027860	Gear Support Case, RH Half
11	ETN0018346	Support Case Thrust Washer, RH
12	ETN0065515	Differential Assembly
13	ETN0023130	Lock Wire
14	ETN0015050	Cap Screw
15	ETN0025967	Differential Case, RH Half
16	*	Side Gear Thrust Washer
17	*	Side Gear, RH
18	*	Side Pinion Thrust Washer
19	*	Side Pinion
20	*	Spider
21	*	Side Pinion, LH
22	*	Side Pinion Thrust Washer
23	ETN0027880	Differential Case with Clutch Plate Pin
24	ETN0014935	Idler Pinion Pin
25	ETN0027875	Idler Pinion
26	ETN0074023	High Speed Clutch Plate
27	ETN0043269	Support Case Thrust Washer, LH
28	ETN0096800	Drive Gear and Pinion, Matched Including Nut
29	ETN0027859	Gear Support Case, LH Half
30	ETN0060598	Lock Nut
31	ETN0027876	Differential Bearing Cone, LH
32	ETN0015092	Differential Bearing Cup, LH
33	ETN0074022	Differential Bearing Adjuster, LH
34	ETN0074021	Slide Clutch Gear, 2 Speed
35	ETN0014949	Adjusting Lock, LH
36	ETN0009820	Cap Screw
37	ETN0071806	Carrier Gasket
38	ETN0067815	Oil Trough Screw
39	ETN0067814	Oil Trough
40	ETN0009797	Expansion Plug
41	ETN0047399	Shift Fork Shaft, 2 Speed
42	ETN0078400	Shift Unit Stud, 2 Speed
43	ETN0032425	Shift Assembly
44	ETN0064085	Shift Fork Seal and Spring
45	ETN0035585	Shift Fork Seal Spring
46	ETN0078401	Stud Flat Washer
47	ETN0063028	Stud Nut
48	ETN0015828	Pinion Pilot Bearing
49	ETN0033699	Pinion Bearing Cone, Inner
50	ETN0041568	Pinion Bearing Spacer, 0.638"
	ETN0041583	Pinion Bearing Spacer, 0.623"
51	ETN0042055	Assembly Yoke and Mud Slinger
52	ETN0012495	Pinion Bearing Cup
53	ETN0045461	.003 Shim
	ETN0062829	.005 Shim
	ETN0054562	.010 Shim
	ETN0062830	.020 Shim
	ETN0054463	.030 Shim
54	ETN0067817	Pinion Cage with Cups
55	ETN0029571	Lock Washer
56	ETN0030800	Cap Screw
57	ETN0064551	Oil Seal
58	ETN0079470	Oil Seal Retainer
59	ETN0012904	Companion Flange Flat Washer
60	ETN0095204	Pinion Nut
61	ETN0014354	Flat Washer

*SOLD ONLY AS KIT:


ETN0102739 Differential Assembly Repair Kit

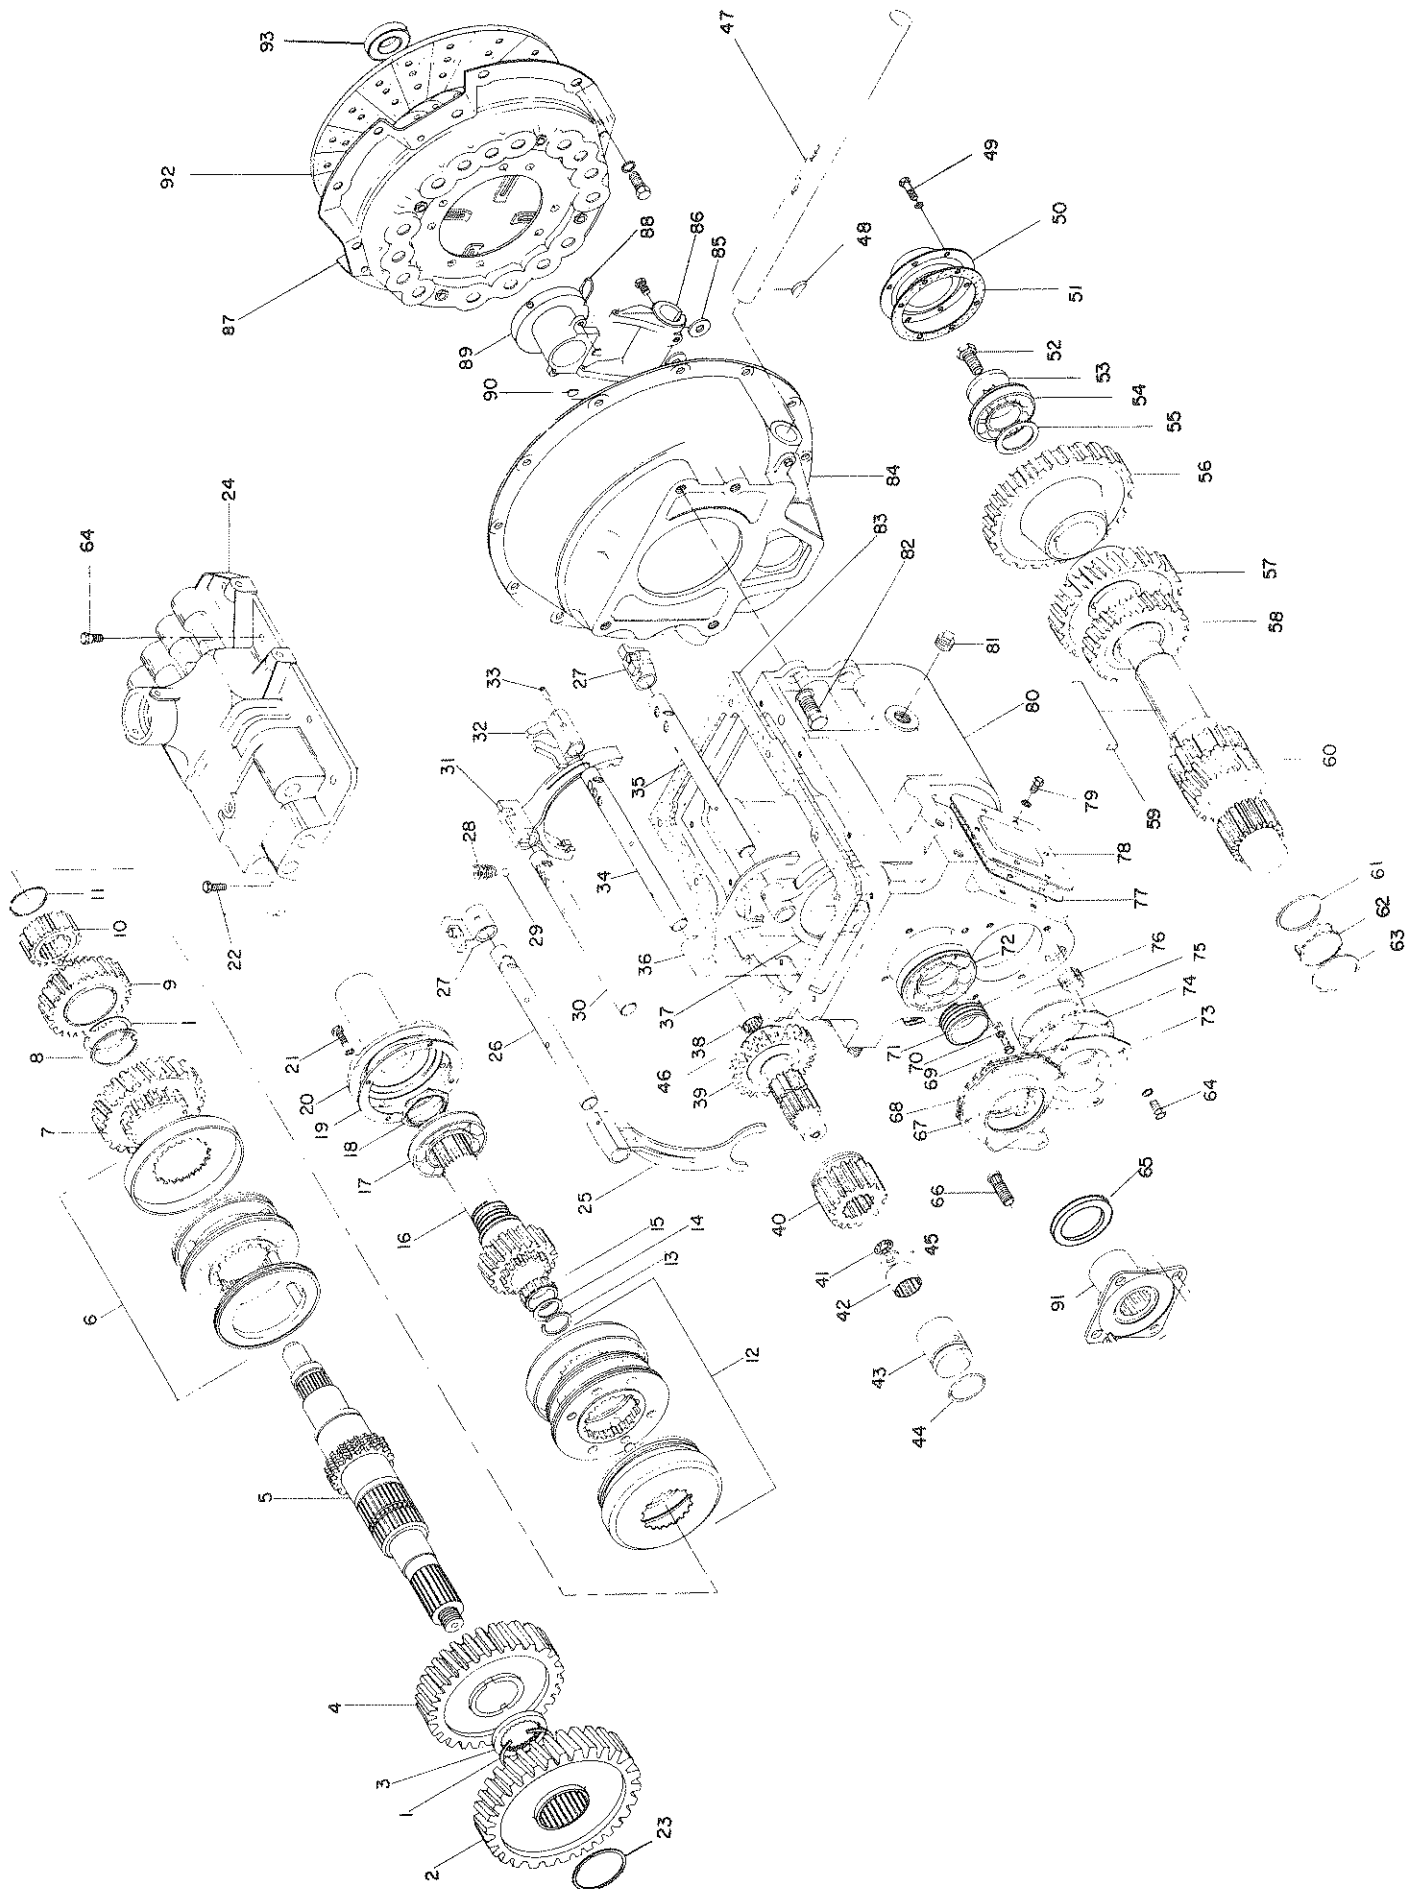

TRANSMISSION


19-922 - - - - - New Process 5 Speed

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	B 0097422	Snap Ring, 2 used	50	B 0097986	Retainer
2	B 0097844	Gear, M/S Low Speed	51	B 0092732	Gasket
3	B 0097974	Thrust Washer	52	B 0223736	Screw
4	B 0097978	Gear W/Bushing, 2nd Speed	53	B 0097979	Washer, Counter Shaft
5	B 0097848	Main Shaft	54	B 0092796	Bearing, Counter Shaft, MRC6208M
6	B 0094458	2 and 3 Synchronizer	55	B 0092917	Thrust Washer
7	B 0097999	Gear, 3rd Speed	56	B 0093644	Counter Shaft Drive
8	B 0097998	Washer	57	B 0092496	4th Speed Counter Shaft
9	B 0099003	Gear, 4th Speed	58	B 0092497	3rd Speed Counter Shaft
10	B 0095849	Gear, Synchromesh Clutch	59	B 0092716	Key
11	B 0096711	Snap Ring	60	B 0097847	Counter Shaft
12	B 0011564	4 and 5 Synchronizer	61	B 0094229	Spacer
13	B 0091484	Snap Ring	62	B 0091233	Roller, 24 used
14	B 0091486	Washer	63	B 0094228	Spacer, Rear
15	B 0091233	Roller, 14 Required	64	B 0061527	Screw
16	B 0099705	Main Drive	65	B 0090235	Seal, Main Shaft, 21120 C/R
17	B 0092695	Bearing, MRC211MFG	66	B 0091924	Bolt, 4 used
18	B 0092106	Nut	67	B 0093161	Retainer, Main Shaft
19	B 0038809	Gasket	68	B 0093257	Gasket
20	B 0094809	Retainer	69	B 0423351	Screw
21	B 0090128	Screw, 4 used	70	B 0038869	Lock Plate
22	B 0091739	Shoulder Screw, 2 used	71	B 0093628	Speedometer Gear
23	B 0099009	Stop, Low Speed Gear	72	B 0092712	Bearing, MRC 308MG
24	B 0097342	Case Cover Only	73	B 0097982	Retainer with Race
	B 0011353	Cover Assembly Complete	74	B 0091204	Gasket
25	B 0092719	Reverse Fork	75	B 0094227	Race, Cam Shaft
26	B 0091221	Reverse Shifter Rail	76	B 0093769	Drain Plug
27	B 0091217	Low Lug, 2 used	77	B 0035666	Gasket, PTO Cover, 2 used
28	B 0091504	Spring, 4 used	78	B 0035662	PTO Cover, 2 used
29	B 0147491	Poppet Balls, 10 used	79	B 0423351	Screw, 12 Required
30	B 0091224	Fourth and Fifth Rail	80	B 0011650	Gear Case
31	B 0093966	Fork, 4th and 5th	81	B 0444592	1/2" Plug
32	B 0091491	Lug, 2nd and 3rd	82	SCC0000705	5/8" x 1 1/4" NCHT Cap Screw, 4 used
33	B 0091239	1/8" Roll Pin, 7 used	83	B 0092794	Gasket
34	B 0092779	Rail, 2nd and 3rd	84	B 0094816	Bell Housing
35	B 0092717	Low Rail	85	B 0092421	Washer Key, 2 used
36	B 0091677	Fork, 2nd and 3rd	86	B 0092348	Yoke
37	B 0092718	Fork, Low	87	CLH0260280	Pressure Plate, JD Only
38	B 0092737	Bearing, Front, B1412		CLH01219BW	Pressure Plate, AC & IHC
39	B 0092533	Reverse Idler Gear	88	B 0092345	Spring, Pull Back
40	B 0092534	Reverse Shift Idler Gear	89	B 0093787	Sleeve Only
41	B 0093081	Thrust Bearing		B 0093798	Bearing
42	B 0092743	Bearing Race, B1816	90	B 0092429	Clutch Pad
43	B 0097991	Retainer, Reverse Idler Gear	91	B 0095249	Companion Flange
44	B 0092822	O-Ring	92	CLH0011967	Clutch Disc
45	B 0093079	Thrust Bearing Race	93	F 0005362	Pilot Bearing, 6205-2RSNR, AC & IHC
46	B 0099976	Thrust Washer		BRG0063052	Pilot Bearing, JD
47	19-202	Shaft			
48	F 0005389	Woodruff Key			
49	B 0095276	Screw, 6 used			

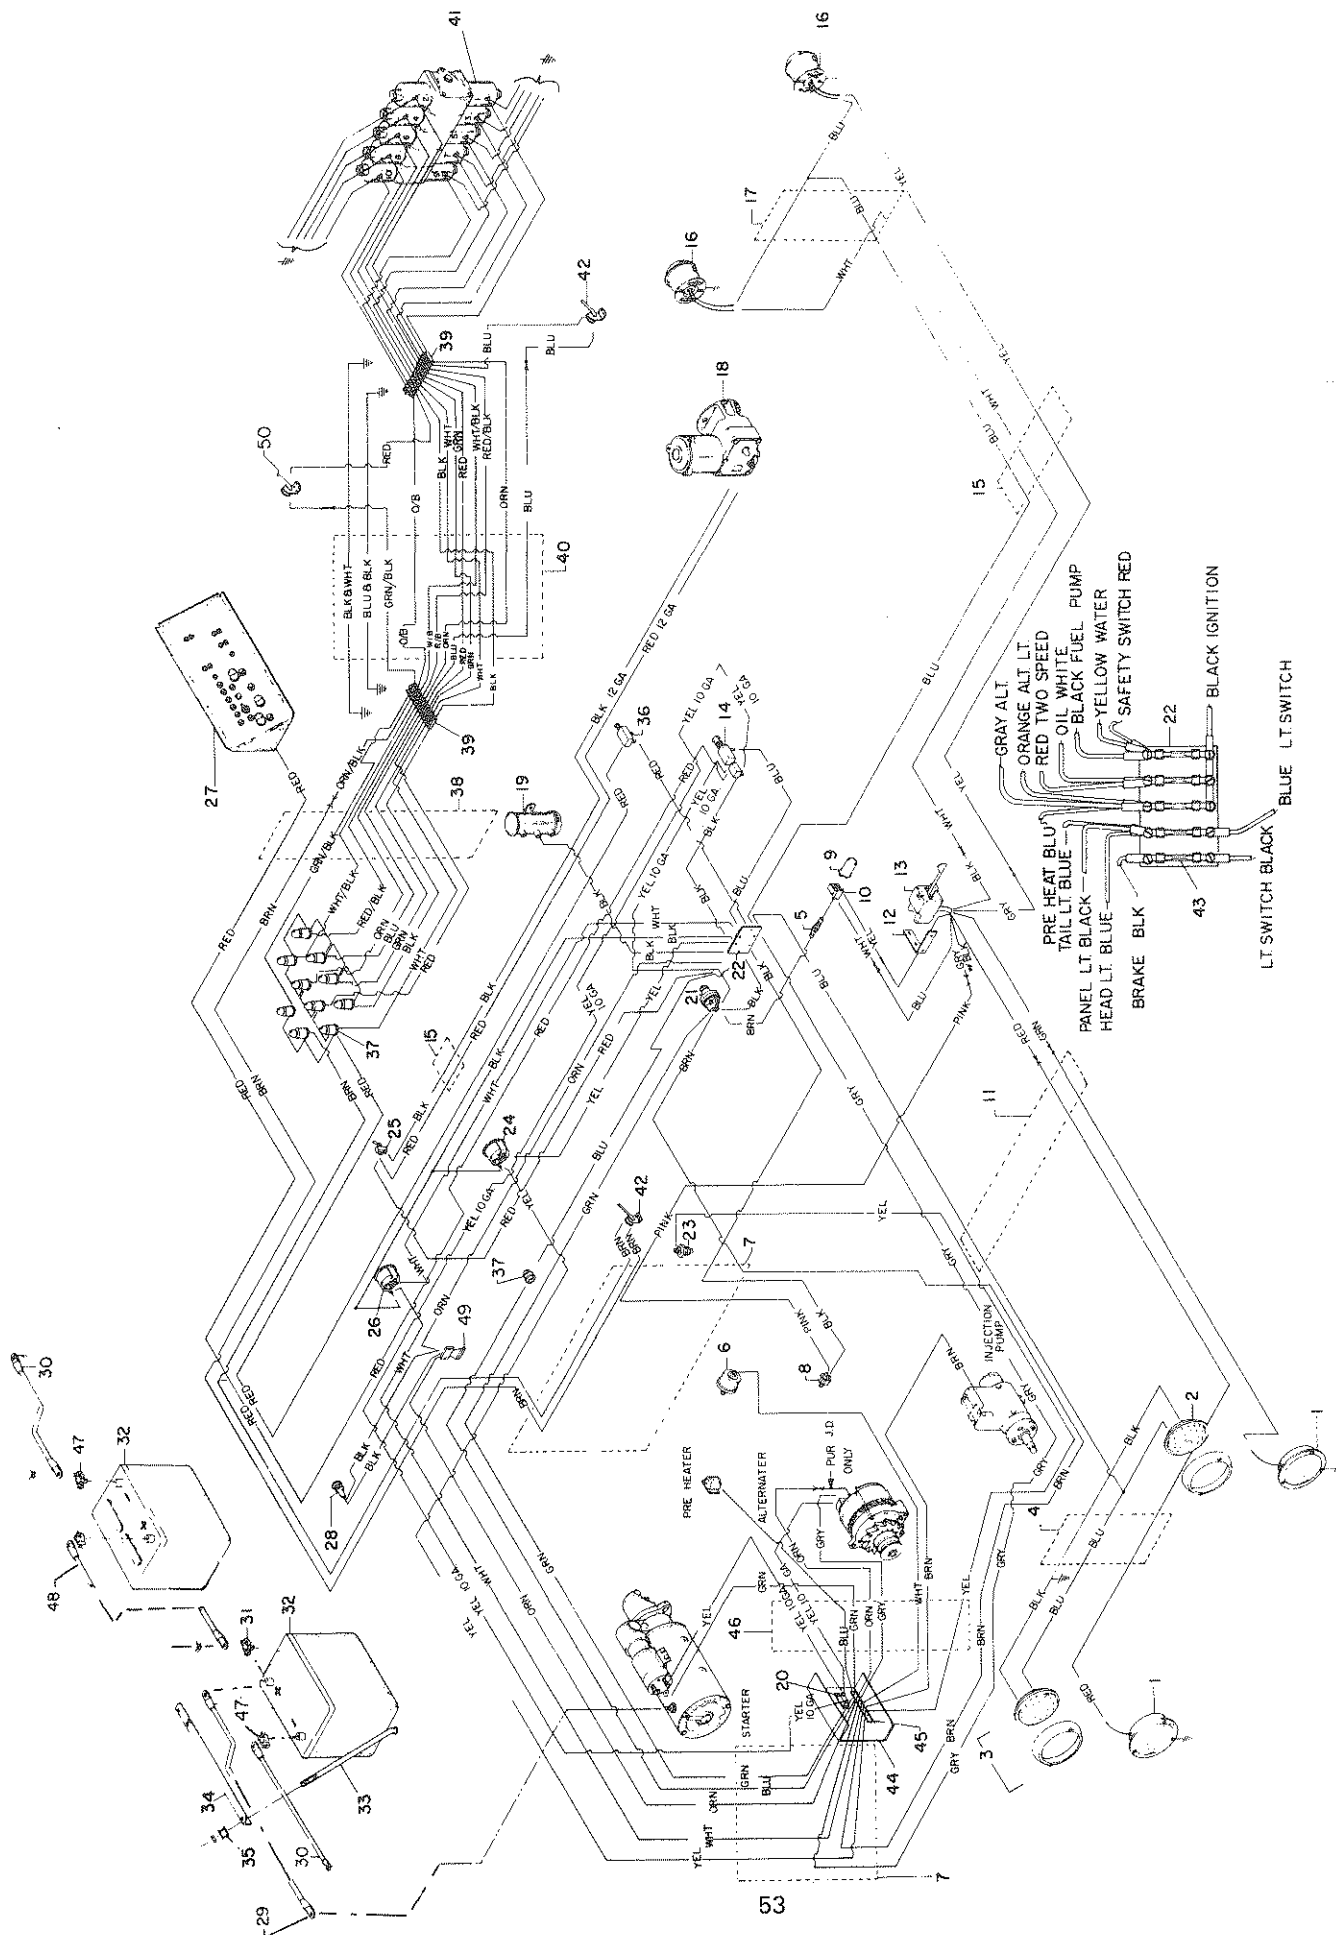


ELECTRICAL SYSTEM

REF. NO.	PART NO.	DESCRIPTION
1	03-155	Turn Signal Light, 6003-12-A, Speaker, 2 used
2	F 0005842	Sealed Beam Unit Only, 2 used
3	F 0006428	Headlight with Housing
4	03-150	Wire Harness, Head Light & Turn Signal
5	03-112	Fuse, 14 Amp.
6	03-132	Sending Unit, Oil Pressure, 279B SW
7	HRN0007533	Wire Harness, AC, Junction Box to Deck
	HRN0008504	Wire Harness, JD, Junction Box to Deck
8	03-130	Switch, Stop Light, SL 132 Echlin
9	03-113	Flasher, 550 Echlin
10	03-195	Flasher Base
11	HRN0009041	Wire Harness, Deck to Hood
12	03-196	Mounting Bracket, Signal Light Control
13	03-157	Control, Signal Light, No. 900 Signal Stat
14	F 0000862	Switch, Light
15	03-153	Wire Harness, Deck to Rear
16	03-156	Tail and Stop Light, 182-2611 Napa
17	03-154	Wiring Harness, Tail & Stop Light
18	19-115	Two Speed Shift Unit W/Motor
	19-193	Motor Only, 2 Speed Shift
19	03-134	Electric Fuel Pump, No. 476087 Bendix
20	ELC0005540	Circuit Breaker, 3005-40 CH
21	03-110	Switch, Ignition, KS6180 Echlin
22	03-209	Fuse Block, 4625-01 CH
23	F 0006431	Sending Unit, Temperature, 362AN SW
24	F 0006421	Gauge, Temperature, 82306 SW
25	03-114	Switch, 2 Speed, 2X465 Grainger
26	03-116	Gauge, Oil, 82305 SW
27	03-901	Control Panel Complete, Cage
28	F 0006424	Amp Indicator Light
29	03-198	Battery Cable, IHC, 75"
	03-199	Battery Cable, JD, 92"
	03-200	Battery Cable, AC, 62"
30	03-201	Cable, Ground, 13"
31	03-203	Battery Terminal, Positive, CP809
32	F 0006639	Battery, 2 Used with Diesel
33	F 0006551	Battery Holddown Bolt, 2 used
34	F 0006626	Battery Holddown, Gasoline
	F 0006627	Battery Holddown, Diesel
35	F 0006328	Battery Holddown, (Grommet), 2 used
36	F 0005235	Switch
37	F 0005237	Switch, Solenoid Control, 10 used
38	03-215	Wire Harness, Solenoid Switch to Terminal Block
39	03-208	Terminal Block, 21.331.6053 Electrovert
40	03-214	Wire Harness, Term. Block to Term. Block
41	03-142	Solenoid Coil Only
42	F 0000946	Switch Limit, 3 used
43	03-193	15 Amp. Fuse, AGC-15
44	SHD0007022	Junction Box Cover
45	03-210	Terminal Block, 8 Post, 4721-P8 CH
46	HRN0009055	Wire Harness, AC, Junction Box to Engine
	HRN0009056	Wire Harness, JD, Junction Box to Engine
47	03-204	Battery Terminal, Negative, CP810
48	03-202	Battery Connecting Cable, 6½"
49	F 0006578	Resistor and Terminal Block, 10W-OHM
50	ELC0003101	Switch, Limit

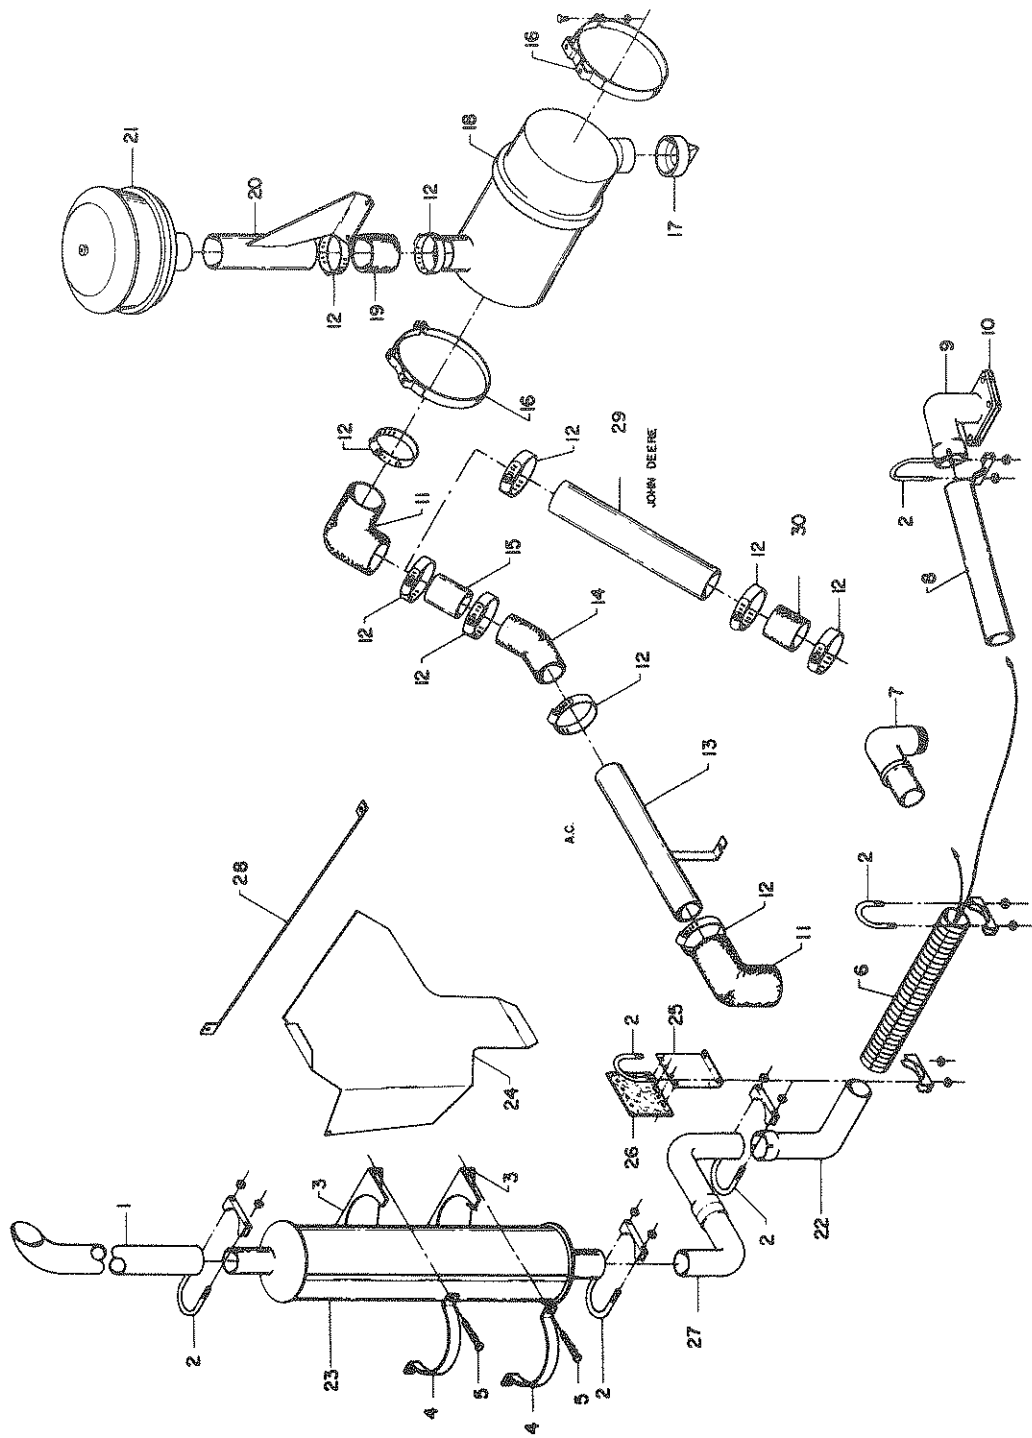


EXHAUST AND AIR CLEANER

REF. NO.	PART NO.	DESCRIPTION
1	EXH0007809	90° Exhaust Pipe
2	20-143	Muffler Clamp
3	BKT0007783	Muffler, Clamp Bracket
4	STR0644420	Muffler Support Strap
5	SCC0000217	5/16" x 5½" NCHT Cap Screw
6	EXH0000101	Flex Tube, 40-007 NAPA
7	20-155	Exhaust Pipe Adapter, AC
8	20-206	Exhaust Pipe, 2½" OD x 13"
9	20-208	Manifold Adapter, JD
10	20-195	Gasket for JD
11	F 0006795	Rubber Elbow, 3"
12	F 0006793	Hose Clamp, 705-1026 NAPA
13	FIL0007933	16" Air Filter Pipe
14	20-216	Rubber Elbow, 3" x 45°, 45HL3
15	20-215	Pipe, 3" OD x 4"
16	20-129	Clamp, Air Cleaner
17	20-128	Bleeder, Air Cleaner
18	20-127	Air Cleaner
	20-133	Air Cleaner Element
19	20-130	Hose, 3" ID x 4"
20	20-131	Air Cleaner Stand
21	20-132	Pre-Cleaner
22	20-153	Exhaust Elbow
23	20-140	Muffler
24	SHD0007838	Exhaust Pipe Shield
25	EXH0007834	Exhaust Pipe Hanger Angle
26	EXH0007836	Exhaust Pipe Hanger Web
27	EXH0008977	Double Exhaust Elbow
28	BRC0007813	Brace
29	20-151	Pipe, 3" OD x 16"
30	20-210	Hose, 2¾" ID x 4"

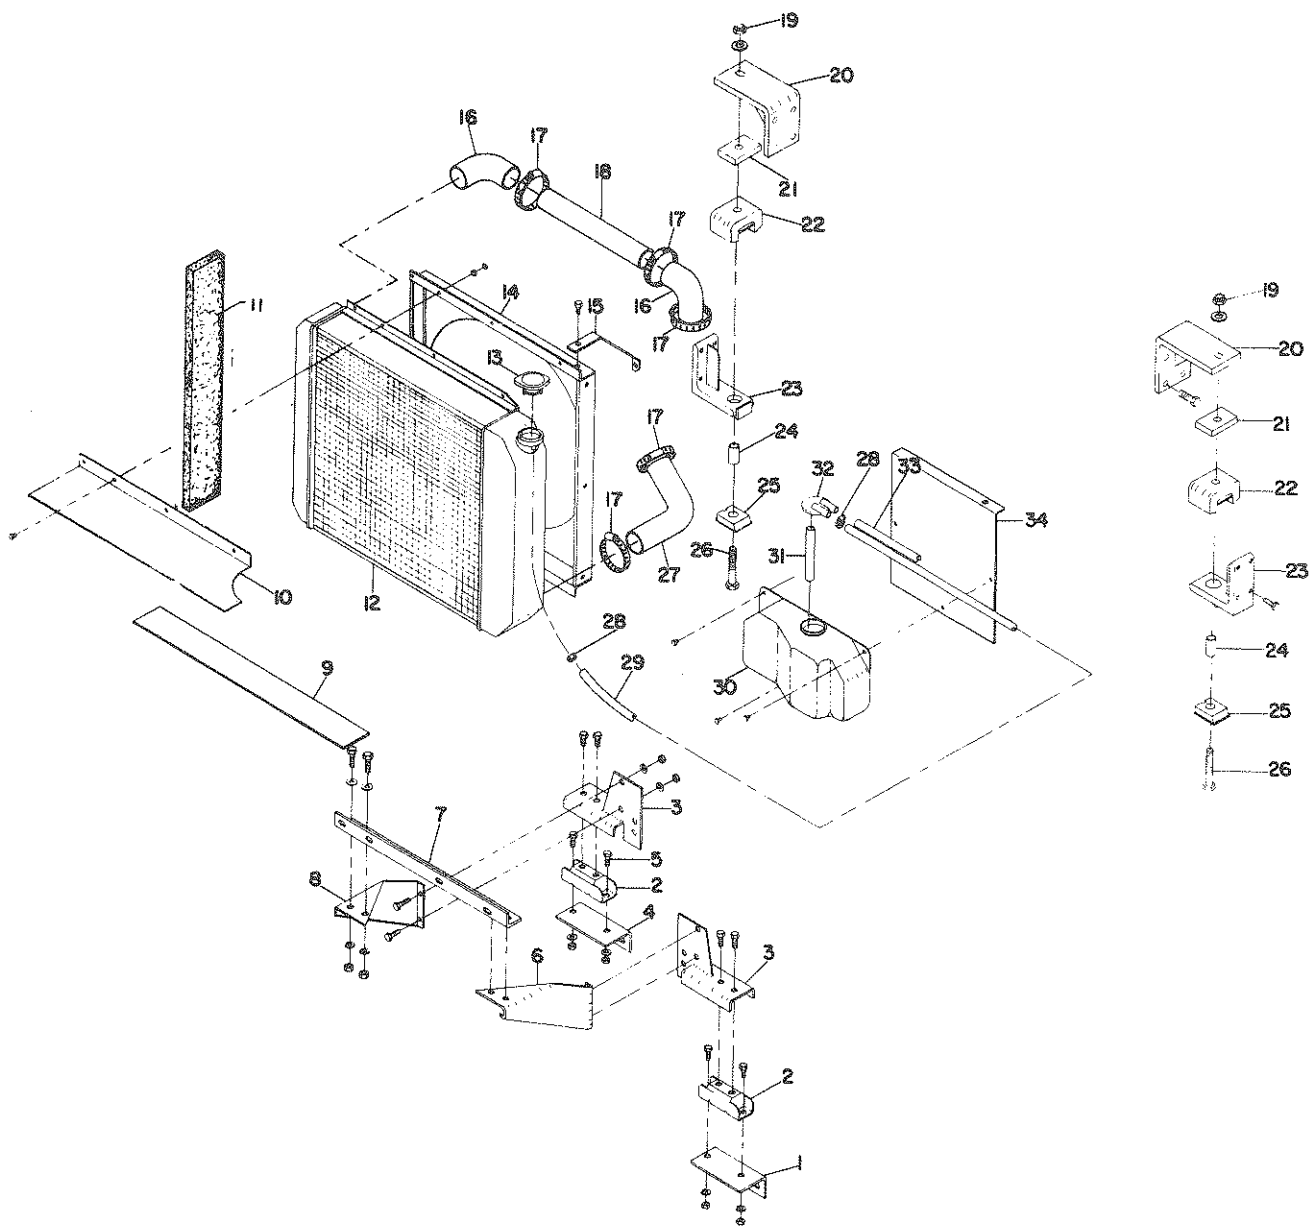


RADIATOR AND ENGINE MOUNTS – JOHN DEERE

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	20-149	Front Mount Angle, Engine to Frame, LH	16	20-174	Radiator Hose, 2" x 90°
2	20-168	Front Motor Mount, 3-5192 BK, 2 used	17	F 0006830	Hose Clamp, 4-1204 BK, 6 used
3	20-189	Front Motor Support, 2 used	18	20-192	Pipe, 2" x 12"
4	20-169	Front Mount Angle, Engine to Frame, RH	19	NCE0005625	9/16" NC Elastic Stop Nut
5	SCC0000402	7/16" x 1" NC Cap Screw	20	20-201	Engine Mount, 2 used
6	20-196	Radiator Support Bracket, LH	21	20-161	Spacer, 2 used
7	MNT0004524	Radiator Mount	22	20-109	Motor Mount, 3-5114 BK, 2 used
8	20-197	Radiator Support Bracket, RH	23	20-115	Engine Support Bracket, 2 used
9	20-198	Wind Baffle, Bottom Section	24	20-116	Bushing, 1-11/16" Long, 2 used
10	20-178	Wind Baffle, Top Section	25	20-112	Motor Mount, 3-511SBK, 2 used
11	SEL0000103	Wind Baffle Seal	26	SCC0000614	9/16" x 4" NC Cap Screw
12	20-176	Radiator	27	20-104	Radiator Hose
13	F 0006821	Radiator Cap with Gasket	28	F 0008301	Hose Clamp
14	20-177	Shroud	29	20-184	1/4" x 30" Overflow Tube
15	20-199	Brace, Radiator	30	20-181	Overflow Tank
			31	20-186	Siphon Tube
			32	20-185	Filler Cap
			33	20-180	1/4" x 5" Overflow Tube
			34	BKT0007070	Overflow Tank Support Bracket

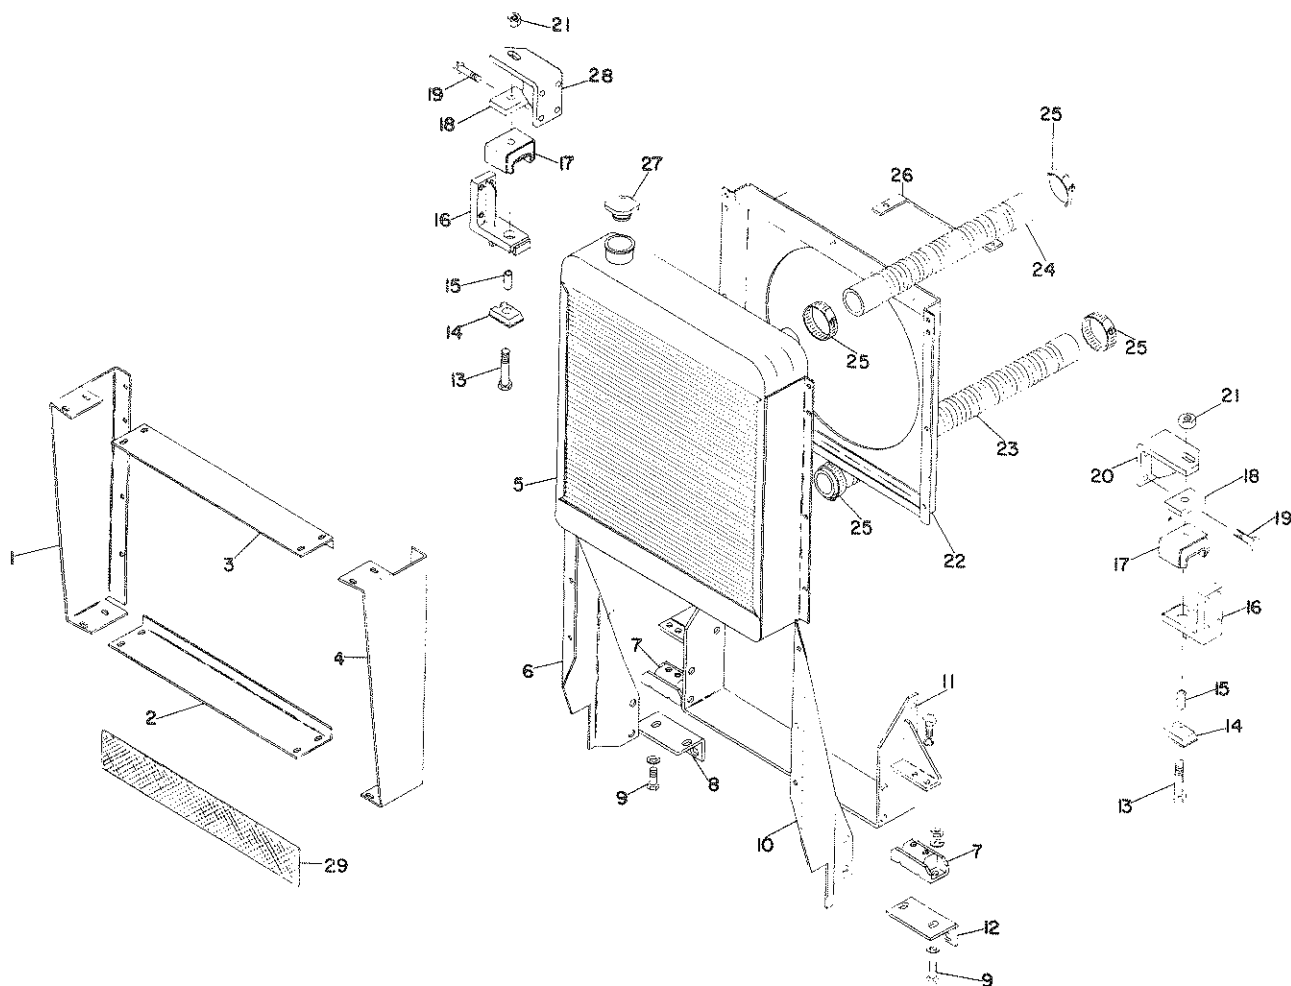


RADIATOR AND ENGINE MOUNTS, AC

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	20-171	Wind Baffle, Right Section	14	20-112	Motor Mount, 305155 BK, 2 used
2	20-170	Wind Baffle, Bottom Section	15	20-116	Bushing 101-1/16" Long
3	20-170	Wind Baffle, Top Section	16	20-115	Engine Support Bracket
4	20-172	Wind Baffle, Left Section	17	20-109	Motor Mount, 305114 BK, 2 used
5	F 0006823	Radiator	18	20-161	Spacer, 2 used
6	20-167	Radiator Mount, Right Side	19	SCC0000506	1/2" x 2" NCHT Cap Screw, 8 used
7	20-168	Front Motor Mount, 305192 BK	20	20-175	Rear Motor Mount Bracket, LH
8	20-169	Front Mount Angle, Engine to Frame, RH	21	NCE0005625	9/16" NC Fiber Lock Nut
9	SCC0000404	7/16" x 1 1/2" NCHT Cap Screw	22	F 0006824	Fan Shroud
10	20-166	Radiator Mount, Left Side	23	F 0006825	Radiator Hose, Upper, FM 62 Modoc
11	20-165	Front Motor Mount Bracket	24	F 0006827	Radiator Hose, Lower, FM 59 Modoc
12	20-149	Front Mount Angle, Engine to Frame, LH	25	F 0006830	Hose Clamp
13	SCC0000614	9/16" x 4" NCHT Cap Screw, 2 used	26	20-164	Top Radiator Brace
			27	F 0006821	Radiator Cap
			28	20-162	Rear Motor Mount Bracket, RH
			29	GRL0008318	Lower Grill

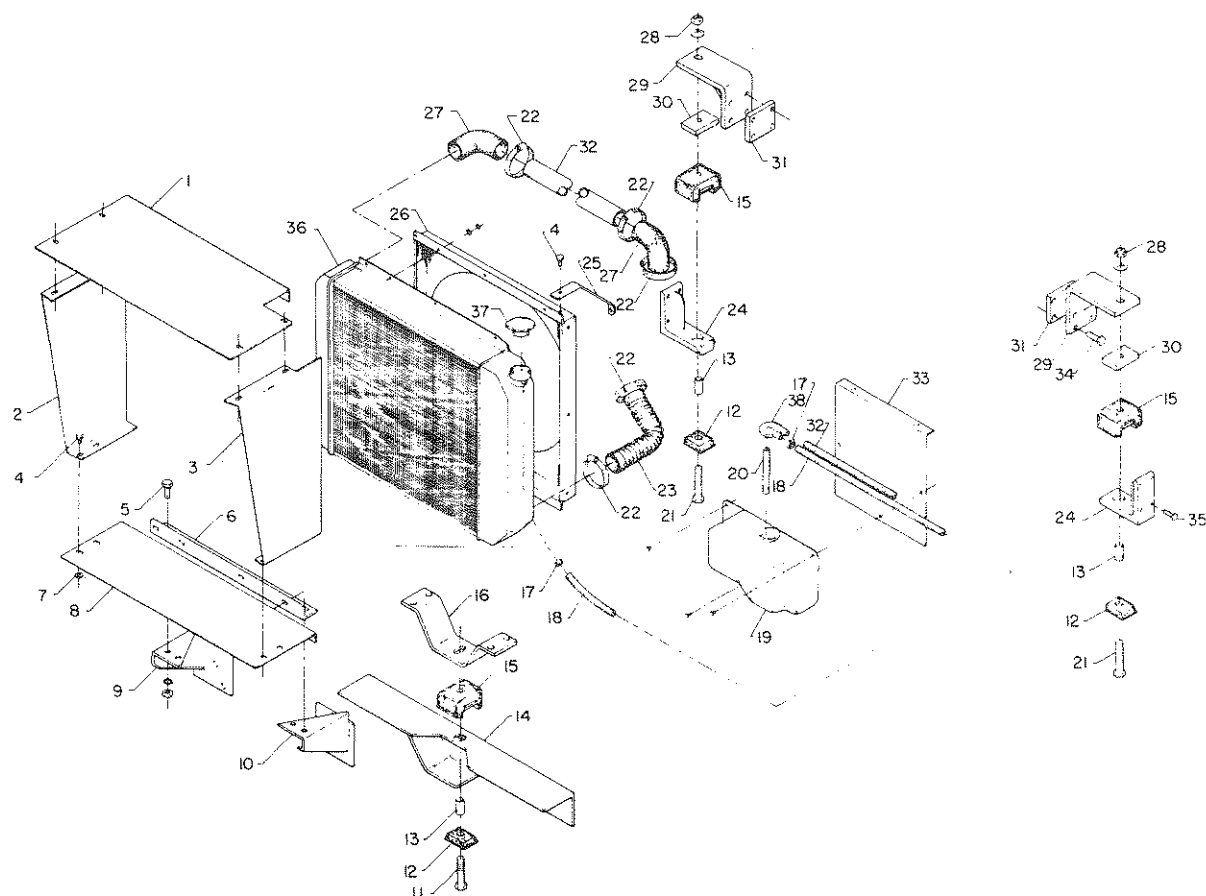


RADIATOR AND ENGINE MOUNTS, IHC

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	SHD0006598	Top Radiator Shroud	19	20-181	Overflow Tank
2	SHD0006599	Right Side Radiator Shroud	20	20-186	Siphon Tube
3	SHD0006600	Left Side Radiator Shroud	21	SCC0000614	9/16" x 4" NCHT Cap Screw, 2 used
4	SMS0000177	5/16" x 1" Whiz Locking Cap Screw, 12 used	22	F 0006830	Hose Clamp, 4-1204BK, 6 used
5	SCC0000504	1/2" x 1 1/2" NCHT Cap Screw, 4 used	23	F 0006825	Flex Radiator Hose, FM62 Modoc
6	MNT0004524	Radiator Mount	24	20-115	Engine Support Bracket, 2 used
7	NMS0000117	5/16" Whiz Lock Nut, 12 used	25	20-199	Brace, Radiator
8	SHD0006597	Bottom Radiator Pump Mount	26	20-177	Shroud
9	MNT0006595	Left Hand Radiator Pump Mount	27	20-174	Radiator Hose, 2" x 90°
10	MNT0006594	Right Hand Radiator Pump Mount	28	NCE0005625	9/16" NC Fiber Lock Nut
11	SCC0000610	9/16" x 3" NCHT Cap Screw	29	20-201	Engine Mount, 2 used
12	20-112	Motor Mount, 305115BK, 3 used	30	20-161	Spacer, 2 used
13	20-111	Bushing, 1-7/16" Long, 3 used	31	20-113	Spacer, Engine Mount, 2 used
14	29-110	Front Engine Support	32	RAD0000102	Pipe, 2" x 10" Long
15	20-109	Motor Mount, 305114BK, 3 used	33	BKT0007070	Over Flow Tank Bracket
16	MNT0003037	Radiator Mounting Bracket	34	SCC0000506	1/2" x 2" NCHT Cap Screw, 8 used
17	F 0008301	Hose Clamp, 2 used	35	SCC0000503	1/2" x 1 1/4" NCHT Cap Screw, 8 used
18	20-184	1/4" x 30" Over Flow Tube	36	20-176	Radiator
			37	F 0006821	Radiator Cap W/Gasket
			38	20-185	Filler Cap

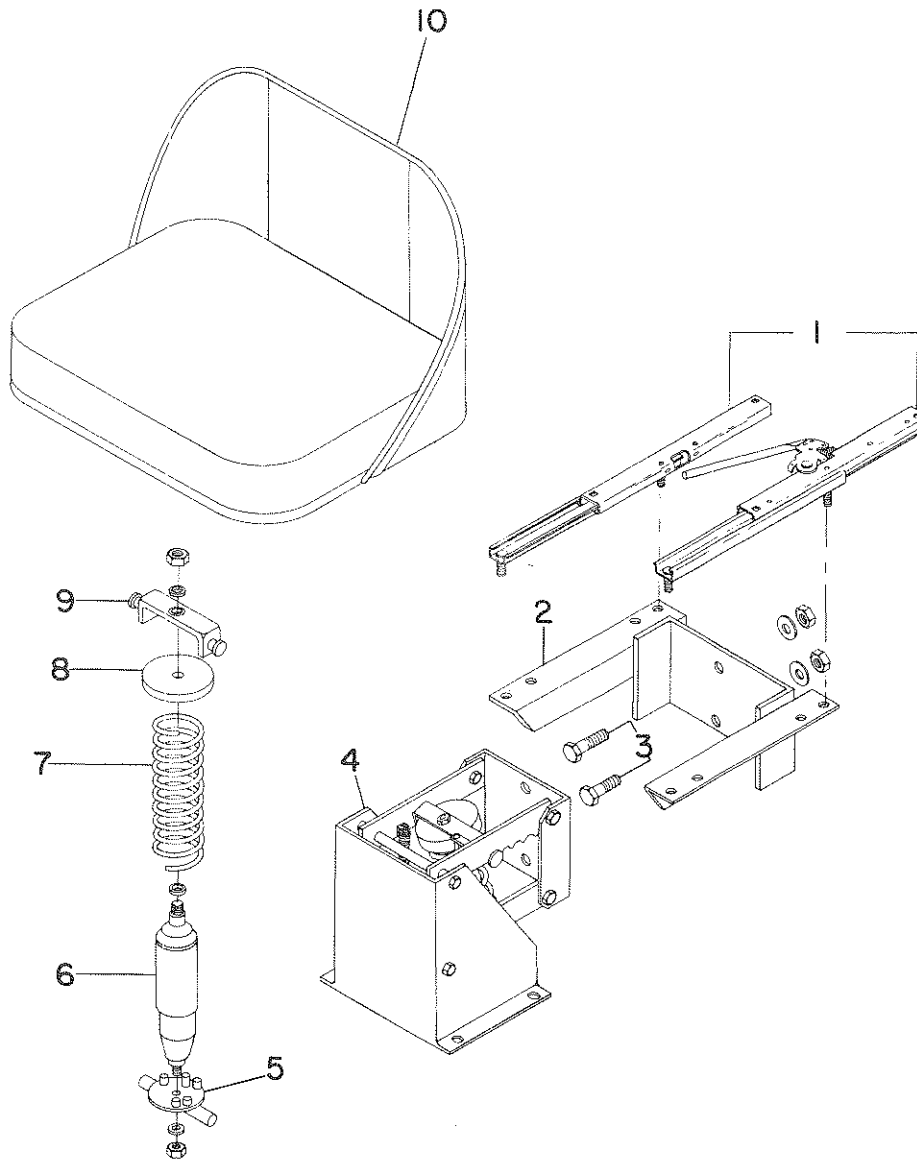

SEAT ASSEMBLY

REF. NO.	PART NO.	DESCRIPTION
1	F 0006858	Seat Adjusting Rails, Complete
2	F 0005867	Seat Bracket
3	SCC0000505	½" x 1¾" NCHT Cap Screw
4	F 0005703	Seat Spring & Hydraulic Assembly Complete
5	F 0005505	Plate, Bottom Pivot
6	F 0005866	Shock Absorber
7	F 0005705	Spring, Seat Assembly
8	F 0005502	Cup Washer
9	F 0005501	Spring & Cylinder Adjusting Bracket
10	F 0005918	Seat Assembly
	F 0005920	Bottom Seat Cushion
	F 0005921	Back Cushion

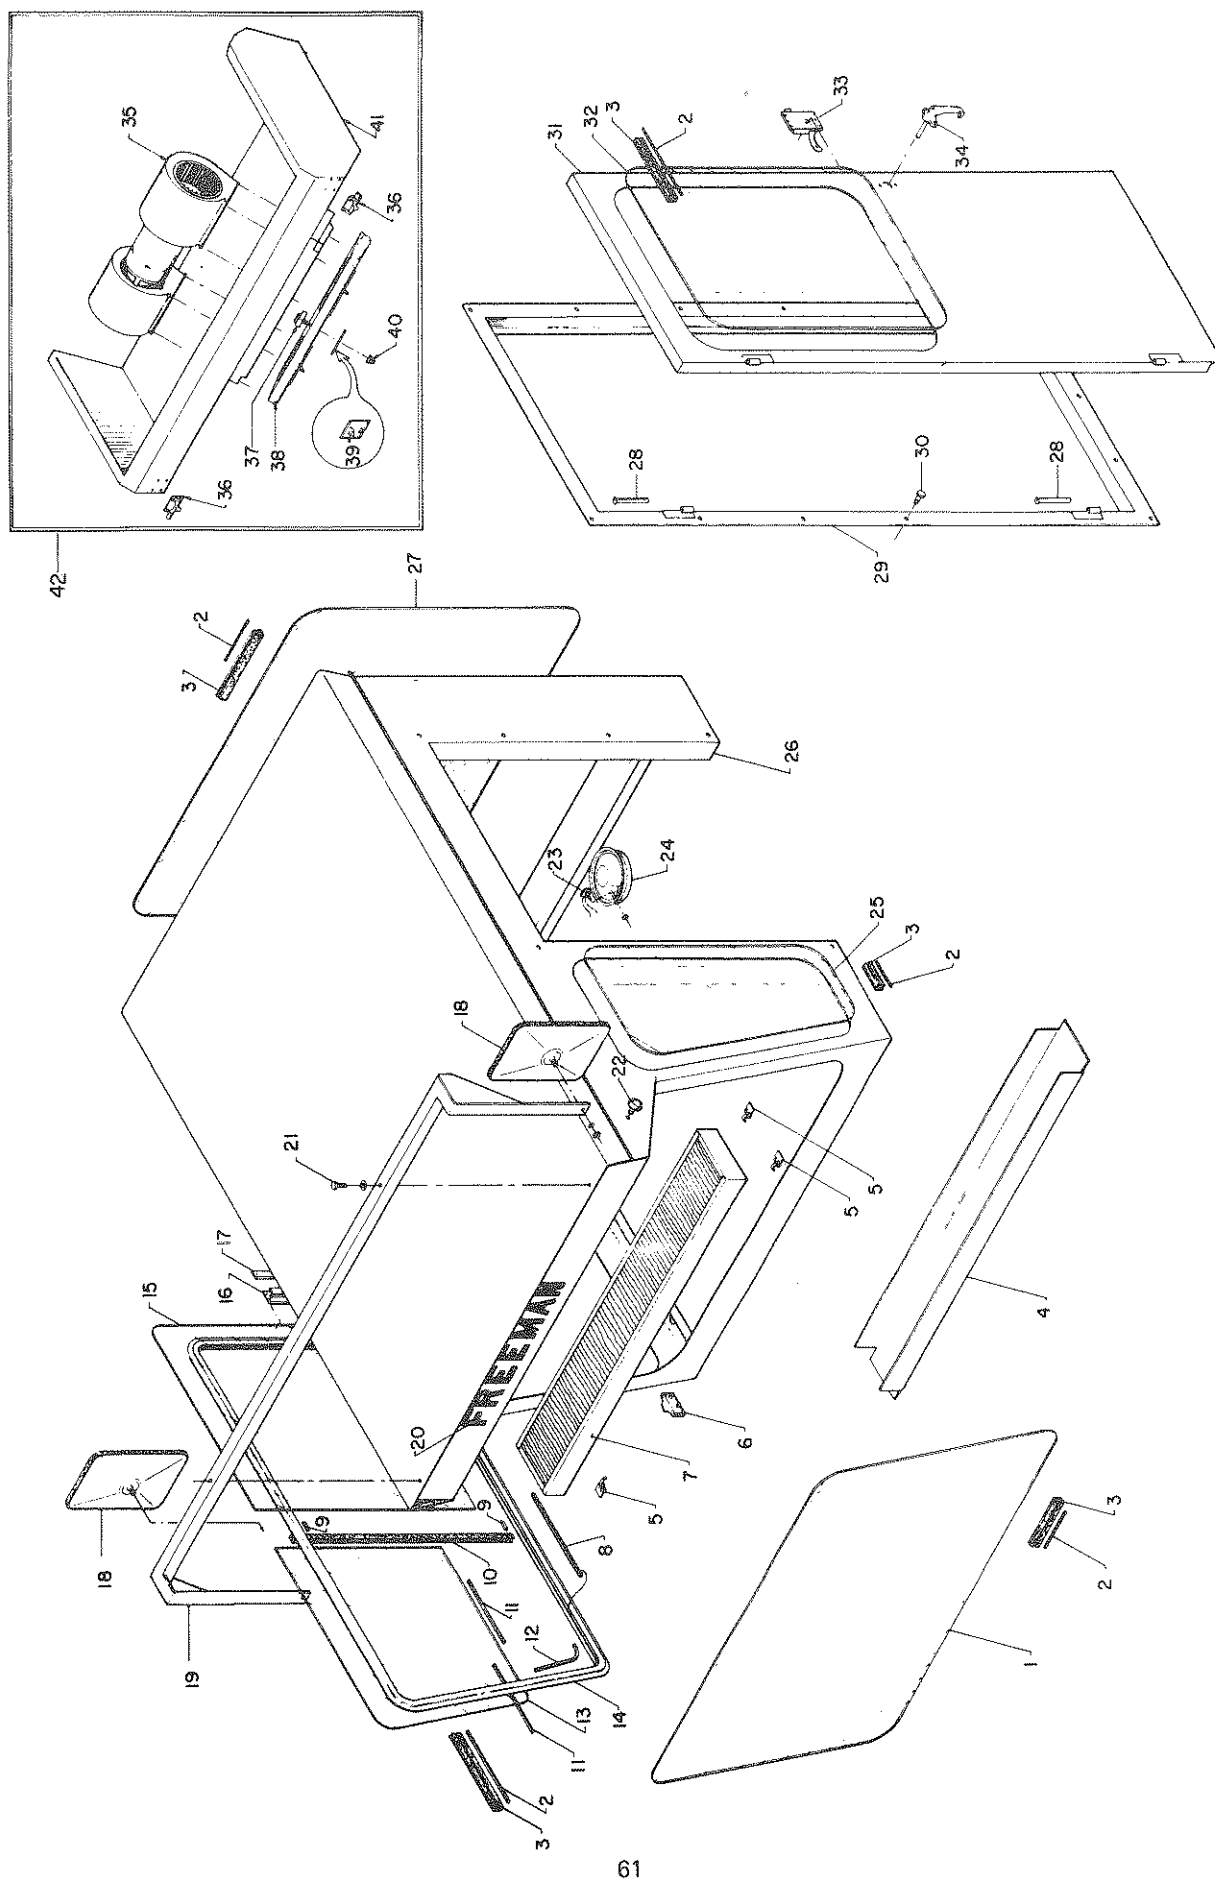


CAB

REF. NO.	PART NO.	DESCRIPTION
1	GLS0006951	Windshield Glass
2	WEA0000937	Filler Stays
3	WEA0001179	Weather Stripping
4	CVR0006779	Cover for Filter Opening
5	F 0006108	Latch, 4 used
6	F 0008264	Rubber Bumper
7	FIL0115154	Filter Element
8	CAB0000101	Felt
9	CAB0000102	Stop
10	CAB0000103	Center Bar
11	CAB0000104	Weather Stripping
12	CAB0000105	Large Weather Stripping
13	GLS0006956	Side Window Glass, Front
14	CAB0000106	Sliding Window Frame
15	GLS0006955	Sliding Glass, Rear
16	CAB0000107	Handle
17	CAB0000109	Latch
18	MIR0402308	Mirror, 2 used
19	BKT0006805	Rear View Mirror Mount
20	FD 0007114	Freeman Decal
21	SCC0000207	5/16" x 2 1/4" NCHT Cap Screw
22	BMP6021044	Door Stop
23	ELC0005020	Light Switch
24	F 0001505	Light
25	GLS0006953	Side Window Glass, Left
26	CAB0006864	Cab Complete with Blower
27	GLS0006952	Rear Window Glass
28	PIN0037540	Pin
29	DOR0006368	Door Frame
30	SCC0000303	3/8" x 1 1/4" NCHT Cap Screw
31	DOR0006367	Door
32	GLS0006954	Door Window Glass
33	LOK0000055	Door Latch
34	F 0004527	Door Handle
35	BLO0000700	Blower
36	LAT0000290	Blower Latch
37	BLO0001065	Blower Switch
38	BLO0003316	Blower Vent
39	BLO0062318	Decal
40	KOB0000100	Switch Knob
41	BLO0006305	Blower Housing
42	BLO0000100	Blower Complete


PARTS NOT ILLUSTRATED

PART NO.	DESCRIPTION
RUG0006968	Rug
LIN0008269	Cab Lining Top Support
LIN0008278	Consol Lining, Left Side Front
LIN0008279	Consol Lining, Rear Section
LIN0008280	Consol Lining, Left Side Rear Section
LIN0008281	Consol Lining, Front Section
LIN0008282	Lining, Cab Roof
LIN0008283	Lining, Cab Door

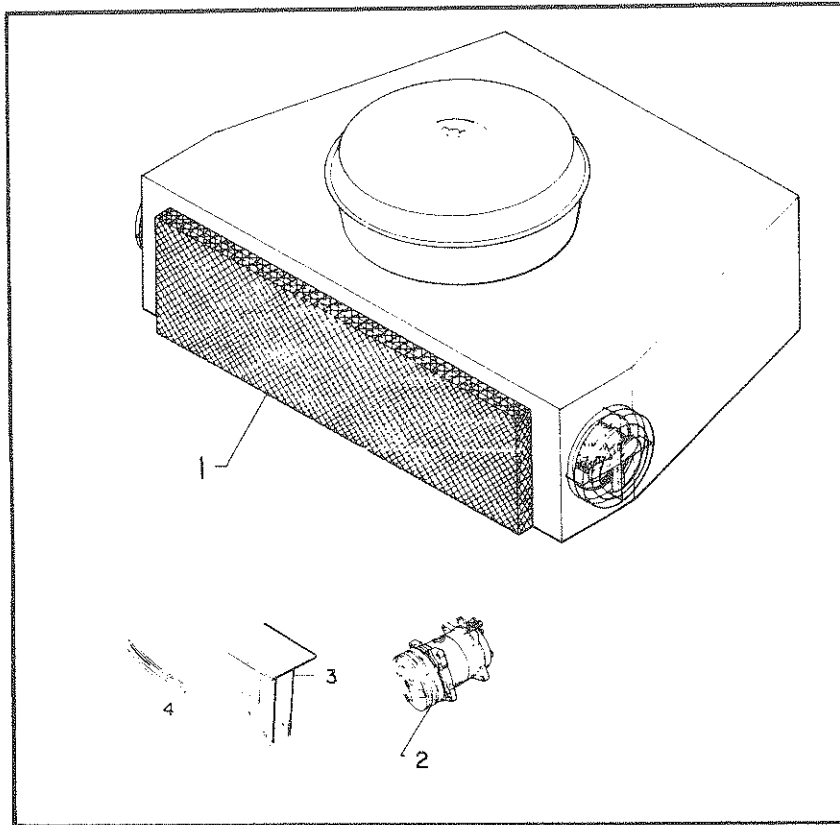


AIR CONDITIONER

REF. NO.	PART NO.	DESCRIPTION
1	ACN0048280	Air Conditioner Less Compressor
	ACN1120009	Fan Motor Only, 12 Volt
	ACN0960800	Fan Only
2	ACN0529945	Compressor with Standard Double Groove Clutch
3	MNT0006799	Air Conditioner Mount, JD
	MNT0007531	Air Conditioner Mount, AC
4	BKT0007018	Air Conditioner Tightner Bracket, JD
	BKT0752100	Air Conditioner Tightner Bracket, LH, AC
	BKT0752101	Air Conditioner Tightner Bracket, RH, AC
		LISTED BUT NOT SHOWN
	BLT0004710	Air Conditioner Belt, AC
	BLT2509905	Air Conditioner Belt, JD

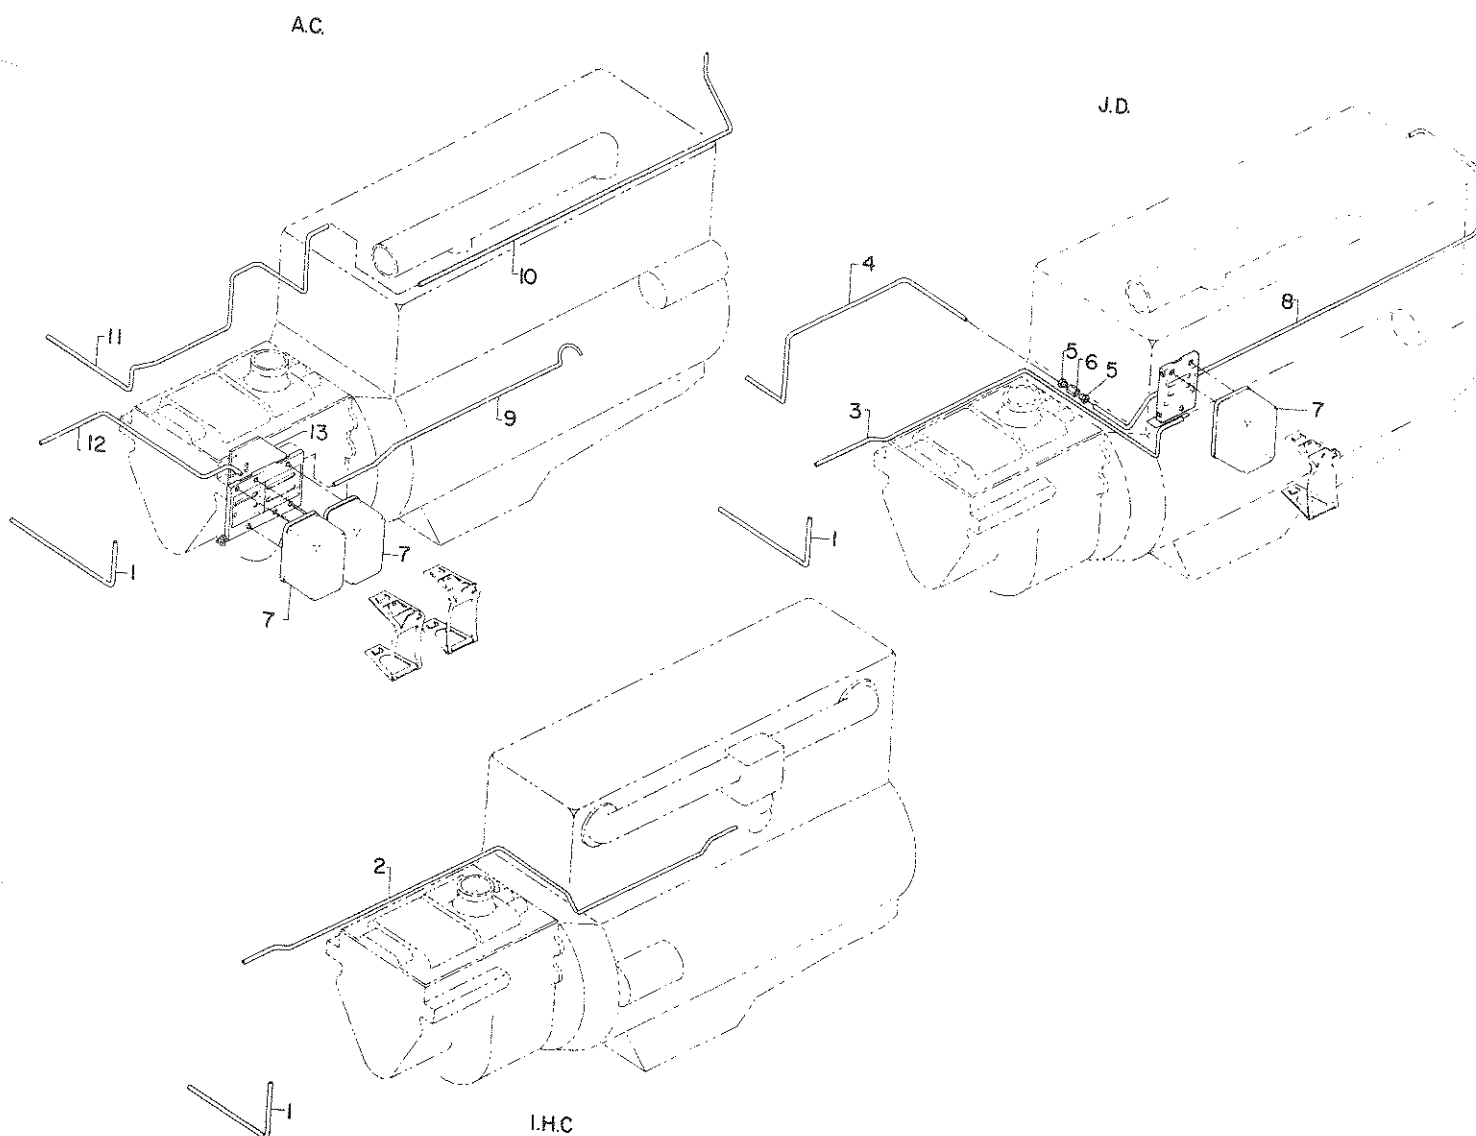

FUEL LINES

REF. NO.	PART NO.	DESCRIPTION
1	01-865	Fuel Line, IHC, JD, AC
2	01-866	Fuel Line, IHC
3	01-867	Fuel Line, JD
4	01-868	Fuel Line, JD
5	01-813	1/4" Inverted Flare Nut, 105" x 4" WH
6	01-814	1/4" Inverted Flare Union, 300" x 4" WH
7	20-213	Fuel Filter, AC, 18786 Roosa Master
	20-214	Water Separator, AC, 19797 Roosa Master
	20-217	Fuel Filter and Water Separator, JD, 18667 Roosa Master
8	01-869	Fuel Line, JD
9	01-870	Fuel Line, AC
10	01-871	Fuel Line, AC
11	01-872	Fuel Line, AC
12	01-873	Fuel Line, AC
13	BKT0005769	Fuel Filter Bracket, AC

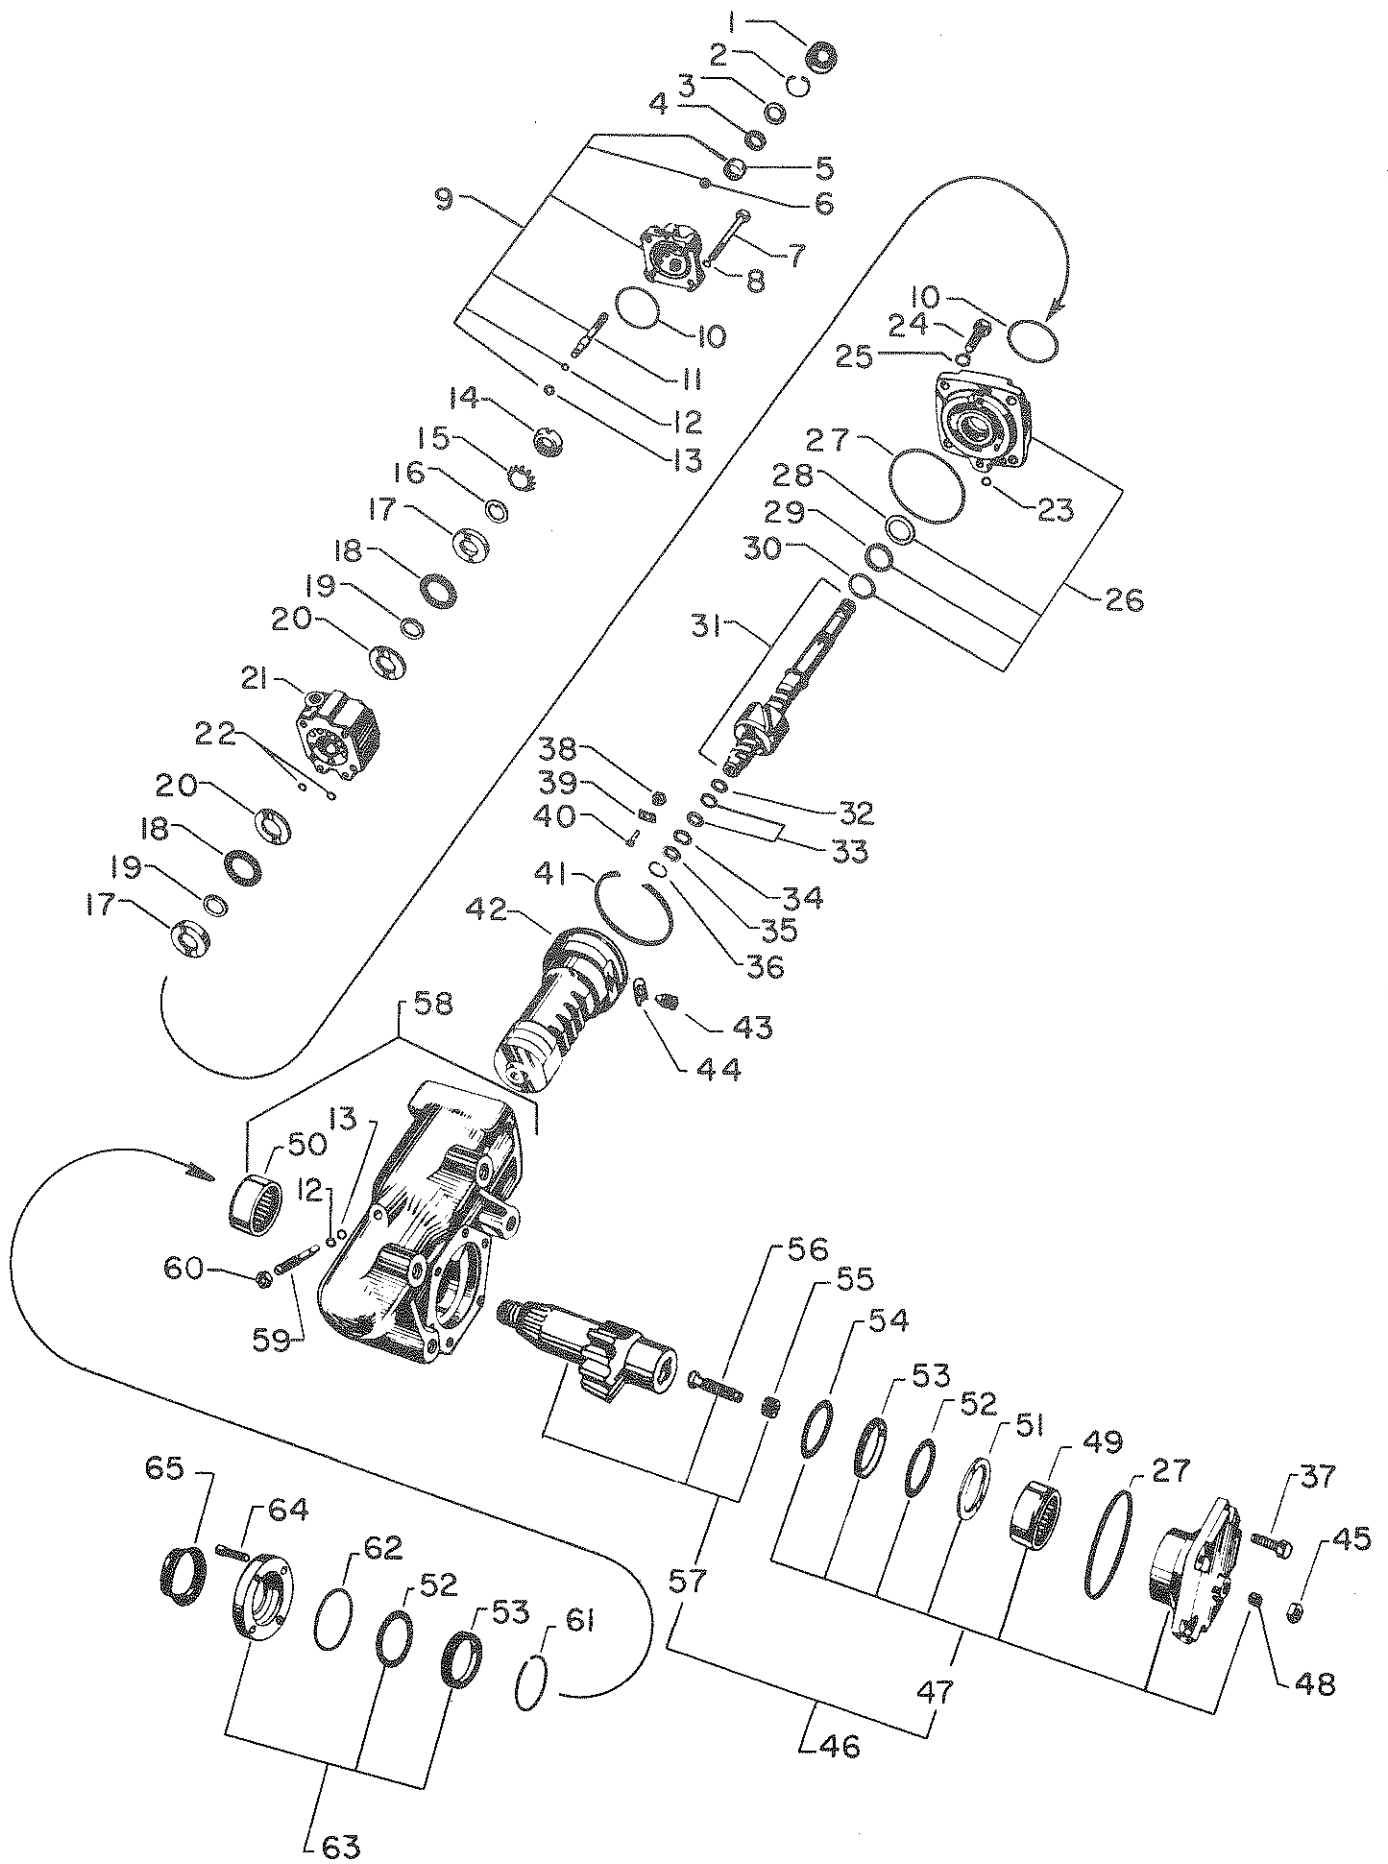


STEERING GEAR ASSEMBLY BREAKDOWN

17-904


HF 64070 TRW

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	TRW0402226*	Seal, Input Shaft	33	*	Seal Assembly
2	TRW0401314	Ring, Retaining	34	TRW0029099	Washer, Bronze
3	TRW0029097	Washer, Seal Back-up	35	TRW0028356	Washer, Lower Worm Shaft Retaining Ring
4	TRW0032356*	Seal, Input Shaft	36	TRW0401315	Ring, Lower Worm Shaft Retaining
5	TRW0063029	Bearing, Input Shaft Needle	37	TRW0021277	Cap Screw, 9/16" x 1" NF
6	TRWG114493	5/16" NF Jam Nut	38	TRW0415438	Seat, Pressure Unloader Valve
7	TRWG186282	Cap Screw, 3/8" x 3 1/4" NC	39	TRW0028409	Lock Washer, 7/16"
8	TRW0028333	Washer, 25/64" x 1 1/16"	40	TRW0040116	Valve, Pressure Unloader
9	TRWHF64600	Cover Assembly, HF646001-AS	41	TRW0325901	Ring, Piston Kit
10	TRW0032344*	Seal (2)	42	TRWHF64701	Piston Rack Assembly
11	TRW0021293	Screw, Pressure Unloader Valve Adjusting	43	TRW0021282	Screw, Worm Follower Locking
12	*	Backup Ring (2)	44	*	Lock Washer
13	*	"O" Ring, Pressure Unloader Screw(2)	45	TRW0025127	Nut, 1/2" NF
14	TRWG127708	Nut, Thrust Bearing Adjustment	46	TRWHF64403	Side Cover & Gear Shaft Assembly
15	*	Washer, External Tang	47	TRWHF64503	Cover Assy., Housing Side
16	TRW0028258	Washer, Internal Tang	48	*	Plug, Relief (Rubber)
17	TRW0028347	Washer, Thrust Bearing Race (heavy) (2)	49	TRW0071015	Bearing, Sector Shaft
18	TRW0067026	Bearing, Needle Thrust (2)	50	TRW0017010	Bearing, Sector Shaft
19	TRW0028349	Spacer, Needle Thrust Bearing (2)	51	TRW0028348	Washer, Seal Back-up
20	TRW0028288	Washer, Thrust Bearing Race (light)	52	*	Washer, Back-up (2)
21	TRWV220009	Valve, Hydraulic Control	53	*	Seal Assembly, Sector Shaft (2)
22	*	Seal, Hydraulic, Cylinder Port (2)	54	TRW00401341	Ring, Snap
23	*	Seal, Hydraulic, Cylinder Port	55	TRW0062005	Retainer, Sector Shaft Adjusting
24	TRWG179885	Cap Screw, NCHT 1/2" x 1 1/2"	56	TRW0021200	Screw
25	TRW0028335	Washer, 1/2" x 29/32"	57	TRWHF64401	Screw, Sector Shaft Adjusting
26	TRW4023461	Adapter Assembly	58	TRWHF64201	Gear Shaft & Adjusting Screw Assembly
27	*	Seal, Side Cover and Valve Adapter	59	TRWHF64201	Housing Assembly, Steering Gear
28	*	Washer, Seal Back-up	60	TRW0021289	Screw, Pressure Unloader Valve Adjusting
29	*	Seal, Hydraulic Control Valve Adapter	61	TRWG272121	7/16" NF Jam Nut
30	TRW0401313	Ring, Spiral Lock	62	TRW0401309	Ring, Sector Shaft Bearing Retaining
31	TRWHF64320	Worm Shaft & Nut Assembly	63	*	Seal, Sector Shaft Seal Adapter
	TRWHF6432A	Worm Shaft Adapter & Valve & Rack Assy., Ref. 9-22, 26-36	64	TRW402285A	Trunnion Seal Carrier Assembly
	TRWHF64323	Worm Shaft Adapter, Valve & Rack Assy., Ref. 9-22, 26-36, 38-44	65	TRWG942162	Cap Screw, 5/16" x 1" NC
32	TRW0028355	Washer, 25/32" x 1-1/64"	*	TRW0032391	Seal, Sector Shaft Dirt and Water
				17-238	Seal Kit, HF640000

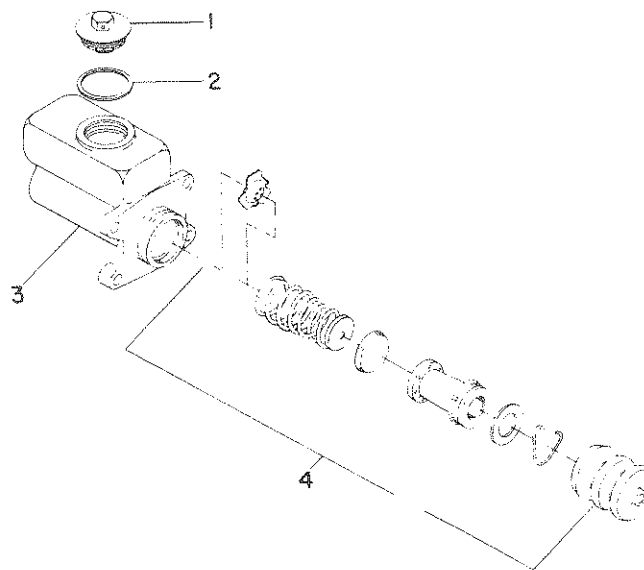

BRAKE CYLINDER


REF. NO.	PART NO.	DESCRIPTION
1	WAG0002162	Cap
2	WAG0002167	Gasket
3	19-157	Brake Master Cylinder Complete
4	WAG0019432	Kit, Includes Spring, Retainer Cup, Piston Plate, Snap Ring and Boot

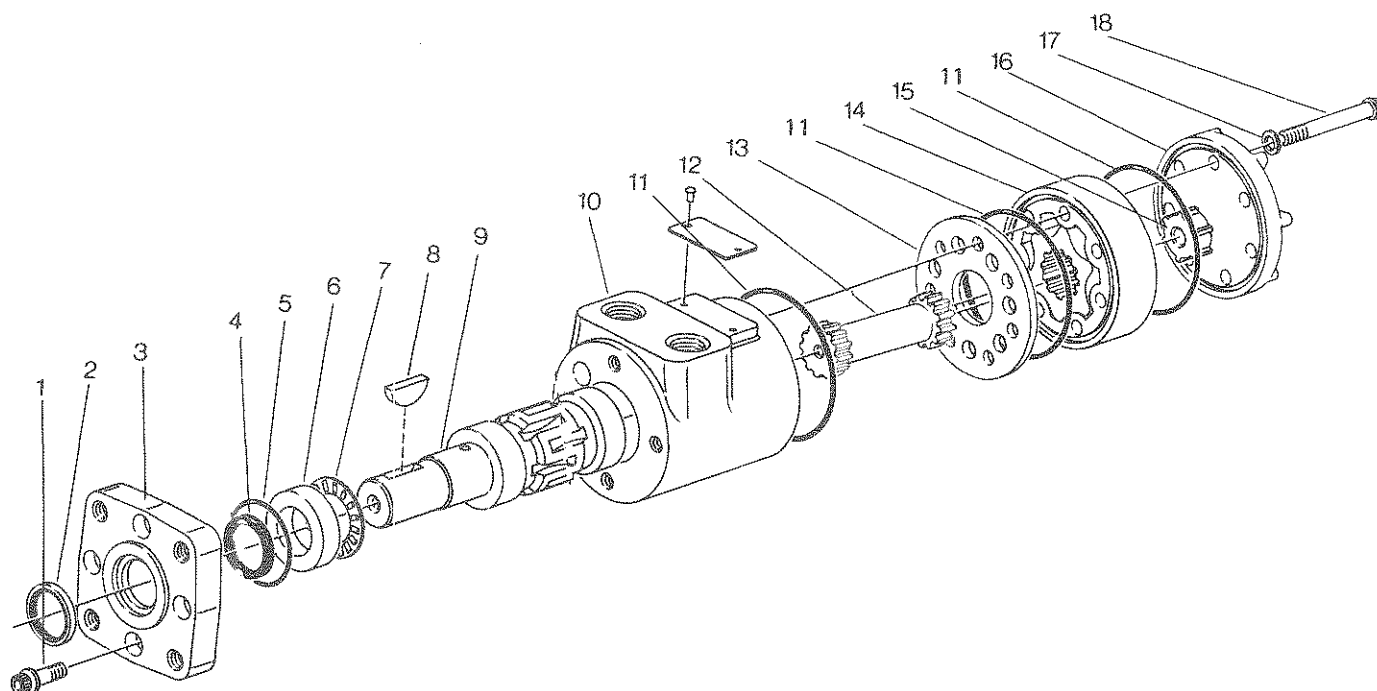

HYDRAULIC MOTOR BREAKDOWN **MTR 1002007**


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	CHR0005777	5/16" x 7/8" NF Cap Screw	12	CHR0000616	Drive
2	CHR0009055	Seal	13	CHR0007358	Plate, Spacer
3	CHR0007464	Flange, Mounting	14	CHR0007357	Gerotor Set
4	CHR0009057	Seal	15	CHR0006901	Spacer
5	CHR0015048	Seal, "O" Ring	16	CHR0007461	Cap, End
6	CHR0007462	Race, Bearing	17	CHR0006049	Washer, Seal
7	CHR0007537	Bearing, Thrust Needle	18	CHR0005389	5/16" x 2 1/2" NF Cap Screw
8	CHR0014193	Key, Woodruff			
9	CHR0007360*	Shaft, Output			
10	CHR0007359*	Housing			
11	CHR0005776	Seal, "O" Ring			
				CHR0060023	Seal Kit, Includes Ref. 4, 5, 11 and 17

* Sold Only As Matched Set of Housing and Shaft

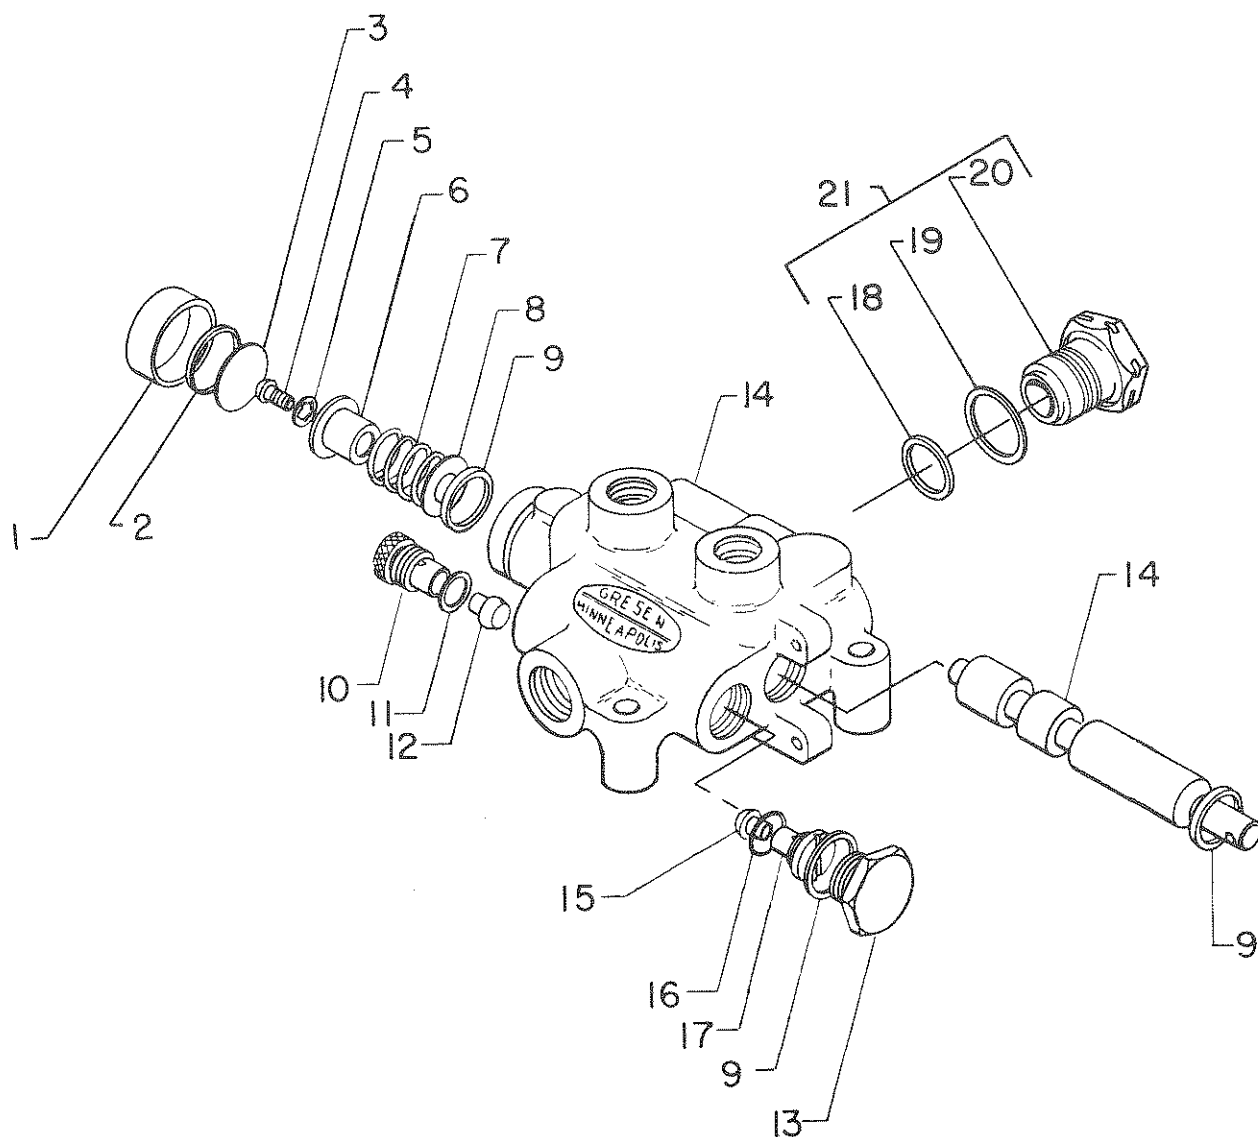


HYDRAULIC CONTROL VALVE BREAKDOWN
01-520
SPYE-3-NR GRESEN

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	GRS0000967	Rubber Bonnet	11	GRS0001141	Check Plug "O" Ring
2	GRS0000914	Stop Disc, Snap Ring	12	GRS0002781	Check Poppet
3	GRS0000912	Stop Disc	13	GRS0000983	Relief Plug Cap
4	GRS0000510	Spring Assembly Bolt	14	GRS2701903	Valve Housing and Spool
5	GRS0002529	Center Spring Lock Washer	15	GRS0002781	Check Poppet
6	GRS000911A	Stop Collar	16	GRS0002706	Relief Valve Seat "O" Ring
7	GRS0000913	Center Spring	17	GRS0002787	Relief Seat Plug, NR
8	GRS0001202	Stop Washer	18	GRS0000954	Seal, Nose
9	GRS0000932	Spool Seal, 3 used	19	GRS0003096	Seal, Sleeve
10	GRS0002783	Check Plug	20	GRS0003147	Power Beyond Sleeve
			21	GRS00K2021	Service Kit, Power Beyond

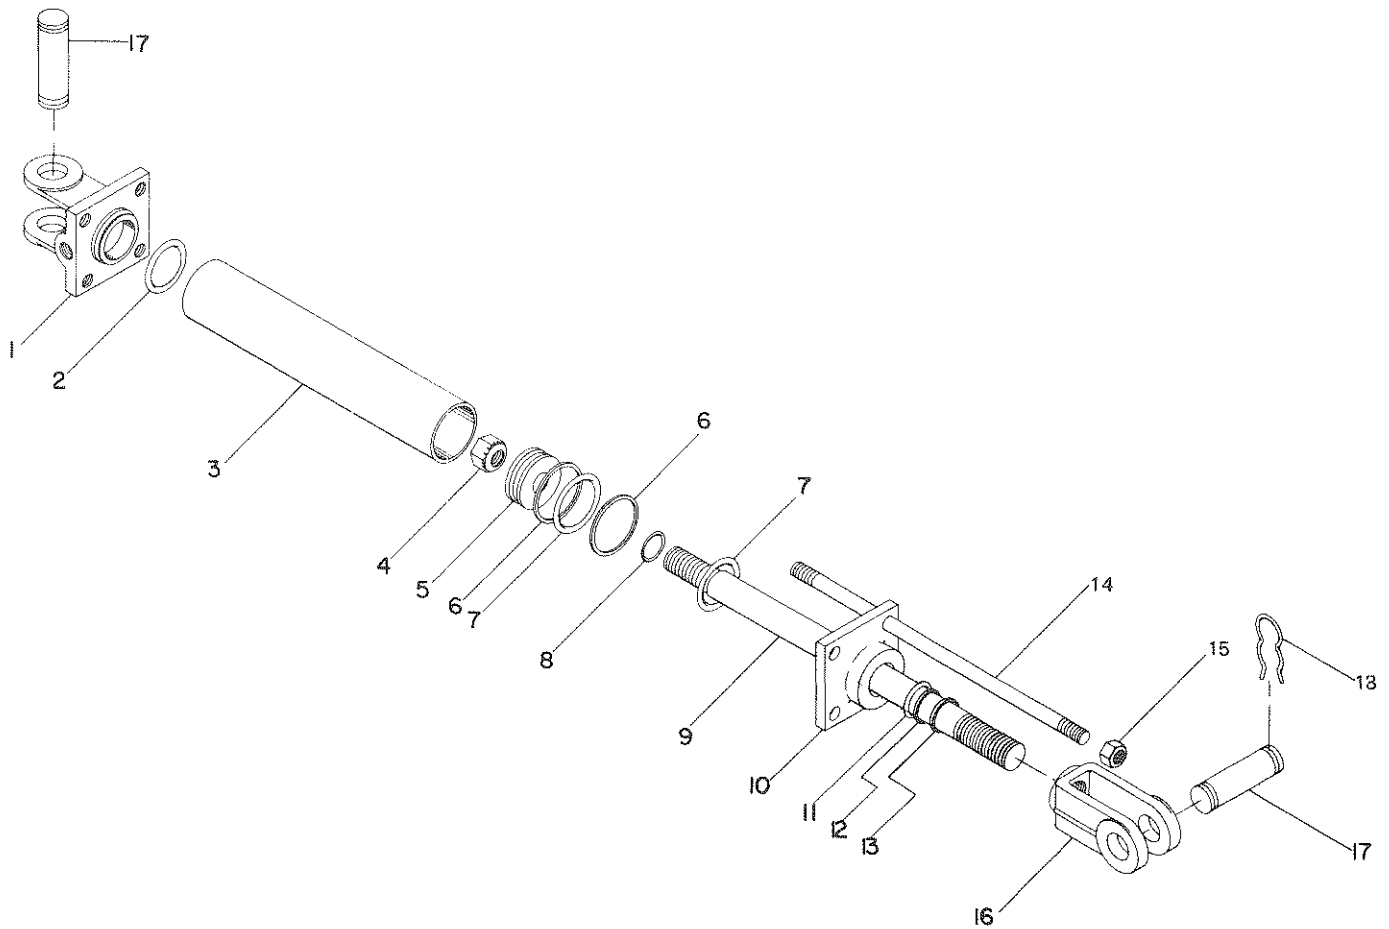

**PRINCE CYLINDER
F 0006519**


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	CYL1411003	Butt	11	CYL2405214	B/U Washer
2	CYL2401326	"O" Ring	12	CYL2400214	"O" Ring
3	CYL5110008	Tube	13	CYL2501214	Wiper
4	CYL2200208	Lock Nut	14	CYL1713122	Tie Rod
5	CYL7110004	Piston	15	NCH0007500	3/4" Nut
6	CYL2405326	B/U Washer	16	CYL1000014	Clevis
7	CYL2400326	"O" Ring	17	CYL1904001	Clevis Pin
8	CYL2400018	"O" Ring	18	CYL1904002	Hair Pin Clip
9	CYL1040008	Piston Rod			
10	CYL8110006	Gland		F 0006599	Seal Kit for F 0006519 Cylinder

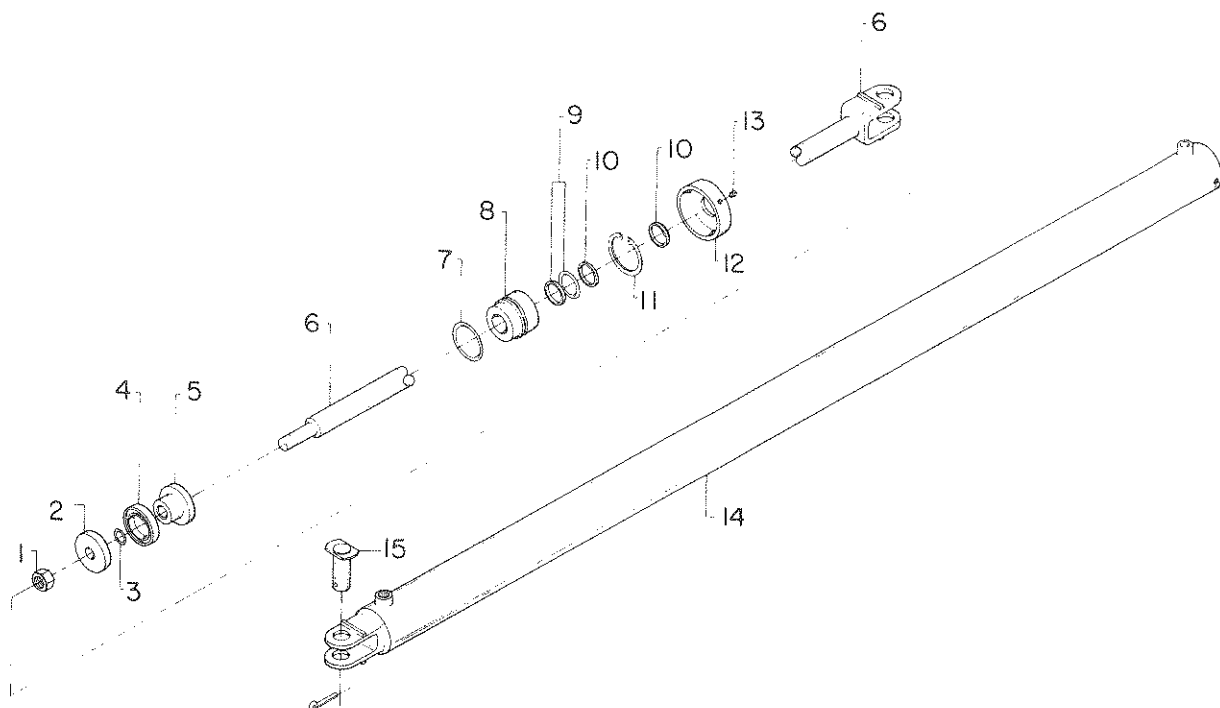

HYPOWER CYLINDER **01-566**


REF. NO.	PART NO.	DESCRIPTION
1	HYP LC25N	Piston Nut
2	HYP OU25W	Washer
3	HYP LC25SO	Small "O" Ring
4	HYP OU297	Piston Packing, Sacoma
5	HYP OU25U	Piston, Special
6	HYP LC418S	Shaft, Special
7	HYP LC25HO	Head "O" Ring
8	HYP LC25E	Head, Special, 1 1/4" Rod
9	HYP LC25US	Shaft Packing

REF. NO.	PART NO.	DESCRIPTION
10	HYP HP25RW	Rod Wiper
11	HYP LC25LR	Lock Ring
12	HYP LC25RC	Rain Cap, Special
13	HYP LC25A	Set Screw
14	HYPLC2563C	Tube, Special
15	HYP LC25P	Clevis Pin
	HYPSACKL25	Repair Kit, 1 1/4" Rod

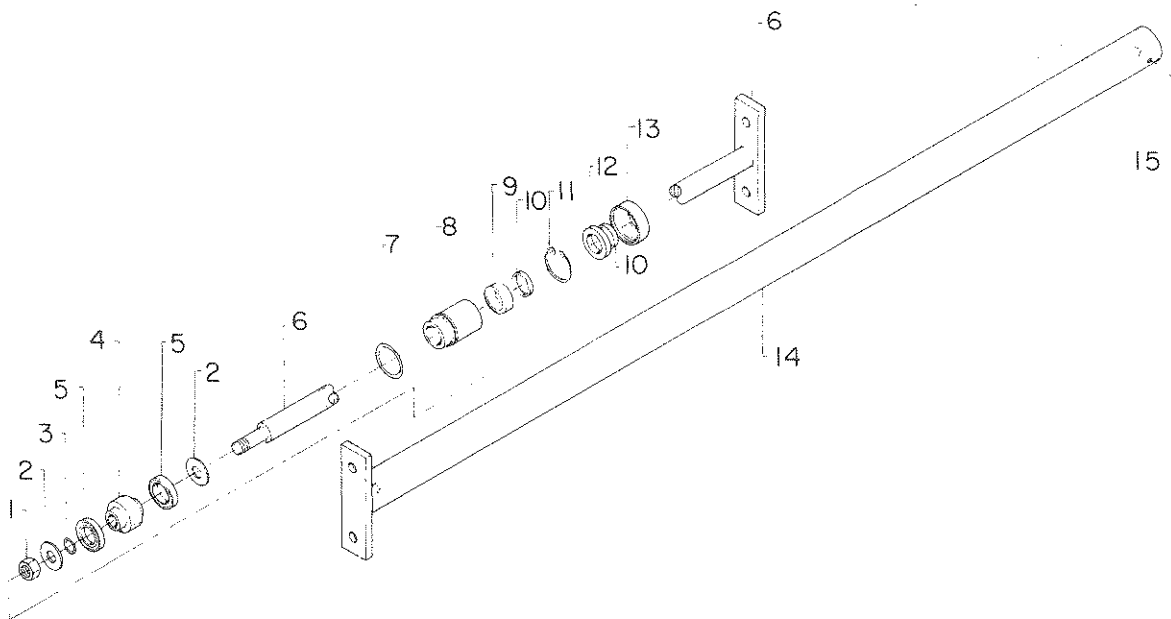


HYPOWER CYLINDER **01-552**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	HYP LC2N	Nut, 3/4"	10	HYP HP25RW	Rod Wiper, 2 used
2	HYP HP2W	Washer	11	HYP LC2LR	Lock Ring
3	HYP LC2SO	Small "O" Ring	12	HYPLC265SP	Spacer
4	HYP HP2V	Piston, Special, 3/4" Bore	13	HYP LC2SC	Steel Cap
5	HYP OU65	Piston Packing, Sacoma, 2 used	14	HYPLC2X65C	Tube, Special
6	HYPLC2X65S	Shaft, Special 1 1/4" Rod	15	HYP LC2A	Set Screw
7	HYP LC20	Head "O" Ring			
8	HYP LC2E	Head, Special			
9	HYP OU84	Shaft Packing, Sacoma			
				HYP SAC0KL2	Repair Kit

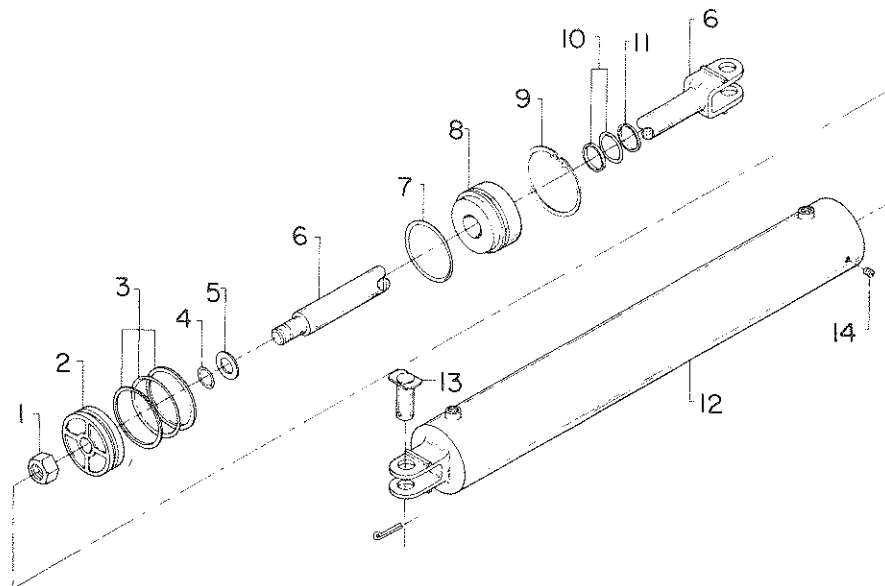

HYPOWER CYLINDER


01-557			01-555		
REF. NO.	PART NO.	DESCRIPTION	REF.	PART	DESCRIPTION
1	HYP LC4N	Nut	1	HYP LC4N	Nut
2	HYP LC4V	Piston	2	HYP LC4V	Piston
3	HYP LC4PO	Piston "O" Ring Assembly	3	HYP LC4PO	Piston "O" Ring Assembly
4	HYP LC4SO	Small "O" Ring	4	HYP LC4SO	Small "O" Ring
5	HYP LC4W	Steel Washer	5	HYP LC4W	Steel Washer
6	HYPLC2563S	Shaft	6	HYP LC46S	Shaft
7	HYP LC4O	Head "O" Ring	7	HYP LC4O	Head "O" Ring
8	HYP LC4E	Head	8	HYP LC4E	Head
9	HYP LC4LR	Lock Ring	9	HYP LC4LR	Lock Ring
10	HYP LC4US	Shaft Packing	10	HYP LC4US	Shaft Packing
11	HYP LC4RW	Rod Wiper	11	HYP LC4RW	Rod Wiper
12	HYP LC418C	Tube	12	HYP LC46C	Tube
13	HYP LC4P	Clevis Pin	13	HYP LC4P	Clevis Pin
14	HYP LC4A	Set Screw	14	HYP LC4A	Set Screw
01-560 Seal Kit, KL4			01-560 Seal Kit, KL4		

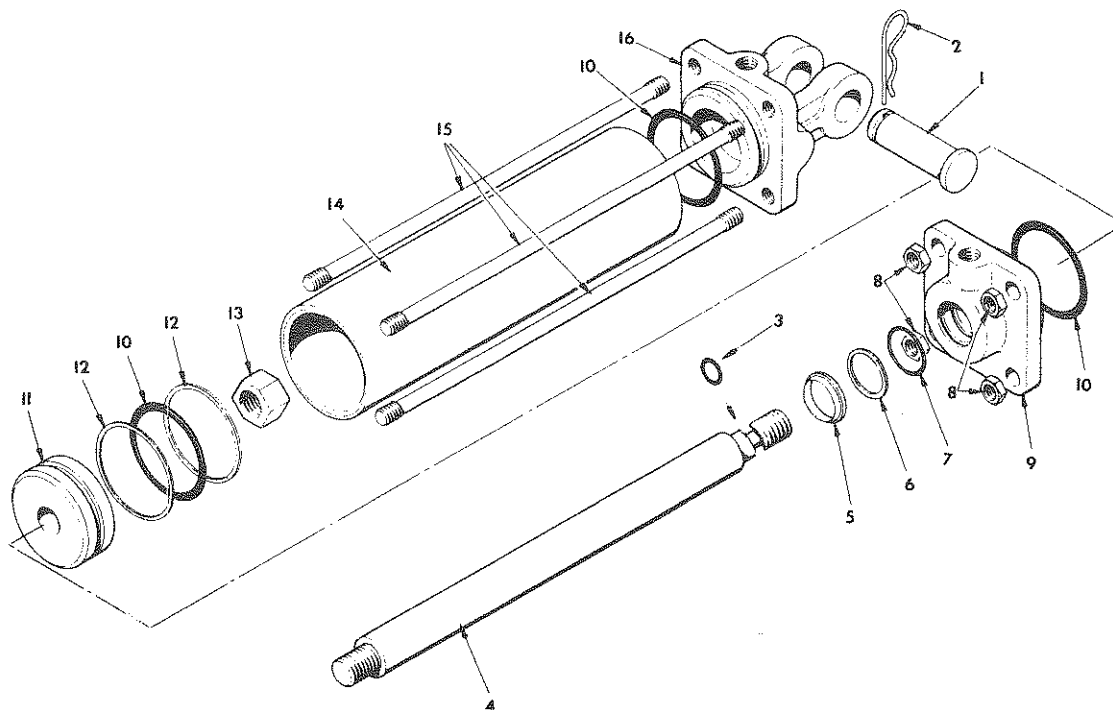

VICTOR CYLINDER 01-569


REF. NO.	PART NO.	DESCRIPTION
1	CYL0181106	Pin
2	CYL0181107	Pin Clip
3	*	"O" Ring
4	CYL0411088	Rod
5	*	Rod Wiper
6	*	Back-up Ring
7	*	"O" Ring Rod Packing
8	NFH0003750	3/8" NF Nut
9	CYL0414207	Head
10	*	"O" Ring

REF. NO.	PART NO.	DESCRIPTION
11	CYL0412057	Piston
12	*	Back-up Ring
13	NFH0008750	7/8" -14 NF Nut
14	CYL0410112	Tube
15	CYL0419146	Tie Rod
16	CYL0414208	Bottom
	*01-570	Seal Kit for 01-569 Cylinder

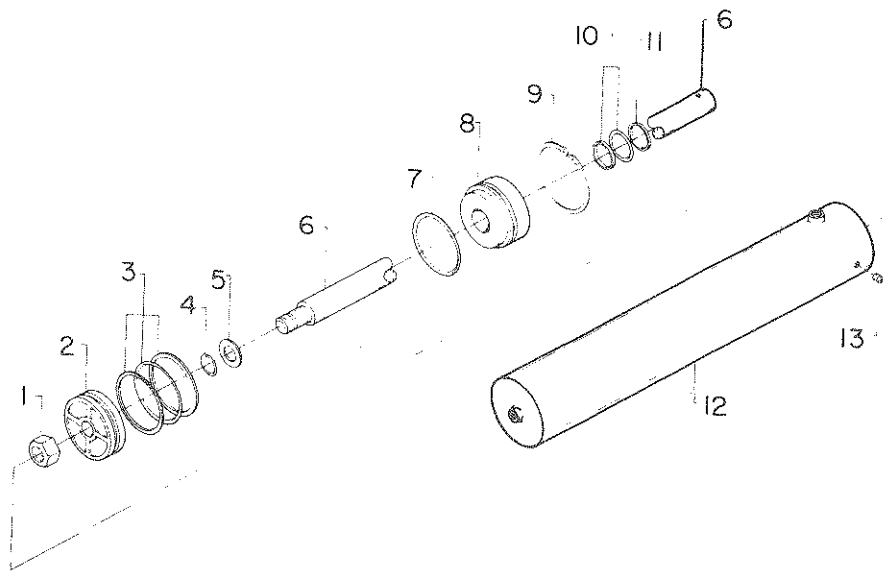

HYPOWER CYLINDER **01-556**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	HYP LC4N	Nut	9	HYP LC4LR	Lock Ring
2	HYP LC4V	Piston	10	HYP LC4US	Shaft Packing
3	HYP LC4PO	Piston "O" Ring Assembly	11	HYP LC4RW	Rod Wiper
4	HYP LC4SO	Small "O" Ring	12	HYPLC4X60C	Tube, Special
5	HYP LC4W	Steel Washer	13	HYP LC4A	Set Screw
6	HYPLC4X60S	Shaft, Special			
7	HYP LC4O	Head "O" Ring			
8	HYP LC4E	Head, Special			
			01-565		Seal Kit, KL4 Sp.

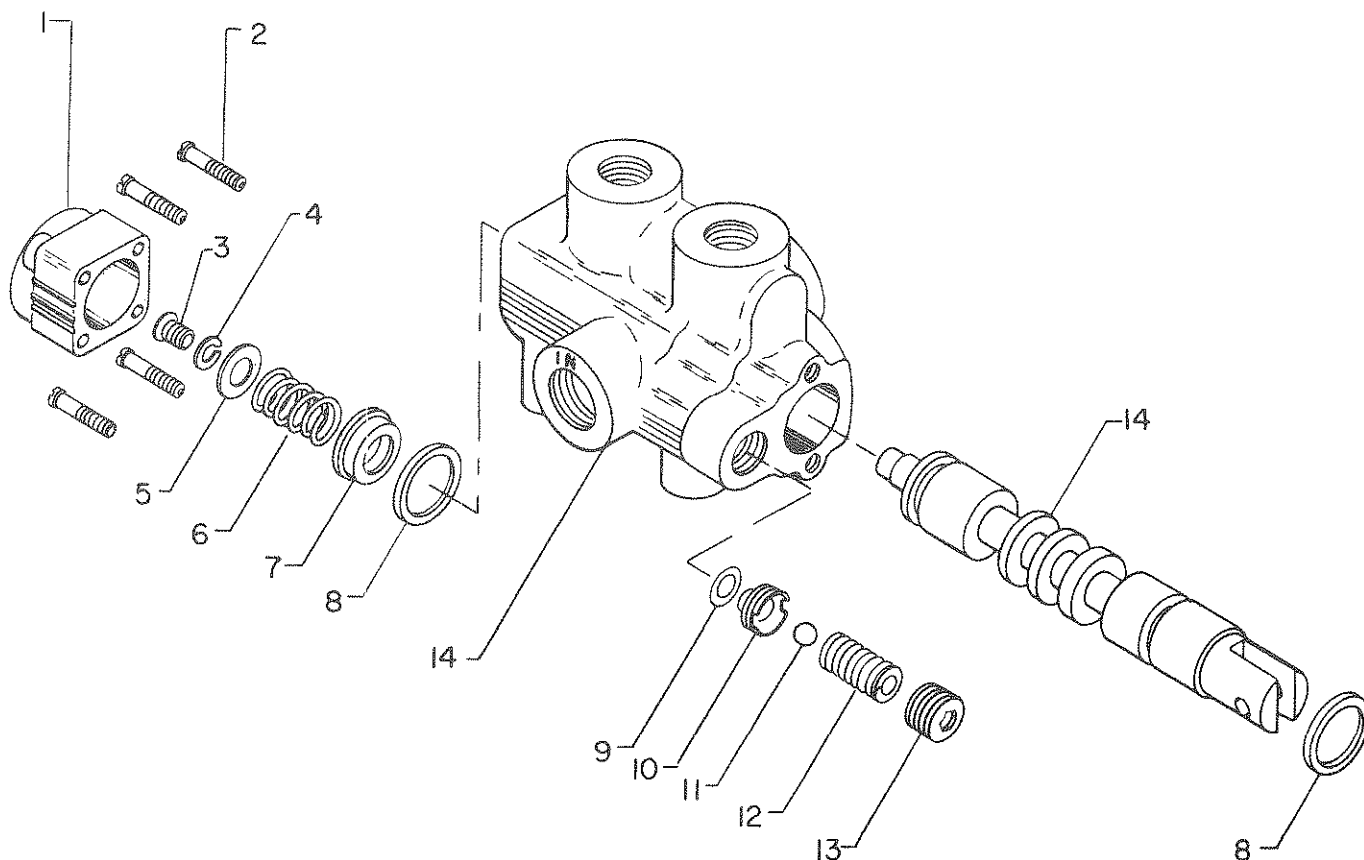


HYDRAULIC CONTROL VALVE BREAKDOWN

01-507 Index Valve

No. 400 Gresen

REF. NO.	PART NO.	DESCRIPTION
1	BON0008271	Bonnet
	GSK0008270	Gasket
2	GRS0000559	Bonnet Cap Screw, 4 used
3	GRS0000510	Spring Assembly Bolt
4	GRS0000564	Assembly Lock Washer
5	GRS0000509	Spring Washer
6	GRS0000557	Centering Spring
7	GRS0000577	Spool Collar
8	GRS0000555	"U" Cup Seal, 2 used
9	GRS0002503	Relief "O" Ring
10	GRS0002502	Relief Seat
11	GRS0002504	Relief Ball, 3/8"
12	GRS0000560	Relief Spring
13	GRS0000073	Relief Plug, 3/8"
14	GRS0575576	Valve Housing & Spool

RELAY BOX WIRING DIAGRAM

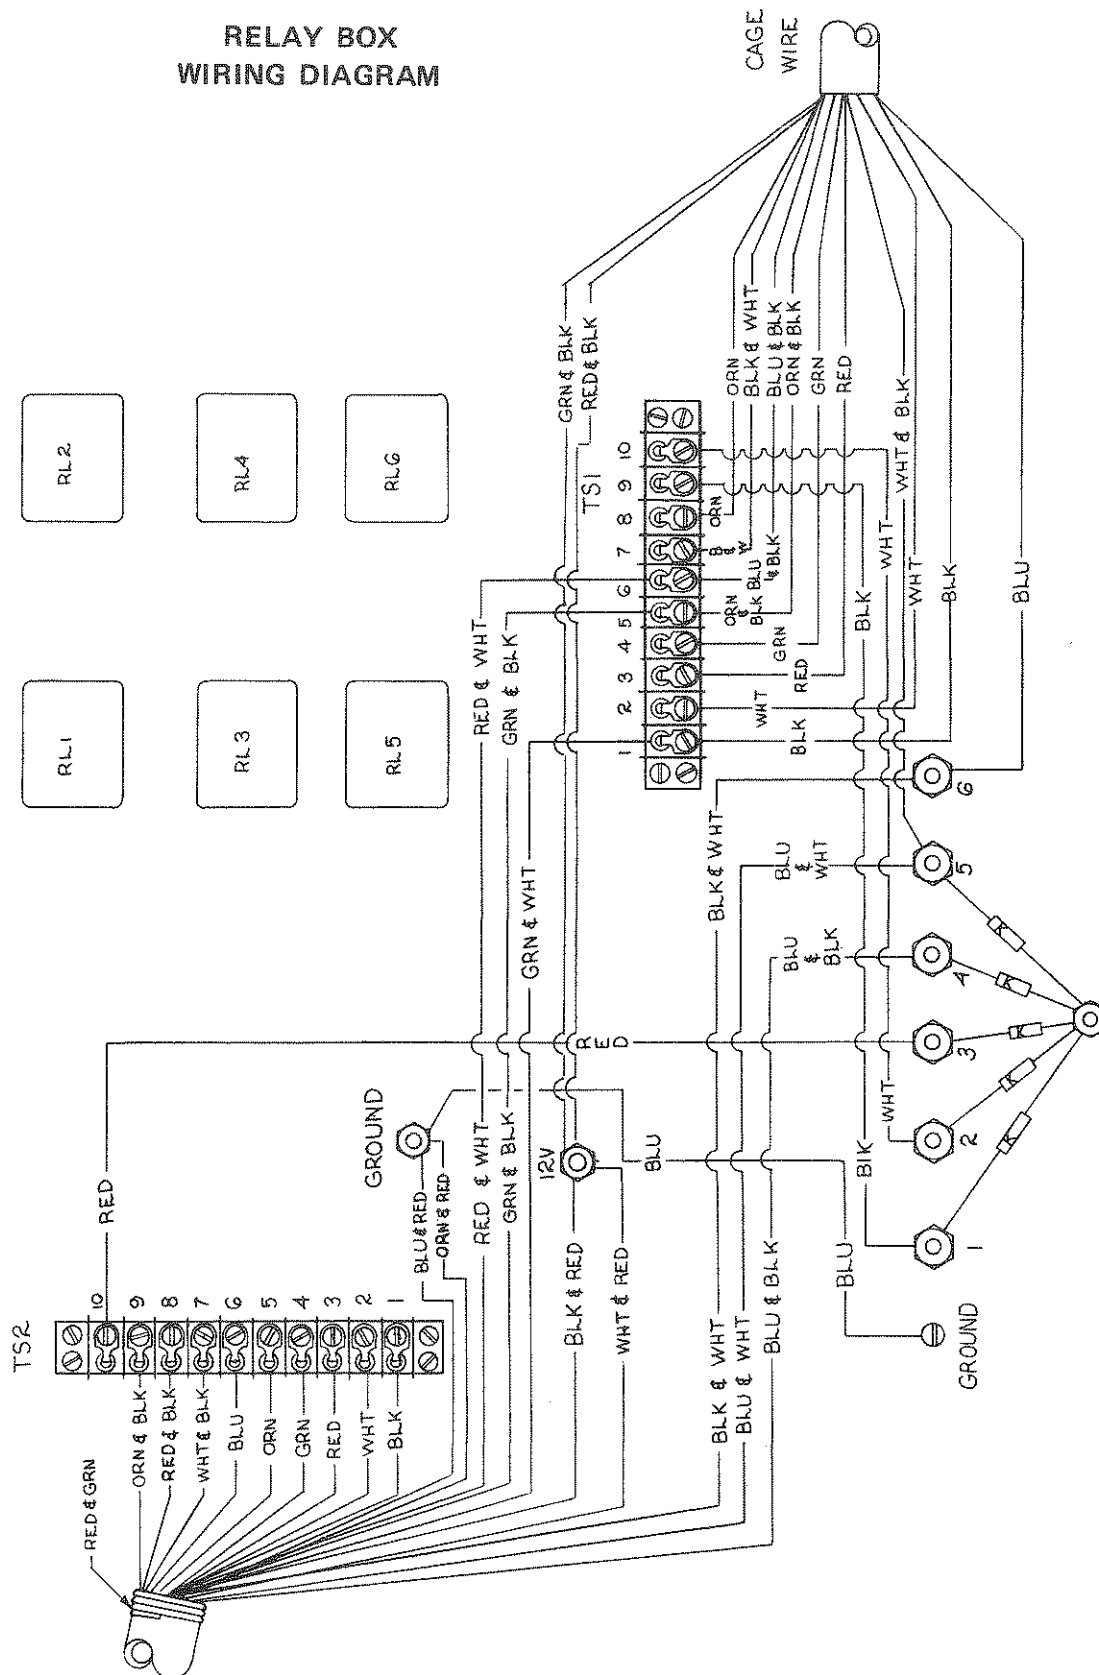



BE CAREFUL

1. KEEP ALL SHIELDS IN PLACE.
2. STOP ENGINE OR MOTOR BEFORE LEAVING OPERATORS POSITION TO ADJUST, LUBRICATE, CLEAN, OR UNCLOG MACHINE, UNLESS OTHERWISE SPECIFICALLY RECOMMENDED IN THE "OPERATOR'S MANUAL."
3. WAIT FOR ALL MOVEMENT TO STOP BEFORE SERVICING MACHINE.
4. KEEP HANDS, FEET, AND CLOTHING AWAY FROM POWER DRIVEN PARTS.
5. KEEP OFF EQUIPMENT UNLESS SEAT OR PLATFORM FOR OPERATION AND OBSERVATION IS PROVIDED.
6. KEEP ALL OTHERS OFF.
7. USE APPROPRIATE SIGNS OR WARNING LIGHTS WHEN OPERATING ON HIGHWAYS.
8. MAKE CERTAIN EVERYONE IS CLEAR OF MACHINE BEFORE STARTING ENGINE, MOTOR OR OPERATION.

