

MAINTENANCE & LUBRICATION

L-80S

CONTENTS

GENERAL		• • • • • •	• •		
SAFETY PRECAUTIONS			• •		
WHAT IS PREVENTIVE	MAINTENANCE				í
BENEFITS OF PREVEN	ITIVE MAINTENAN	ICE	• •		2
SHIFT MAINTENANCE			•		í
OIL ANALYSIS SAMPL	.ING PROGRAM .				
SHIFT MAINTENANCE	CHECKLIST		• •		2
LUBRICATION CHART			• •		
COMPONENT CAPACITI	ES & LUBRICANT	rs		• • .	6
HYDRAULIC PRESSURE	SETTINGS		• •	• • •	6
MAINTENANCE SPECIF	FICATIONS				6
MAINTENANCE CHECKL	.IST - 50 HR, 2	250 HR, 500 HR	• •		
MAINTENANCE CHECKL	.IST - 1000 HR	, 2000 HR			-
LURDICANT SPECIFIC	CATIONS				(

GENERAL

The regular care a machine receives by its operators and mechanics is generally rewarded by decreased downtime and greater reliability. With the help of the information in this section, you should be able to maintain your machine at top operating efficiency. The maintenance and lubrication procedures given here can be performed on the job site with a minimum of shop tools.

SAFETY PRECAUTIONS

Before doing any maintenance or lubrication, review the following safety precautions. They're included for your protection.

PERFORM MAINTENANCE ON LEVEL GROUND

The machine should be on level ground and free of traffic lanes whenever possible.

SUPPORT THE BOOM

Before doing any work under a raised boom or bucket, first do the following:

- 1. Empty the load.
- 2. Support the boom with a safety stand don't rely on the hydraulics.
- 3. Shutdown the engine.
- 4. Set the parking brake and block the wheels.

INSTALL SWIVEL LOCKING BAR

A swivel locking bar is provided on 4-wheel drive models. Before working in the hinge area of the machine make sure this bar is installed. Place the machine on a level surface so that the locking bar can be aligned for pin insertion.

TAG KEY SWITCH

Before doing maintenance or lubrication remove the key from the switch, or tag the key switch "DO NOT START", to insure that the engine is not started inadvertently.

WHAT IS PREVENTIVE MAINTENANCE

Preventive maintenance is a system that is intended to detect problem areas and prevent equipment failure before trouble can develop to a critical point. The system is based on a series of maintenance checks and servicing points. To be effective, a preventive maintenance program demands strict adherence to a planned schedule of maintenance.

BENEFITS OF PREVENTIVE MAINTENANCE

The time that is diligently expended to make the required periodic checks is a real investment in working equipment and efficient use of manhours. Valuable benefits can be realized; all of which means savings in time and resources.

PREVENTIVE MAINTENANCE:

- IMPROVES EQUIPMENT AVAILABILITY by minimizing the chances of breakdown.
- REDUCES UNEXPECTED DOWNTIME crash repairs are expensive and detract from normal scheduled maintenance.
- REDUCES EQUIPMENT ABUSE provides the abvility to predict component life and helps avoid operating equipment to destruction by replacing parts before they fail.
- ALLOWS PLANNING OF DAILY PRODUCTION by knowing the condition of available equipment.
- ALLOWS PLANNING OF MAINTENANCE MANHOURS by distribution of duties and necessary lead time for parts ordering.
- PROVIDES COMPLETE HISTORY OF EQUIPMENT based on performance, frequency and type of failure and actual manhours expended on maintenance.
- PROMOTES SAFETY well maintained equipment is more able to operate within its design specifications and react positively to the operator's control.

SHIFT MAINTENANCE

Shift maintenance is where preventive maintenance begins. The operator of the machine normally completes this inspection. It consists of the routine servicing and lubrication of the machines major systems. On a daily basis, the operator is in the best position to identify, remedy and/or record

potential problem areas and is able to quickly recognize any change in the performance of his machine. The comments he records on the shift maintenance report become a valuable tool to the maintenance department, and are an important ingredient to the overall success of a preventive maintenance program.

SHIFT MAINTENANCE CHECKLIST

A recommended checklist is given here as an aid in developing a practical shift maintenance program if one has not been developed by your company. a shift maintenance report, based on this checklist should be used to report defects found when making maintenance checks at the beginning of each shift.

Your company may have a different reporting method, however, it is usually a necessary requirement that this form be filled out at the end of each shift. Accurate shift maintenance reports can help your company anticipate maintenance problems and take action to prevent costly failures.

USING THE CHECKLIST

Actual operating environment governs the maintenance schedule. Some checks should be performed more often under heavy dust or other special conditions.

The maintenance schedule checklist is designed as a guide until adequate experience is obtained to establish a schedule to meet your specific operation.

A detailed list of component checks is provided through several check periods; also a suggested schedule basis is given for hours of operation, or calendar of time.

A maintenance schedule should be established using the checklist as a guide; the result will be a maintenance program to fit your specific operation.

OIL ANALYSIS SAMPLING PROGRAM

Use scheduled oil sampling (SOS) to monitor machine condition and maintenance requirements. Oil samples from Engine, Transmission, Axles and Hydraulic System should be taken when the oil is hot and well mixed to ensure an accurate analysis.

Consult your dealer for complete information and assistance in establishing a scheduled oil sampling program for your equipment.



SHIFT MAINTENANCE CHECKLIST

EVERY 10 HOURS OR DAILY

Note general vehicle condition. Clear away all collected debris — steam clean if necessary. Check for mechanical damage and loose or leaking components. Report faults to maintenance department.

	Before Starting Engine - Check The Fo	llowing:			
REF 2	ITEM ENGINE (Check oil level - check for leaks)		ок 	NO	ADD
4	FUEL TANK (Drain off moisture & sediment)				-
19	HYDRAULIC TANK (Check oil level - check for 1	eaks)			
1	RADIATOR (Check coolant level - check for lea	ks)			
25	AIR CLEANER (Check indicator - clean or chang	e A/R)			
41	ENGINE BELTS (Check for adjustment and wear)	•			
43	FUEL FILTER (Drain off water & sediment)				
24	AIR TANKS (Drain off water & sediment)				
1	RADIATOR & OIL COOLER (Are fins clean & unobs	tructed?)			
47	WHEEL & TIRE ASSEMBLIES (Check condition & pr	essure)			
10	HYDRAULIC BRAKE RESERVOIRS (Check Fluid Level)			
-	LUBRICATE CHASSIS (Refer to Lube Chart)				
	After Starting Engine - Check The Fo	lowing:			
42	ENGINE (Does it sound normal?)				
28	INSTRUMENTS (Check for normal readings)				
28	CONTROLS (Check for normal operation)				
26	AIR INTAKE SYSTEM (Check for leaks and damage	e)			
27	EXHAUST SYSTEM (Check for leaks & excessive s	smoke)			
8	TRANSMISSION (Check oil level - Check for lea	ıks)			************
	Note Anything Abnormal Or In Need Of	Repair:		······································	
LIGHTS	DEFROSTER REV	ERSE W/HORI	1		
HORN _	WINDSHIELD WIPERS				
HEATER _	AIR CONDITIONER				
OPERATOR	SUPERVISOR	DATE			
MODEL	SERIAL NO. HOUR	METER			

LUBRICATION POINTS L-805 CUMMINS / CLARK


REF	10 HOURS	FTG
14)	STEERING CYLINDER PINS	4
30	BOOM TO CHASSIS PIN	2
50	BOOM TO CARRIAGE PIN	2
31 & 48	HOIST CYLINDER PINS	4

29 & 32 TILT CYLINDER PINS 59 HOLDDOWN ARM PINS KICKOFF ARM PINS	FTG
	4
58 KICKOFF ARM PINS	2
	2
36 & 60 HOLDDOWN CYLINDER PINS	4
35 & 57 KICKOFF CYLINDER PINS	4
34 & 55 REACH LINKAGE PINS, UPPER	8


REF	50 HOURS cont'd	FTG
(51) & (52)	REACH LINKAGE PINS, LOWER	8
33 & 37	REACH CYLINDER PINS	4
49	CUSHION CYLINDER PINS	2
53	AUXILIARY HD ARM PINS	2
54 & 56	AUXILIARY HD CYL PINS	2
44)	*DRIVELINE - CONV TO TRANS	3
45)	*DRIVELINE - TRANS TO AXLE	3
	* Use Hand Gun or Low Pressure Adapter.	

REF	500 HOURS	FTG
38)	TAILWHEEL BEARINGS	2
13	TAILPOST	1

Lubricate Sparingly.

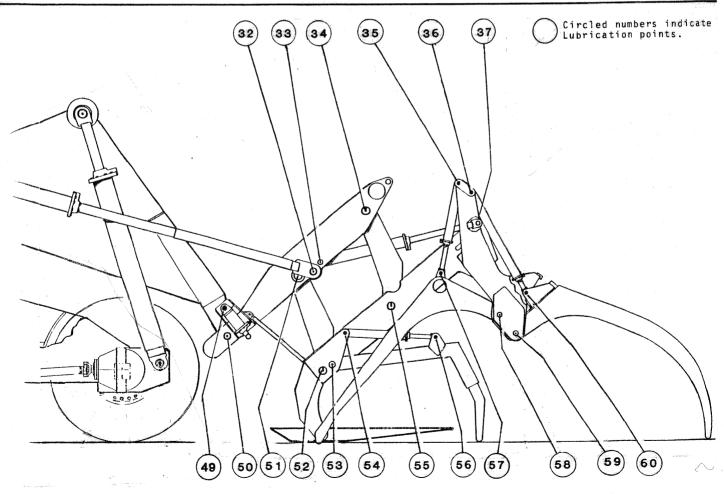

L-80S with Extension Carriage & Auxiliary Holddowns

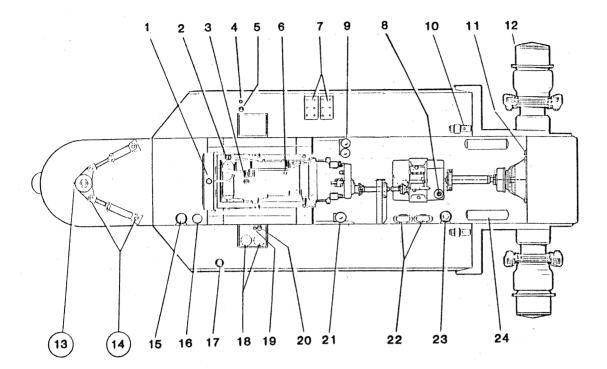


CAUTION!

Due to the extreme height of the upper lube points, it is essential to personnel safety that safe ladders and/or scaffolding be used while servicing. These areas can t dangerously slick under conditions of rain, frost, or oil smears.

Before lubricating, first lower carriage to ground and extend holddown arms to obtai the lowest possible configuration.

Before working in area of ope reach mechanism, make sure th safety bar is in place betwee the two carriage halves.

NOTE: Due to variations in engine types and models, the indicated location of engine filters (fuel - oil - coolant may not be exact. Consult your specific engine Service Manual for exact location.

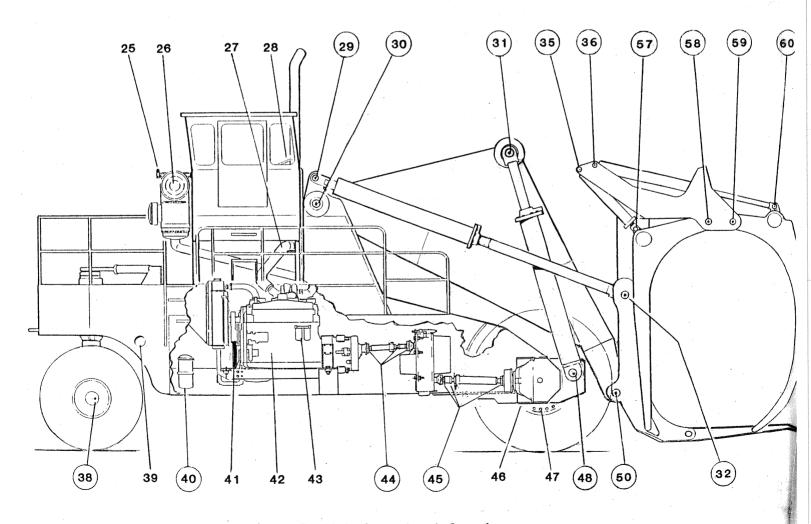

L-80S with Standard Carriage

COMPONENT CAPACITIES & LUBRICANTS L-80S

COMPONENT OR SYSTEM	REFILL CAPACIT	Y (APPROX) LITERS	LUBRICANT TYPE*				
ENGINE CRANKCASE W/FILTERS	11	41	HEAVY DUTY ENG. OIL				
FUEL TANK	450	1703	DIESEL FUEL				
COOLING SYSTEM	18	6 8	WATER/ANTIFREEZE				
HYDRAULIC SYSTEM	350	1324	HYDRAULIC OIL				
TRANSMISSION		em em em	TRANSMISSION OIL				
DIFFERENTIALS (Each)	35	132	GEAR LUBRICANT				
PLANETARY HUBS (Each)	5	18	GEAR LUBRICANT				
BRAKE RESERVOIRS	AS REQU	IRED	MINERAL OIL				
CHASSIS GREASE FITTINGS	AS REQU	IRED	CHASSIS GREASE				
* SEE LUBRICANT SPECIFICATIONS,	PAGE 9.						

MAINTENANCE SPECIFICATIONS L-80S

HYE	PRAULIC PRESSURE RELIEF SETTINGS	MAIN	CIRCUIT	<u>PUMP</u>
1. 2. 3. 4. 5. 6. 7. 8. 9.	Steering Holddown & Kickoff, LH Holddown & Kickoff, RH Auxiliary Holddown Hoist Tilt (Cylinder Base) Tilt (Cylinder Stem) Steering (Pressure Reducing Valve) Carriage Extension	2050 psi NONE 1950 psi 2050 psi 2050 psi 50-175 psi	*2500 psi 2300-2600 psi 2300-2600 psi NONE 2300-2600 psi 950-1200 psi 2300 psi NONE NONE	2200 psi 2200 psi
*	Non-adjustable, Pre-set at Factory			
WH	EEL LUGNUT TOROUE			

Front.	_	_	_						_	 		_	_	500	Ft./	/I h	ıs
1 1 0110	•			•	•		•	•				•		000	, ,,	W	, ,

TIRE INFLATION PRESSURE

Front.				•						90-95	psi
										60-65	



MAINTENANCE CHECKLIST

IMPORTANT: Consult engine manufacturer's Maintenance Manual for additional engine related maintenance checks and/or details.

	EVERY 50 HOURS OR WE	EKLY	
1.	REPEAT THE 10 HOUR CHECK	0K	NO
2.	CHECK FOR FLUID LEAKS - OIL, FUEL, WATER	0K	REPAIR
3.	CHECK BRAKES FOR ADJUSTMENT & WEAR	0K	REPAIR
4.	CHECK WHEEL NUTS & STUDS - MECHANICALLY	0K	REPAIR
5.	CHECK BATTERY ELECTROLYTE	0K	ADD
6.	LUBRICATE CHASSIS - REFER TO LUBE CHART .	0K	NO
7.	RECORD ENGINE RPM	HIGH	STALL
8.	CHECK FOR STRUCTURAL DAMAGE - INSPECT CHASSIS & ATTACHMENTS FOR BENDING, CRACKING, & BROKEN WELDS	0K	REPAIR
	EVERY 250 HOURS OR MC	NTHLY	
1.	REPEAT THE 50 HOUR CHECK	0K	NO
2.	CHANGE ENGINE OIL & FILTERS*	0K	ADDED
3.	TAKE ENGINE OIL SAMPLE FOR ANALYSIS*	0K	NO
4.	CHECK AXLE DIFFERENTIAL OIL LEVEL	0K	ADDED
5.	CHECK AXLE PLANETARY OIL LEVEL	0K	ADDED
6.	CHANGE COOLING SYSTEM FILTER	0K	REPLACE
7.	CHECK ALL HYDRAULIC PRESSURES & RECORD	0K	NO
8.	CHECK FIRE SUPPRESSION SYSTEM	0K	NO
	EVERY 500 HOURS OR QUA	RTERLY	
1.	REPEAT THE 250 HOUR CHECK	OK	NO
2.	SERVICE FUEL FILTERS	0K	REPLACE
3.	SERVICE HYDRAULIC FILTERS*	OK	REPLACE
4.	SERVICE TRANSMISSION FILTERS*	OK	REPLACE
5.	TAKE OIL SAMPLES FROM TRANSMISSION, AXLE AND HYDRAULIC SYSTEM FOR ANALYSIS*	0K	NO
6.	INSPECT BRAKE SYSTEM & COMPONENTS	0K	REPAIR

10-89



MAINTENANCE CHECKLIST

IMPORTANT: Consult engine manufacturer's Maintenance Manual for additional engine related maintenance checks and/or details.

	1000 HOURS OR SEMI-AN	NUALLY	
1.	REPEAT 500 HOUR CHECK	0K	NO
2.	CHANGE TRANSMISSION OIL & FILTERS*		ADDED
3.	CLEAN, FLUSH AND INSPECT COOLING SYSTEM		ADDED
4.	CHECK PINS & BUSHINGS FOR WEAR	0K	REPLACE
	2000 HOURS OR ANNU	ALLY	
1.	REPEAT 1000 HOUR CHECK	0K	NO
2.	DRAIN, FLUSH & REFILL DIFFERENTIALS*	0K	ADDED
3.	DRAIN, FLUSH & REFILL PLANETARIES*	0K	ADDED
4.	CHANGE HYDRAULIC OIL & FILTERS*	0K	ADDED
	IRS:		
	S.:		
- Charles Control of the Control of		HOURS LAE	30R
REPA	AIRS:		
PROB	BLEM:		
PART	rs:		
		HOURS LA	3 O R
OPER	RATOR:		
	ERVISOR:		
	TS:		
MODE	EL: SERIAL NUMBER:	HOUR MET	ER:

LUBRICANT SPECIFICATIONS

	MANUFACTURER & SPECIFICATION	RECOMMENDED VISCOSITY	PREVAILING AMBIEN (FAHRENHEIT)	T TEMPERATURES (CELSIUS)
	and an interfere of the second and a first state of the second and an interference and a first state of the second and a second a second and a second a second and a second an		0 0	0 0
ENGINE	CUMMINS	SAE 10W-30	-13 ⁰ F to 95 ⁰ F	-25°C to 35°C
	MIL-L-2104D	SAE 15W-40	14 ⁰ F and ABOVE(Normal) 32 ⁰ F and ABOVE	-10 [°] C and ABOVE(Normal
	(API CD/SE)	SAE 20W-40	32 F and ABUVE	
	DETROIT DIESEL	SAE 30	BELOW 32 ^o F	BELOW O ^O C
	MIL-L-46152	SAE 40	ABOVE 32 ⁰ F	ABOVE O ^O C
	API CC/SF Note: Multi-grade oils are not recommended in Detroit Diesel Engine			
	CATERPILLAR	SAE 5W-20	-13 ⁰ F to 50 ⁰ F	-25°C to 10°C
	MIL-L-2104D	SAE 10W-30	-4 ⁰ F to 104 ⁰ F	-20 C to 40 C
	(API CD or CD/TO-2)	SAE 15W-30	5 ^o F to 122 ^o F(Normal)	-15°C to 50°C(Normal)
~	CLARK	MIL-L-46167	-65°F to 0°F	-54 ⁰ C to -18 ⁰ C
	MIL-L-2104D	SAE 10W	-10°F to 140°F(Normal)	-23°C to -60°C(Normal)
	(API SE) Type C-3	SAE 30	$30^{\circ}F$ to $140^{\circ}F$	$-1^{\circ}C$ to $60^{\circ}C$
	ALLISON	SAE 5W-20	BELOW -10°F	BELOW -23°C
<u>ō</u>	ALLISON	SAE 10W	BELOW 10 F(Normal)	BELOW -23 C BELOW -12 C(Normal)
SS	MIL-L-2104D	SAE 15W-40	BELOW 30°F	BELOW -10C
NS.		SAE 30	BELOW 35 ⁰ F	BELOW 2°C
TRANSMISSION	(API SE) TYPE C-3	before is not	transmission fluid to indica operating transmission o available, operate transmissi inutes prior to engaging Forw	or if preheating equipment on in NEUTRAL for minimum
	TWIN-DISC	SAE 5W-20	-60 ⁰ F to 0 ⁰ F	-51°C to -18°C
	MIL-L-2104D	SAE 10W	-10 [°] F to 140 [°] F(Normal)	-23°C to 60°C(Normal)
	(API SE) TYPE C-3	SAE 30	30°F to 140°F	-1°C to 60°C
	CLARK	SAE 75W	-40°F to -10°F	-40°C to -23°C
	- Control of the Cont	SAE 75W-80	-40°F to 0°F	-40°C to -18°C
			-13 ^O F to 100 ^O F(Normal)	
	MIL-L-2105C	SAE 80W-90	-13 F to 100 F(Normal)	-27°C to 37°C(Normal)
	MIL-L-2105C (API GL-5)	SAE 80W-90 SAE 85W-140	ABOVE 10 ⁰ F	-27°C to 37°C(Normal) ABOVE -12°C
ш			ABOVE 10 ⁰ F	ABOVE -12°C
XLE	(API GL-5)	SAE 85W-140	ABOVE 10 ^o F	
AXLE	(API GL-5) BRYAN	SAE 85W-140	ABOVE 10 ⁰ F	ABOVE -12°C BELOW -18°C
AXLE	(API GL-5) BRYAN MIL-L-2104C (API CD)	SAE 85W-140 SAE 20 SAE 30	ABOVE 10°F BELOW 0°F -20°F to 120°F(Normal) ABOVE 100°F	ABOVE -12°C BELOW -18°C -29°C to 49°C(Normal) ABOVE 37°C
AXLE	(API GL-5) BRYAN MIL-L-2104C	SAE 20 SAE 30 SAE 40	ABOVE 10°F BELOW 0°F -20°F to 120°F(Normal)	ABOVE -12°C BELOW -18°C -29°C to 49°C(Normal) ABOVE 37°C -54°C to -29°C
AXLE	(API GL-5) BRYAN MIL-L-2104C (API CD) RIMPULL	SAE 20 SAE 30 SAE 40 SAE 75W-90	ABOVE 10°F BELOW 0°F -20°F to 120°F(Normal) ABOVE 100°F -65°F to 20°F	ABOVE -12°C BELOW -18°C -29°C to 49°C(Normal) ABOVE 37°C
	(API GL-5) BRYAN MIL-L-2104C (API CD) RIMPULL MIL-L-2105C	SAE 85W-140 SAE 20 SAE 30 SAE 40 SAE 75W-90 SAE 80W-90	ABOVE 10°F BELOW 0°F -20°F to 120°F(Normal) ABOVE 100°F -65°F to 20°F -20°F and above(Normal)	ABOVE -12° C BELOW -18° C -29° C to 49° C(Normal) ABOVE 37° C -54° C to -29° C -29° C and above(Normal)
	(API GL-5) BRYAN MIL-L-2104C (API CD) RIMPULL MIL-L-2105C (API GL-5)	SAE 85W-140 SAE 20 SAE 30 SAE 40 SAE 75W-90 SAE 80W-90 SAE 120 ISO VG32	ABOVE 10°F BELOW 0°F -20°F to 120°F(Normal) ABOVE 100°F -65°F to 20°F -20°F and above(Normal) -90°F to 120°F	ABOVE -12°C BELOW -18°C -29°C to 49°C(Normal) ABOVE 37°C -54°C to -29°C -29°C and above(Normal) -32°C to 49°C -23°C to 49°C
HYDRAULIC	(API GL-5) BRYAN MIL-L-2104C (API CD) RIMPULL MIL-L-2105C (API GL-5) WAGNER Premium Grade	SAE 85W-140 SAE 20 SAE 30 SAE 40 SAE 75W-90 SAE 80W-90 SAE 120 ISO VG32	ABOVE 10°F BELOW 0°F -20°F to 120°F(Normal) ABOVE 100°F -65°F to 20°F -20°F and above(Normal) -90°F to 120°F -10°F to 120°F	ABOVE -12°C BELOW -18°C -29°C to 49°C(Normal) ABOVE 37°C -54°C to -29°C -29°C and above(Norma -32°C to 49°C -23°C to 49°C
	(API GL-5) BRYAN MIL-L-2104C (API CD) RIMPULL MIL-L-2105C (API GL-5) WAGNER Premium Grade Hydraulic Oil	SAE 85W-140 SAE 20 SAE 30 SAE 40 SAE 75W-90 SAE 80W-90 SAE 120 ISO VG32	ABOVE 10°F BELOW 0°F -20°F to 120°F(Normal) ABOVE 100°F -65°F to 20°F -20°F and above(Normal) -90°F to 120°F -10°F to 120°F	ABOVE -12°C BELOW -18°C -29°C to 49°C(Normal) ABOVE 37°C -54°C to -29°C -29°C and above(Norma -32°C to 49°C -23°C to 49°C

9