

# **wagner**

a division of allied systems company

## **MAINTENANCE & LUBRICATION**

**CHD-17S**

**CD-500**

**CD-650**

## C O N T E N T S

GENERAL . . . . .	1
SAFETY PRECAUTIONS . . . . .	1
WHAT IS PREVENTIVE MAINTENANCE . . . . .	2
BENEFITS OF PREVENTIVE MAINTENANCE . . . . .	2
SHIFT MAINTENANCE . . . . .	2
OIL ANALYSIS SAMPLING PROGRAM . . . . .	3
SHIFT MAINTENANCE CHECKLIST . . . . .	4
LUBRICATION CHART . . . . .	5
COMPONENT CAPACITIES & LUBRICANTS . . . . .	6
HYDRAULIC PRESSURE SETTINGS . . . . .	6
MAINTENANCE SPECIFICATIONS . . . . .	6
MAINTENANCE CHECKLIST - 50 HR, 250 HR, 500 HR . . . . .	7
MAINTENANCE CHECKLIST - 1000 HR, 2000 HR . . . . .	7
LUBRICANT SPECIFICATIONS . . . . .	9

### GENERAL

The regular care a machine receives by its operators and mechanics is generally rewarded by decreased downtime and greater reliability. With the help of the information in this section, you should be able to maintain your machine at top operating efficiency. The maintenance and lubrication procedures given here can be performed on the job site with a minimum of shop tools.

### SAFETY PRECAUTIONS

Before doing any maintenance or lubrication, review the following safety precautions. They're included for your protection.

#### PERFORM MAINTENANCE ON LEVEL GROUND

The machine should be on level ground and free of traffic lanes whenever possible.

#### SUPPORT THE BOOM

Before doing any work under a raised boom or bucket, first do the following:

1. Empty the load.
2. Support the boom with a safety stand - don't rely on the hydraulics.
3. Shutdown the engine.
4. Set the parking brake and block the wheels.

#### INSTALL SWIVEL LOCKING BAR

A swivel locking bar is provided on 4-wheel drive models. Before working in the hinge area of the machine make sure this bar is installed. Place the machine on a level surface so that the locking bar can be aligned for pin insertion.

#### TAG KEY SWITCH

Before doing maintenance or lubrication remove the key from the switch, or tag the key switch "DO NOT START", to insure that the engine is not started inadvertently.

---

## WHAT IS PREVENTIVE MAINTENANCE

Preventive maintenance is a system that is intended to detect problem areas and prevent equipment failure before trouble can develop to a critical point. The system is based on a series of maintenance checks and servicing points. To be effective, a preventive maintenance program demands strict adherence to a planned schedule of maintenance.

## BENEFITS OF PREVENTIVE MAINTENANCE

The time that is diligently expended to make the required periodic checks is a real investment in working equipment and efficient use of manhours. Valuable benefits can be realized; all of which means savings in time and resources.

### PREVENTIVE MAINTENANCE:

- IMPROVES EQUIPMENT AVAILABILITY - by minimizing the chances of breakdown.
- REDUCES UNEXPECTED DOWNTIME - crash repairs are expensive and detract from normal scheduled maintenance.
- REDUCES EQUIPMENT ABUSE - provides the ability to predict component life and helps avoid operating equipment to destruction by replacing parts before they fail.
- ALLOWS PLANNING OF DAILY PRODUCTION - by knowing the condition of available equipment.
- ALLOWS PLANNING OF MAINTENANCE MANHOURS - by distribution of duties and necessary lead time for parts ordering.
- PROVIDES COMPLETE HISTORY OF EQUIPMENT - based on performance, frequency and type of failure and actual manhours expended on maintenance.
- PROMOTES SAFETY - well maintained equipment is more able to operate within its design specifications and react positively to the operator's control.

## SHIFT MAINTENANCE

Shift maintenance is where preventive maintenance begins. The operator of the machine normally completes this inspection. It consists of the routine servicing and lubrication of the machines major systems. On a daily basis, the operator is in the best position to identify, remedy and/or record

potential problem areas and is able to quickly recognize any change in the performance of his machine. The comments he records on the shift maintenance report become a valuable tool to the maintenance department, and are an important ingredient to the overall success of a preventive maintenance program.

#### SHIFT MAINTENANCE CHECKLIST

A recommended checklist is given here as an aid in developing a practical shift maintenance program if one has not been developed by your company. a shift maintenance report, based on this checklist should be used to report defects found when making maintenance checks at the beginning of each shift.

Your company may have a different reporting method, however, it is usually a necessary requirement that this form be filled out at the end of each shift. Accurate shift maintenance reports can help your company anticipate maintenance problems and take action to prevent costly failures.

#### USING THE CHECKLIST

Actual operating environment governs the maintenance schedule. Some checks should be performed more often under heavy dust or other special conditions.

The maintenance schedule checklist is designed as a guide until adequate experience is obtained to establish a schedule to meet your specific operation.

A detailed list of component checks is provided through several check periods; also a suggested schedule basis is given for hours of operation, or calendar of time.

A maintenance schedule should be established using the checklist as a guide; the result will be a maintenance program to fit your specific operation.

#### OIL ANALYSIS SAMPLING PROGRAM

Use scheduled oil sampling (SOS) to monitor machine condition and maintenance requirements. Oil samples from Engine, Transmission, Axles and Hydraulic System should be taken when the oil is hot and well mixed to ensure an accurate analysis.

Consult your dealer for complete information and assistance in establishing a scheduled oil sampling program for your equipment.

## SHIFT MAINTENANCE CHECKLIST

### EVERY 10 HOURS OR DAILY

*Note general vehicle condition. Clear away all collected debris — steam clean if necessary. Check for mechanical damage and loose or leaking components. Report faults to maintenance department.*

#### *Before Starting Engine - Check The Following:*

REF	ITEM	OK	NO	ADD
3	ENGINE (Check oil level - check for leaks)	<input type="checkbox"/>	<input type="checkbox"/>	___
6	FUEL TANK (Drain off moisture & sediment)	<input type="checkbox"/>	<input type="checkbox"/>	___
20	HYDRAULIC TANK (Check oil level - check for leaks)	<input type="checkbox"/>	<input type="checkbox"/>	___
2	RADIATOR (Check coolant level - check for leaks)	<input type="checkbox"/>	<input type="checkbox"/>	___
15	AIR CLEANER (Check indicator - clean or change A/R)	<input type="checkbox"/>	<input type="checkbox"/>	
11	ENGINE BELTS (Check for adjustment and wear)	<input type="checkbox"/>	<input type="checkbox"/>	
30	FUEL FILTER (Drain off water & sediment)	<input type="checkbox"/>	<input type="checkbox"/>	
1	AIR TANKS (Drain off water & sediment)	<input type="checkbox"/>	<input type="checkbox"/>	
2	RADIATOR & OIL COOLER (Are fins clean & unobstructed?)	<input type="checkbox"/>	<input type="checkbox"/>	
28	WHEEL & TIRE ASSEMBLIES (Check condition & pressure)	<input type="checkbox"/>	<input type="checkbox"/>	___
—	LUBRICATE CHASSIS (Refer to Lube Chart)	<input type="checkbox"/>	<input type="checkbox"/>	

#### *After Starting Engine - Check The Following:*

14	ENGINE (Does it sound normal?)	<input type="checkbox"/>	<input type="checkbox"/>	
23	INSTRUMENTS (Check for normal readings)	<input type="checkbox"/>	<input type="checkbox"/>	
23	CONTROLS (Check for normal operation)	<input type="checkbox"/>	<input type="checkbox"/>	
16	AIR INTAKE SYSTEM (Check for leaks and damage)	<input type="checkbox"/>	<input type="checkbox"/>	
17	EXHAUST SYSTEM (Check for leaks & excessive smoke)	<input type="checkbox"/>	<input type="checkbox"/>	
8	TRANSMISSION (Check oil level - Check for leaks)	<input type="checkbox"/>	<input type="checkbox"/>	___


#### *Note Anything Abnormal Or In Need Of Repair:*

LIGHTS _____	DEFROSTER _____	REVERSE W/HORN _____
HORN _____	WINDSHIELD WIPERS _____	_____
HEATER _____	AIR CONDITIONER _____	_____

OPERATOR \_\_\_\_\_ SUPERVISOR \_\_\_\_\_ DATE \_\_\_\_\_

MODEL \_\_\_\_\_ SERIAL NO. \_\_\_\_\_ HOUR METER \_\_\_\_\_

# LUBRICATION POINTS

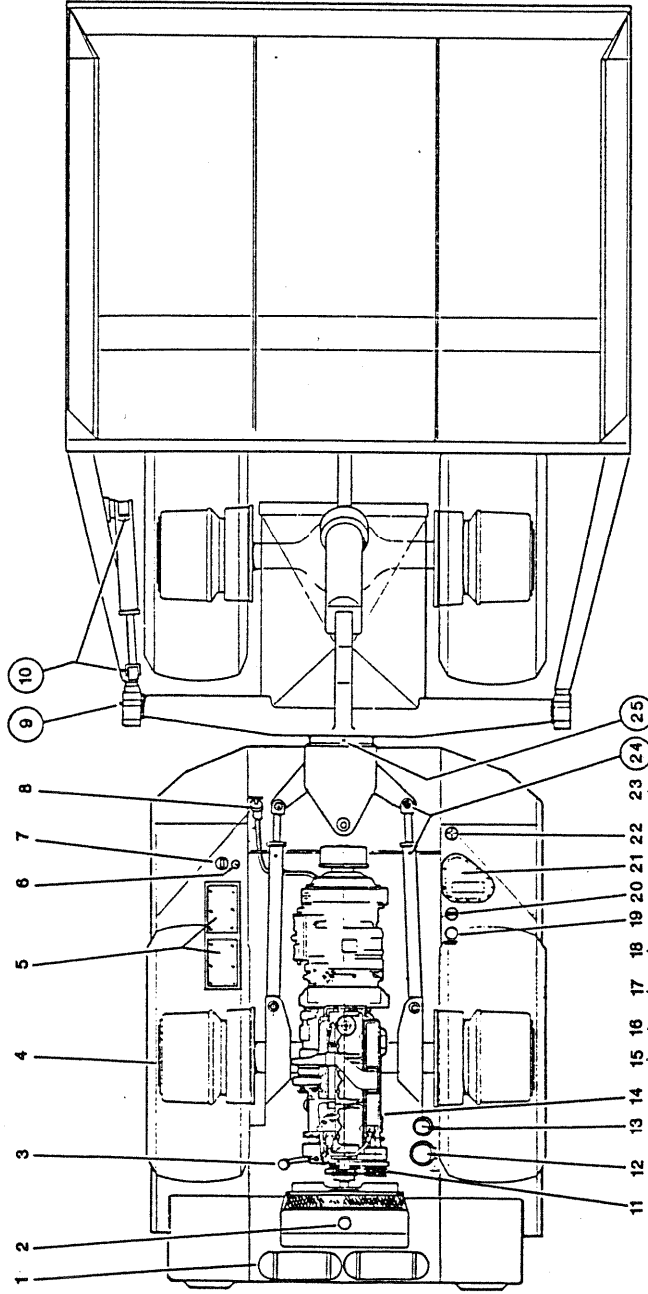


REF	ITEM	FTGS
<b>10 HOURS</b>		
24	STEERING CYLINDER PINS	4
26	HOIST CYLINDER PINS	2
27	DUMP CYLINDER PINS	4
10	SIDE TILT CYLINDER PINS	2
42	LIFT ARM TO BUCKET PINS	2
37	HINGE PIN - UPPER	1
36	HINGE PIN - LOWER	1
9	SIDE TILT LINK	2

REF	ITEM	FTGS
<b>50 HOURS</b>		
33	DRIVELINE - TRANS TO REAR AXLE*	3
35	DRIVELINE - TRANS TO SWIVEL*	3
39	DRIVELINE - SWIVEL TO FRONT AXLE	2
38	DRIVELINE SUPPORT BEARING	1
32	SLACK ADJUST/CAMSHAFT - REAR	6
40	SLACK ADJUST/CAMSHAFT - FRONT	6
25	SWIVEL BEARING	1

\* Use Hand Gun or Low Pressure Adapter.  
Lubricate sparingly.

○ Circled numbers indicate  
Lubrication points.

NOTE: Due to variations in engine types and models, the indicated locations of engine filters (fuel - oil - coolant) may not be exact. Consult your specific engine Service Manual for exact location.

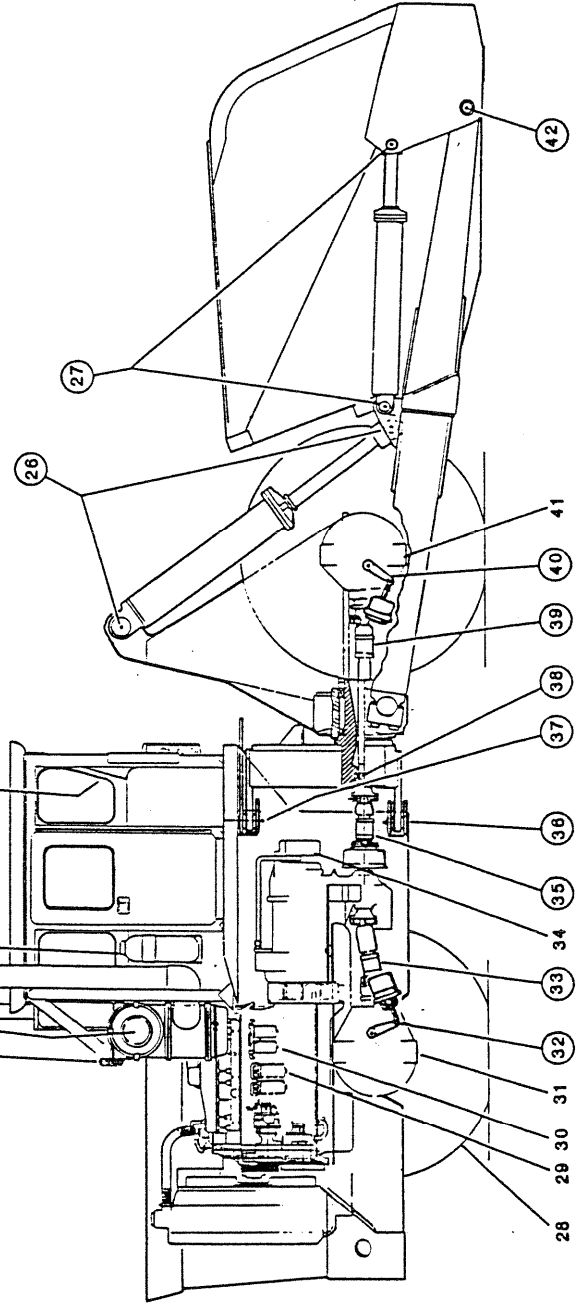

# COMPONENT CAPACITIES & LUBRICANTS

CHD-17S CD-500 CD-650

COMPONENT OR SYSTEM	REFILL CAPACITY (APPROX)		LUBRICANT TYPE*
	U.S. GAL	LITERS	
ENGINE CRANKCASE W/FILTERS	11	42	HD ENGINE OIL
FUEL TANK	107	405	DIESEL FUEL
COOLING SYSTEM	14.5	55	WATER/ANTIFREEZE
HYDRAULIC SYSTEM	82	310	HYDRAULIC OIL
TRANSMISSION & CONVERTER	15	57	TRANSMISSION OIL
DIFFERENTIALS (Each)	8.6	32.6	GEAR LUBRICANT
PLANETARY HUBS (Each)	3.3	12.5	GEAR LUBRICANT
CHASSIS GREASE FITTINGS	AS REQUIRED		CHASSIS GREASE

\* SEE LUBRICANT SPECIFICATIONS, PAGE 9.

## MAINTENANCE SPECIFICATIONS

CHD-17S CD-500 CD-650

### HYDRAULIC PRESSURE SETTINGS

	MAIN	CIRCUIT
(1) Steering . . . . .	2500 psi*	
(2) Steering pilot Control . . . . .	170 psi	
(3) Bucket Dump. . . . .	2350 psi	2500 psi**
(4) Bucket Hoist . . . . .	2350 psi	2500 psi
(5) Side Tilt . . . . .	2350 psi	2500 psi**
(6) Bucket Pilot Controls . . . . .	450 psi*	

\*Pre-set, Non-Adjustable

\*\*Set with Engine at Idle

### WHEEL LUGNUT TORQUE

Front & Rear . . . . . 500 Ft/Lbs

### TIRE INFLATION PRESSURE

Front . . . . . 65 psi

Rear . . . . . 55 psi





## MAINTENANCE CHECKLIST

**IMPORTANT:** Consult engine manufacturer's Maintenance Manual for additional engine related maintenance checks and/or details.

### EVERY 50 HOURS OR WEEKLY

- |    |   |      |        |
|----|---|------|--------|
| 1. | REPEAT THE 10 HOUR CHECK . . . . .  | OK   | NO     |
| 2. | CHECK FOR FLUID LEAKS - OIL, FUEL, WATER  | OK   | REPAIR |
| 3. | CHECK BRAKES FOR ADJUSTMENT & WEAR . . .  | OK   | REPAIR |
| 4. | CHECK WHEEL NUTS & STUDS - MECHANICALLY   | OK   | REPAIR |
| 5. | CHECK BATTERY ELECTROLYTE . . . . .   | OK   | ADD    |
| 6. | LUBRICATE CHASSIS - REFER TO LUBE CHART .   | OK   | NO     |
| 7. | RECORD ENGINE RPM . . . . .   | HIGH | STALL  |
| 8. | CHECK FOR STRUCTURAL DAMAGE - INSPECT<br>CHASSIS & ATTACHMENTS FOR BENDING,<br>CRACKING, & BROKEN WELDS . . . . . | OK   | REPAIR |

### EVERY 250 HOURS OR MONTHLY

- |    |  |    |         |
|----|--|----|---------|
| 1. | REPEAT THE 50 HOUR CHECK . . . . .         | OK | NO      |
| 2. | CHANGE ENGINE OIL & FILTERS* . . . . .     | OK | ADDED   |
| 3. | TAKE ENGINE OIL SAMPLE FOR ANALYSIS* . . . | OK | NO      |
| 4. | CHECK AXLE DIFFERENTIAL OIL LEVEL . . . .  | OK | ADDED   |
| 5. | CHECK AXLE PLANETARY OIL LEVEL . . . . .   | OK | ADDED   |
| 6. | CHANGE COOLING SYSTEM FILTER . . . . .     | OK | REPLACE |
| 7. | CHECK ALL HYDRAULIC PRESSURES & RECORD. .  | OK | NO      |
| 8. | CHECK FIRE SUPPRESSION SYSTEM . . . . .    | OK | NO      |

### EVERY 500 HOURS OR QUARTERLY

- |    |  |    |         |
|----|--|----|---------|
| 1. | REPEAT THE 250 HOUR CHECK . . . . .  | OK | NO      |
| 2. | SERVICE FUEL FILTERS . . . . .   | OK | REPLACE |
| 3. | SERVICE HYDRAULIC FILTERS* . . . . .   | OK | REPLACE |
| 4. | SERVICE TRANSMISSION FILTERS* . . . . .  | OK | REPLACE |
| 5. | TAKE OIL SAMPLES FROM TRANSMISSION, AXLE<br>AND HYDRAULIC SYSTEM FOR ANALYSIS* . . . | OK | NO      |
| 6. | INSPECT BRAKE SYSTEM & COMPONENTS . . . .  | OK | REPAIR  |



a division of allied systems company

## MAINTENANCE CHECKLIST

**IMPORTANT:** Consult engine manufacturer's Maintenance Manual for additional engine related maintenance checks and/or details.

### 1000 HOURS OR SEMI-ANNUALLY

- |    |  |          |               |
|----|--|----------|---------------|
| 1. | REPEAT 500 HOUR CHECK . . . . .          | OK _____ | NO _____      |
| 2. | CHANGE TRANSMISSION OIL & FILTERS* . . . | OK _____ | ADDED _____   |
| 3. | CLEAN, FLUSH AND INSPECT COOLING SYSTEM  | OK _____ | ADDED _____   |
| 4. | CHECK PINS & BUSHINGS FOR WEAR . . . . . | OK _____ | REPLACE _____ |

### 2000 HOURS OR ANNUALLY

- |    |   |          |             |
|----|---|----------|-------------|
| 1. | REPEAT 1000 HOUR CHECK . . . . .          | OK _____ | NO _____    |
| 2. | DRAIN, FLUSH & REFILL DIFFERENTIALS*. . . | OK _____ | ADDED _____ |
| 3. | DRAIN, FLUSH & REFILL PLANETARIES*. . . . | OK _____ | ADDED _____ |
| 4. | CHANGE HYDRAULIC OIL & FILTERS* . . . . . | OK _____ | ADDED _____ |

\*Normal drain period & filter change intervals are for average environmental and duty-cycle conditions. Severe or sustained high operating temperatures or very dusty atmospheric conditions will cause accelerated deterioration and contamination.

Change intervals should be adjusted according to the results of oil sampling analysis. Consult your dealer for assistance in establishing an oil sampling program for your equipment.

REPAIRS:

PROBLEM: \_\_\_\_\_

PARTS: \_\_\_\_\_

HOURS LABOR \_\_\_\_\_

REPAIRS:

PROBLEM: \_\_\_\_\_

PARTS: \_\_\_\_\_

HOURS LABOR \_\_\_\_\_

OPERATOR: \_\_\_\_\_

SUPERVISOR: \_\_\_\_\_

PARTS: \_\_\_\_\_

MODEL: \_\_\_\_\_ SERIAL NUMBER: \_\_\_\_\_ HOUR METER: \_\_\_\_\_

# LUBRICANT SPECIFICATIONS

	MANUFACTURER & SPECIFICATION	RECOMMENDED VISCOSITY	PREVAILING AMBIENT TEMPERATURES	
			(FAHRENHEIT)	(CELSIUS)
ENGINE	<u>CUMMINS</u>	SAE 10W-30	-13°F to 95°F	-25°C to 35°C
	MIL-L-2104D	SAE 15W-40	14°F and ABOVE(Normal)	-10°C and ABOVE(Normal)
	(API CD/SE)	SAE 20W-40	32°F and ABOVE	0°C and ABOVE
	<u>DETROIT DIESEL</u>	SAE 30	BELOW 32°F	BELOW 0°C
	MIL-L-46152	SAE 40	ABOVE 32°F	ABOVE 0°C
	API CC/SF	Note: Multi-grade oils are not recommended in Detroit Diesel Engines.		
	<u>CATERPILLAR</u>	SAE 5W-20	-13°F to 50°F	-25°C to 10°C
	MIL-L-2104D	SAE 10W-30	-4°F to 104°F	-20°C to 40°C
	(API CD or CD/TO-2)	SAE 15W-30	5°F to 122°F(Normal)	-15°C to 50°C(Normal)
	<u>CLARK</u>	MIL-L-46167	-65°F to 0°F	-54°C to -18°C
TRANSMISSION	MIL-L-2104D	SAE 10W	-10°F to 140°F(Normal)	-23°C to -60°C(Normal)
	(API SE) Type C-3	SAE 30	30°F to 140°F	-1°C to 60°C
	<u>ALLISON</u>	SAE 5W-20	BELOW -10°F	BELOW -23°C
		SAE 10W	BELOW 10°F(Normal)	BELOW -12°C(Normal)
	MIL-L-2104D	SAE 15W-40	BELOW 30°F	BELOW -1°C
	(API SE) TYPE C-3	SAE 30	BELOW 35°F	BELOW 2°C
		Note: Preheat transmission fluid to indicated minimum temperature before operating transmission. . . or if preheating equipment is not available, operate transmission in NEUTRAL for minimum of 20 minutes prior to engaging Forward or Reverse ranges.		
	<u>TWIN-DISC</u>	SAE 5W-20	-60°F to 0°F	-51°C to -18°C
	MIL-L-2104D	SAE 10W	-10°F to 140°F(Normal)	-23°C to 60°C(Normal)
	(API SE) TYPE C-3	SAE 30	30°F to 140°F	-1°C to 60°C
AXLE	<u>CLARK</u>	SAE 75W	-40°F to -10°F	-40°C to -23°C
		SAE 75W-80	-40°F to 0°F	-40°C to -18°C
	MIL-L-2105C	SAE 80W-90	-13°F to 100°F(Normal)	-27°C to 37°C(Normal)
	(API GL-5)	SAE 85W-140	ABOVE 10°F	ABOVE -12°C
	<u>BRYAN</u>	SAE 20	BELOW 0°F	BELOW -18°C
	MIL-L-2104C	SAE 30	-20°F to 120°F(Normal)	-29°C to 49°C(Normal)
	(API CD)	SAE 40	ABOVE 100°F	ABOVE 37°C
	<u>RIMPULL</u>	SAE 75W-90	-65°F to 20°F	-54°C to -29°C
	MIL-L-2105C	SAE 80W-90	-20°F and above(Normal)	-29°C and above(Normal)
	(API GL-5)	SAE 120	-90°F to 120°F	-32°C to 49°C
HYDRAULIC	<u>WAGNER</u>	ISO VG32	-10°F to 120°F	-23°C to 49°C
	Premium Grade Hydraulic Oil	Note: Hydraulic Oil must include the following: Anti-Wear Agents; Rust, Foam and Oxidation Inhibitors; High Demulsibility; High Viscosity Index; Cold Weather Properties; Minimum Pour Point of -40°F and Minimum viscosity Index of 140.		
CHASSIS	<u>WAGNER</u>			
	Multipurpose Chassis Grease w/EP & MoS <sub>2</sub>	NLGI-1	BELOW 10°F	BELOW -12°C
		NLGI-2	ABOVE 10°F	ABOVE -12°C

